



User Manual for Escali Pico scale, model N115

Thank you for purchasing an **Escali** Digital Scale.

Please read the following operation information to ensure the proper function of your new scale.

How to weigh

- 1) Press the "ON/ZERO" key. All display segments will appear for approximately 2 seconds before resetting to zero.
- 2) Press the "UNIT" key to select the units (gr, lb, oz or lb+oz).
- 3) Place item slowly on the platform and the weight will show on the display.
- 4) Remove the item, and press the "ON/ZERO" key to turn the scale off.

How to use the "Tare" feature

This feature allows you to obtain the exact weight of an item in a container, by subtracting the weight of the container.

- 1) Place the container, without the item, slowly on the platform.
- 2) Press the "ON/ZERO" key. The weight of the container will be removed and the display will reset to zero.
- 3) Slowly add the item to the container. The display will show the weight of the item only.
- 4) You may continue to determine the weight of each additional item as they are added by repeating steps 2 & 3.

How to clear the "Tare" feature

- 1) Remove all items from the platform.
- 2) Press the "ON/ZERO" key.

How to use the counting feature

This feature allows you to have the scale count a large quantity of the same item, based on the weight of a sample quantity.

- 1) Turn the scale on. Wait for 2 seconds till ZERO shows on the display
- 2) Place a sample quantity of 10, 20 or 50 pcs on the platform
- 3) Press the "PCS" key to activate the counting mode
- 4) Press and hold the "PCS" key for 3 sec. until the sample quantity flashes. Immediately press the "PCS" key again if you need to change the sample quantity
- 5) Wait 3 seconds and press the "PCS" key to confirm the sample quantity. CAL will show on the display briefly
- 6) Place your total quantity on the platform. The display will show the total quantity.
- 7) To return to weighing mode, remove your items from the platform and press the "UNIT" key

Hold feature to weigh oversized items that block the display

After placing an item on the scale, a beep sound is heard when the weight is stable. You can now remove the item, and the weight will show on the display for 5 seconds.

Do not place overweight items on the scale

Weighing items over the maximum weight capacity will cause an overload "O-Ld" error to display. Immediately remove overweight items to avoid causing damage to your scale.

Battery Replacement

Replace the battery when the low battery symbol appears on the display.

Additional Information

- 1) Make sure your scale is at room temperature, and on a stable horizontal surface free of vibration.
- 2) This scale is not waterproof. Do not expose to moisture.
- 3) As this scale is a precision instrument, it must be handled with extreme care. Avoid rough treatment, shaking and vibration.
- 4) Do not disassemble this scale or the warranty will be void.
- 5) The display value may be affected by electromagnetic disturbances such as operating near a radio. If this occurs, move the device that is causing the disturbance and turn the scale off and restart.

Warranty: Limited Lifetime warranty. See www.escali.com for full details

Specifications

Capacity:	5000 gram / 11 Pound / 175 ounce
Increments:	1 gram, 0.1 ounce (1/10th oz.)
Weight Modes:	Gram, Pounds+ounces, Pounds and Ounces
Auto Shut Off:	Turns off after 4 minutes of non-use.
Power Source:	9V battery

Escali's liability is limited to two (2) times the cost of the product.



see www.escali.com for full details

www.Escali.com

© Copyright Escali Corp, 2010