

About Installation

Thank you for purchasing a Ufly product. You may refer to this installation manual, and you can also visit our official website for installation and troubleshooting videos of the RS Series. Please make sure to follow the guide step by step during installation. If you are unable to install it yourself, please contact a professional installer and ask them to install it with reference to this manual.

www.uflyscreen.com



Installation Instructions

Please do not use excessive force before installation is fully completed. All products have been calibrated and tested at the factory. If you encounter any problems, please contact us immediately.


Service@uflyscreen.com

Installation Instructions

按顺序摆好位置

1 Installation Instructions


Installation Diagrams for UFLY Retractable Screen & Door Series.
You may also view the installation animation video on our official website.

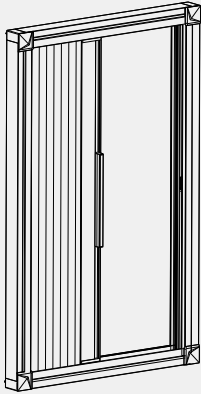

2 Inspect the packaging


Check that the carton is free of damage and deformation.

Verify the model, color and dimensions.

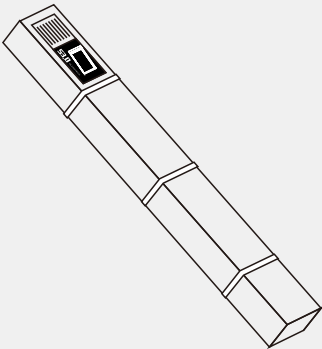


3 Inspect all items

Please ensure all items are complete. Please do not remove the tape binding the screen door main body before installation is finished to ensure proper installation..

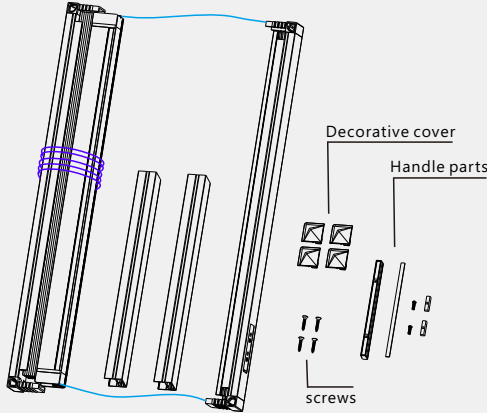

4 Position the screen door.


Please place the screen door flat on a clean, level surface as shown in the diagram.

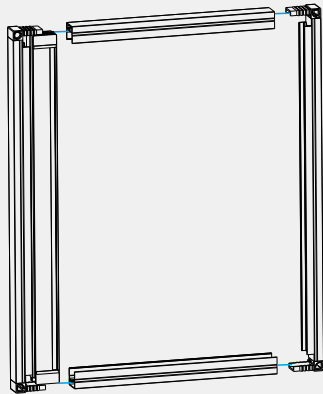

5 Insert the tracks


Connect the upper and lower tracks to the screen main body using corner brackets.

Note: Straighten the cord and ensure it is not pinched when inserting the track.

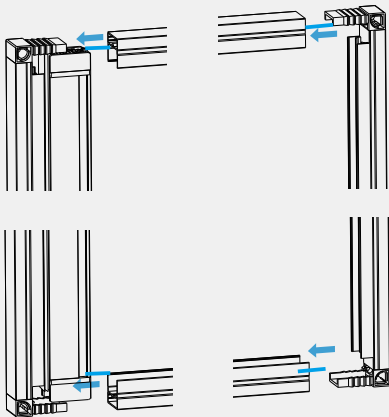

6 Check and confirm


Ensure the track is fully inserted into the corner brackets with no gaps.

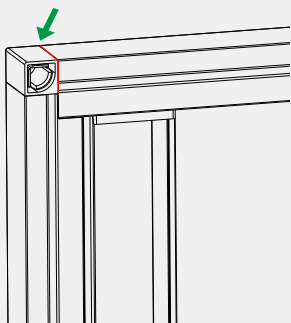

7 Test operation


Stand the screen door upright, then slide it back and forth to ensure smooth and proper operation.

Note: If the screen door sticks noticeably or cannot be pulled during sliding, the cord has been pinched during track installation and requires reinstallation.

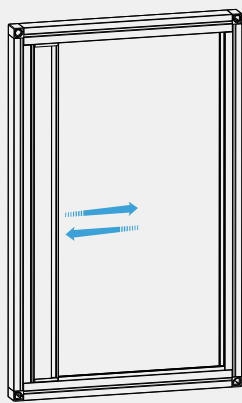


8 Fix the screen

1. Place the screen door at the desired location and confirm the installation position.
2. Perform a sliding test to ensure proper positioning.
3. When securing the screen door, make sure the upper and lower tracks are level.

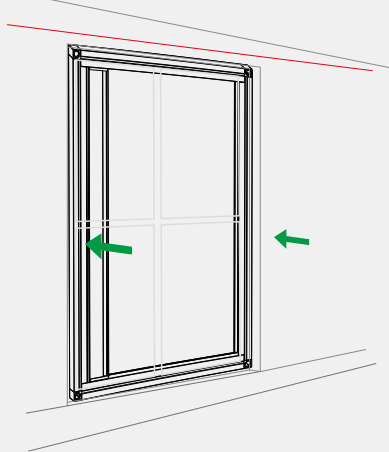


5 Fixing Method 1

Drive screws vertically into the four corner brackets to ensure firm fixation at the four corners.
Note: 1. Do not drive screws into the upper and lower tracks.
2. Ensure the upper and lower tracks are level.

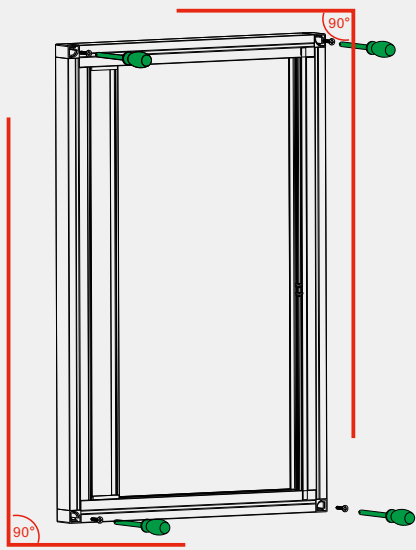


6 Fixing Method 2

Drive screws into the left and right frames, avoiding damage to the mesh and upper/lower adjustment components.
Note: Ensure the upper and lower tracks are level.

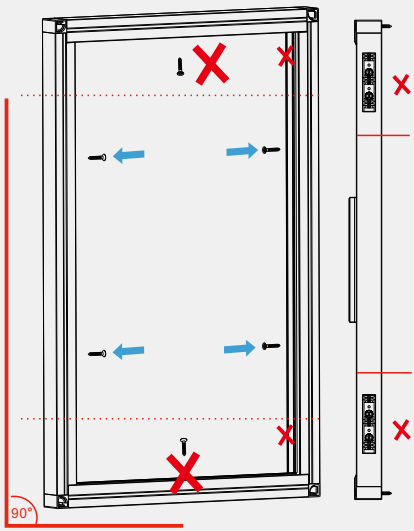

7 Fixing Method 3


Attach double-sided tape to the door frame, then fix it further with glue or other adhesives.
Note: Ensure the upper and lower tracks are level.

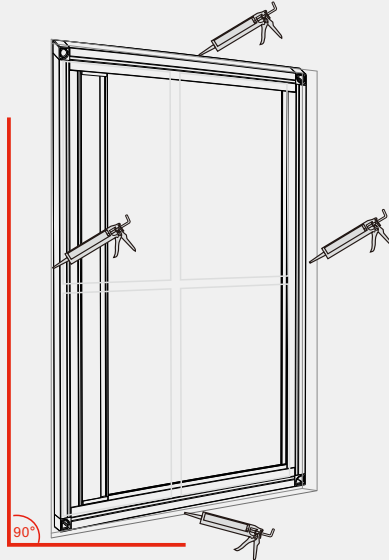

8 Installation complete

Install the decorative covers. Installation complete.

→ Success!

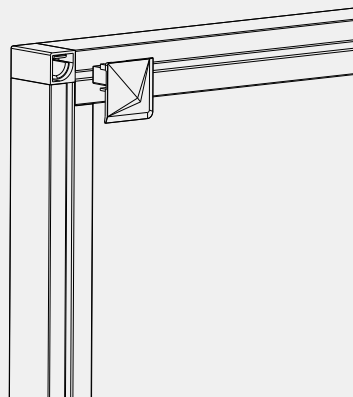


Handle Installation Instructions

The handle height is adjustable according to your needs. Please confirm the desired height before installation.

1 Installation Instructions


Insert the screw through the handle and attach the metal block.

Note: Do not fully tighten the screw. Only connect it to the metal block. Otherwise, it will be impossible to fit into the slot.

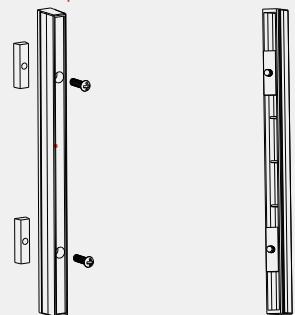


2 Install the handle.

Confirm the handle height, then press the handle into the aluminum profile slot. Tighten the two screws afterward (tighten moderately until no wobbling occurs; over-tightening may damage the handle).

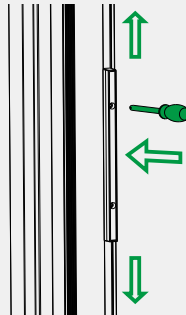


3 Decorative Cover

Peel off the double-sided tape on the back of the decorative cover and attach it to the recess of the handle. Installation complete.

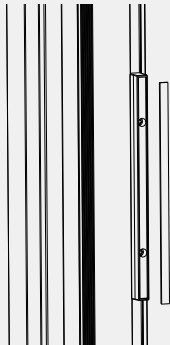

1 Adjustment Methods

Clockwise: Tighten the cord
Counterclockwise: Loosen the cord

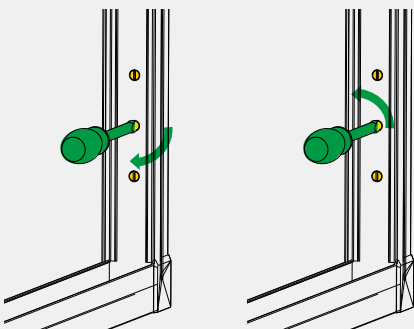

Cord Adjustment Method

If any of the following issues occur during use:

1. Handle tilts: Adjust as needed.
2. High sliding resistance but handle does not tilt: Loosen all cords evenly.
3. Handle springs back and fails to seal: Tighten all cords evenly.

You can use the E-line adjustment mechanism to adjust the cord for optimal performance.

2 Working Principle

The folding screen uses a cross-cord design. Please refer to the picture on the right for the adjustment holes. Locate the cord controlled by each screw hole and make adjustments accordingly. After adjustment, test the sliding operation repeatedly.

