



PURE GARDEN

PATIO AND GARDEN ESSENTIALS

Metal Garden Torch Product Information

(Please observe the details according to the model you have purchased)

Please read this product information carefully before use and retain for further use.

Instructions:

- a) The decorative garden torch is approximately 10 ½ inches in height.

Illustration no. 1



- b) Using a funnel, fill the fuel container with recommended lamp fuel through the wick opening. (Illustration no. 2)

Do not over fill the decorative garden torch and ensure that the fuel does not overflow.


In the event that fuel has poured over the exterior of the decorative garden torch during filling, you must remove this completely or wipe it dry before igniting.

Illustration no. 2



- c) The decorative garden torch has a safety lock with wick protection so that children cannot come into contact with torch oil or suck on the wick. In spite of this, please never leave the decorative garden torch unattended! In delivery condition the wick is already in the lock. The wick should end approx. 1/4 inch above the wick holder (illustration no. 3)


Illustration no. 3

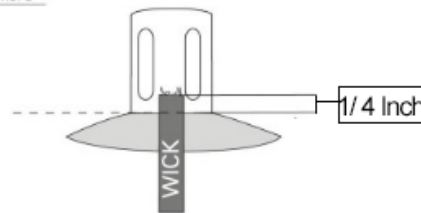

- d) Insert the lock in the oil container together with the wick. Depress and turn the safety lock simultaneously in a clockwise direction, so that the revolving wick protection interlocks in

the lateral notch of the wick holder and can be turned in further in a clockwise direction into the thread. Tighten the lock firmly (illustration 4)


Illustration no. 4

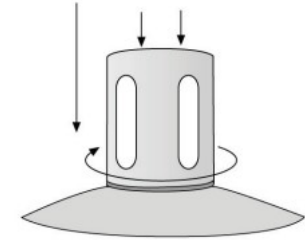

Igniting the Torch:

- Before igniting, wait 5 minutes until the wick has soaked up the fuel.
- Do not touch the candle snuffer until it has cooled down entirely. (illustration no. 5)
- Wait until the torch has cooled down completely before transporting or refilling it.

Illustration no. 5

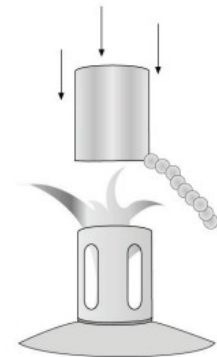


Refilling:

To refill, depress the safety lock and turn simultaneously in an anticlockwise direction, so that the revolving wick protection interlocks in the lateral notch of the wick holder.

Unscrew the lock from the thread in an anticlockwise direction. (illustration no. 6)

Illustration no. 6

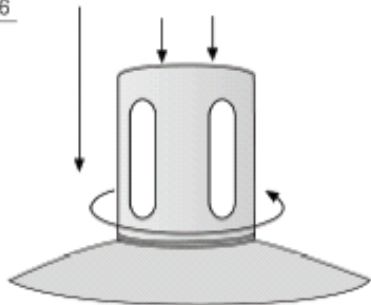

Taking care of the decorative garden torch

It is not necessary to take special care of the torch due to the high quality stainless steel material. You can take care of the decorative oil torch by using a cloth and a recommended stainless steel cleaning agent to restore the natural shine of the stainless steel. If required, you can wipe away any soot at the wick protection using a cloth. Discoloration of the material around the flame because of the high temperatures is due to the natural features of the stainless steel and does not constitute a quality defect. When not in use, we recommend protection against atmospheric exposure.

Wick:

The decorative garden torch should only be used with recommended round fiberglass wicks, approximately ¼ inch in size. In doing so, please ensure that the wick is positioned firmly in the wick holder and that at the same time the wick ends approx. ¼ inch above the wick holder (see

illustration no. 3). The wick opening must be completely sealed off. Because of the purely capillary action of the supplied wick, this does not burn down and does not need to be replaced.

Safety Information:

- The decorative garden torch must be positioned vertically on a stable, level table or on level ground.
- Check stability at periodic intervals.
- Fuel Type: Citronella Torch Fuel from Hardware Stores, Home Improvement retailers or on line.
- Please only use recommended fuel.
- Never use petrol, kerosene or other flammable fluids.
- Keep away from children and animals.
- Only for outside use. Do not use in confined spaces.
- Do not place near combustible objects.
- Do not leave unattended.
- Never move the decorative garden torch when lit or when it is hot.
- Use the candle snuffer to snuff the candle flame.
- Please be sure to observe the warning information on the packaging of the torch fuel you use.
- Please note: the decorative garden torch and the extinguishing cover can become very hot. Please do not move or refill until the decorative garden torch has cooled down. Please ensure that the torch is only stored away in a cool condition.
- The wick shall not be exposed more than 1/2

inches for lighting.



WARNING:

Please keep the garden torch out of the reach of children during operation and storage.

Retain this information for future reference, and make the information available to any third party who may operate the torch.

In the case of small children, just a sip of torch fuel – or even sucking the wick – may lead to life threatening lung damage.

If torch fuel is swallowed, do not induce vomiting. Seek medical advice immediately or contact a poison information center and review these warnings.