



# Let's Yeego

## Who are we?

Yeego, the perfect fusion of fashion and innovation. We are a factory seller specializing in wine cooler and beverage refrigerator.

We pursue fashionable design and innovative technology to create a space full of personality and modernity for you.

Whether you are a connoisseur who loves wine tasting, or a host looking to add unique charm to family gatherings, Yeego products can meet your needs.

Choose Yeego, let us create a fashionable, innovative and wonderful life experience together.



<https://yeegolife.com/>



 
<https://www.facebook.com/yeegolife.official>



<https://www.instagram.com/yeegolife.official>


# Yeego

## PRDUT

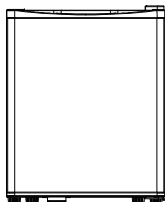


### YG-CR-26A

 VOLTAGE:	115V
FREQUENCY:	60HZ
STORAGE CAPACITY:	0.92 cu. ft.
TEMPERATURE RANGE:	38°F - 72°F

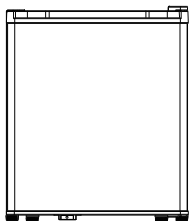

### YG-CR-38A

 VOLTAGE:	115V
FREQUENCY:	60HZ
STORAGE CAPACITY:	1.34 cu. ft.
TEMPERATURE RANGE:	38°F - 72°F

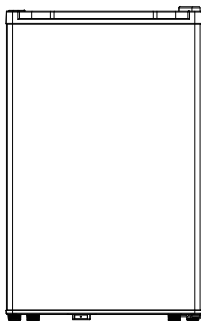

### YG-CR-70A

VOLTAGE:	115V
FREQUENCY:	60HZ
STORAGE CAPACITY:	2.47 cu. ft.
TEMPERATURE RANGE:	38°F - 72°F

# TABLE OF CONTENTS

Safety Information & Warnings .....	01
Parts List .....	02
Assembly & Installation .....	02
Cleaning & Maintenance .....	03
Product Size .....	04
Operating Instructions .....	05
Installation Instructions .....	06
Troubleshooting Guide .....	07
Limited Manufacturer's Warranty .....	08
Customer Service .....	09





**Yeego**



[yeegolife.com](http://yeegolife.com)

## SAFETY INFORMATION & WARNINGS



When using any electrical appliance, basic safety precautions must be followed in order to reduce the risk of fire, electrical shock and/or injury to persons or property. Be sure to read all instructions before using this appliance and observe the following safety tips:

### Attention: Child Entrapment Risk!

---

**To prevent the risk of child entrapment, do not allow children to operate, play with, or crawl inside the unit.** If the unit will not be used for an extended period of time, remove the door and leave the shelves in place so that children cannot crawl inside. Also remove the door when disposing of the unit.



### Shock Hazard –Electrical Grounding Required

---

- Never attempt to repair or perform maintenance on the unit until the electricity has been disconnected.
- Never remove the round grounding prong from the plug and never use a two-prong grounding adaptor.
- Altering or cutting of power cord, removal of power cord, removal of power plug, or direct wiring can cause serious injury, fire, loss of property and/or life, and will void the warranty.
- Never use an extension cord to connect power to the unit.
- Avoid operating this fridge in excessively moist or humid environment.

 


### Important Precautions:

---

- Do not lift unit by door handle.
- Never install or operate the unit behind closed doors.
- Failure to clean the condenser every six months can cause the unit to malfunction.
- Allow unit temperature to stabilize for 24 hours before use.
- Do not block any internal fans.
- Keep the fridge away from hazardous materials or combustible/flammable substances.
- Use only genuine supplier's replacement parts. Imitation parts can damage the unit, affect its operation or performance, and may void the warranty.

## PARTS DIAGRAM

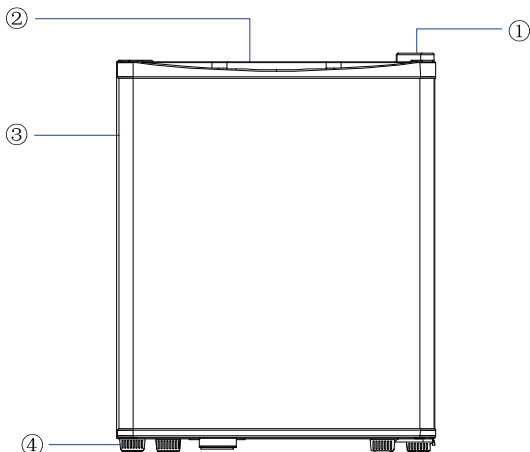

1. Door hinge

2. Door handle

3. Foam door

4. fridge foot

## ASSEMBLY & INSTALLATION



Before connecting the appliance to a power source, let it stand upright for approximately 24 hours. This will reduce the possibility of a malfunction in the cooling system from handling during transportation.

This fridge is a freestanding unit and should not be built in to surrounding cabinetry. Allow for proper air clearance around the fridge.

The recommended clearances are as follows:

Sides:  $\frac{3}{4}$ " (19 mm) | Top: 4" (100 mm) | Back: 2" (50 mm)

## **Before operating your fridge for the first time, follow these steps:**

---

1. Clean the interior surface of the unit with lukewarm water and a soft cloth.
2. Place the fridge on a level surface that will be strong enough to support the unit when it is fully loaded. To level your fridge, adjust the front feet located at the bottom of the unit.
3. Install the fridge away from direct sunlight and heat sources such as stoves, heaters, or radiators. Direct sunlight may affect the unit's acrylic coating, and nearby heat sources can increase electrical consumption. Extreme cold or hot ambient temperatures may also prevent proper performance.
4. Once the fridge is plugged in, let the fridge run for at least 30 minutes. Do not change the temperature or adjust any settings at this time.

## **CLEANING & MAINTENANCE**

### **Cleaning Your fridge**

---

#### **How to clean your fridge:**

- Unplug the fridge and remove anything inside.
- Wash the inside of the unit with a solution made of warm water and neutral detergent. Do not use abrasive cleaners.
- Use mild, soapy water to clean the unit's door seal.
- To ensure efficient operation, also thoroughly clean the back and bottom of the fridge.
- To clean the outside of the unit, use a mild detergent and warm water.

### **Moving Your fridge**

---

 
#### **To move your fridge:**

- Remove anything stored inside.
- Securely tape down all loose parts located inside the unit.
- Turn the leveling feet up to the base in order to avoid damage.
- Tape the door shut.
- Be sure the fridge stays in an upright position during transportation.



## PRODUCT SIZE

### YEG-CR-26A

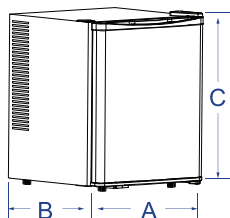


Overall Width (in.) A	14.9"
-----------------------	-------

Overall Depth (in.) B	15.8"
-----------------------	-------

Overall Height (in.) C	18.7"
------------------------	-------

### YEG-CR-38A

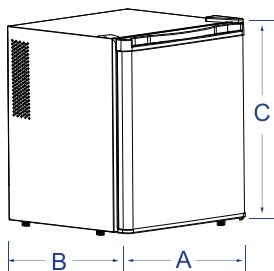 


Overall Width (in.) A	16.9"
-----------------------	-------

Overall Depth (in.) B	17.2"
-----------------------	-------

Overall Height (in.) C	20.3"
------------------------	-------

### YEG-CR-70A

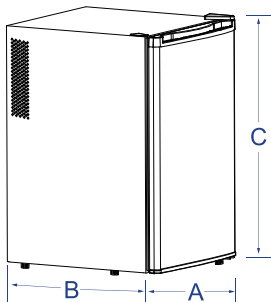 

Overall Width (in.) A	17.7"
-----------------------	-------


Overall Depth (in.) B	20.9"
-----------------------	-------

Overall Height (in.) C	28.6"
------------------------	-------

# OPERATING INSTRUCTIONS
 
## Control Panel

---

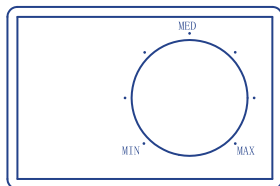

- The first time you turn the unit on, set the temperature control to "MAX"
- To control the internal temperature, adjust the control knob "MAX" according to the ambient temperature or purpose of use.

- Your refrigerator has only one control box for regulating the temperature. The temperature control is located on the upper right hand inside of the compartment.
- The range of the temperature control is from position "MIN" to "MAX" (38°F-72°F). The inside temperature of the thermoelectric refrigerator depends on the room temperature.

### NOTE

- If the unit is unplugged, if the power is lost, or turned off, you must wait 3 to 5 minutes before restarting the unit. If you attempt to restart before this time delay, the wine cellar will not start.

## Optimizing Performance

 
---

- To ensure maximum performance and efficiency, be sure to place your fridge in an area where there is proper air circulation. (See installation instructions above for proper clearances).
- For proper internal air circulation, do not overfill your fridge. When storing wines, keep them away from the rear wall. To allow free circulation of cold air, don't pack wines too tightly on the shelves.
- Do not place the unit in direct sunlight.
- Do not place heated food in your fridge.
- Do not store perishable food in your fridge. The unit's interior temperature may not be low enough to prevent spoilage.
- Do not place heavy objects on top of the fridge.

# INSTALLATION INSTRUCTIONS

- You will need to tilt the fridge backward to access the lower hinge which holds screws. Do not tilt more than 45 degrees and do not lay the fridge flat on its side. Tools Required: Philip head screwdriver, flat headed screwdriver and hexagonal spanner.

1. Remove the upper hinge cover (2).
2. Remove the 2x screws (1) that fix the upper hinge (3) to the appliance and then remove the upper hinge.
3. Lift the door and place it on a padded surface to prevent scratching it.
4. Remove the 4x screws (7) that hold the lower hinge (6) and then remove the lower hinge.
5. Remove the screw (5) and transfer it to the opposite side.
6. install the lower hinge(6) to the opposite side with 4x screws(7) securing it.
7. Remove the cover plate (4) to the opposite side.
8. Set the door to its place making sure the door seats at the lower hinge.
9. While holding the door in the closed position secure the upper hinge onto the appliance with the screws(1). Ensure the door is aligned horizontally and vertically so that the seals are closed on all sides before finally tightening the screws.
10. Install the upper hinge cover on the upper hinge.

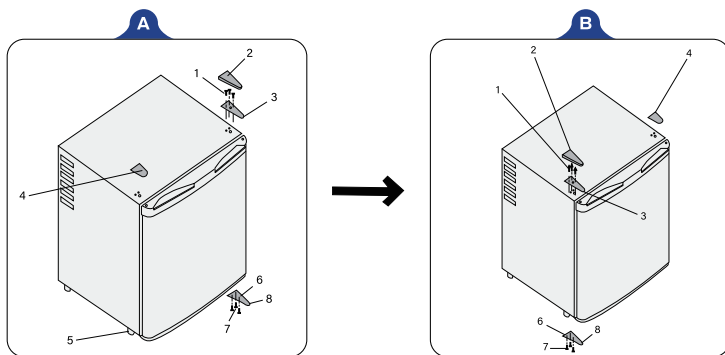

## TROUBLESHOOTING GUIDE

Problem	Possible Causes	Solution
<b>The fridge Does Not cool.</b>	The unit may be plugged in using a different voltage.	Check if using the wrong voltage.
	The circuit breaker may be tripped or there is a blown fuse.	Reset the circuit breaker or check for a broken fuse.
<b>The fridge is not cold enough.</b>	The external environment may require a higher setting.	Lower the temperature of the fridge.
	The fridge may be placed too close to a heat source.	Keep the fridge away from direct sunlight or other heat sources.
	There is insufficient ventilation.	Place the fridge in an area with proper ventilation and clearances.
	The door is not completely closed or the door seal is not working properly.	Close the door tightly. Do not open the door frequently and do not keep the door open for extended periods of time. Replace the seal on the door if necessary.
<b>The fridge seems to make too much noise.</b>	The unit is not leveled.	Adjust the unit's feet and ensure the product is level.
	There is insufficient ventilation. The unit is too close to a wall or another surface.	Allow sufficient clearance around the unit.
<b>An interior red light is flashing.</b>	The set temperature is too low.	Adjust the set temperature so that it is higher than the fridge's interior temperature.
<b>Frost is building up in the unit.</b>	There is excess humidity or the interior temperature is too low.	Turn off the fridge, unplug it, and remove the frost buildup manually. Reconnect the power once the ice has thawed.

# LIMITED MANUFACTURER'S WARRANTY

## 1 Year Warranty Parts

---

For a year (12 months) from the purchase by the original owner, we would provide accessories to replace any part of the unit which proves to be defective in material or workmanship, with installation video or online guide. You could also contact us by email to get a solution.

During this period we will provide all parts necessary to correct such defects free of charge, so long as the unit has been installed and operated in accordance with the written instructions in this manual.

You are responsible for the service labour and freight charges. Cost to move the wine cellar to the servicers' shop and back to the user's home, as may be required, are the user's responsibility.

## What Is Not Covered

---

The following circumstances are not covered by the scope of the warranty, and the user shall pay the corresponding material fee and maintenance fee.

- Damage caused by the violation of the operating procedures.
- Damage caused by the use of unmatched power supply and parts.
- Damage caused by not complying with the instructions during installation and use.
- Any damage caused by man or accident.
- Damage caused by self-maintenance and modification without the approval of the Company.
- Aging or scratches on the product surface shell.
- Free warranty period of more than 1 year.

## Matters Need Attention

---

- If the user finds any quality problem of the product during the use, please contact the customer service and provide this warranty card. After the customer service checks the user information and the factory number, we will provide the warranty service to the user as soon as possible.
- After the expiration of the free warranty, the user can still get the paid maintenance service provided by the company and charge the cost of maintenance.
- Please keep the warranty card properly after purchasing the product. The warranty card must be provided, otherwise it will be invalid.

## CUSTOMER SERVICE

### Read This Guide Carefully.

Keep proof of original purchase date (such as your sales slip) with this guide to establish the warranty period.

Save time and money. Before you call for service, check the Troubleshooting Guide. It lists causes of minor operating problems that you can correct by yourself.

#### User information

#### Product information

Name : \_\_\_\_\_ Product model : \_\_\_\_\_

Tel : \_\_\_\_\_ Purchase date : \_\_\_\_\_

Address: \_\_\_\_\_

### Contact Us

We take pride in delivering excellent service and strive to ensure your satisfaction. If you have any questions or concerns, please reach out to the customer services who serviced your beverage refrigerator and explain your concerns. In many cases, they can address and resolve the issue directly.

Email Us: Please feel free to contact us via our after-sales email address  
([service@yeegolife.com](mailto:service@yeegolife.com))

Maintenance date	Fault content		Maintenance unit	Maintenance person
	Fault situation	Replace accessories		





**Let's Yeego**  
[yeegolife.com](http://yeegolife.com)

