

 
End Table

IMPORTANT

Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.


Carefully and strictly follow these assembly instructions to ensure a completed product as designed.

Do not use power tools above 8 volts to assemble.

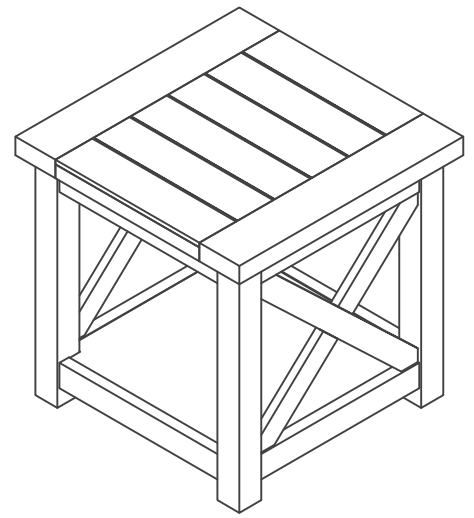


Part List

 A.
Top
1 pc.

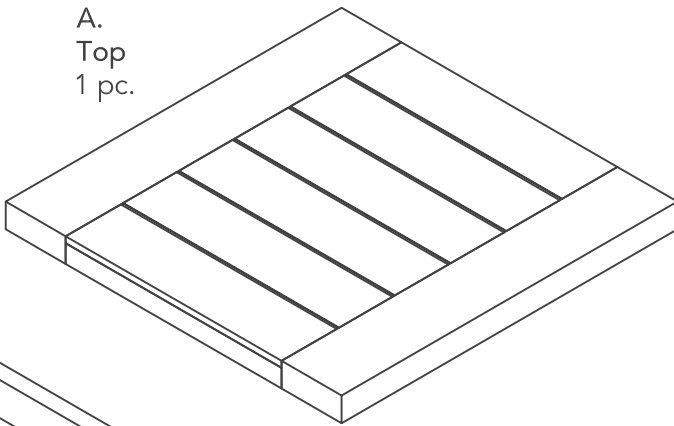

 
F.
Bottom
1 pc.

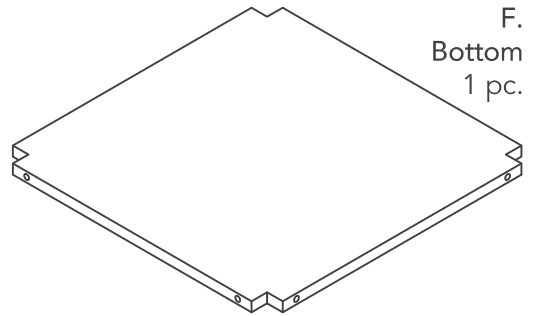


D.
Top Rail
2 pcs.



 E.
Bottom Rail
2 pcs.

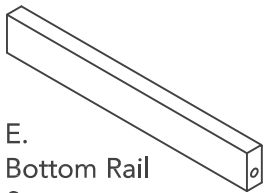

 C.
Side Assembly
2 pcs.

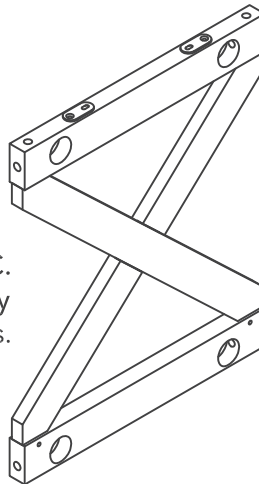

B.
Leg
4 pcs.



Hardware List



 
Cam Lock Screw
8 pcs. (+2 extra)



Cam Lock
8 pcs. (+2 extra)



M4x19
3/4" Flat Head Screw
4 pcs. (+1 extra)



5/16"x3 5/32"
Bolt
16 pcs. (+1 extra)



Flat Washer
16 pcs. (+1 extra)



Nut
16 pcs. (+1 extra)



Wrench
1 pc.

Tool(s) required for assembly: Phillips screwdriver, Level

Assembly Instructions 2/4

 
IMPORTANT

- Use a soft cloth between these parts and the floor.
- Do not use power tools above 8 volts to assemble.
- Do not tighten all the screws until each part is properly assembled.
- The unit must be level to work properly. Use the included adjustable levelers to level.
- Keep Wrench as the Nuts may need to be tightened in the future.

STEP 1

Insert Cam Lock Screws into pre-drilled holes in Side Assemblies (C) and Bottom Rails (E), then tighten.

Insert Bolts into pre-drilled holes of Legs (B), then tighten.

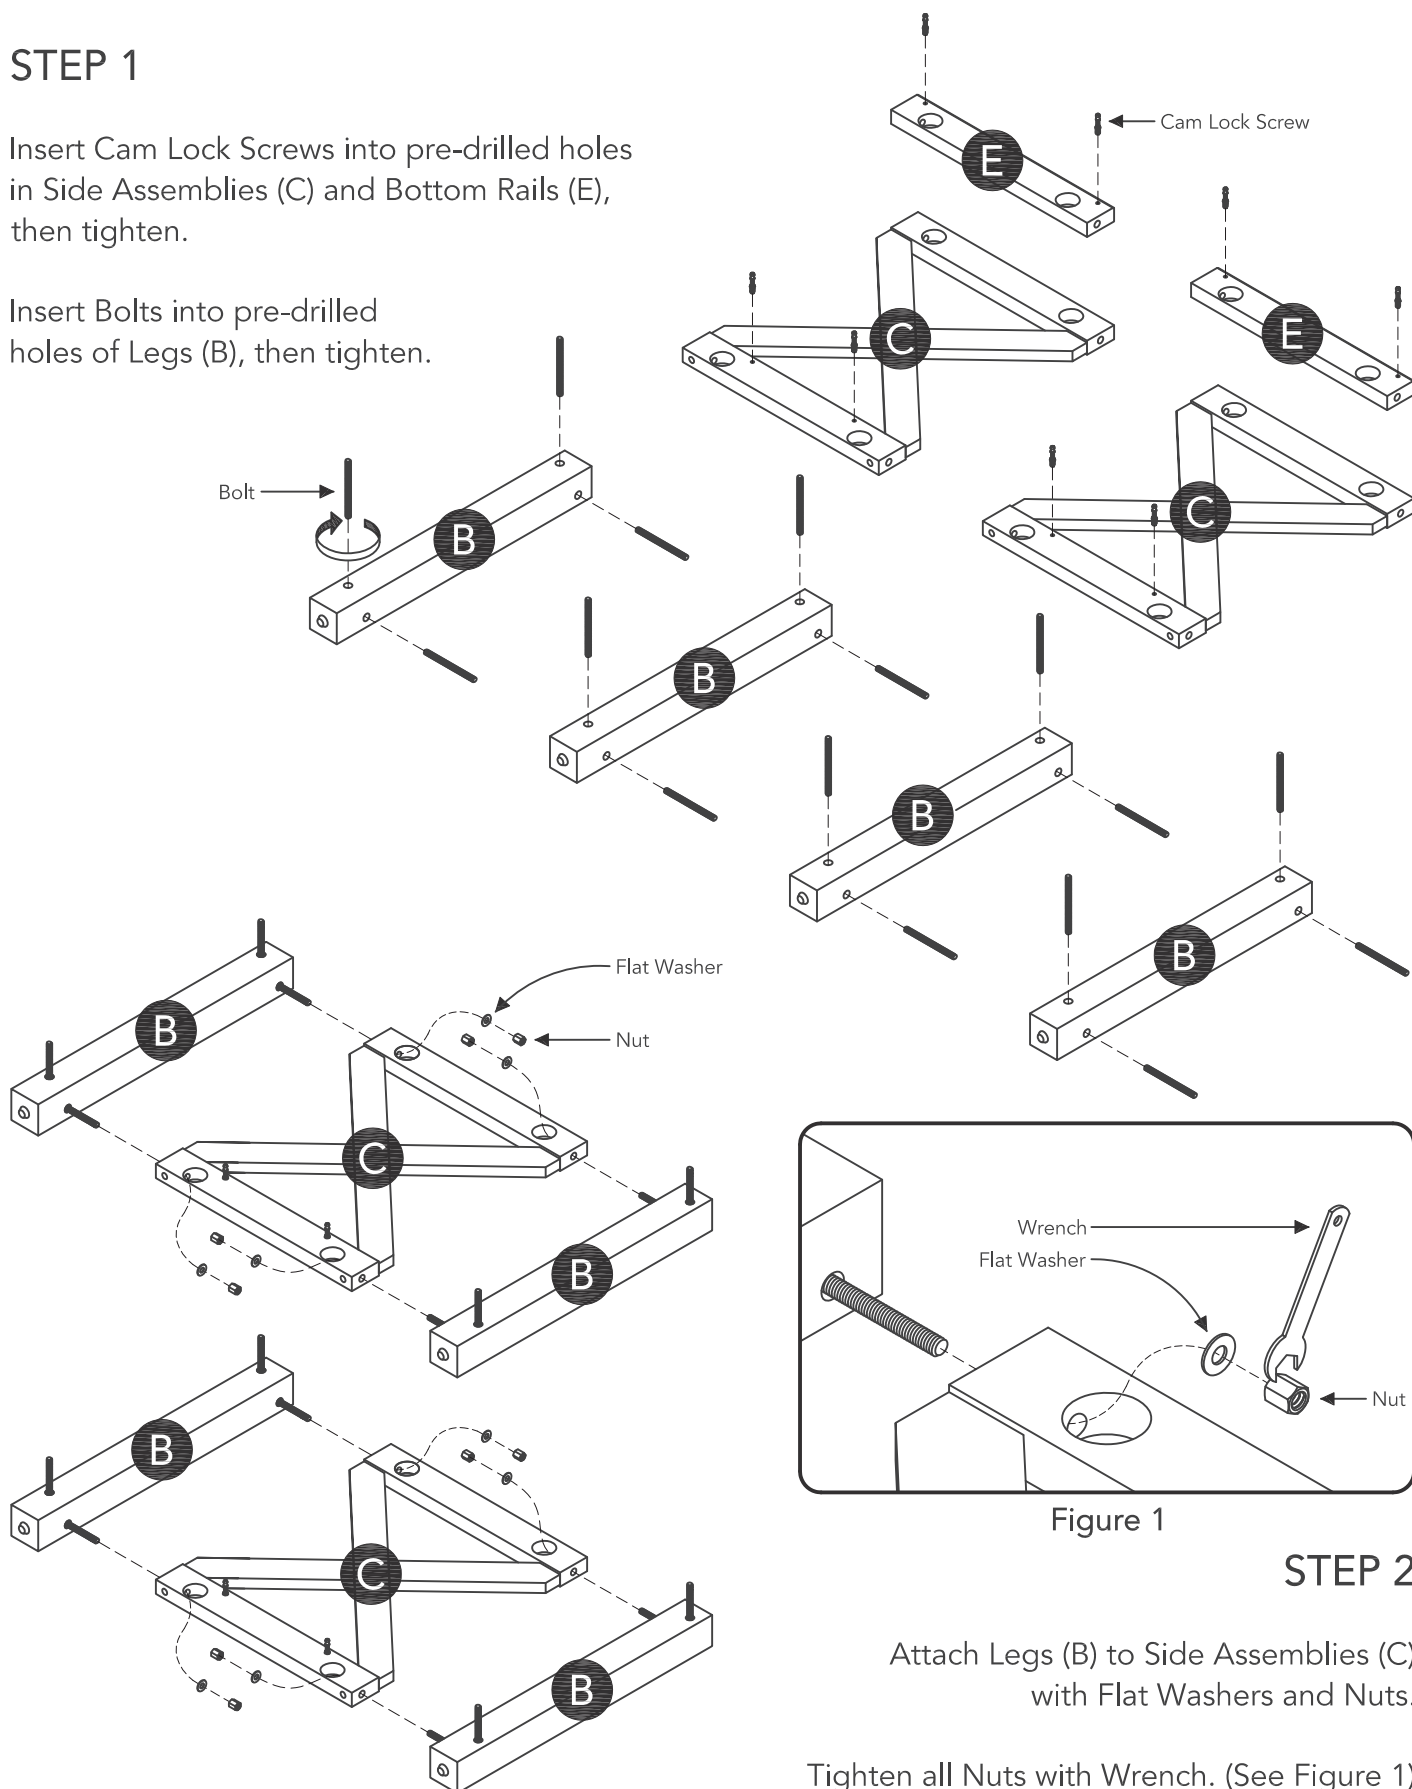

STEP 2

Attach Legs (B) to Side Assemblies (C) with Flat Washers and Nuts.

Tighten all Nuts with Wrench. (See Figure 1)

Assembly Instructions 3/4

STEP 3


 
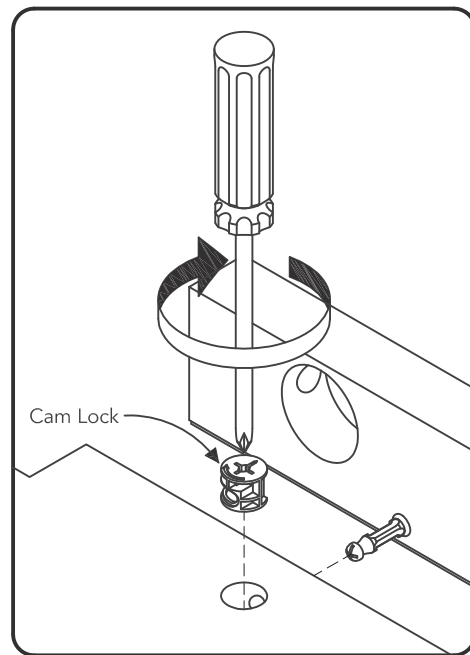 


Figure 2

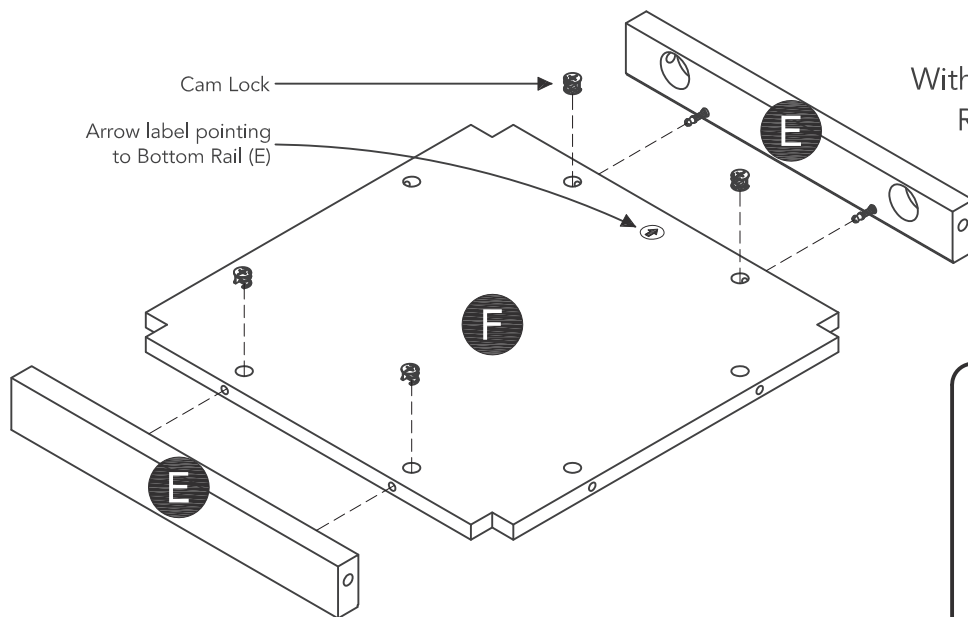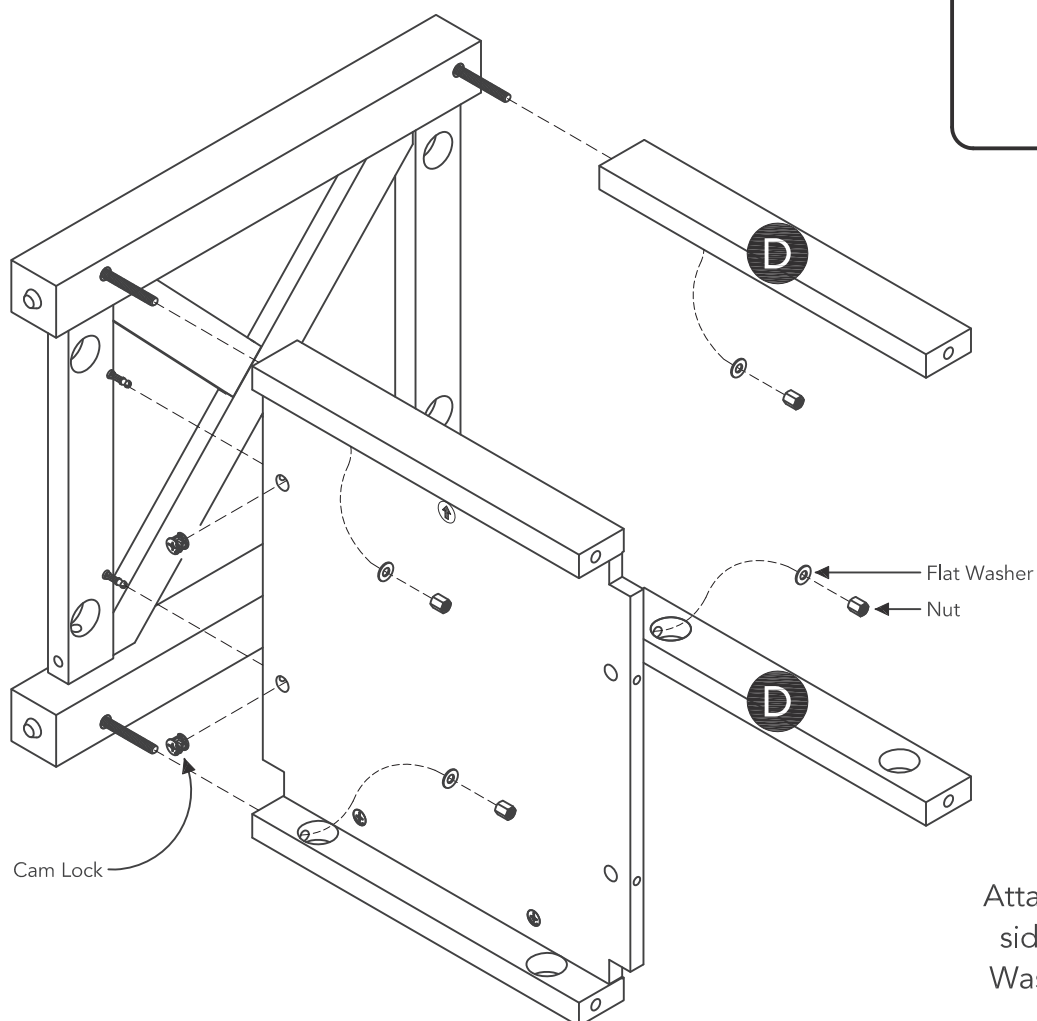 

STEP 4

Attach Top Rails (D) and unit to side unit from Step 2 with Flat Washers, Nuts and Cam Locks.

Tighten all Nuts with Wrench.

Assembly Instructions 4/4

STEP 5

Attach side unit from Step 2 to unit with Flat Washers, Nuts and Cam Locks.

Tighten all Nuts with Wrench.


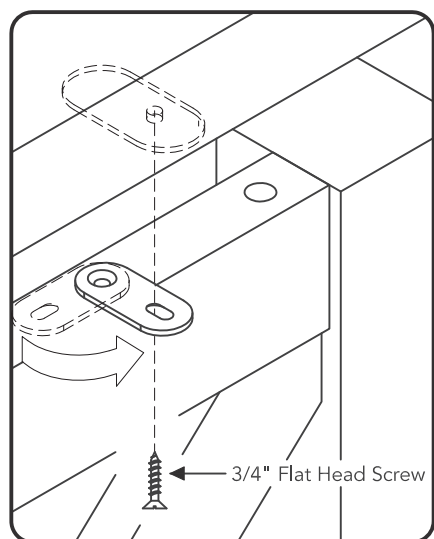 


Figure 3

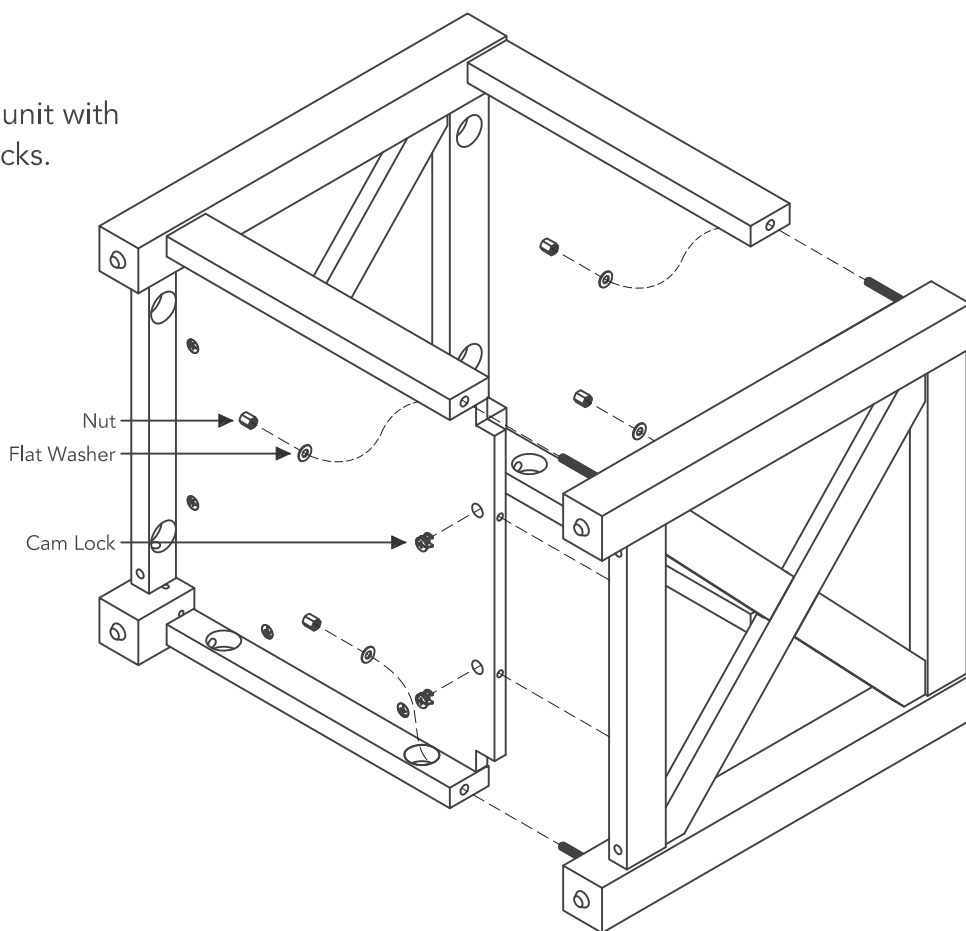 

STEP 6

Rotate metal tabs on unit out and attach Top (A) to unit with 3/4" Flat Head Screws. (See Figure 3)

Level unit by adjusting the adjustable levelers on bottom of unit. (See Figure 4)

Note: Unit must be level to work properly.

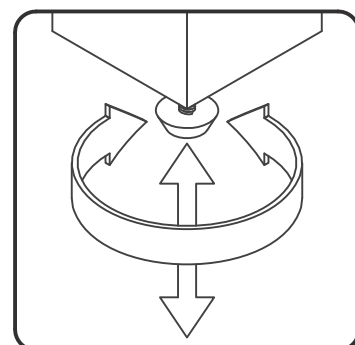 
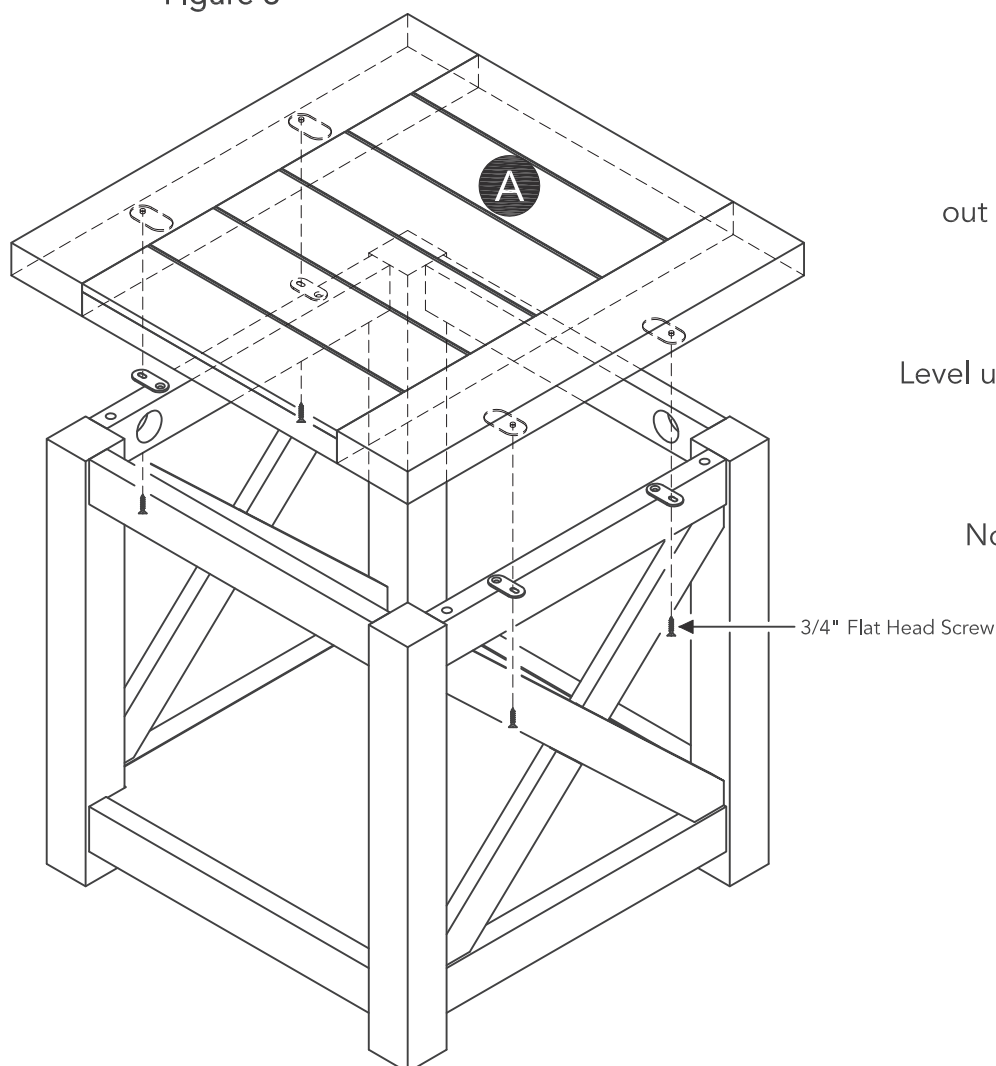 


Figure 4