 


Product Installation Instructions

 
Storage Cabinets

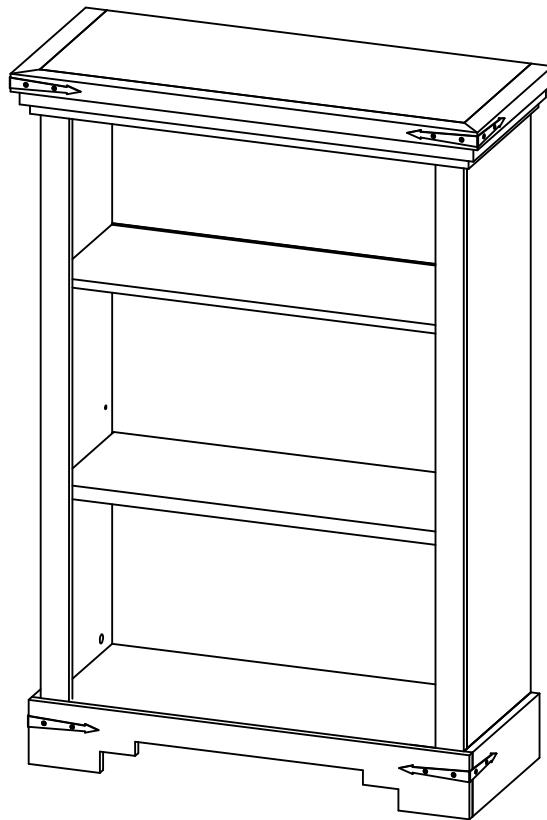

Warm Tips:

The assembly process is both challenging and fun. Please be patient and follow the instructions STEP BY STEP. You will feel exactly proud of yourself when you finish!

Parts list

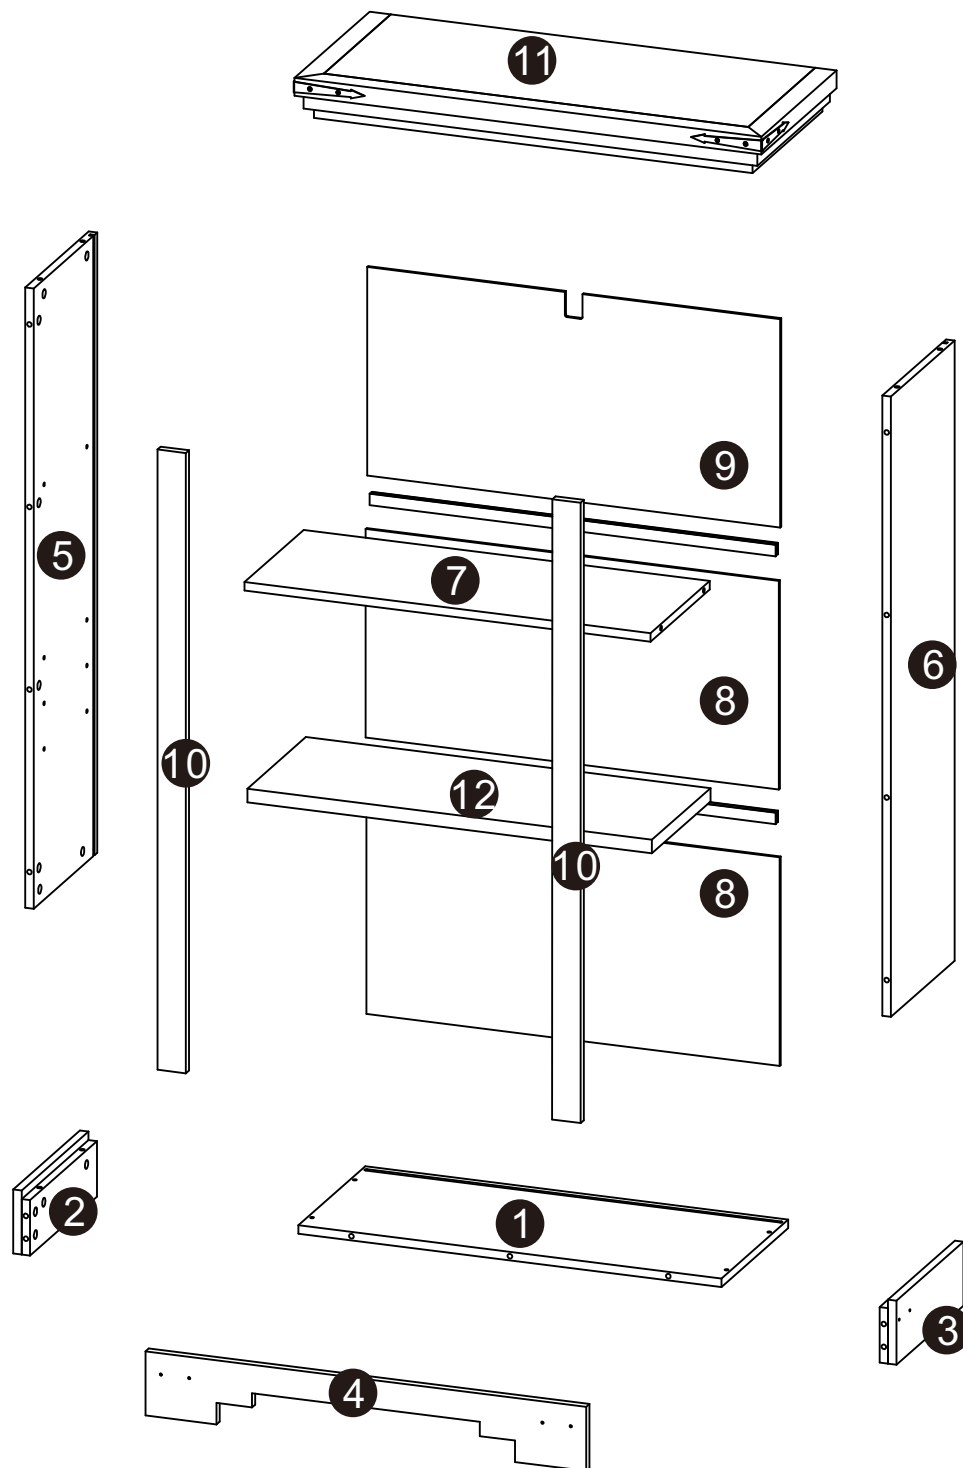

① x 1

④ x 1

⑦ x 1

⑩ x 2

② x 1

⑤ x 1

⑧ x 2

⑪ x 1

 
 
 
 
③ x 1

⑥ x 1

⑨ x 1

⑫ x 1

Hardwarelist

				
A $\Phi 6*28(31+2)$	B $\Phi 12(31+2)$	C $\Phi 20(31+2)$	D X2	E ST4*12(8)
				
F X2	G X(10+1)	H ST3*16(10+1)	I X4	J X1
				
K M5*35(1)	L ST4*35(1)	M ST4*12(1)	X1	

Note: The number after "+" sign indicates the extra piece(s).

Warnings

ATTENTION:

FUNCTION OF KLIX CAM

 
1/2 RIGHT TURN FOR LOCKING

MAKE SURE THE ARROW OVER AGAINST THE TOPSIDE OF CAM LOCK PIN BEFORE INSERTING INTO THE PANEL'S HOLE

IMPORTANT!
After 180° right turn, if there is a gap between the boards, please check whether the cam lock pin is tightened enough.

Lock pin

Klix Cam

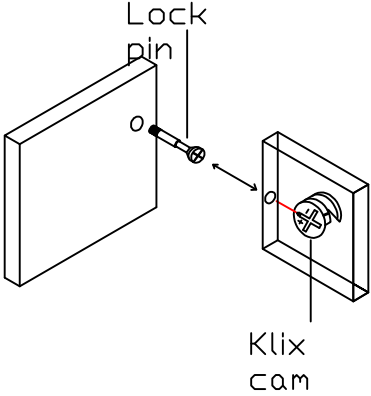


1


A



 x 4

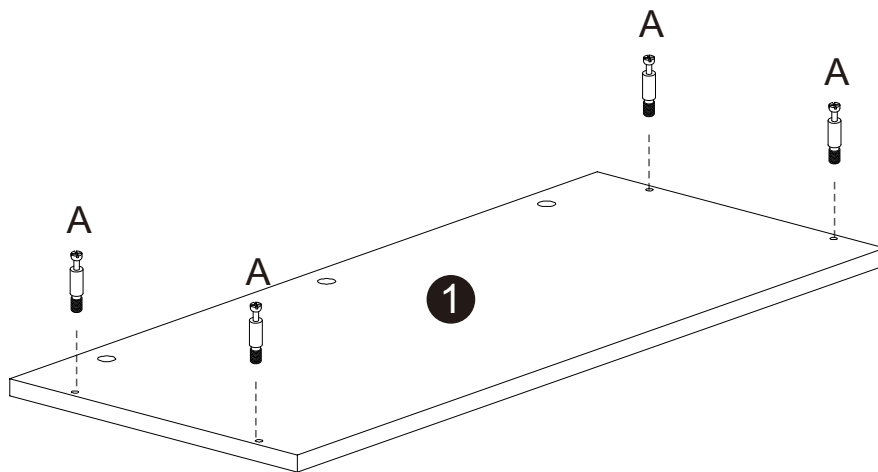

2

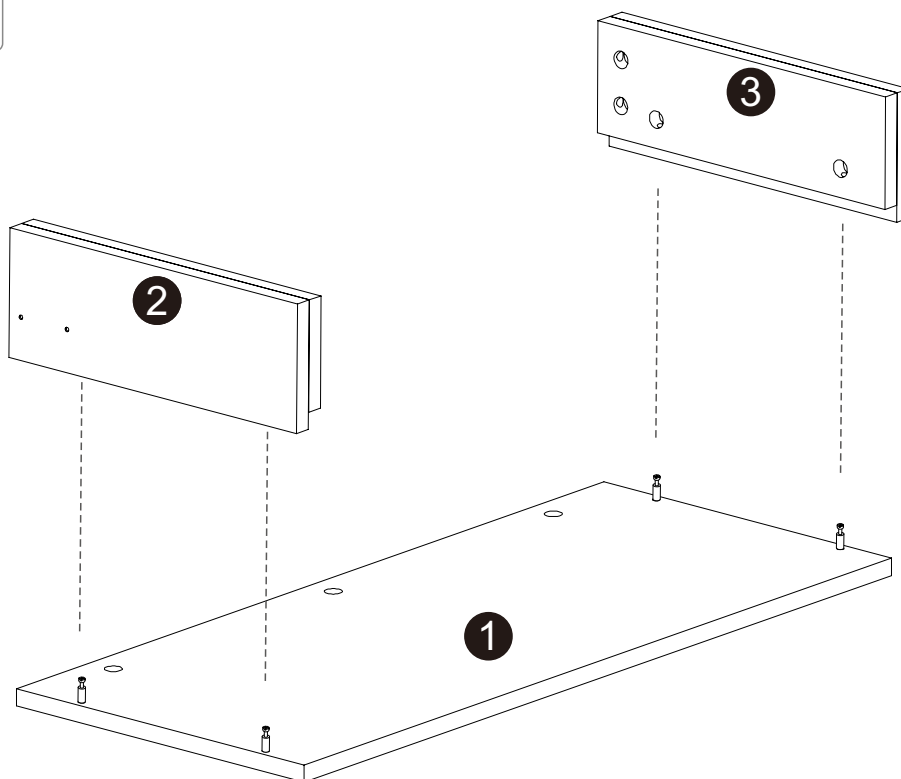 


3

B




 x 4

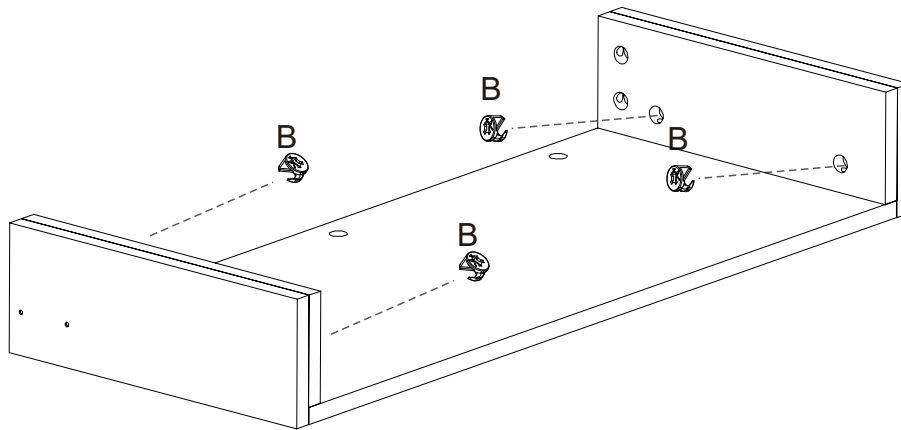


4

 
A



x 7

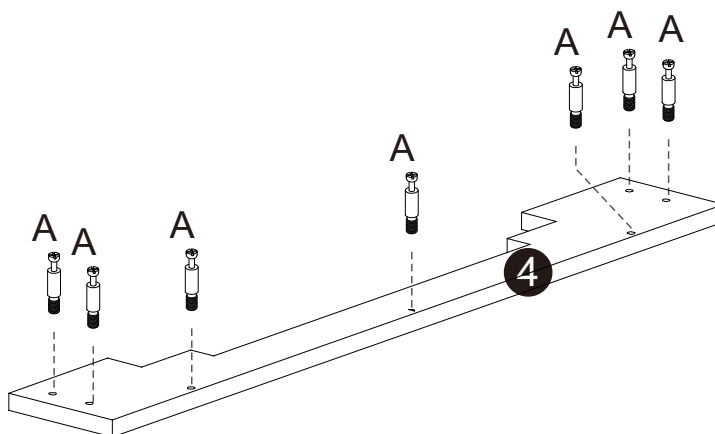 

5

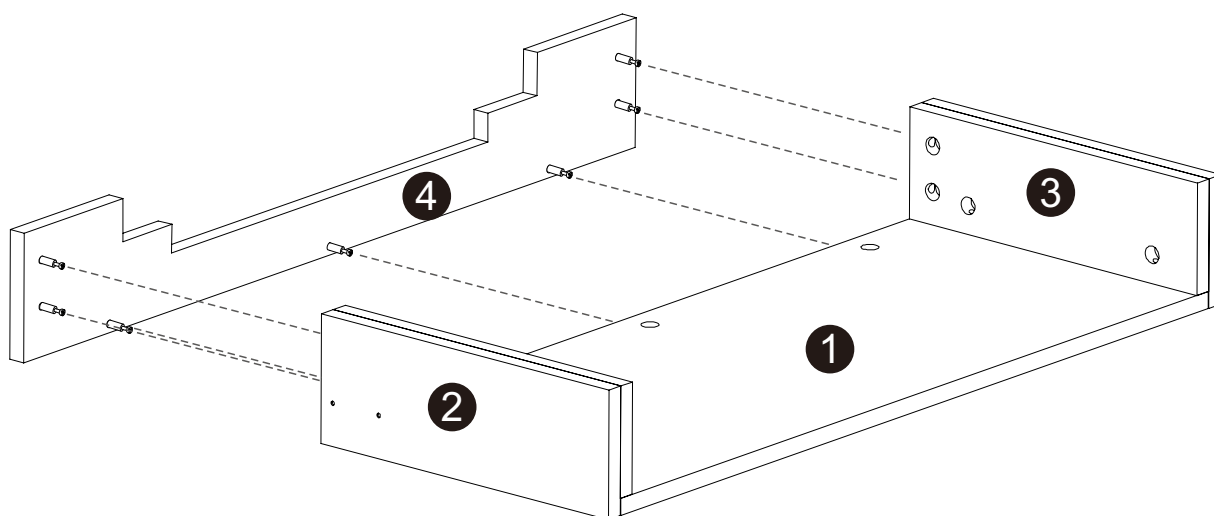 


6

B




 
x 7

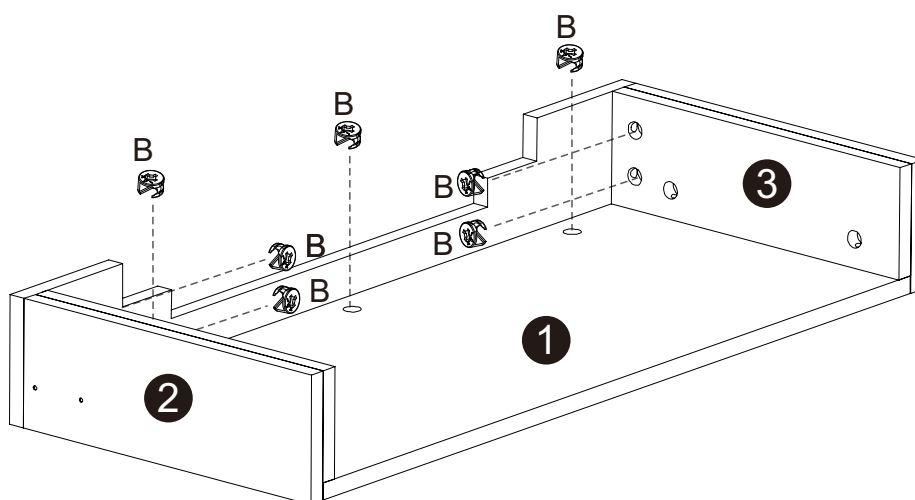

7

C

  ● x 11

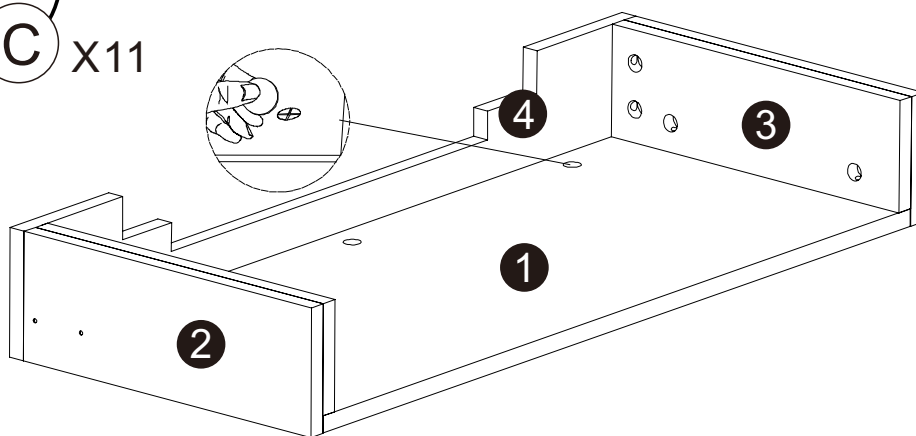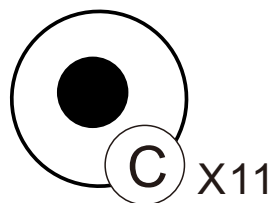

8

D

 
 


x 2

E



x 8

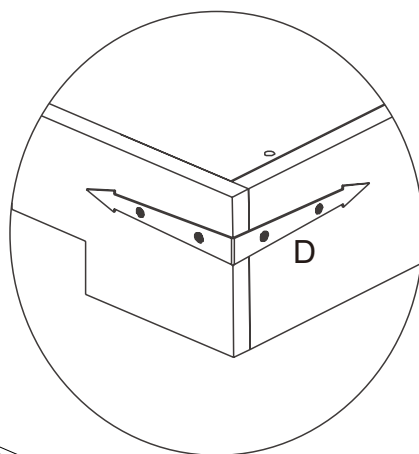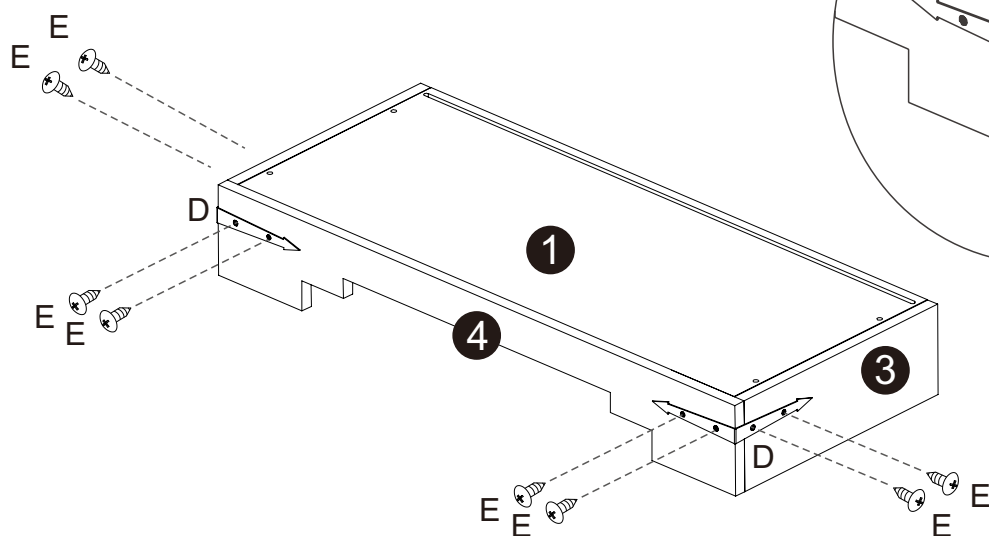


9

A



 x 4

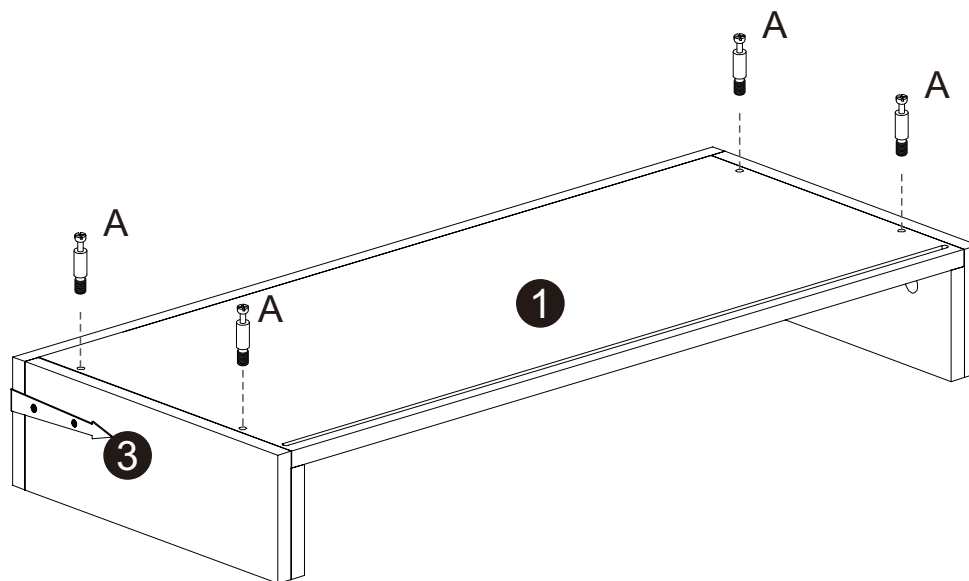


10


A



 x 8

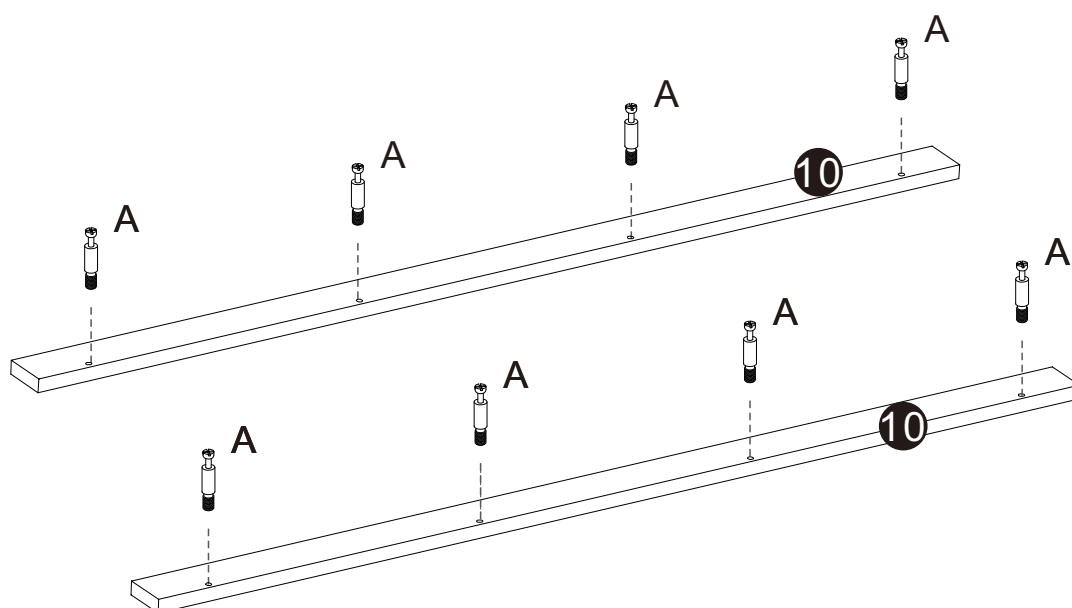

11

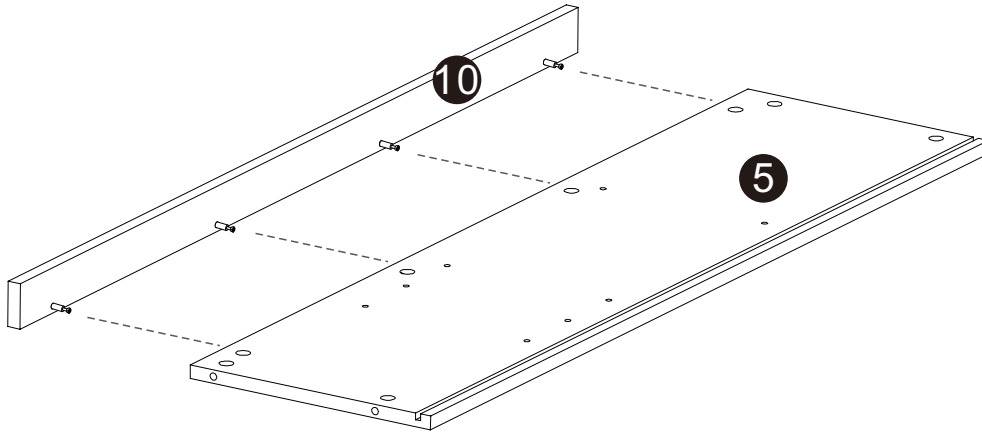 


12

B



 x 4

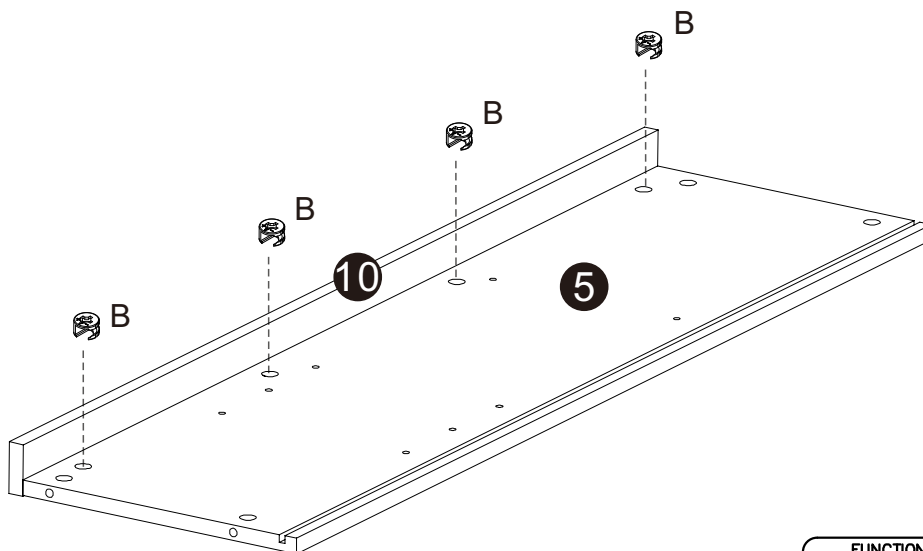


FUNCTION OF KLIX CAM



1/2 RIGHT
TURN FOR
LOCKING

MAKE SURE THE ARROW OVER AGAINST
THE
TOPSIDE OF CAM LOCK PIN BEFORE
INSERTING INTO THE PANEL'S HOLE

 13

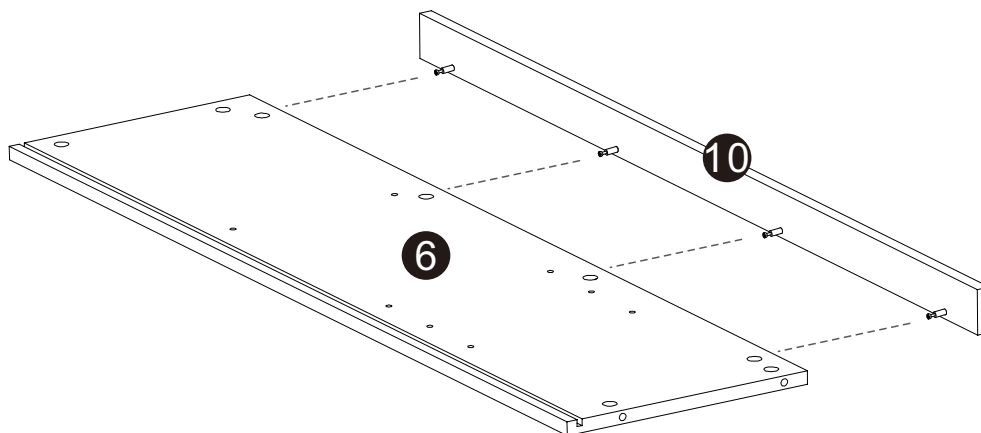


14

B



 x 4

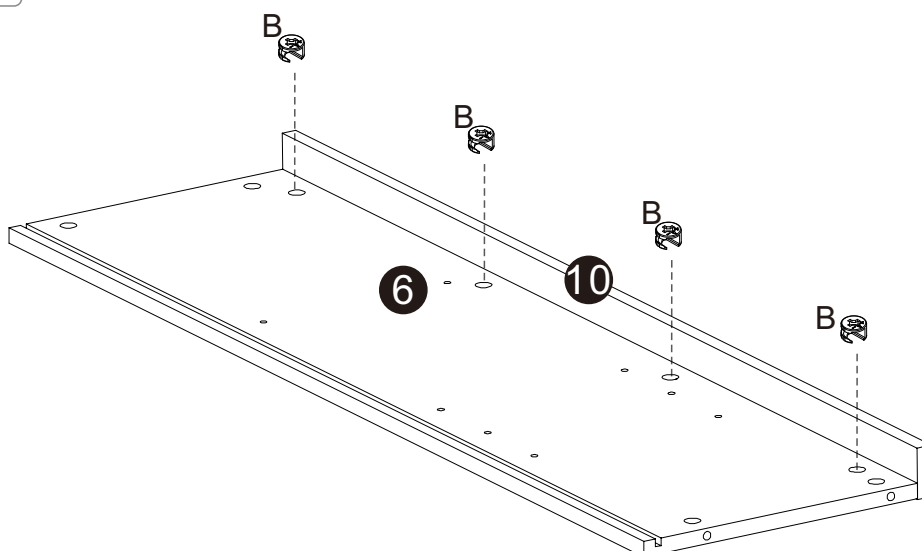

FUNCTION OF KLIX CAM

 


1/2 RIGHT
TURN FOR
LOCKING


MAKE SURE THE ARROW OVER AGAINST
THE
TOPSIDE OF CAM LOCK PIN BEFORE
INSERTING INTO THE PANEL'S HOLE

15


A



x 4

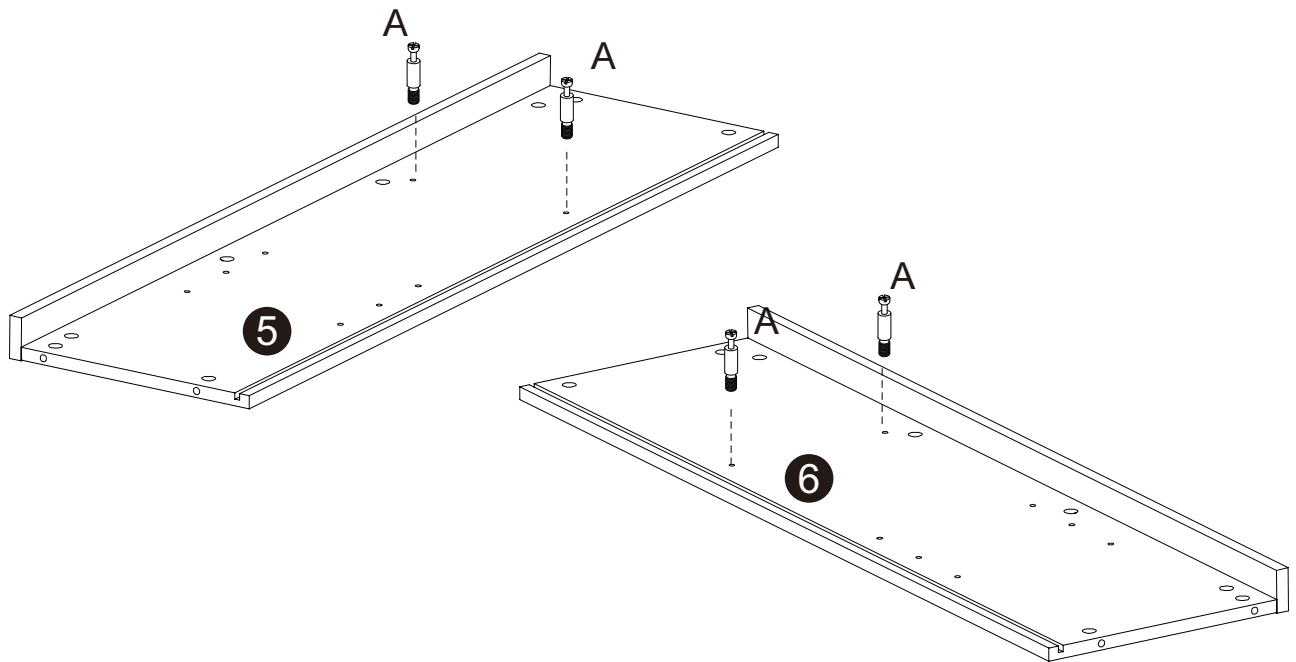 

16

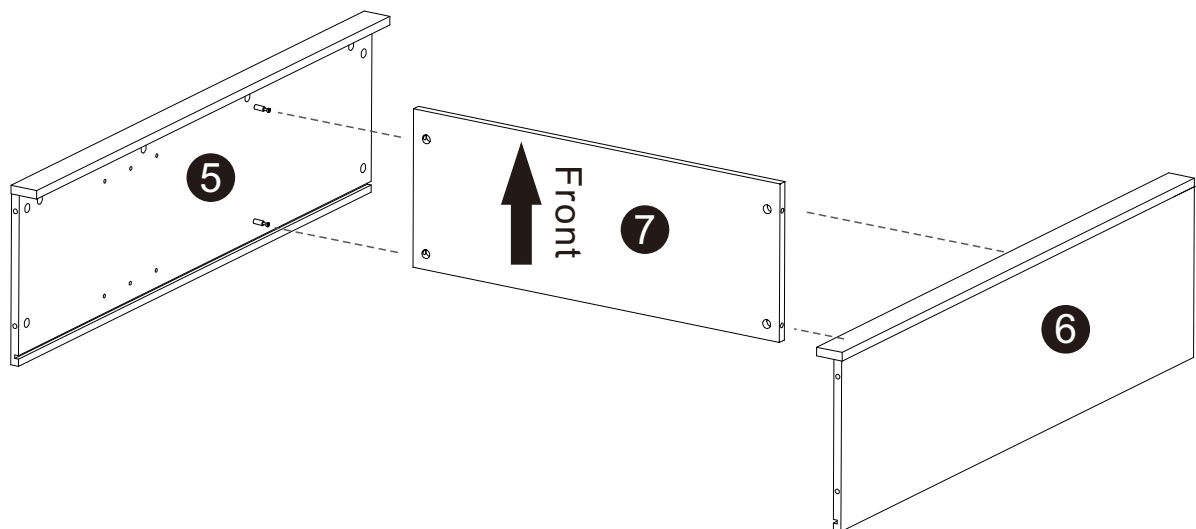 


17


B



 x 4

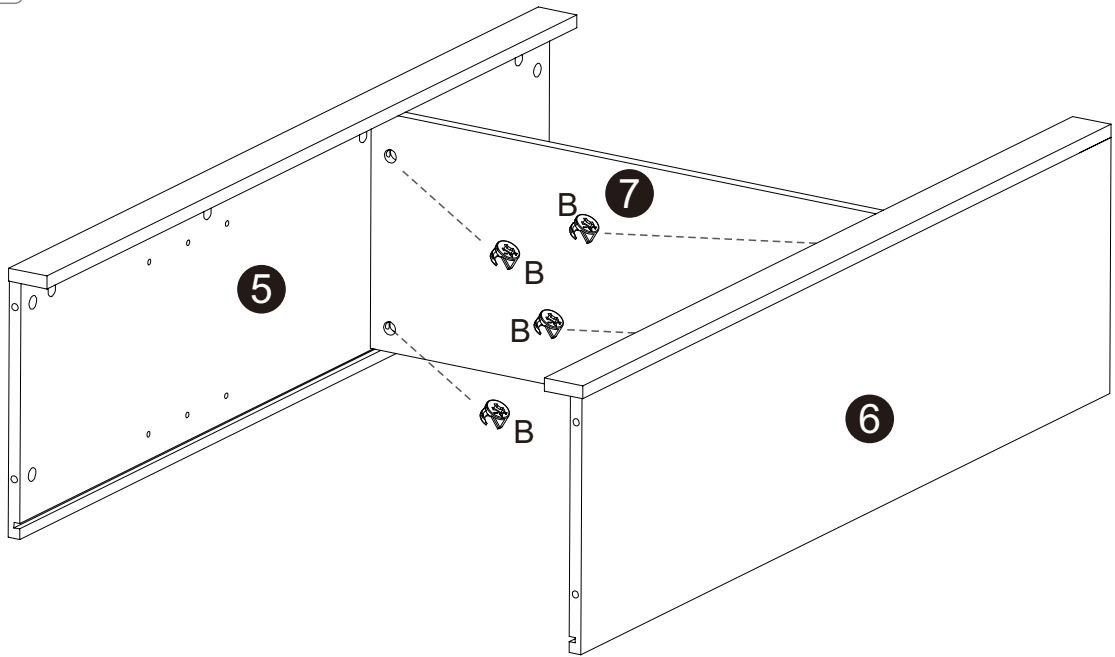

18


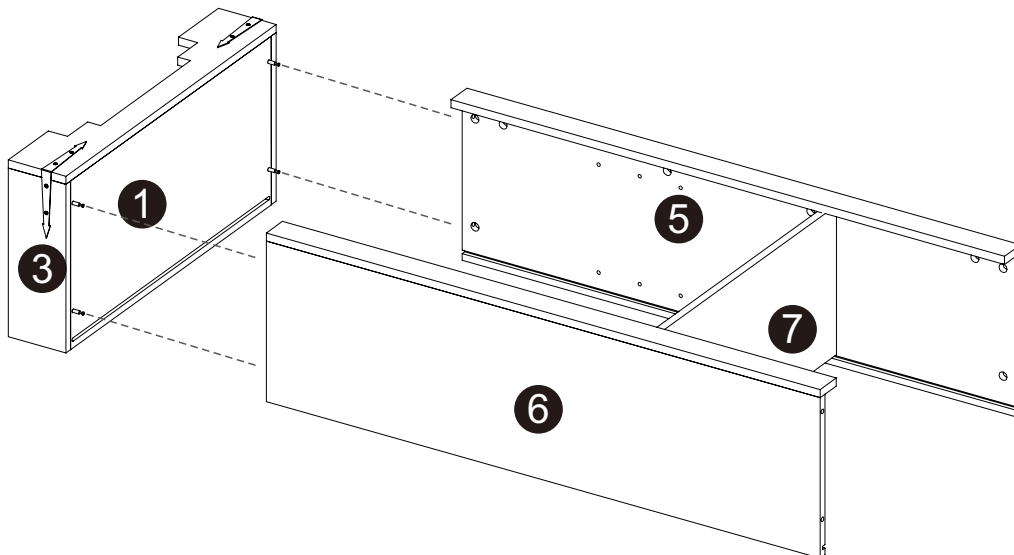 


19

B



  x 4

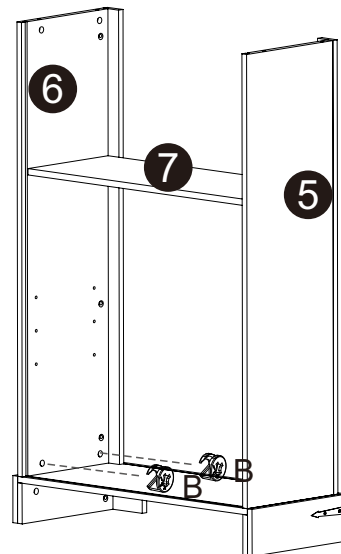
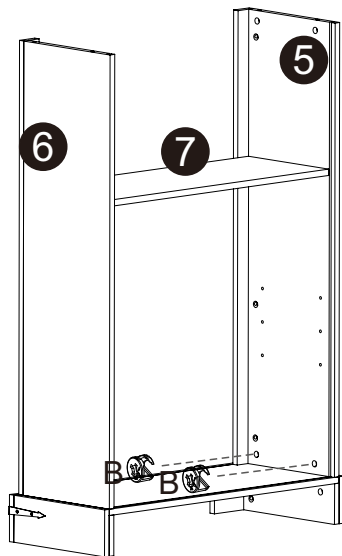


20

F




  x 2

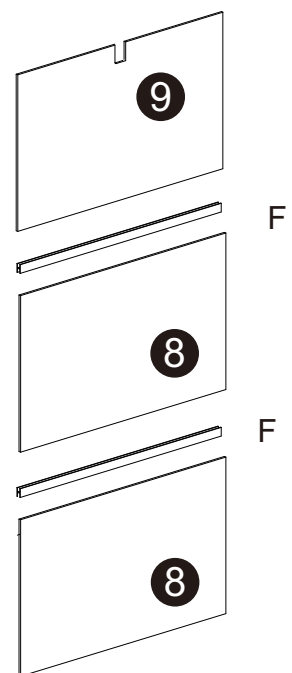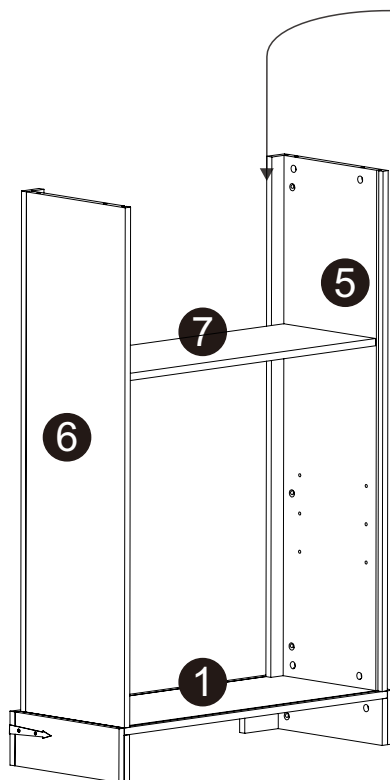


21

 
A



x 4

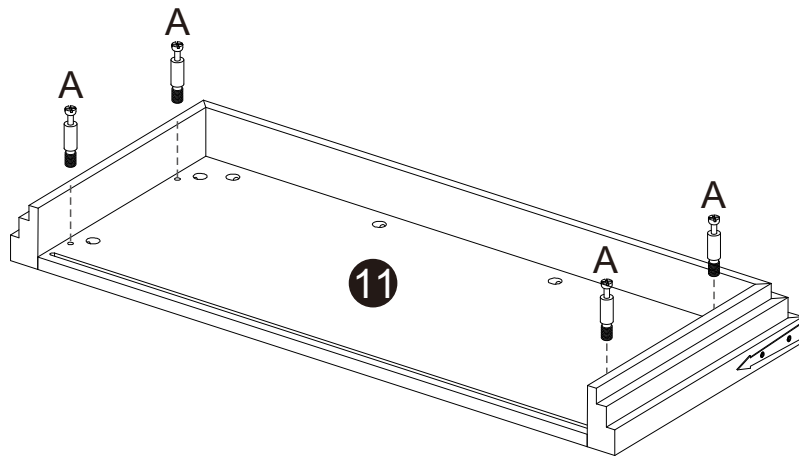 

22


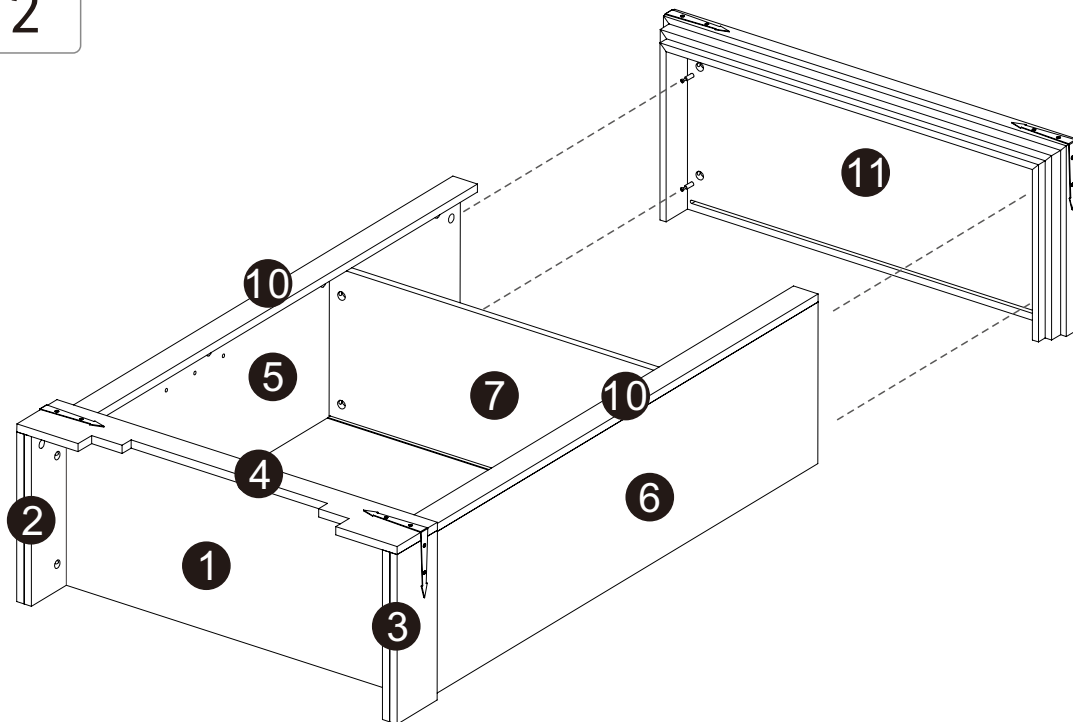 


23

B



  x 4

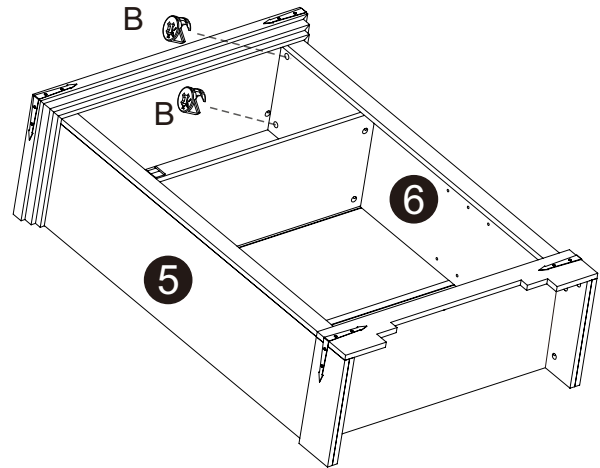
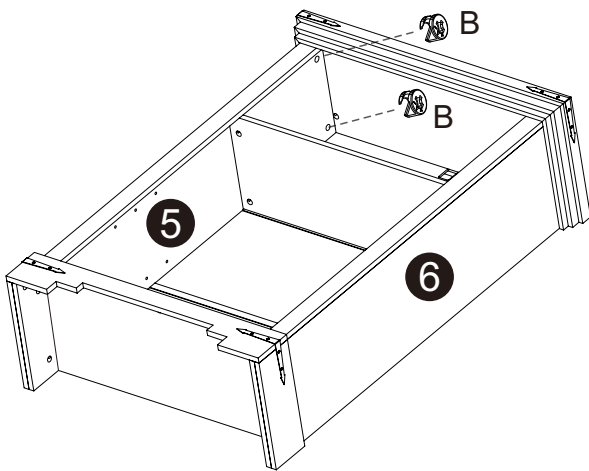


24


I



  
x 4

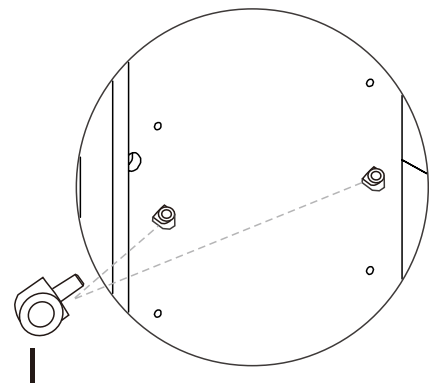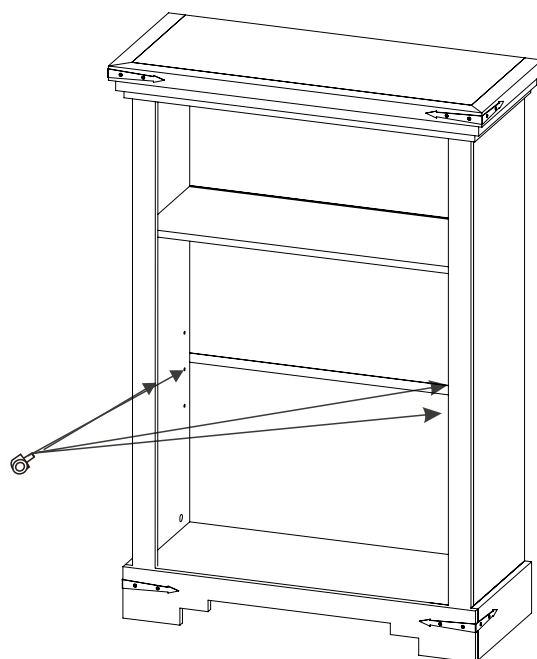

25

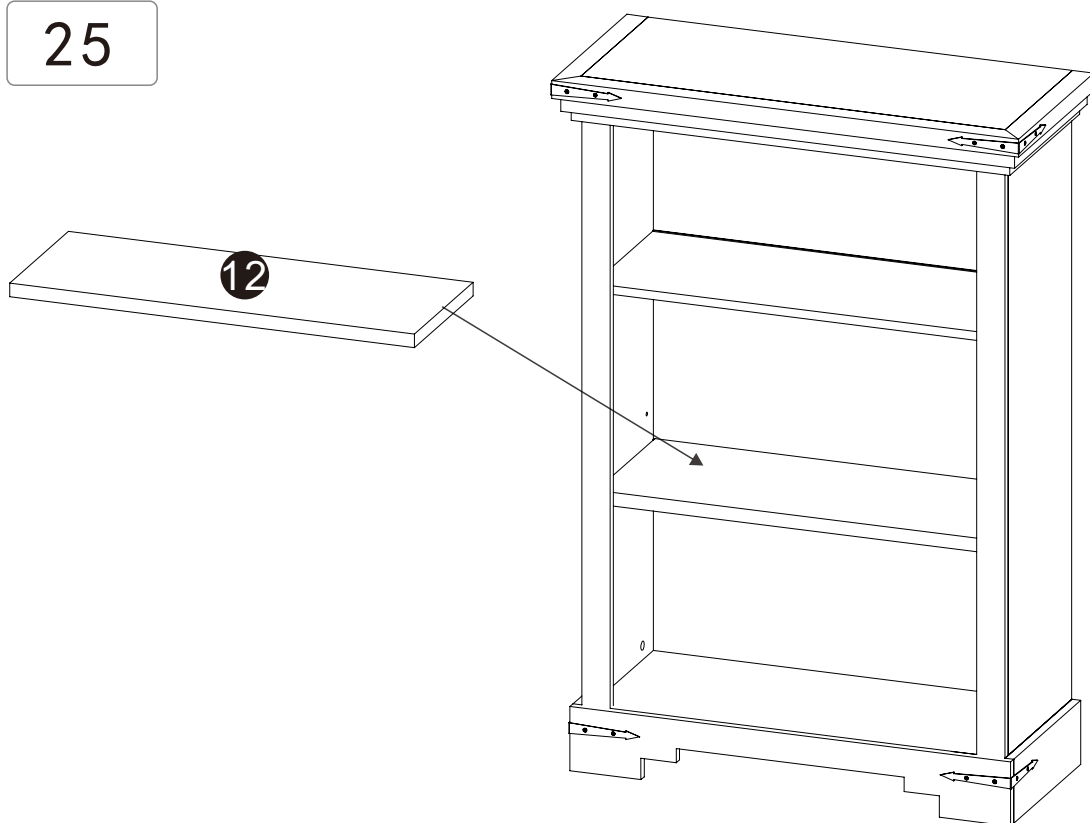 

26

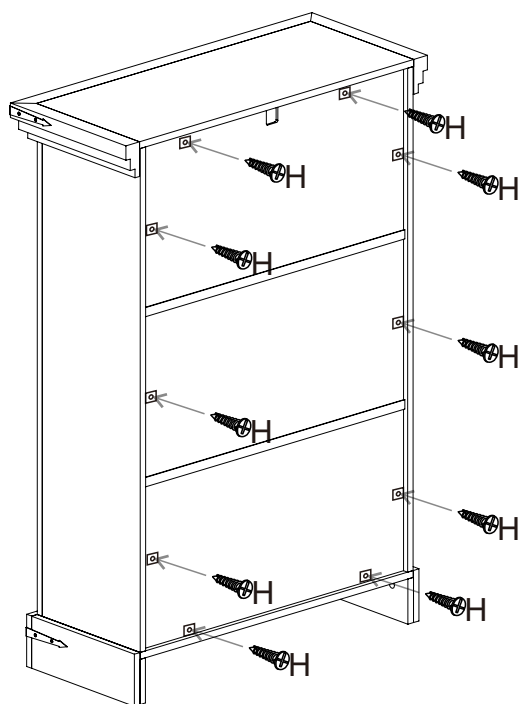 


H

 x 10

G

  x 10

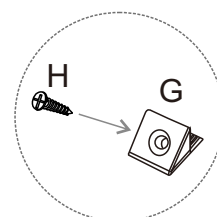


C





x 20

 
27



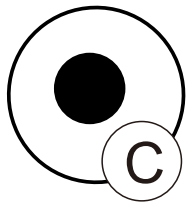


X20

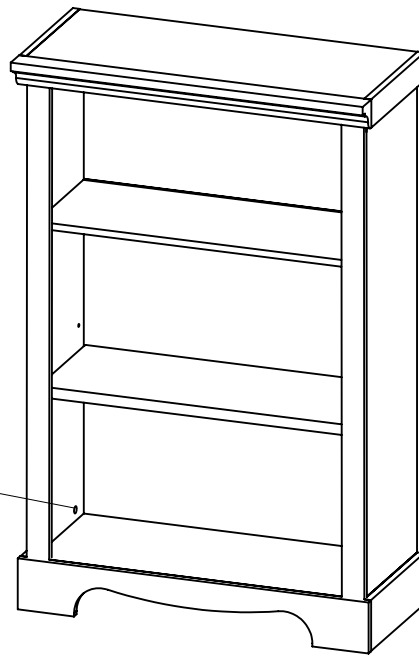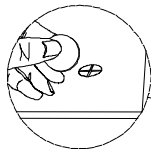  

28

 L	 X 1	J	 X 1
M	 X 1	K	 X 1

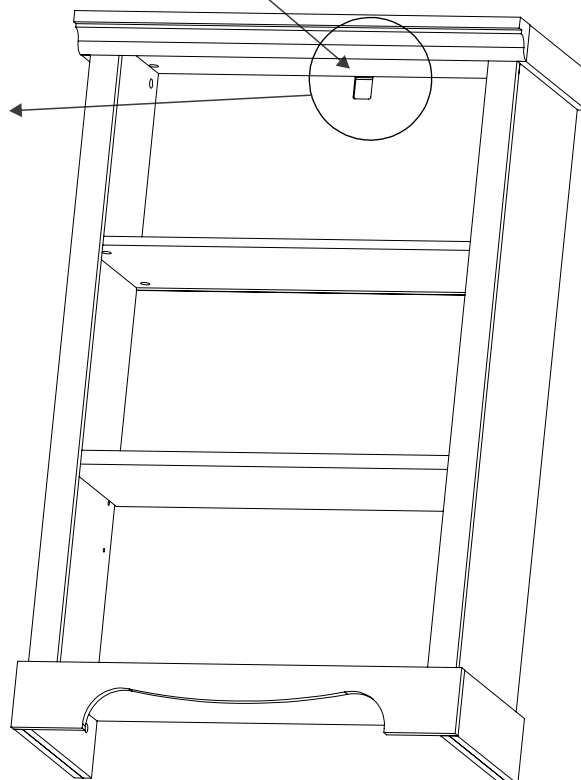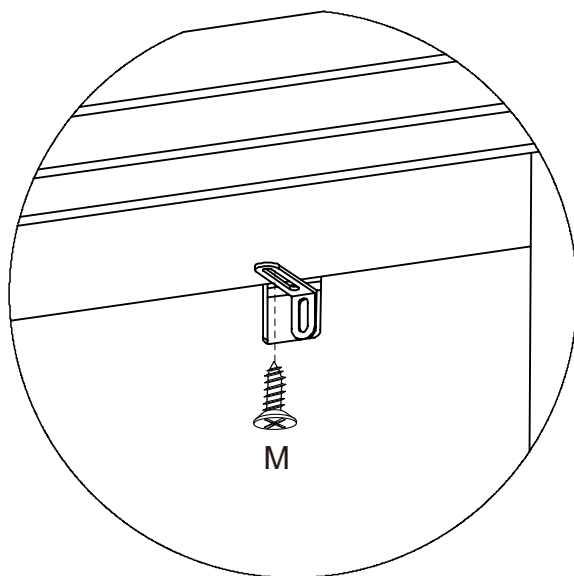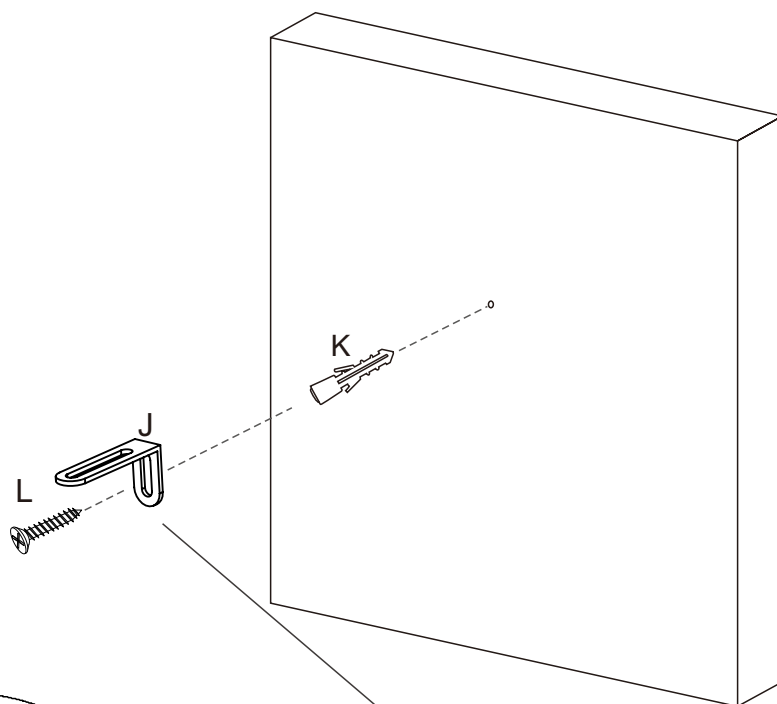   

WARRANTY CARD

Your warranty includes

- **30 Days Money Back Guaranty**

Within the first 30 days of your purchase, you are allowed to return your product for a full refund.

- **30 Days to 3 Months(6 Months)**

We will replace the defective unit due to manufacturer fault with a new one. (You will receive extra 3 Months warranty if you register on our website.)

- **3 Months to 24 Months**

Within 24 Months, we will provide timely and effective online after-sales service after your purchase.

How to return your Products

- Contact us with your order number.
- We will issue you RMA # and return address for your return.
- Please fill out RMA info, tear off this page and leave it inside your return package.
- We will issue replace / return after receiving your return.

Return product details

To get your returns processed as quickly as possible, please fill this form and include it in your return package.

Purchase Name	
Order Number	
Date of Purchase	
Your Email Address	
Where did you buy it	

MADE IN CHINA

