


MANUAL INSTRUCTION

Aluminum double seat sofa

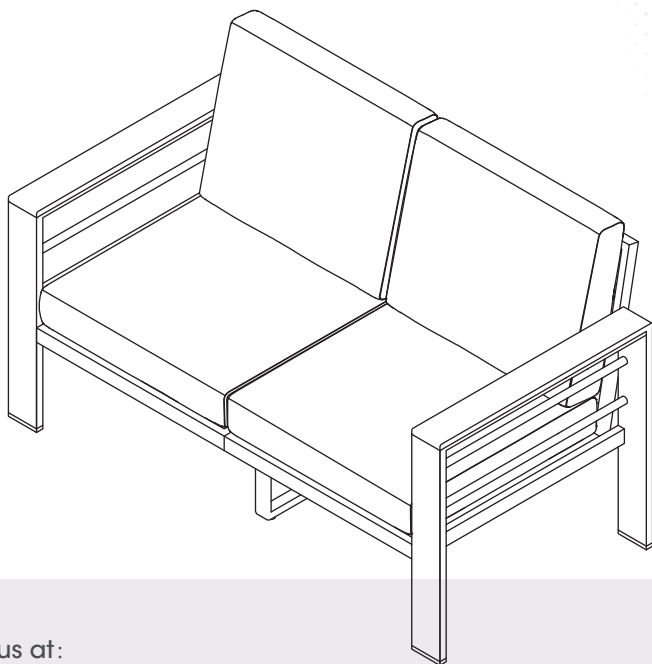

Reach us at:

 service@kmcglobe-us.com


 (only us) +1 213-816-4788

We offer a diverse range of products to
meet the needs of customers.

PARTS

A


Right Armrest

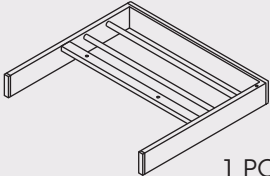

1 PC

B


Left Armrest

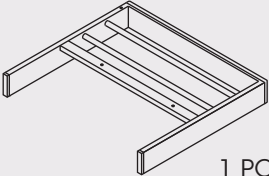

1 PC

C


Seat plate

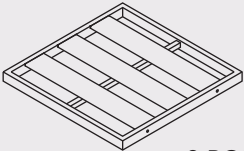

2 PCS

D


Back plate

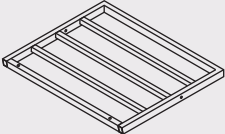

2 PCS

E


Seat cushion

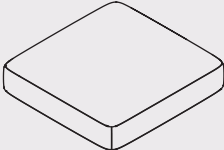

2 PCS

F


Back cushion

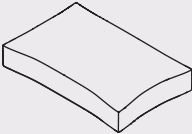

2 PCS


G

 Middle leg



1 PC

O

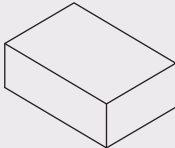

1 PC

HARDWARE

1

4MM



1 PC

2

M6X35



6 PCS

3

M6X45



4 PCS

4

M6X55



3 PCS

5



12 PCS

6

M6



3 PCS

7




1 PC

I PRODUCT ASSEMBLY


1 Step 1

PART	NO.	QTY.
	C	2
	G	1
	4	2
	6	2

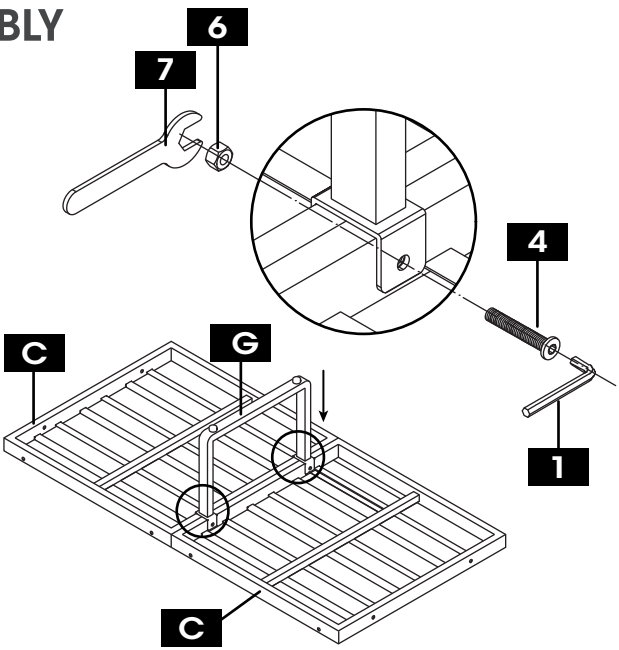

2 Step 2


PART	NO.	QTY.
	D	2
	4	1
	5	2
	6	1

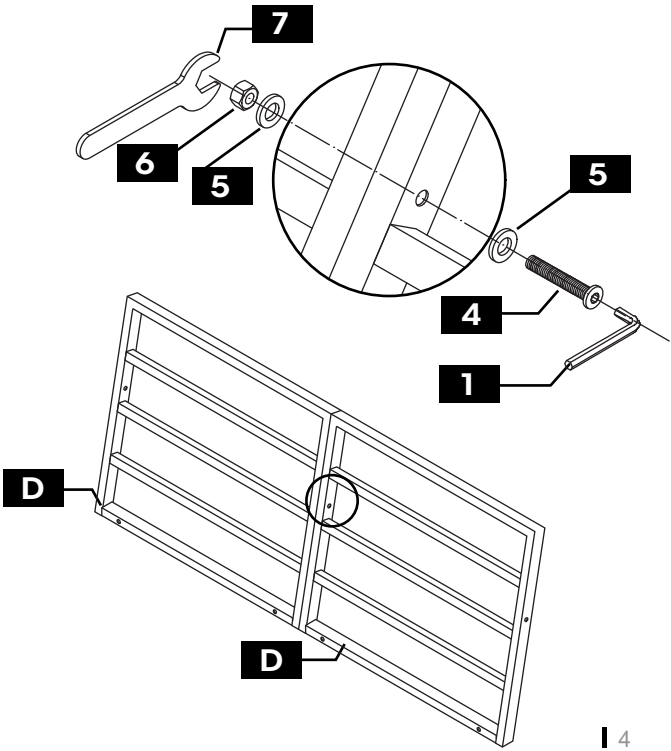

I PRODUCT ASSEMBLY



3 Step 3

PART	NO.	QTY.
	3	4
	5	4

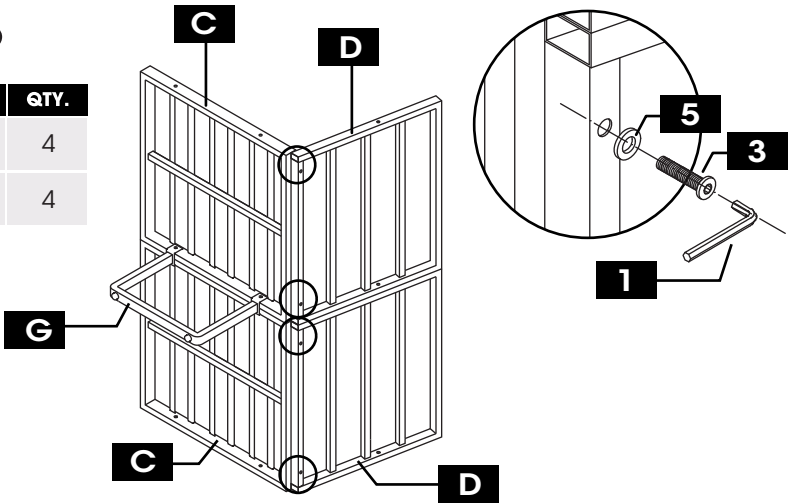

4 Step 4


PART	NO.	QTY.
	A	1
	5	3
	2	3

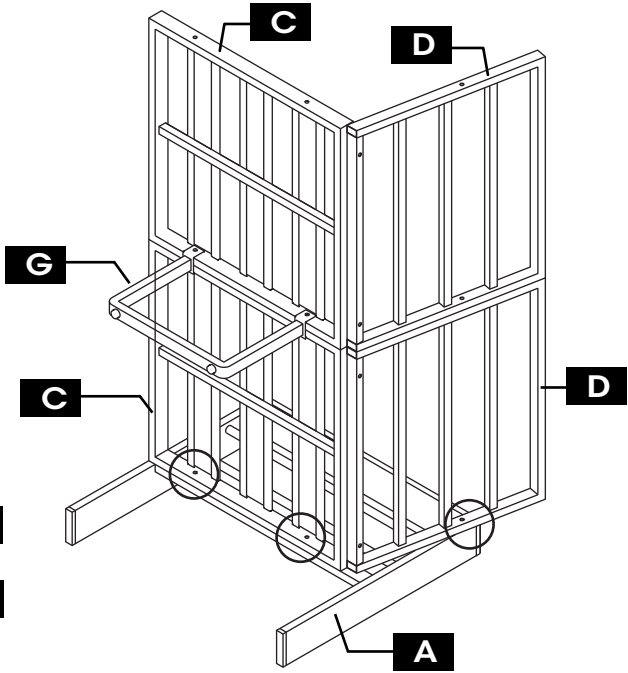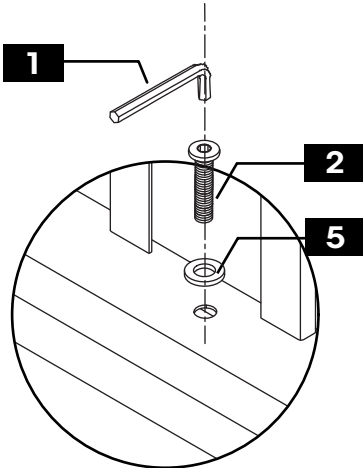

I PRODUCT ASSEMBLY


5 Step 5

PART	NO.	QTY.
	B	1
	5	3
	2	3

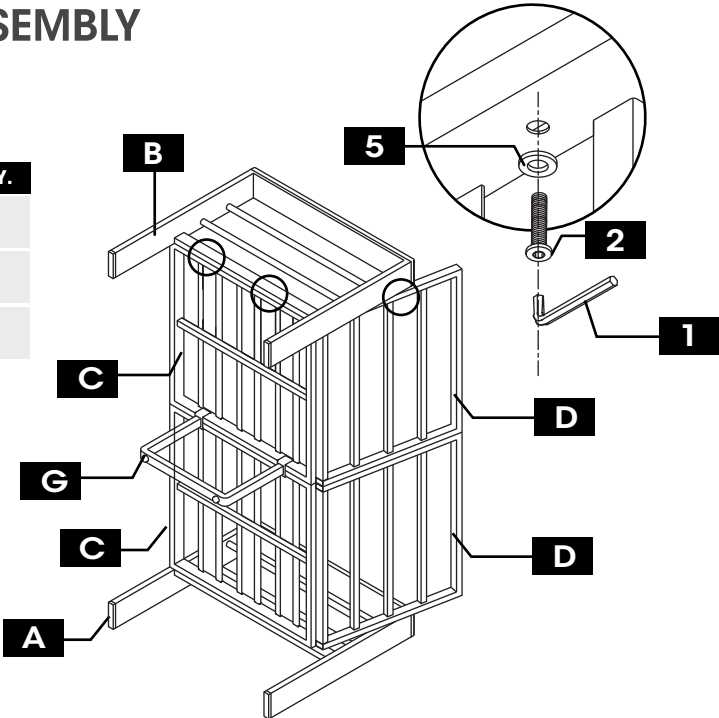

6 Step 6

PART	NO.	QTY.
	F	2
	E	2

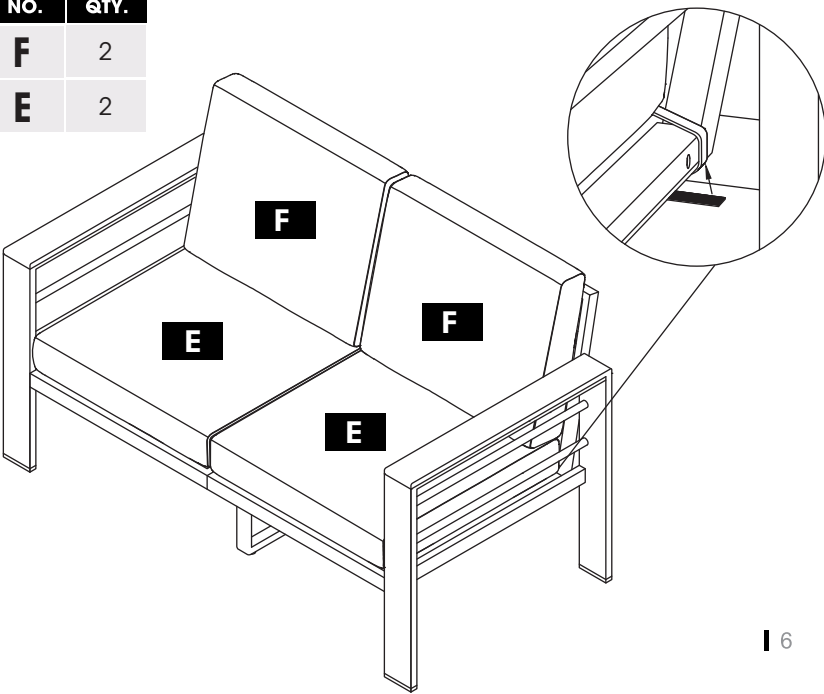

I PRODUCT ASSEMBLY

7 Step 7

PART	NO.	QTY.
	0	1

Cover the furniture with dust cover O when not in use or when it rains

