 


INSTALLATION

 
 
Product Manual

Version: 760021-01-26A-CXZ

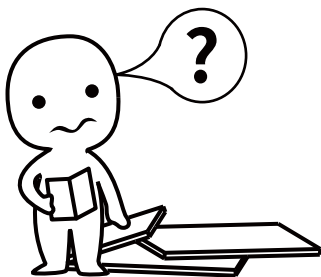


IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

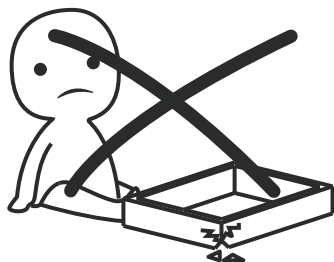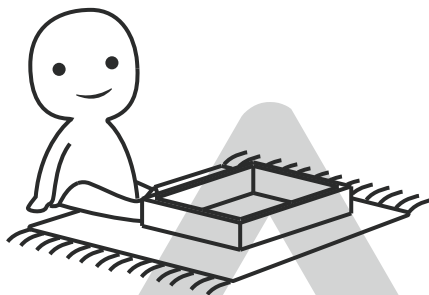



AVOID SCRATCHES!

 In order to avoid scratching this furniture should be assembled on a soft layer—could be a rug.

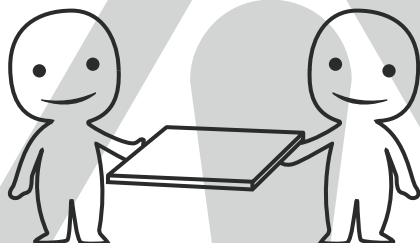

IMPROVE EFFICIENCY !

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

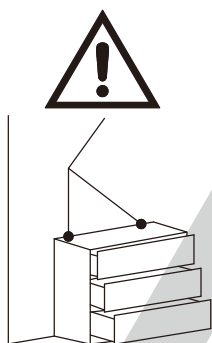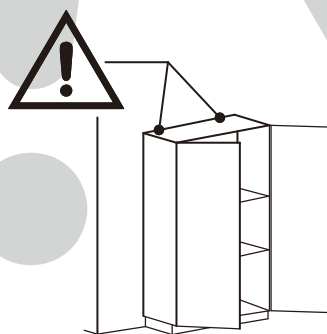

ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !




It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

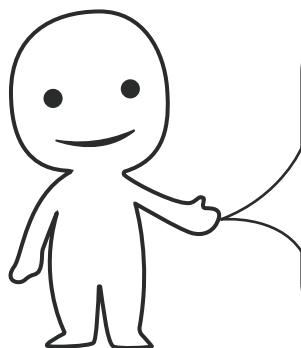


Please prepare the following tools

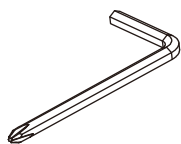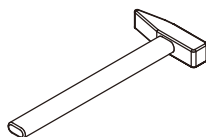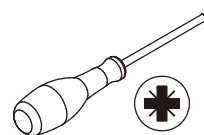   


When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

 A x 62

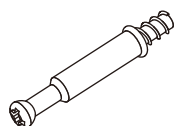

Ø 6 x 28 mm

 B x 62

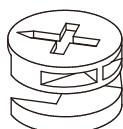

Ø 12 x 10 mm

C x 40



 
Ø 6 x 30 mm

D x 39




Ø 3.5 x 12 mm


E-CL x 2

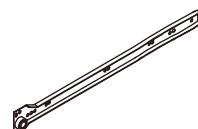


E-CR x 2

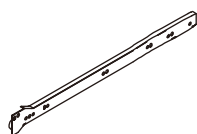 


E-DL x 2

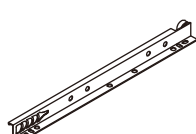 

E-DR x 2

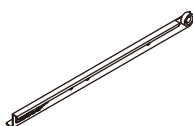 


F x 12

 


M5 x 35 mm

 G x 12




M6 x 15 mm

 H x 2




M6 x 30 mm

 
J x 1




K x 5

 


L x 8

 


M x 4

 


N x 1

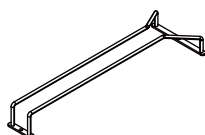 

P x 1

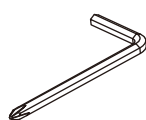 

#4

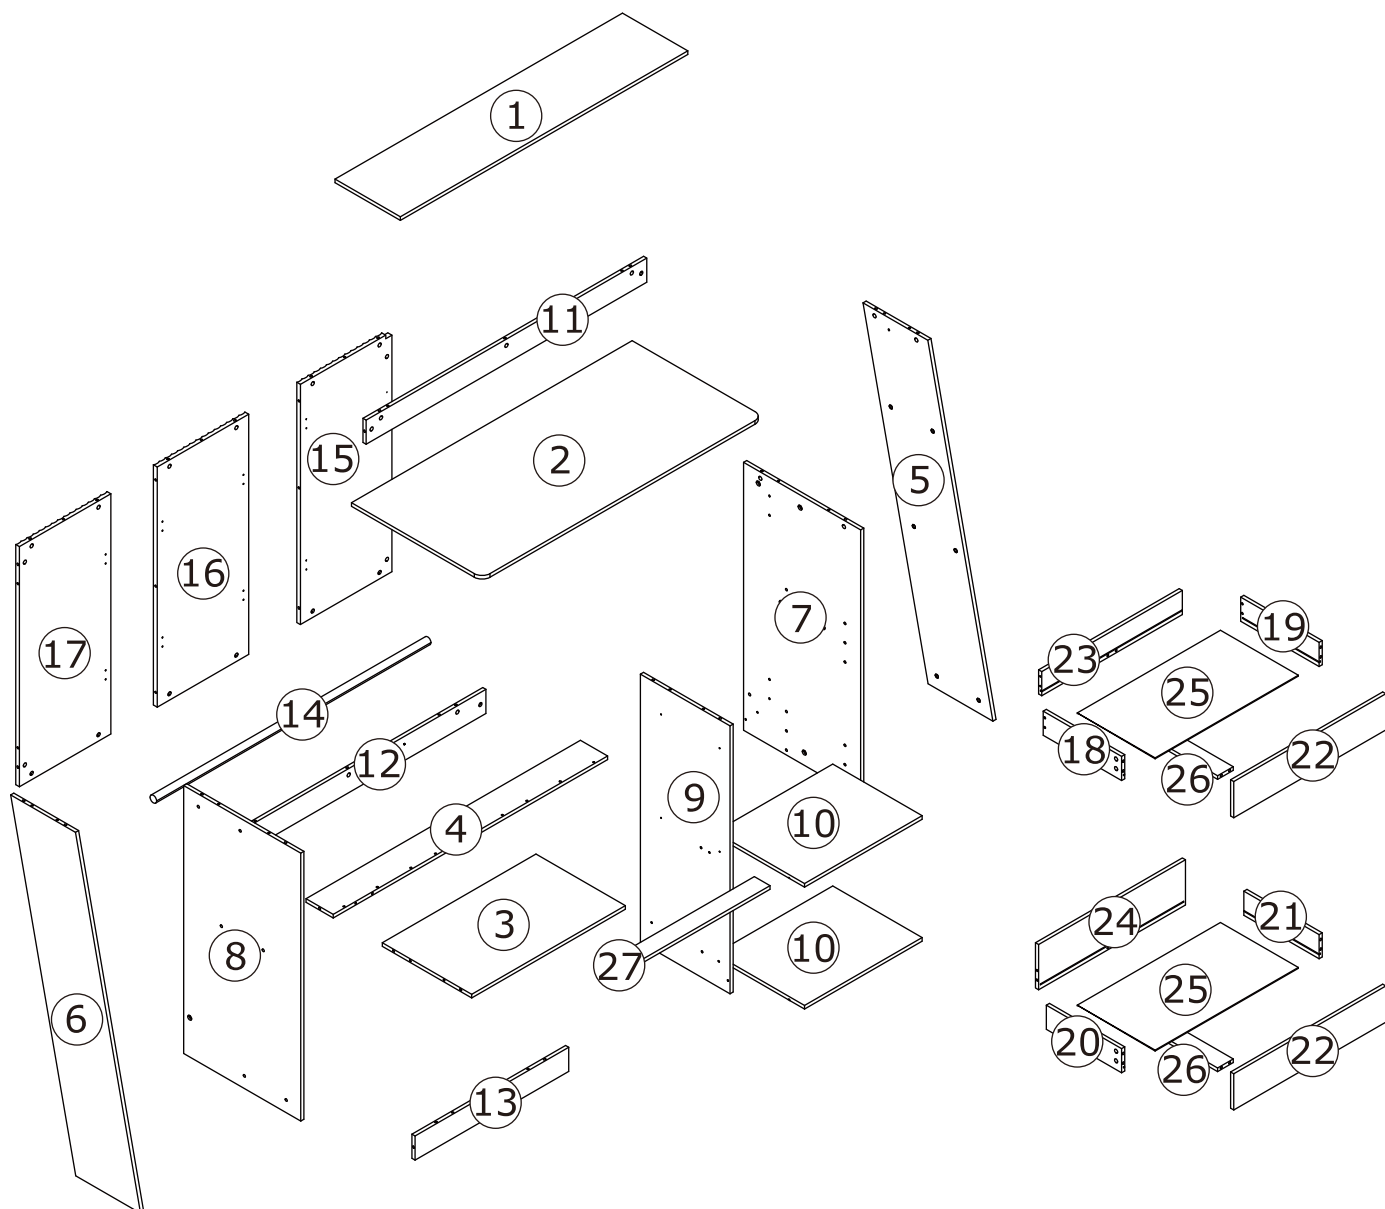 


⚠ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:



- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

 *This is a permanent label.
Do not remove!*


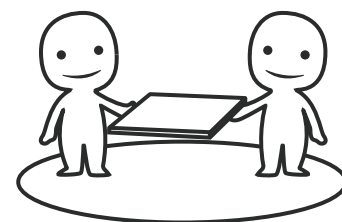


ASSEMBLED BY 2 ADULTS


 
 
1

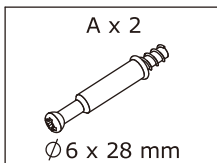



Fasten cam bolts (A) into Panel 3.

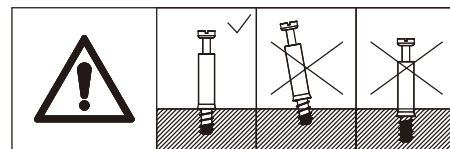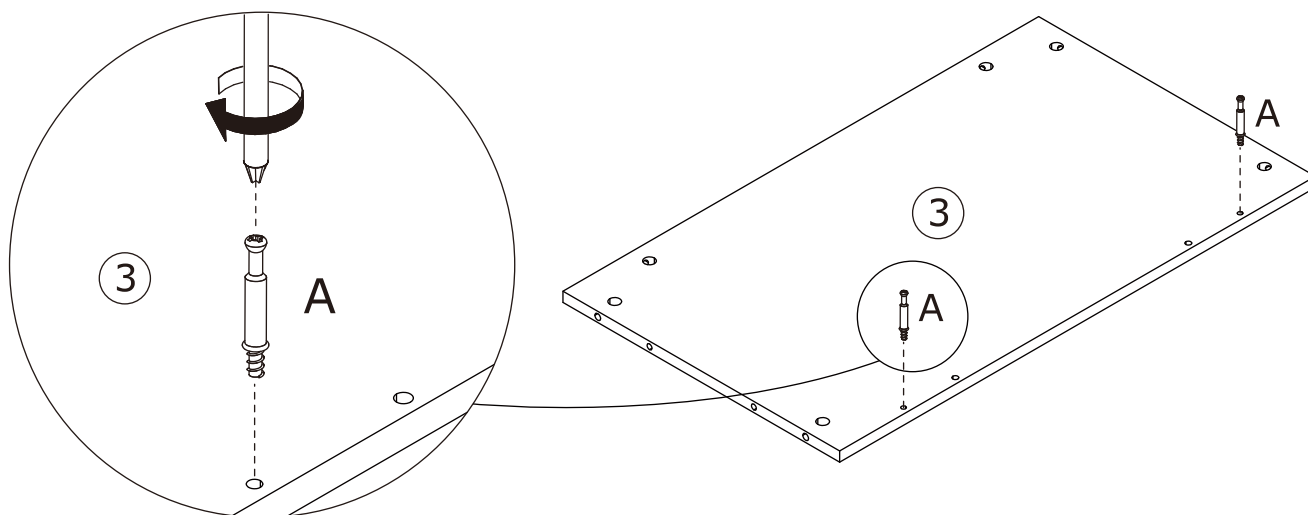  




2

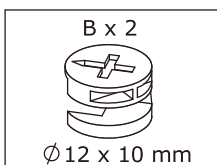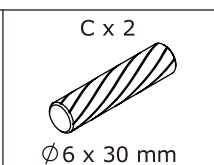   



 
 
Connect Panel 13 and Panel 3 with dowel pins (C). Fit cam locks (B) into position, then turn them clockwise to tighten.

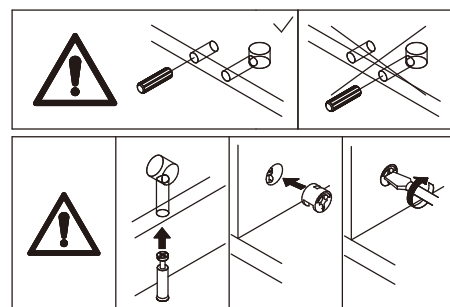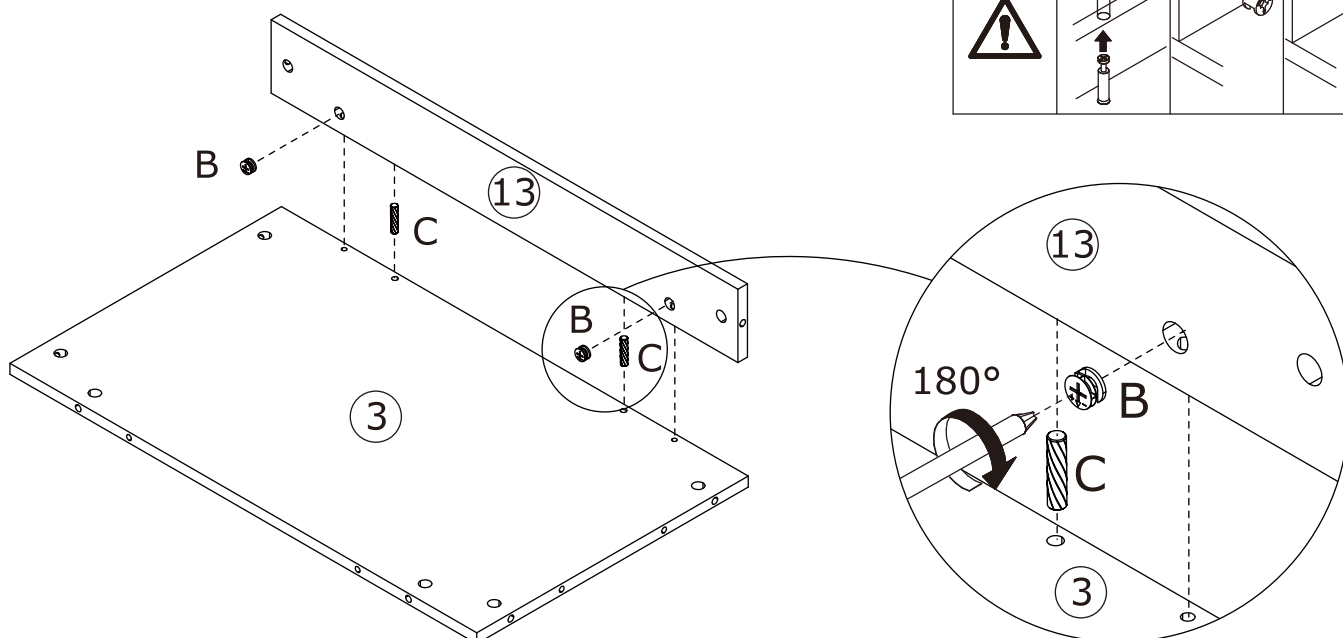

3

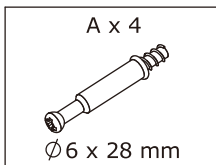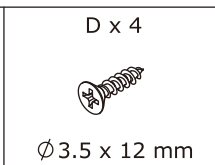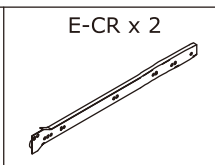   

    Fasten cam bolts (A) into Panel 9.
 Secure slide rails (E-CR) onto Panel 9
 with screws (D).

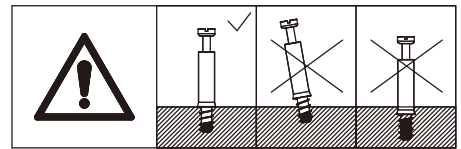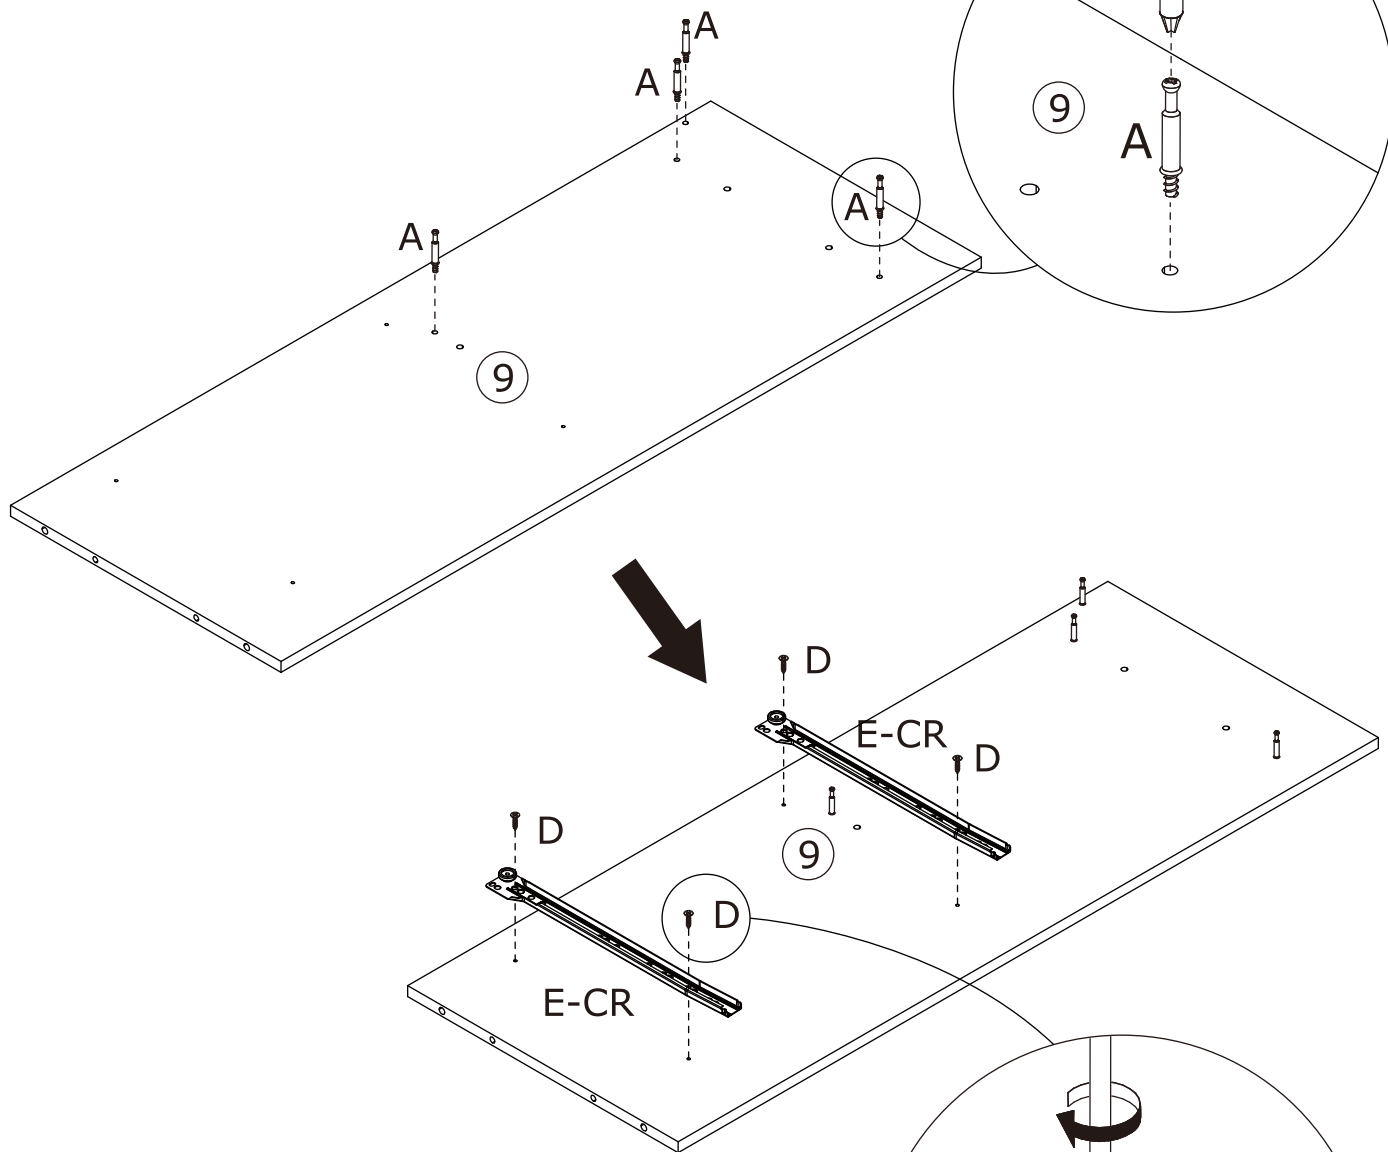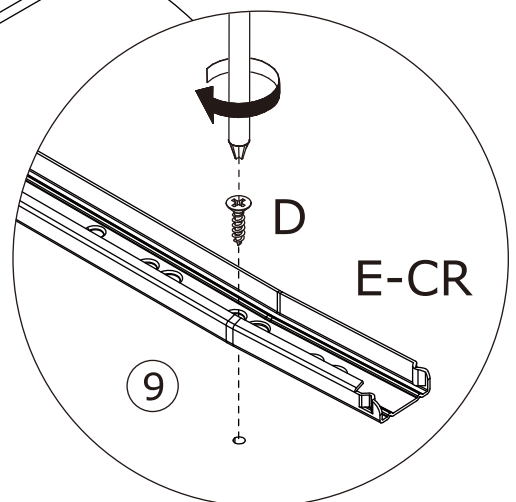
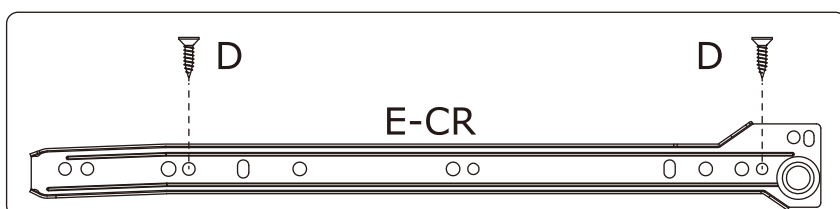


4



B x 3

 $\varnothing 12 \times 10 \text{ mm}$


 
 
C x 2

 $\varnothing 6 \times 30 \text{ mm}$ 

  
Connect Panels 3 and 13 to Panel 9 with dowel pins (C). Fit cam locks (B) into position, then turn them clockwise to tighten.

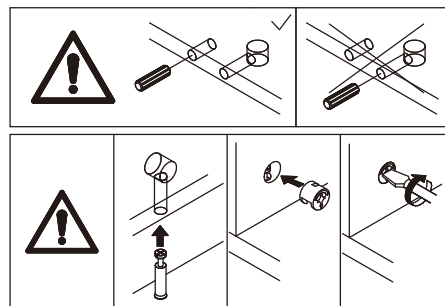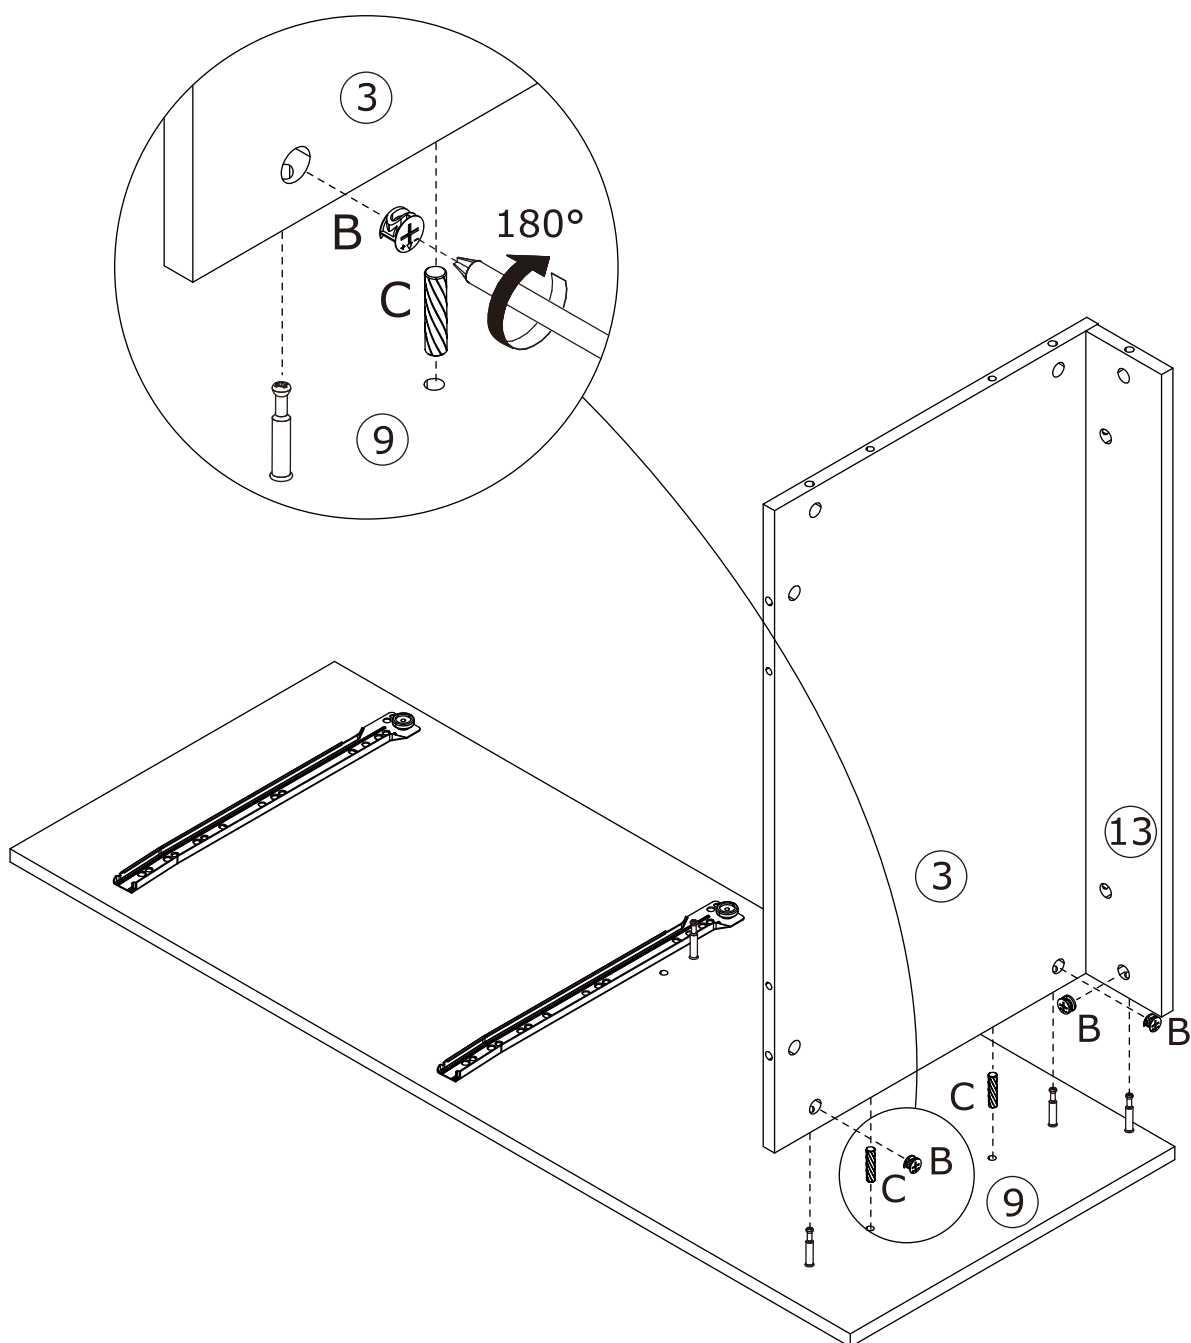




5

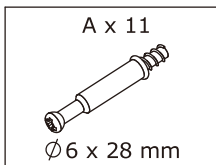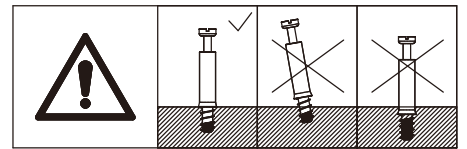   


 
Fasten cam bolts (A) into **both sides** of Panel 4.

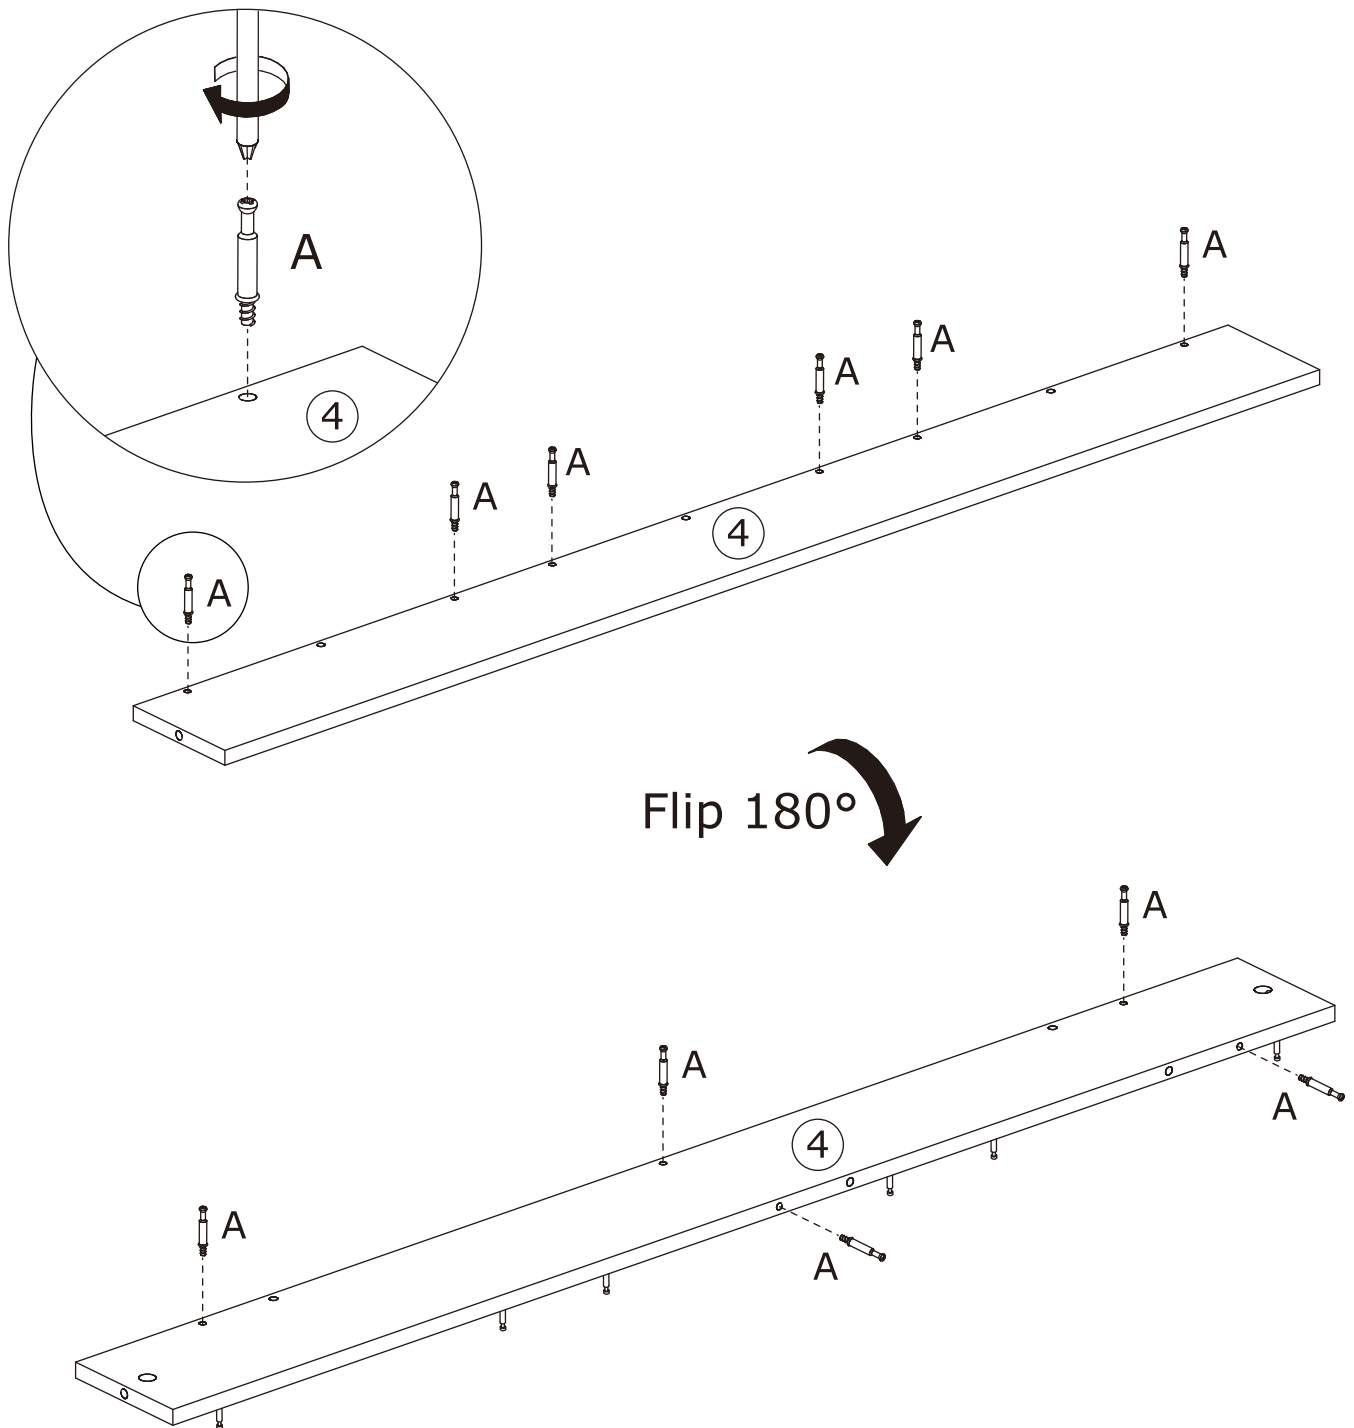




6

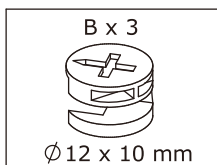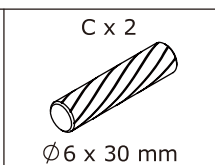   


 
 
Connect Panel 4 and Panel 12 with dowel pins (C). Fit cam locks (B) into position, then turn them clockwise to tighten.

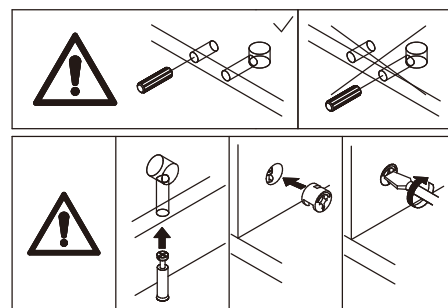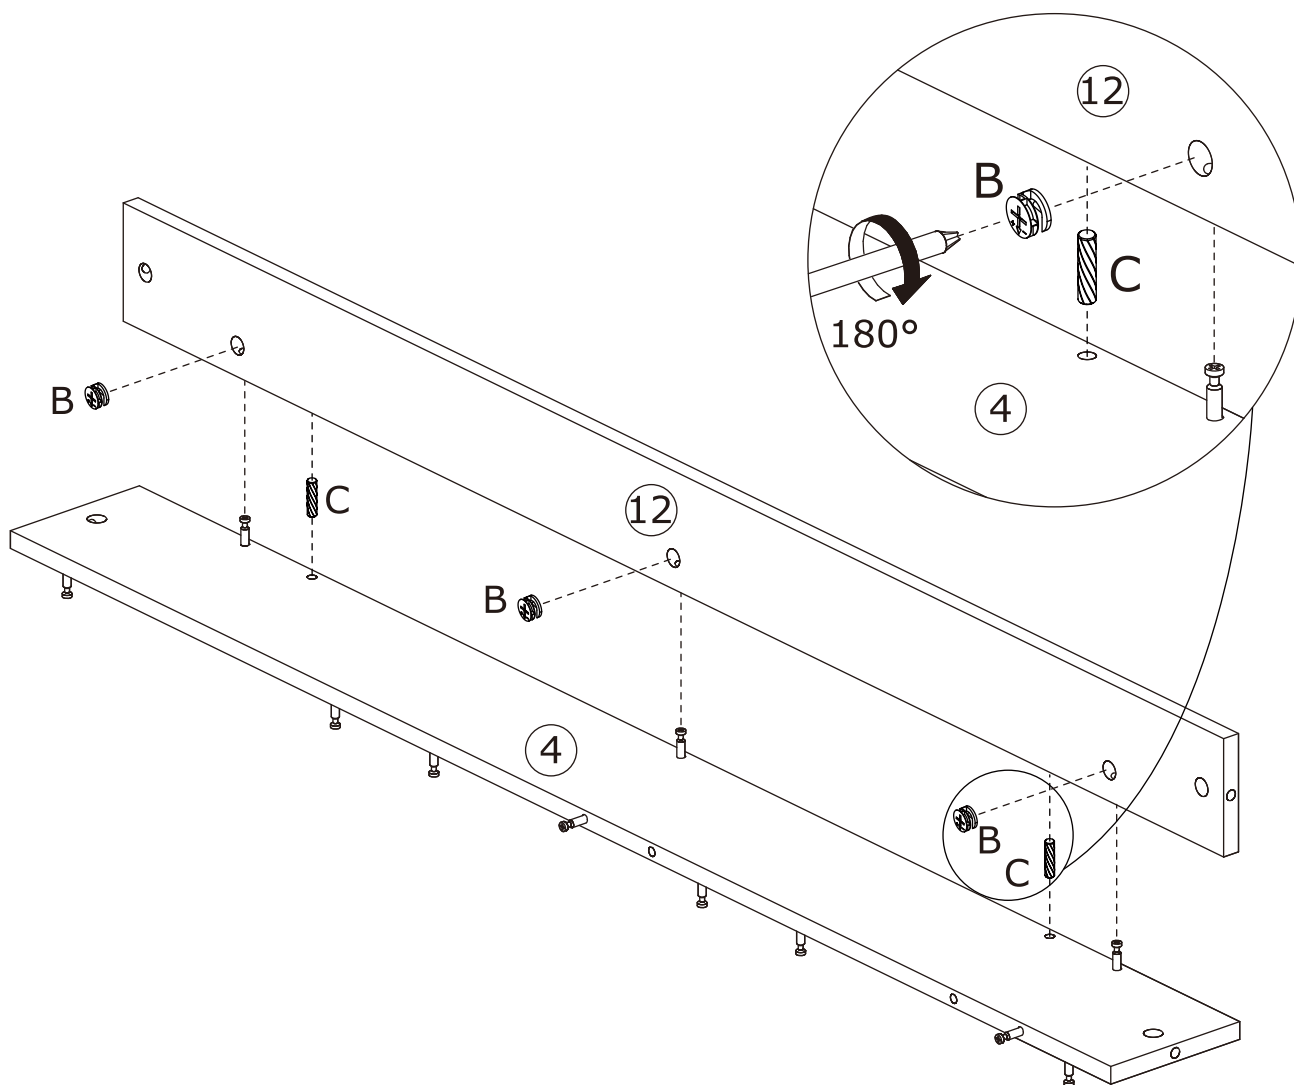


7

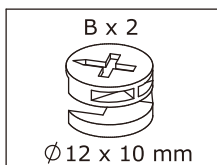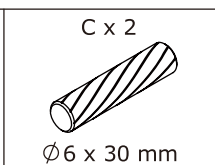   

   Connect Panel 4 and Panel 3 with dowel pins (C). Fit cam locks (B) into position, then turn them clockwise to tighten.

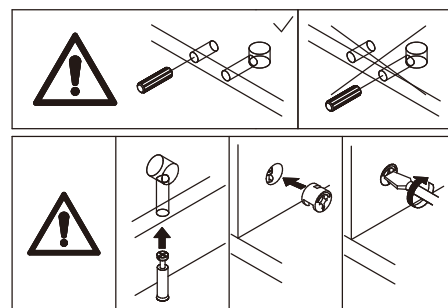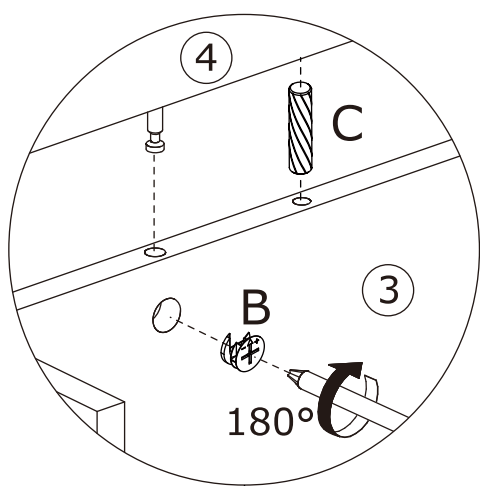
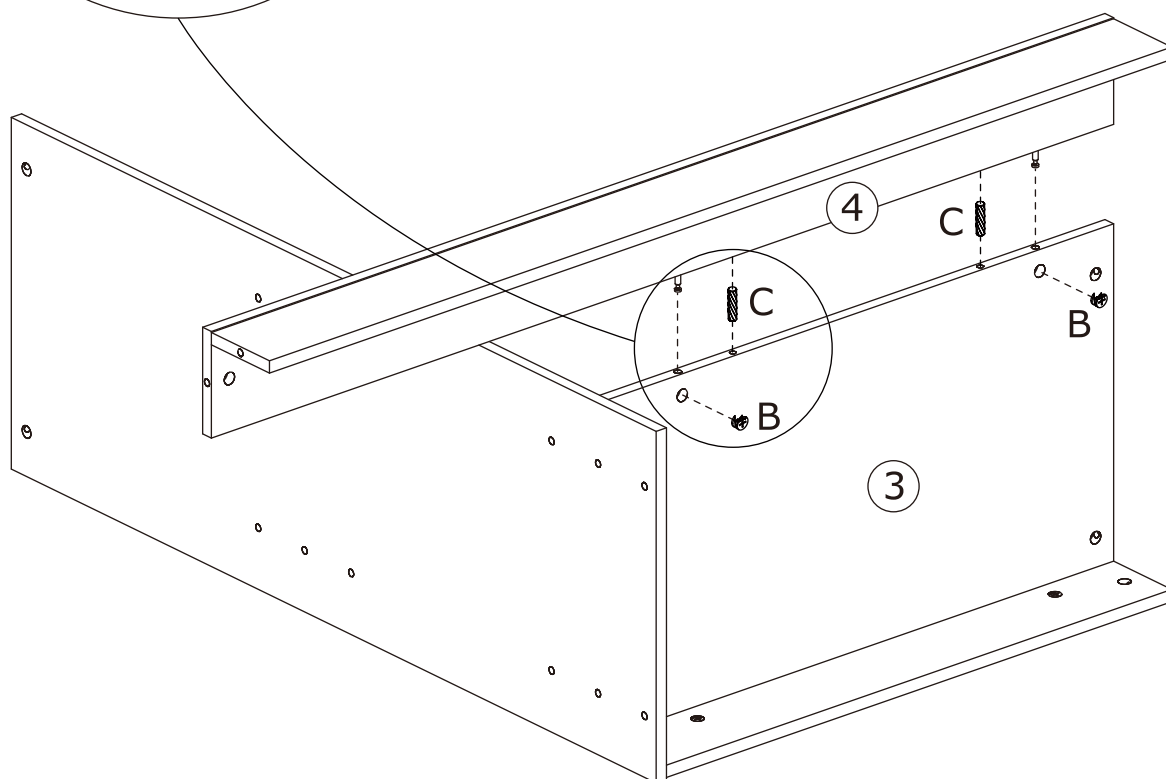


8



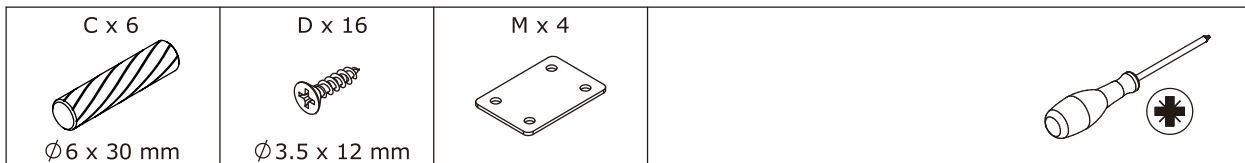 


Connect Panels 15, 16, and 17 with dowel pins (C).



 
 
Secure metal plates (M) onto Panels 15, 16, and 17 with screws (D).

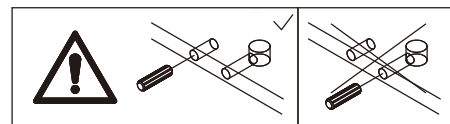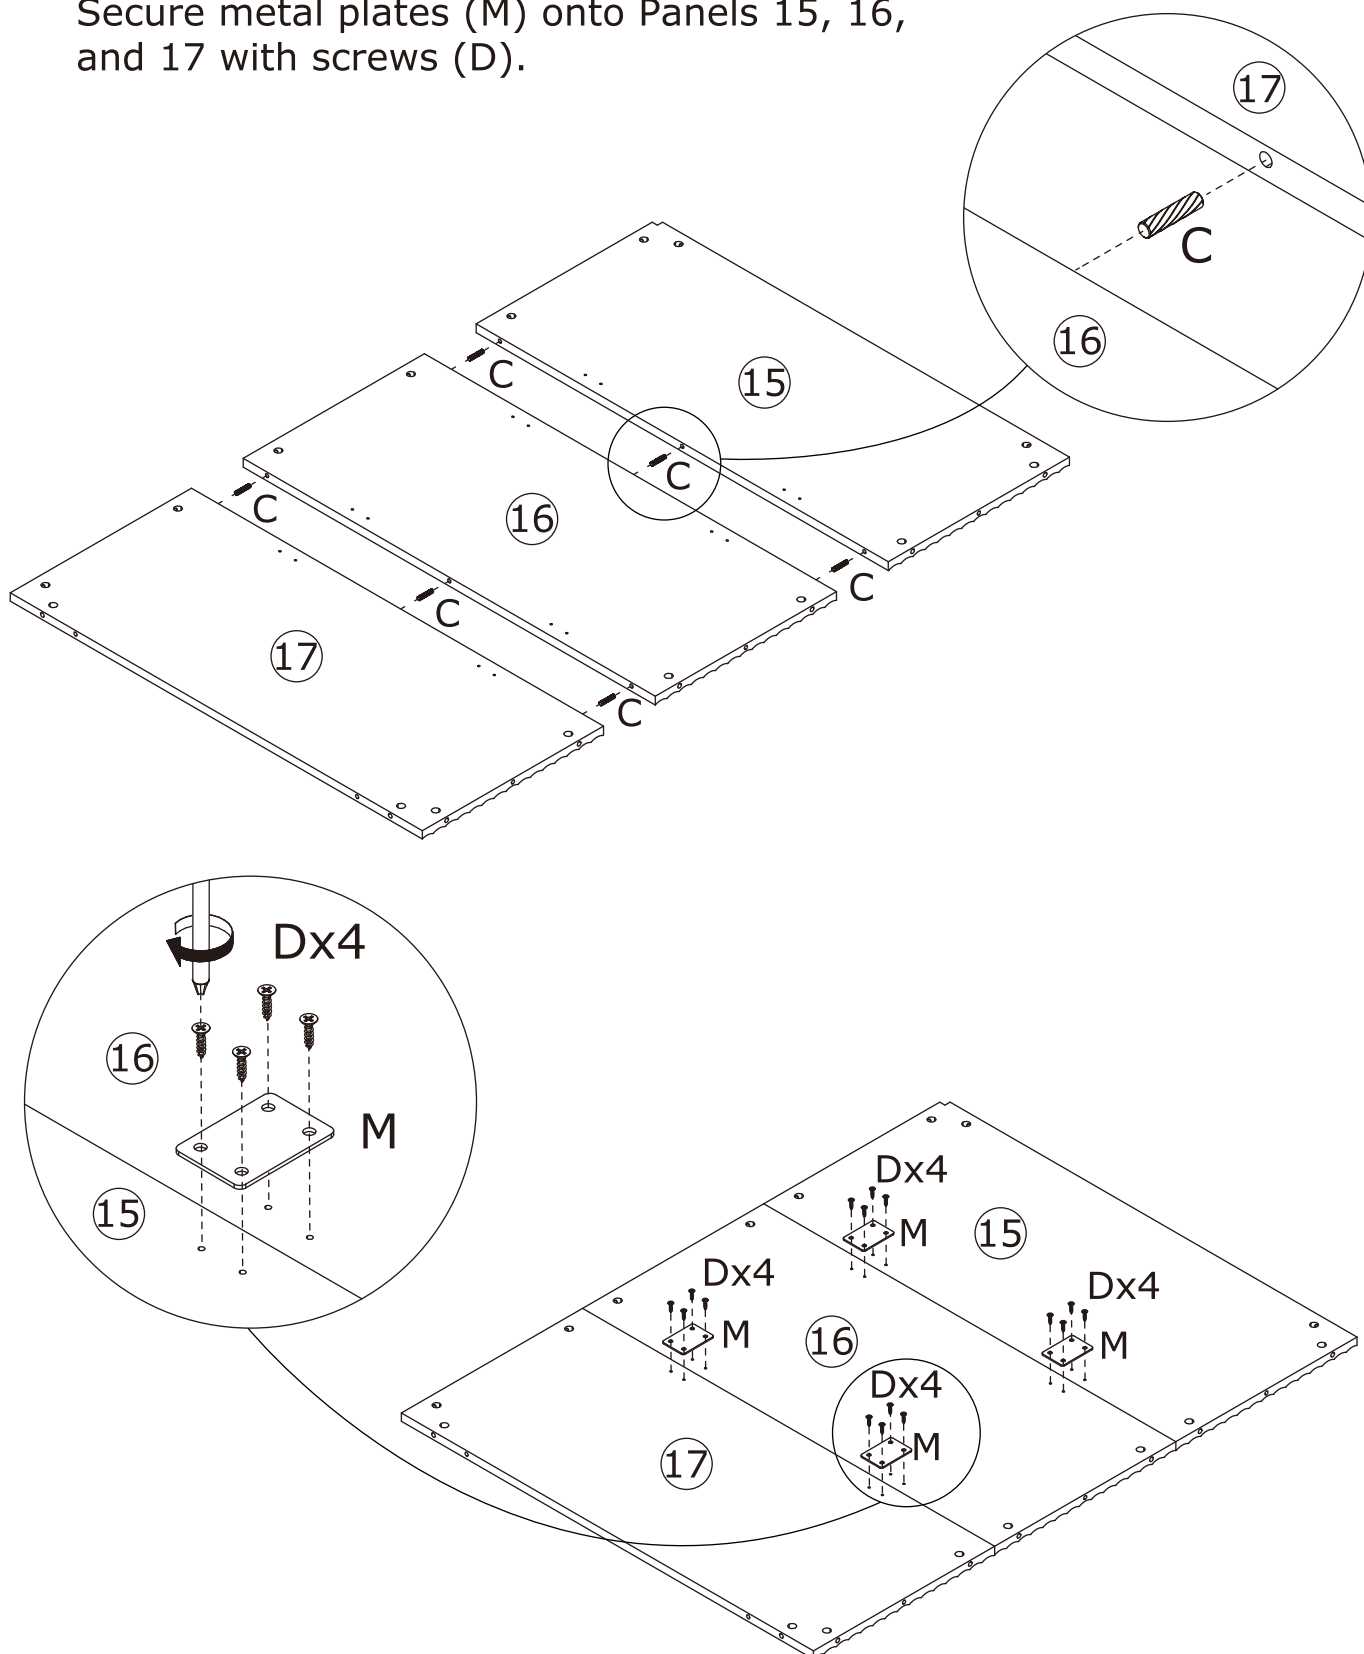


9

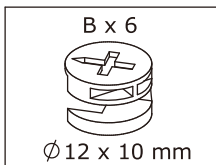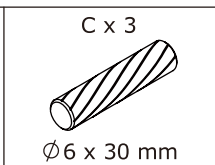   


    Connect Panels 15, 16, and 17 to Panel 4 with dowel pins (C). Fit cam locks (B) into position, then turn them clockwise to tighten.

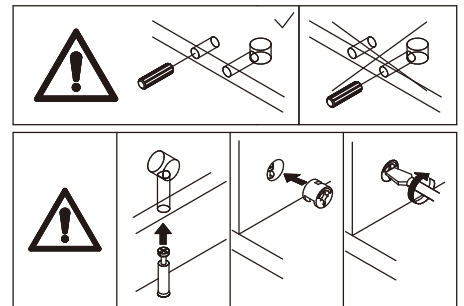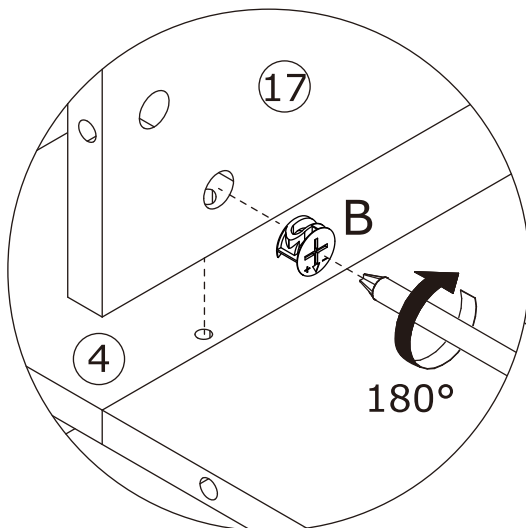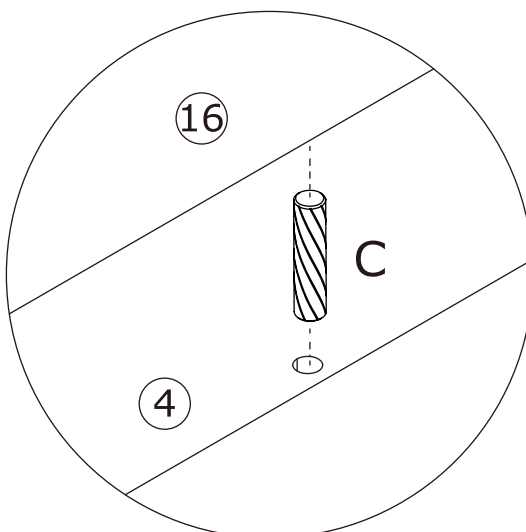
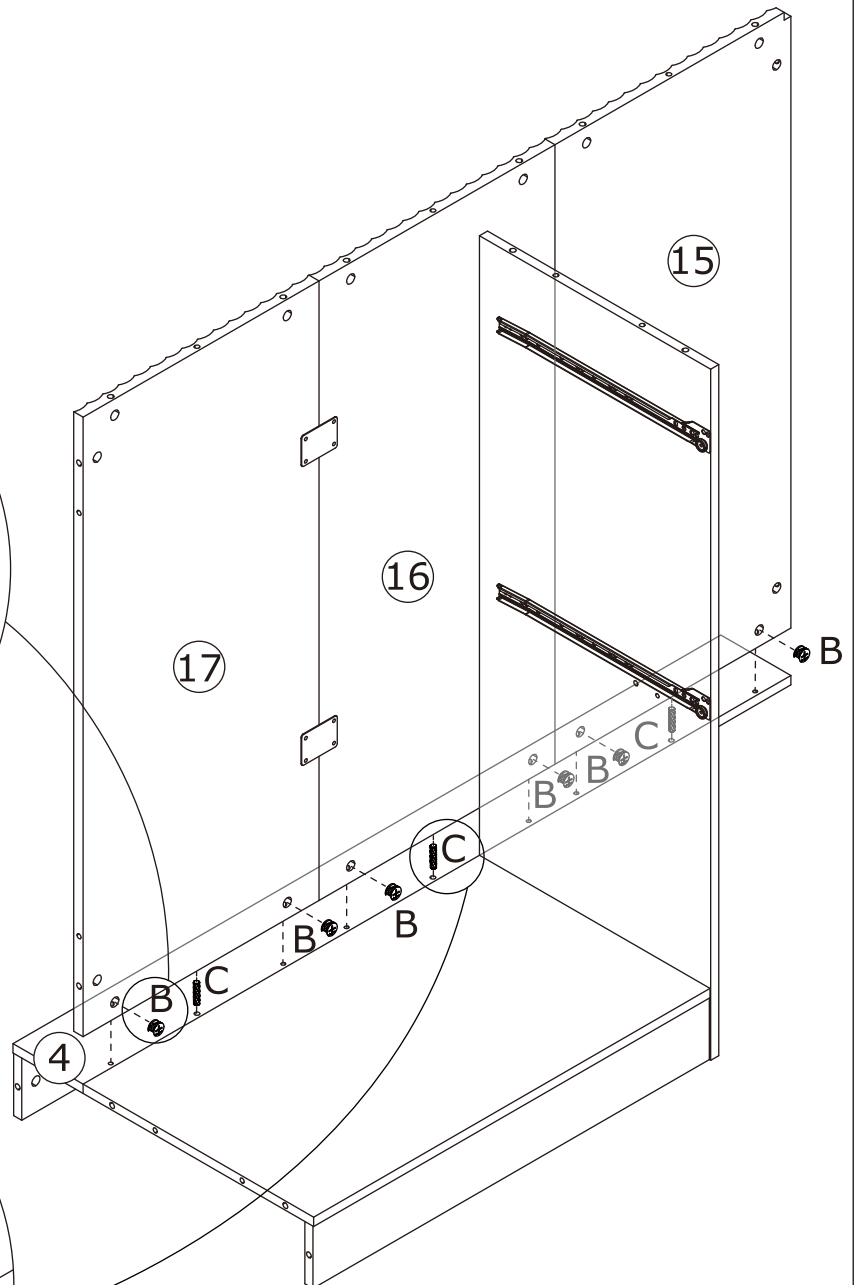


10

 A x 8

  Ø6 x 28 mm

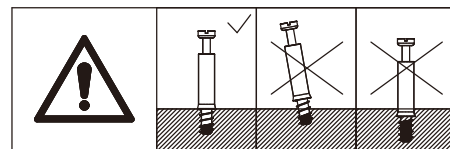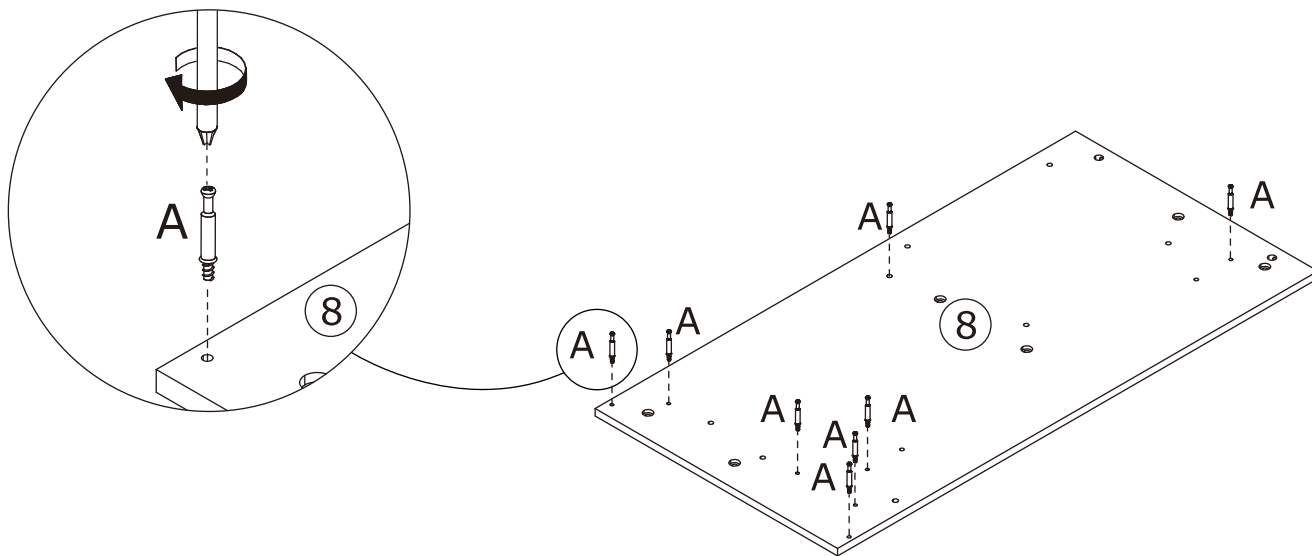  


Fasten cam bolts (A) into Panel 8.




11



D x 4

  Ø3.5 x 12 mm

E-CL x 2

 

  
Secure slide rails (E-CL) onto Panel 8 with screws (D).

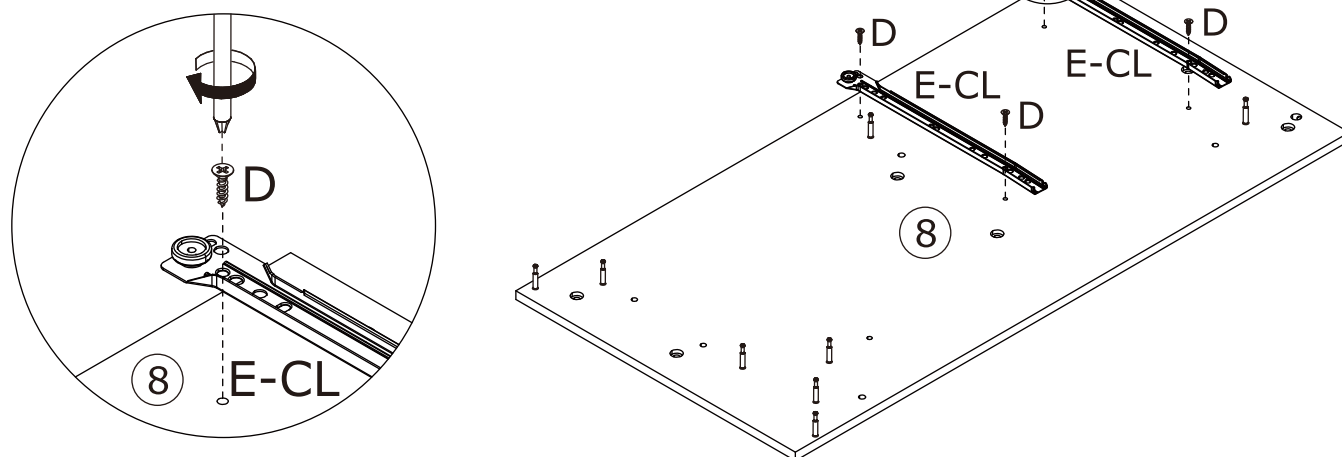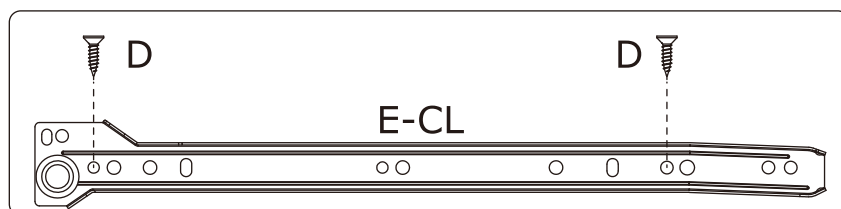


12

B x 1




Ø 12 x 10 mm


 
C x 1



Ø 6 x 30 mm

 

  Connect Panel 27 to Panel 8 with dowel pins (C). Fit cam locks (B) into position, then turn them clockwise to tighten.

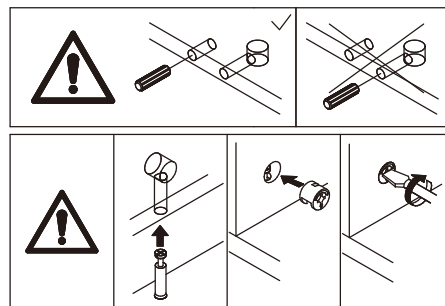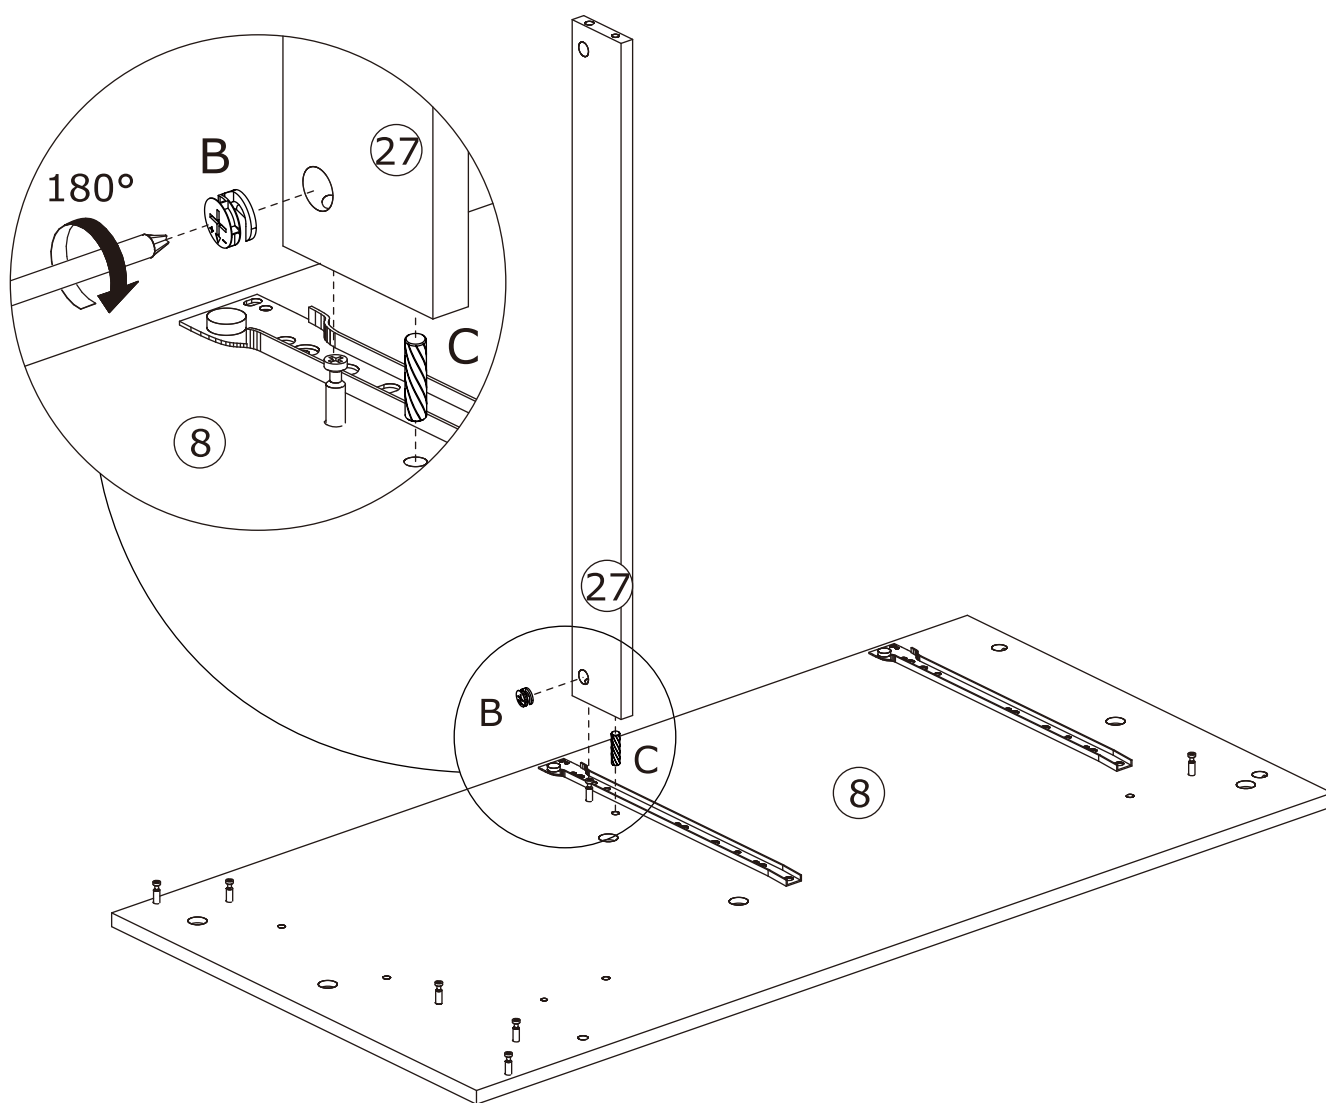


13

B x 3




Ø12 x 10 mm


 
C x 5





Ø6 x 30 mm

 

 
 
Connect Panel 8 to Panels 13, 3, and 17 with dowel pins (C). Fit cam locks (B) into position, then turn them clockwise to tighten.

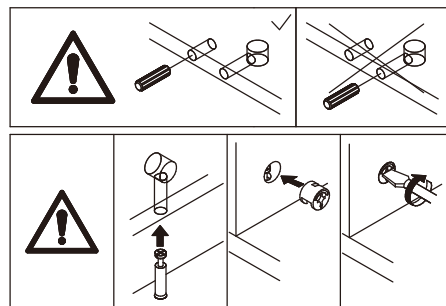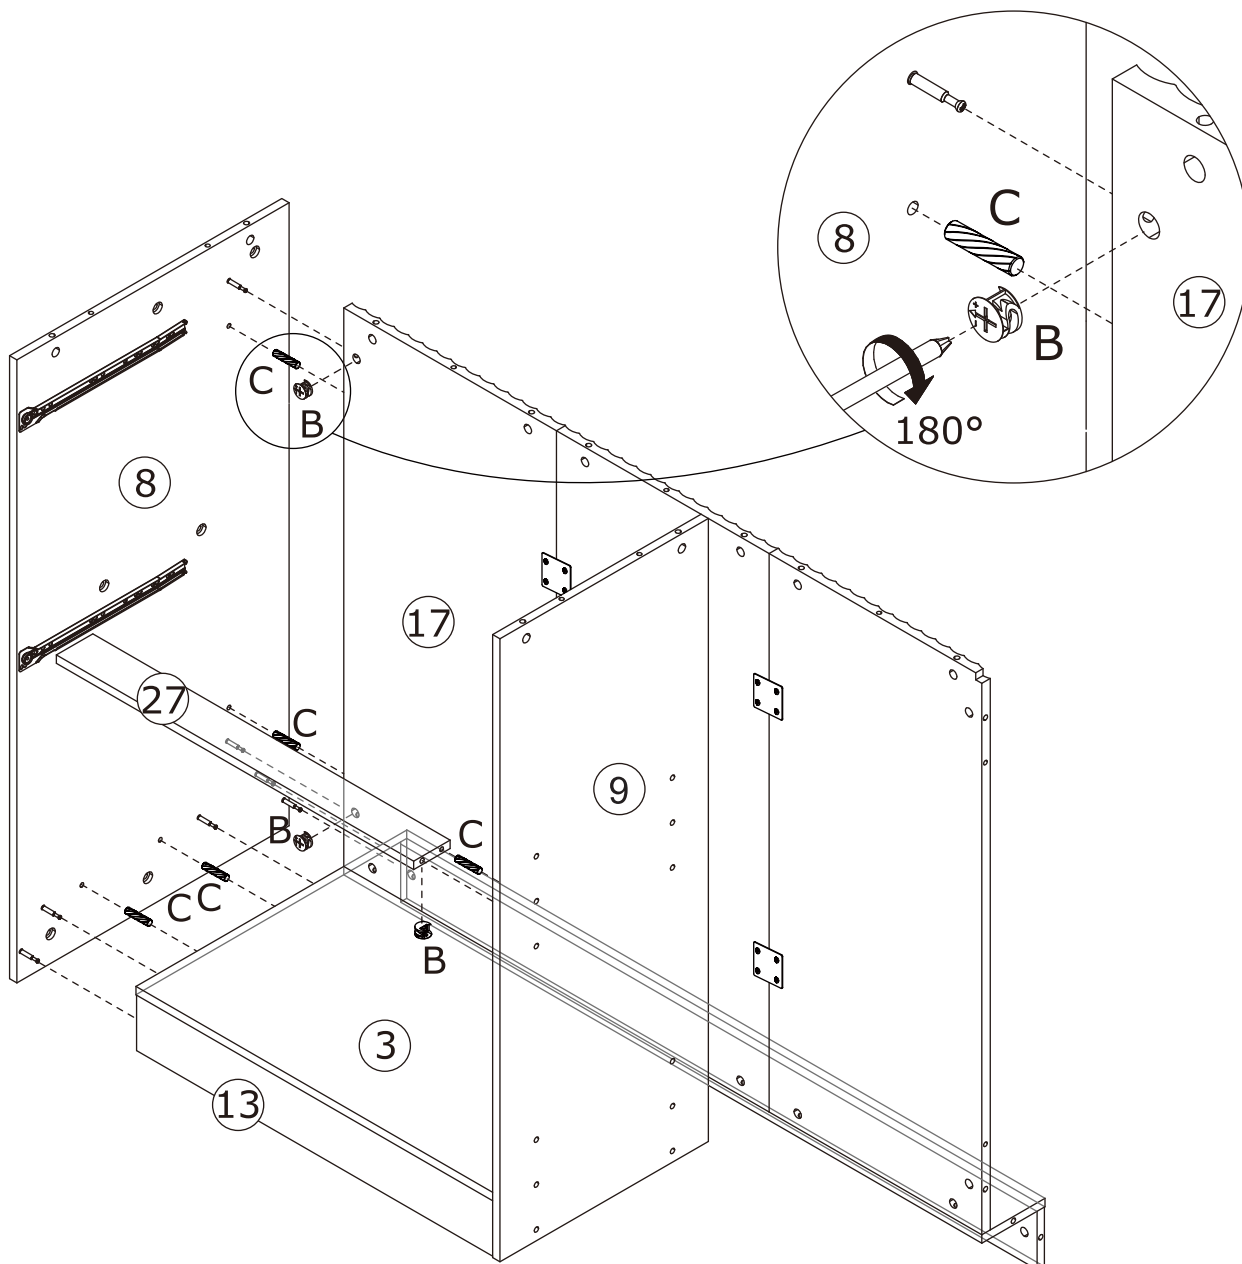

14

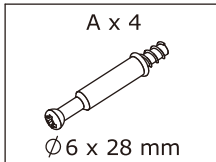  

Fasten cam bolts (A) into Panel 7.

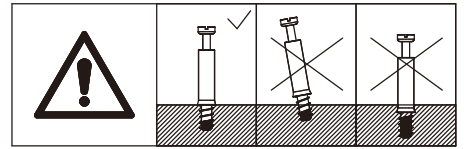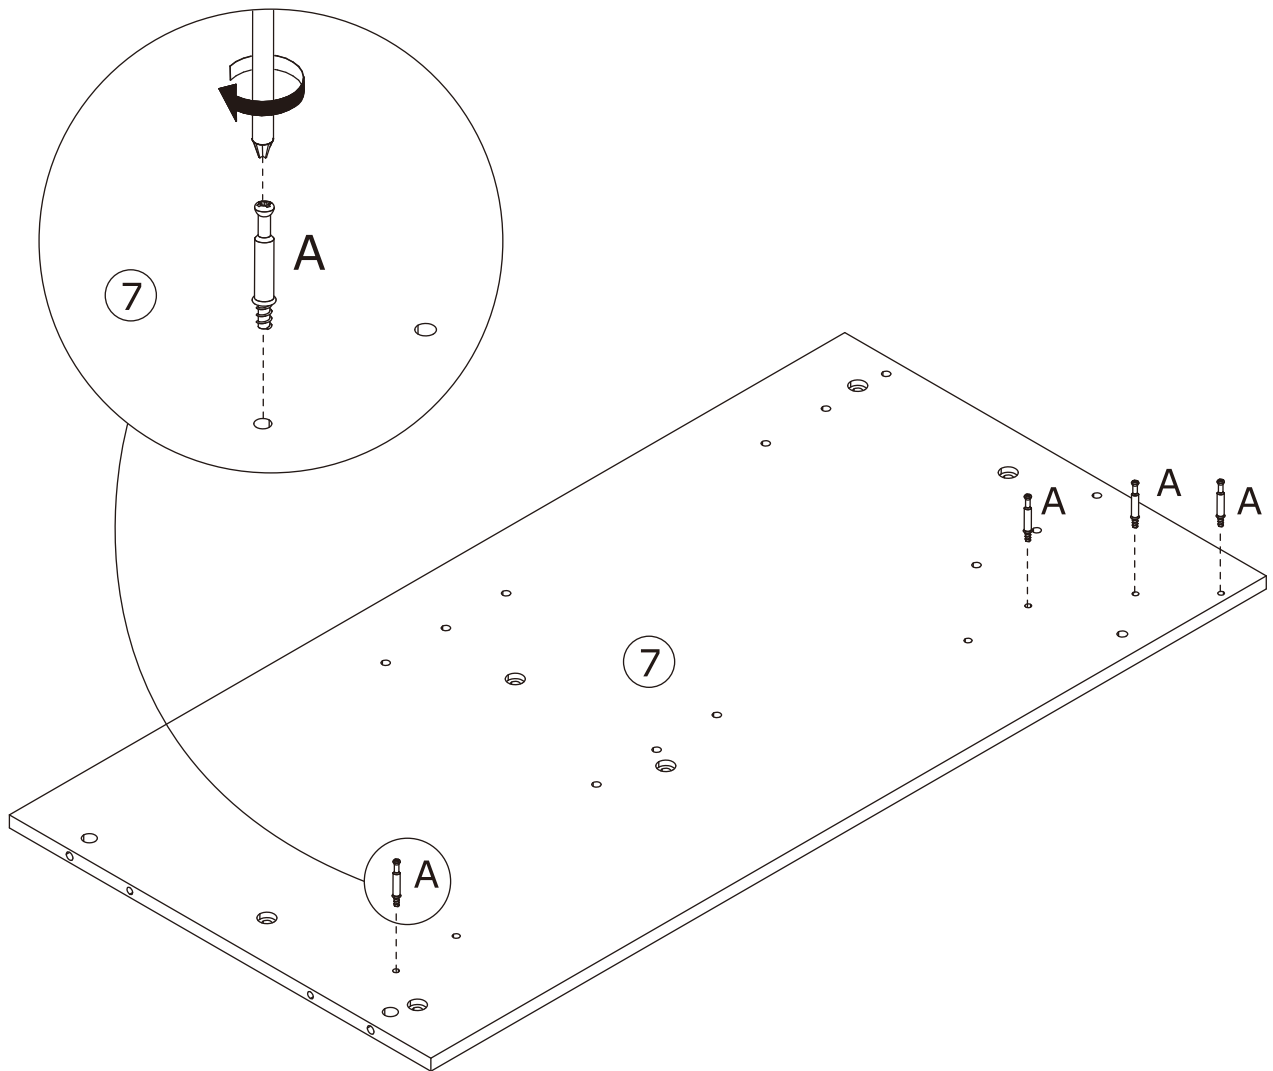  


15

B x 2




Ø 12 x 10 mm



 
C x 2




Ø 6 x 30 mm

 


   Connect Panel 7 to Panels 15, 12, and 4 with dowel pins (C). Fit cam locks (B) into position, then turn them clockwise to tighten.

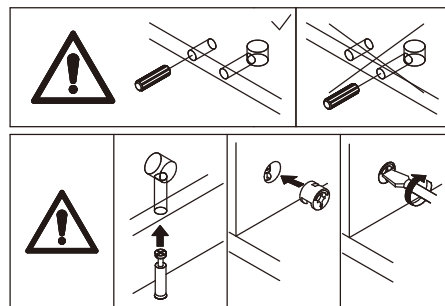
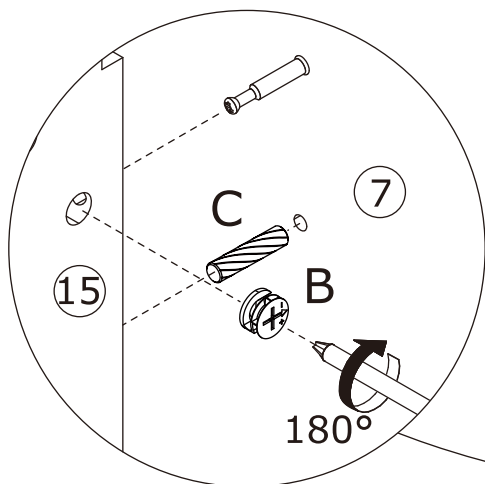
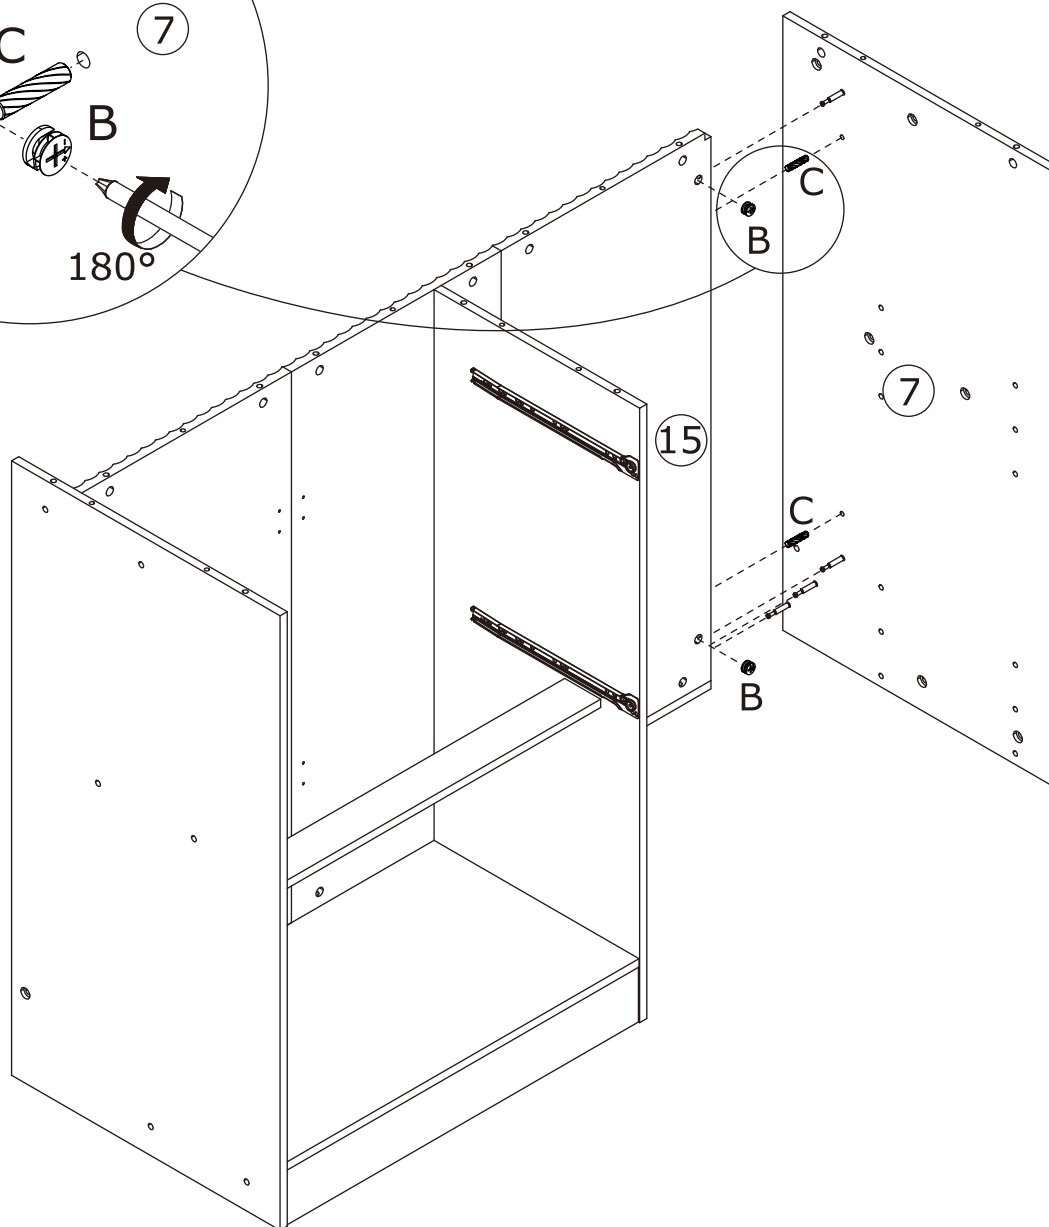


16

 A x 12

  Ø 6 x 28 mm

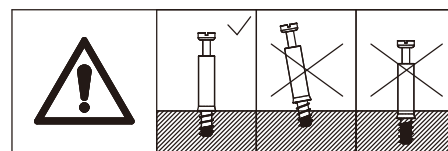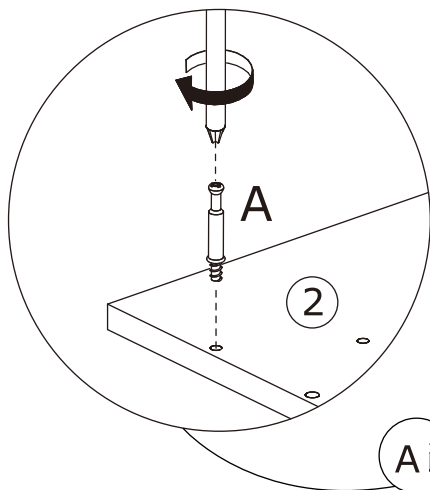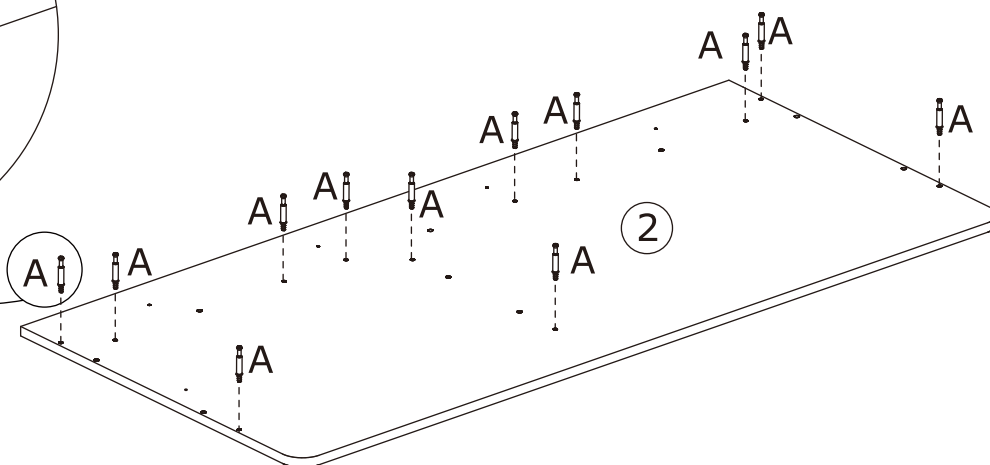   

Fasten cam bolts (A) into Panel 2.



17

 
D x 5

 Ø 3.5 x 12 mm




J x 1



K x 5



   Stick LED strip (J) onto Panel 2 at the indicated position, and install cable clips (K) onto Panel 2 with screws (D).

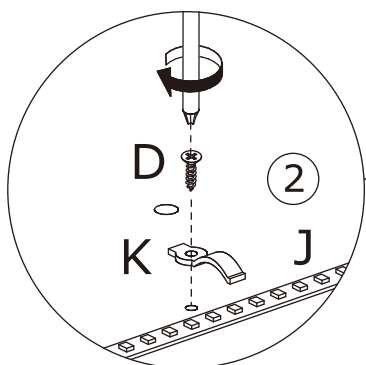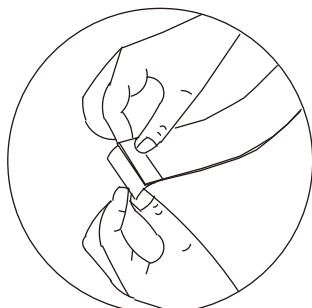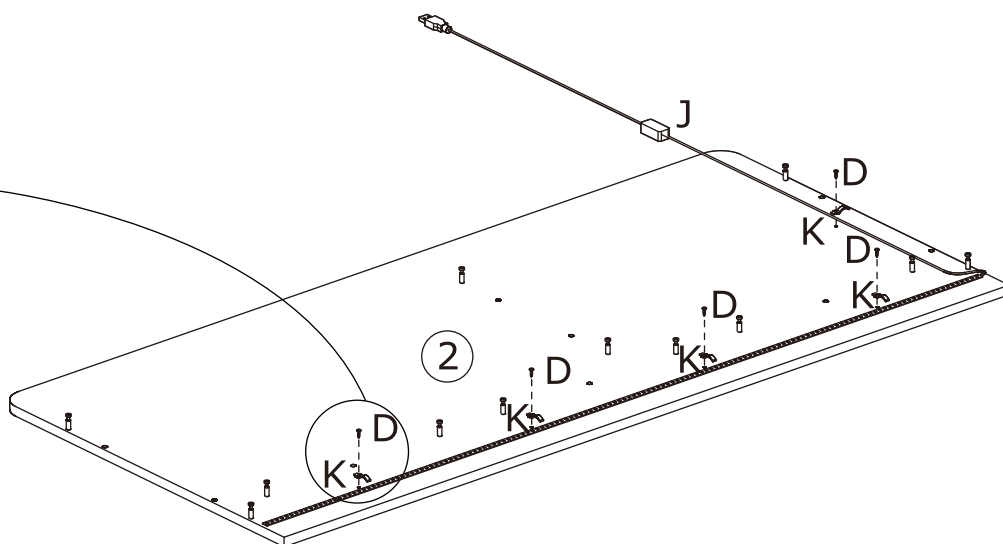

Peel off the adhesive backing of the light strip and stick it onto the panel.

 
18

B x 12









Ø 12 x 10 mm



C x 9



Ø 6 x 30 mm

     
 


  Connect Panel 2 to the main assembly with dowel pins (C). Fit cam locks (B) into position, then turn them clockwise to tighten.

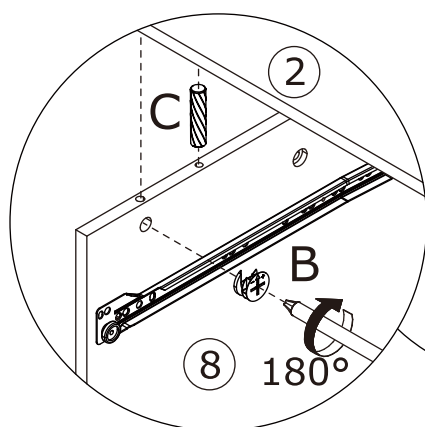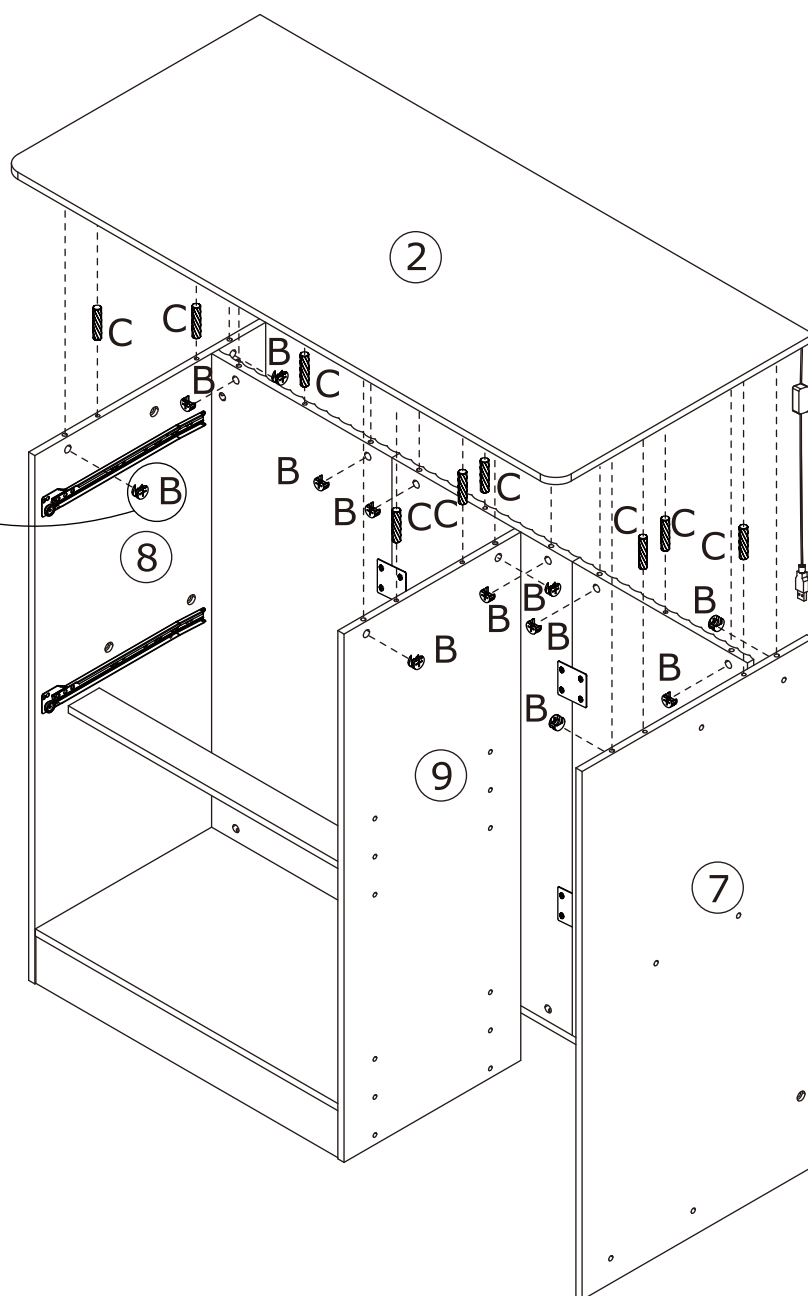


19

 
 
A x 2

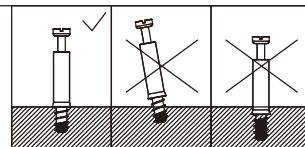


 
Fasten cam bolts (A) into Panels 5 and 6.

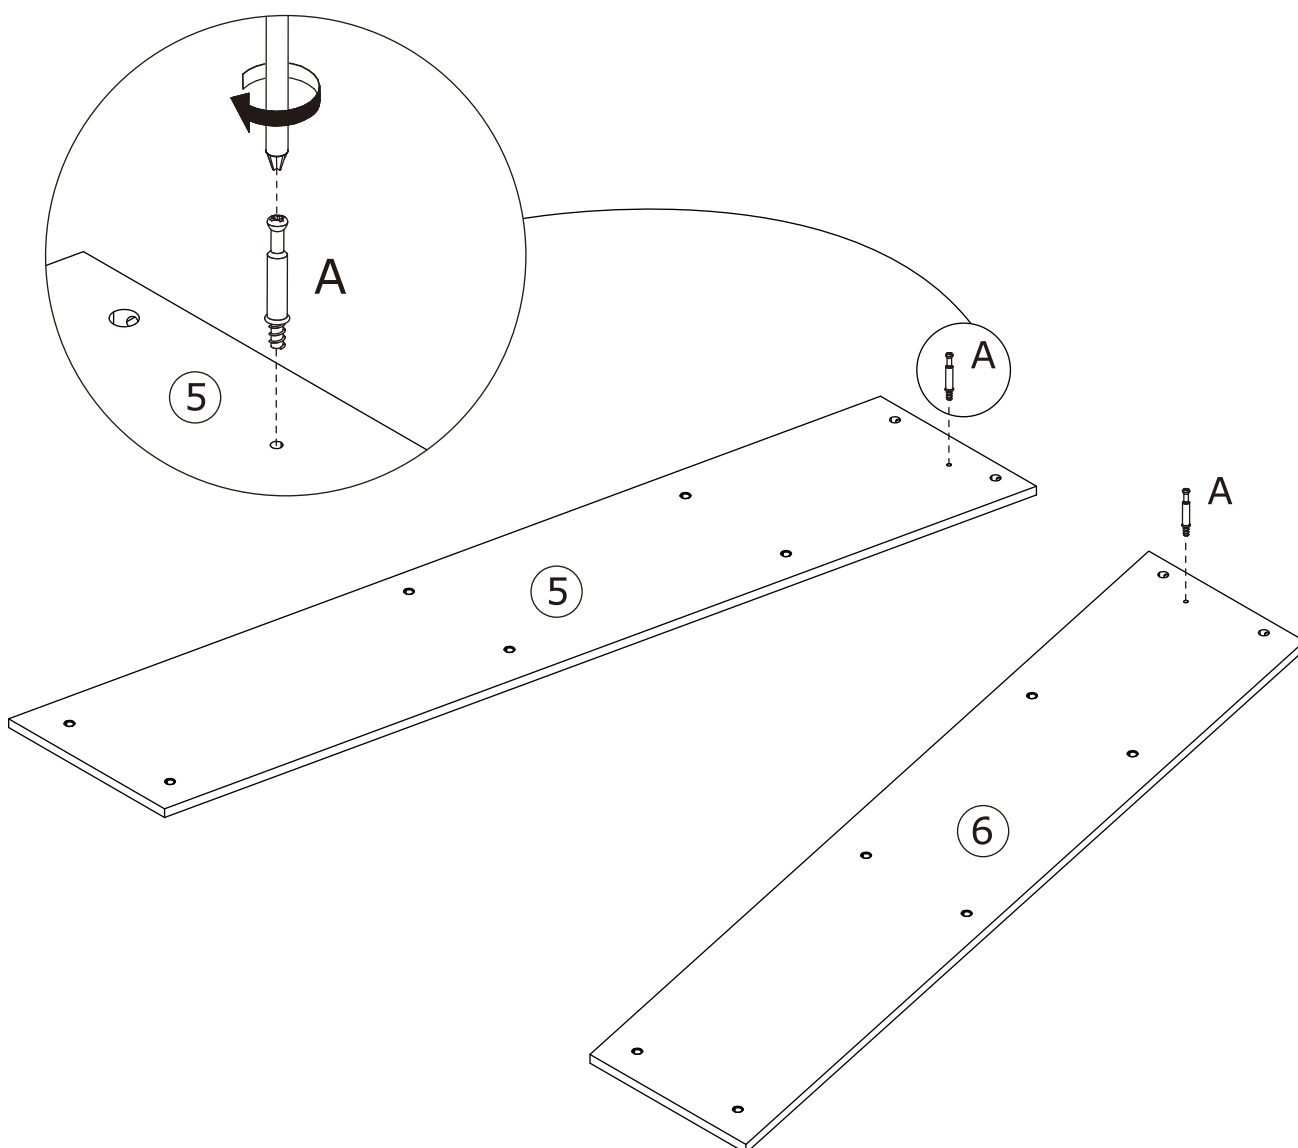



20

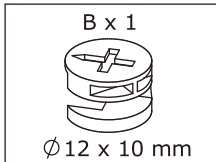  

 
 
Connect Panel 11 to Panel 6. Fit cam lock (B) into position, then turn it clockwise to tighten.

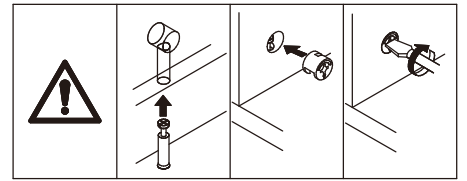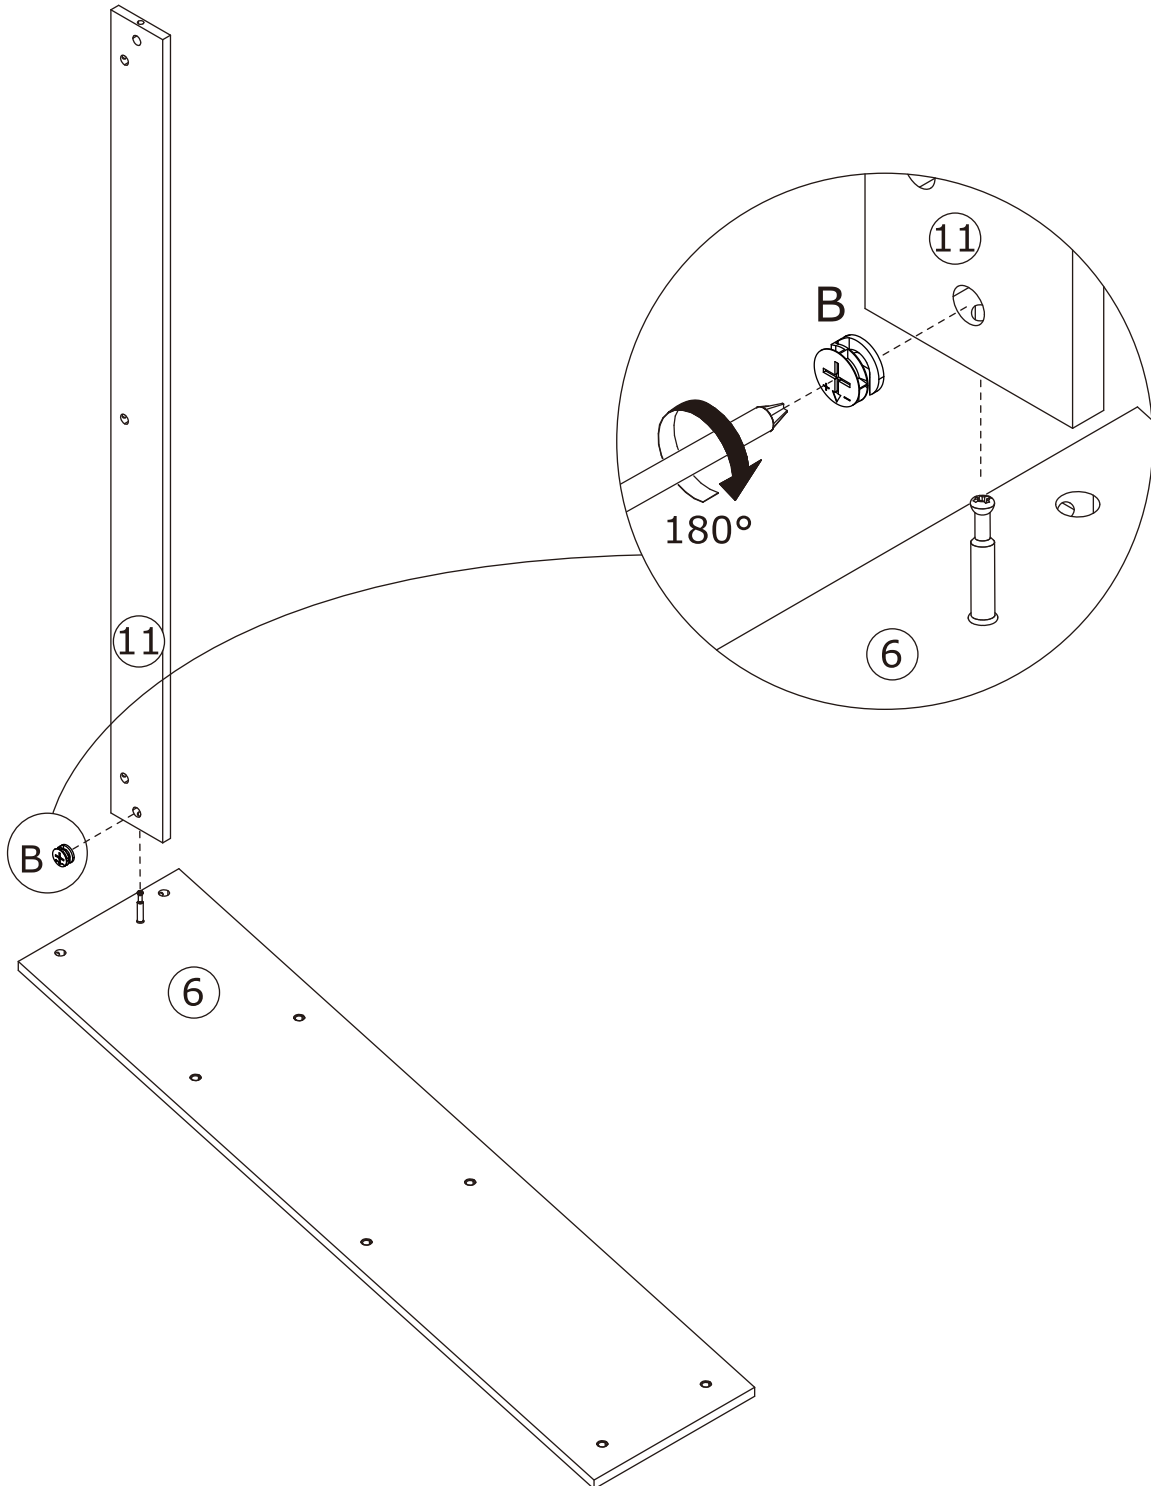


21

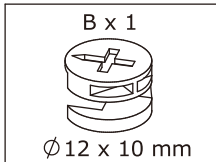  

   Connect Panel 11 to Panel 5. Fit cam lock (B) into position, then turn it clockwise to tighten.

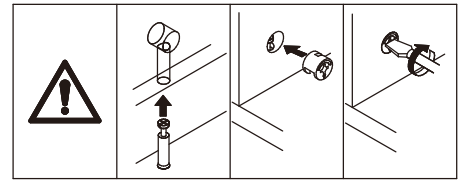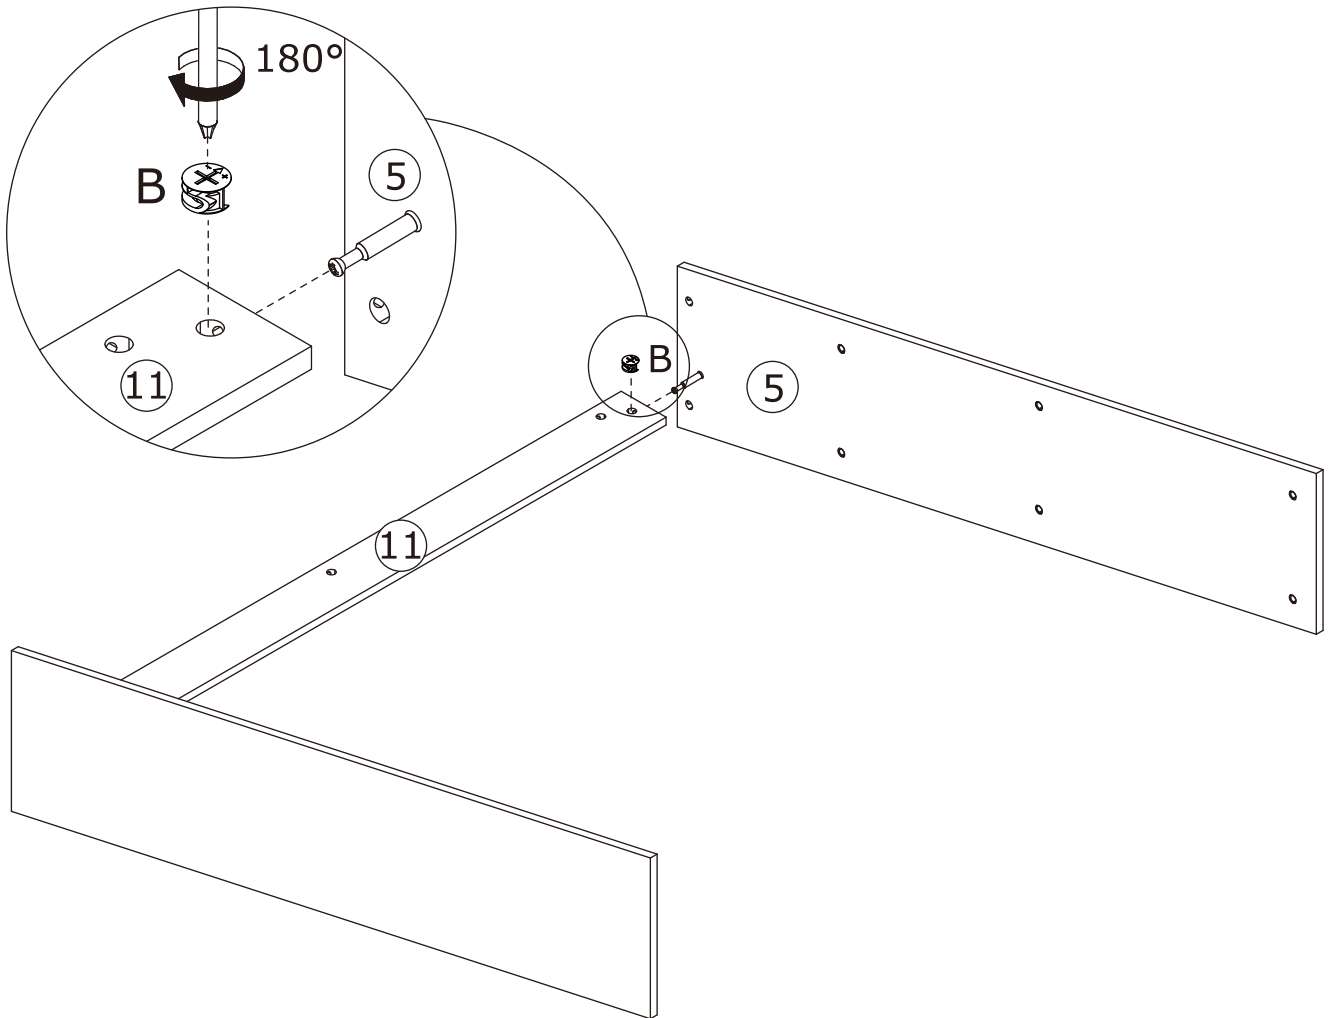


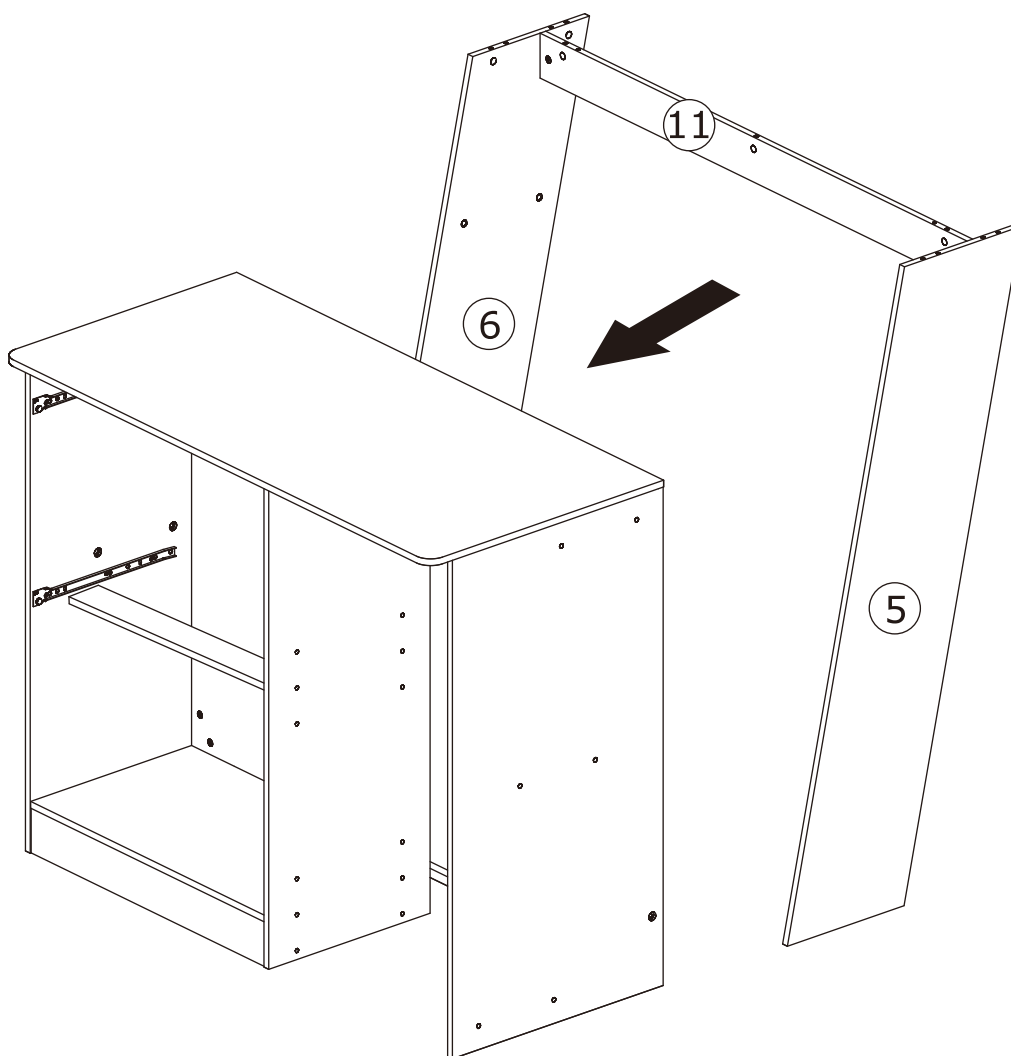

Note: This step requires two adults to complete.

23

 
G x 10
M6 x 15 mm






P x 1
#4




 
Align Panel 6 with Panel 8, and Panel 7 with Panel 5, then secure them with screws (G).

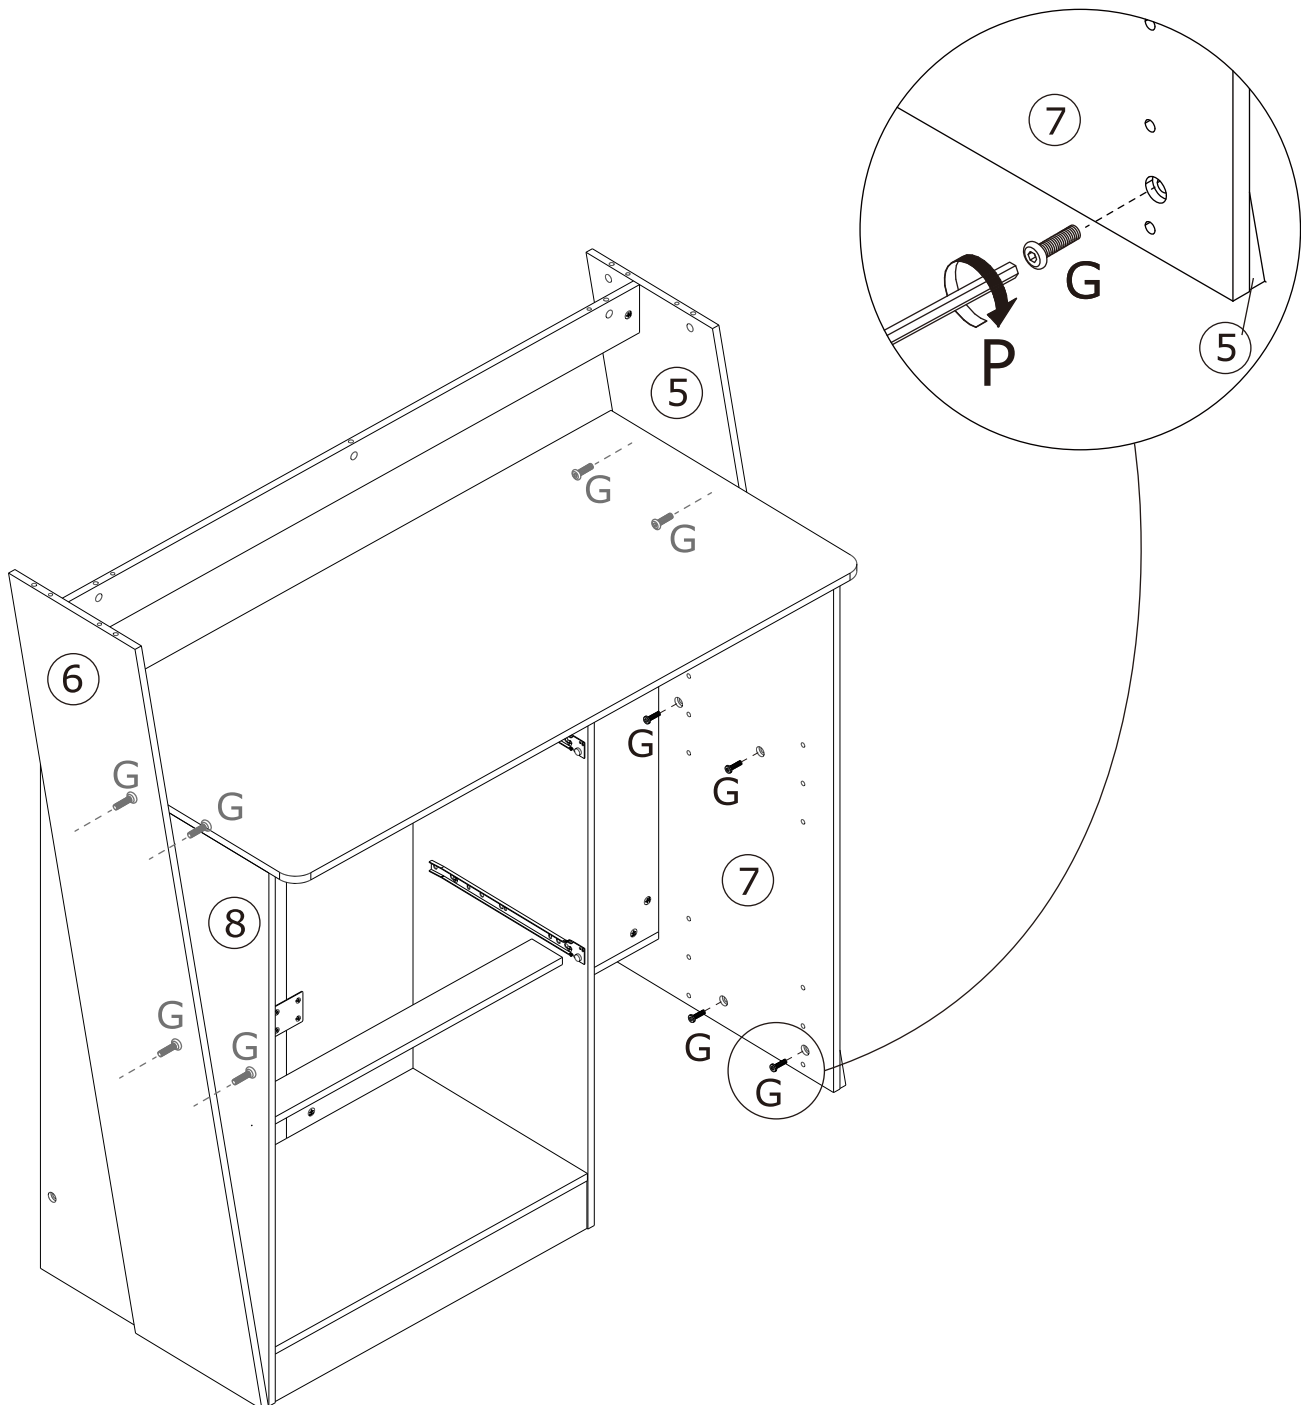

24

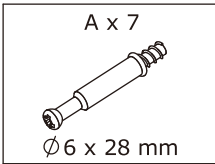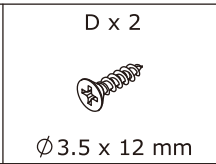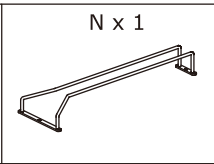   

  Fasten cam bolts (A) into Panel 1.
Secure wine glass rack (N) onto Panel 1
with screws (D).

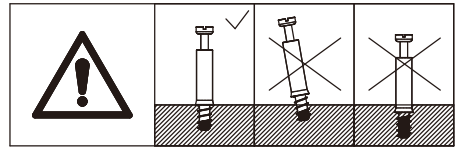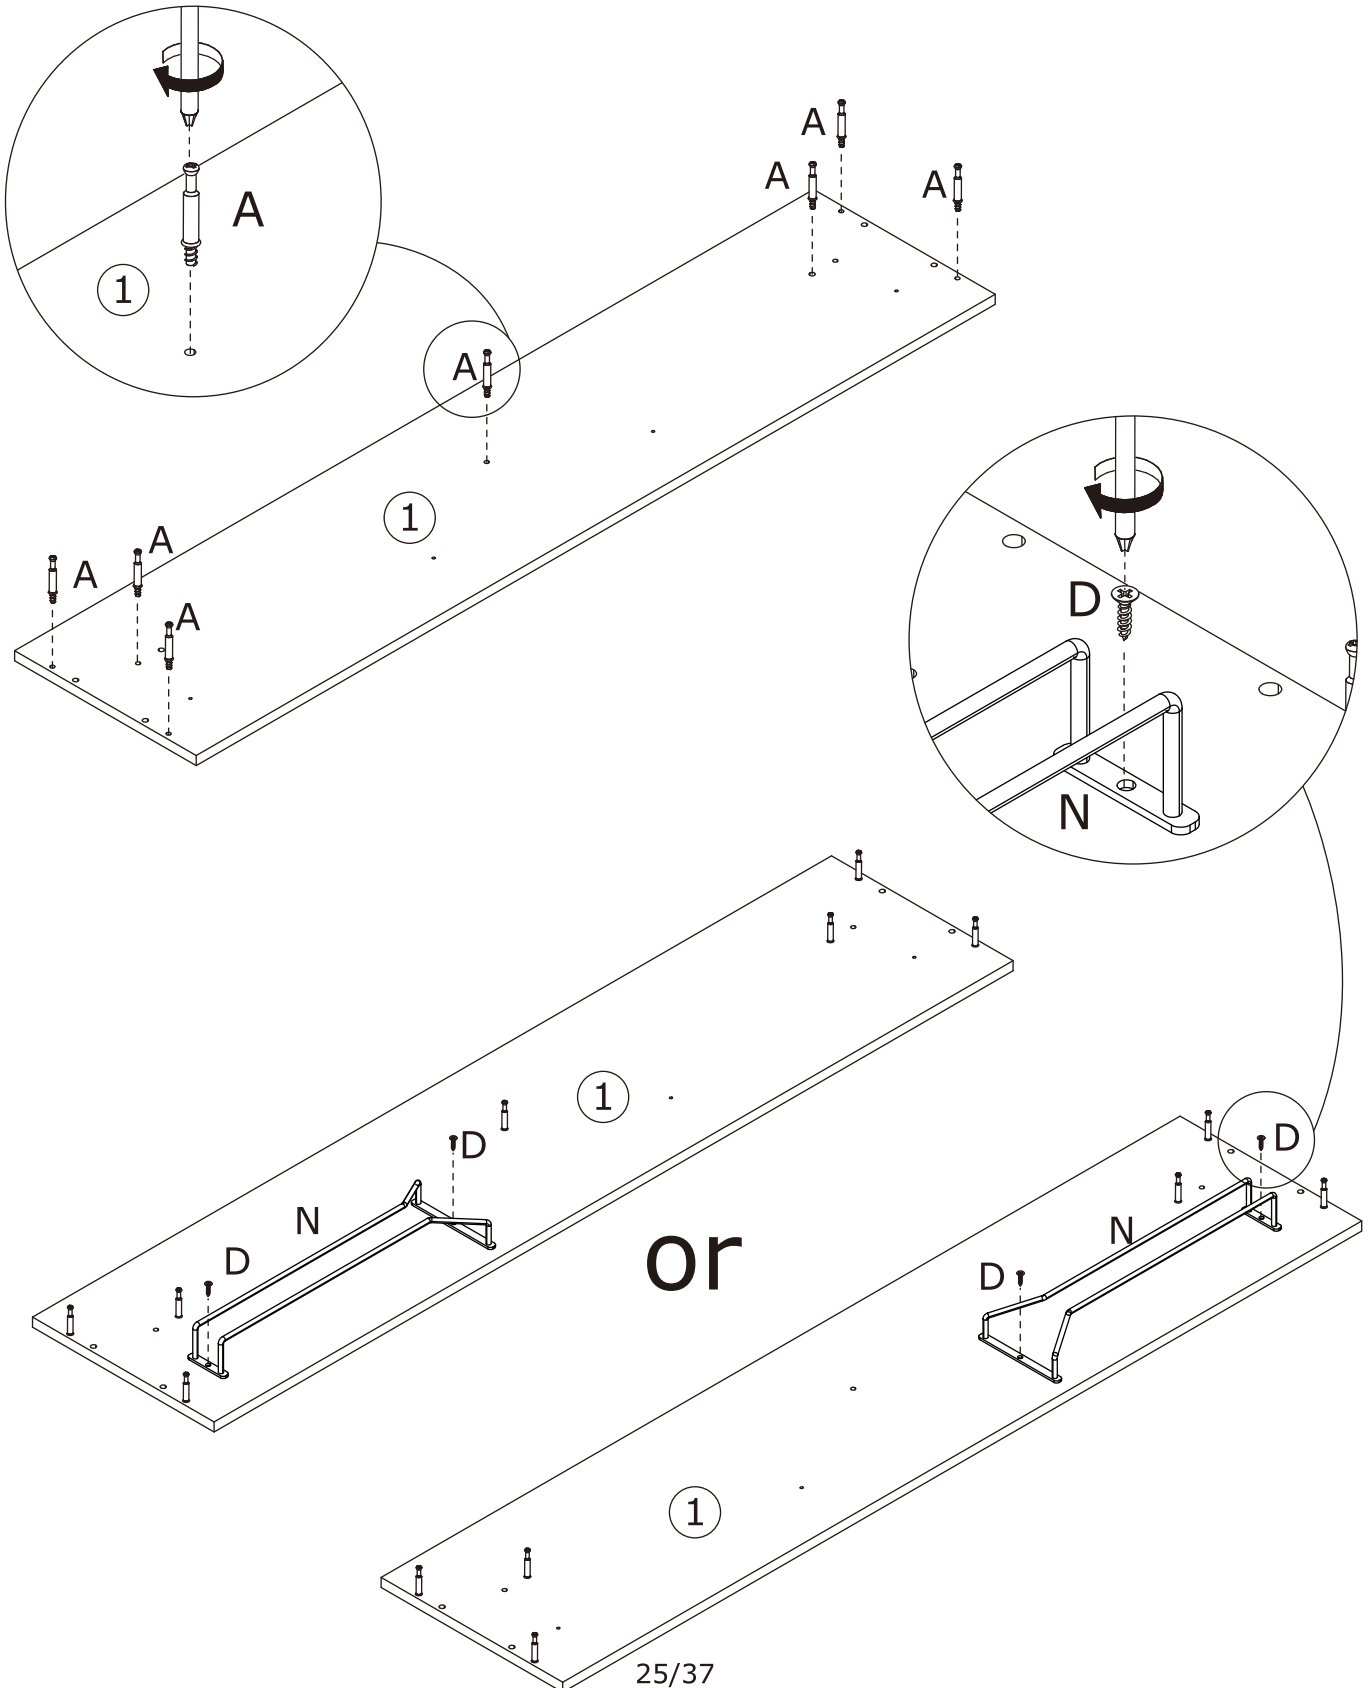


25

B x 7




Ø 12 x 10 mm



 
C x 6







Ø 6 x 30 mm

 

 
 
 
Connect Panel 1 to Panels 5, 6, and 11 with dowel pins (C). Fit cam locks (B) into position, then turn them clockwise to tighten.

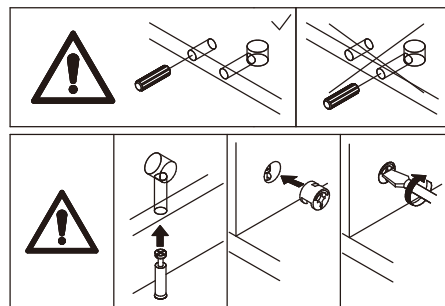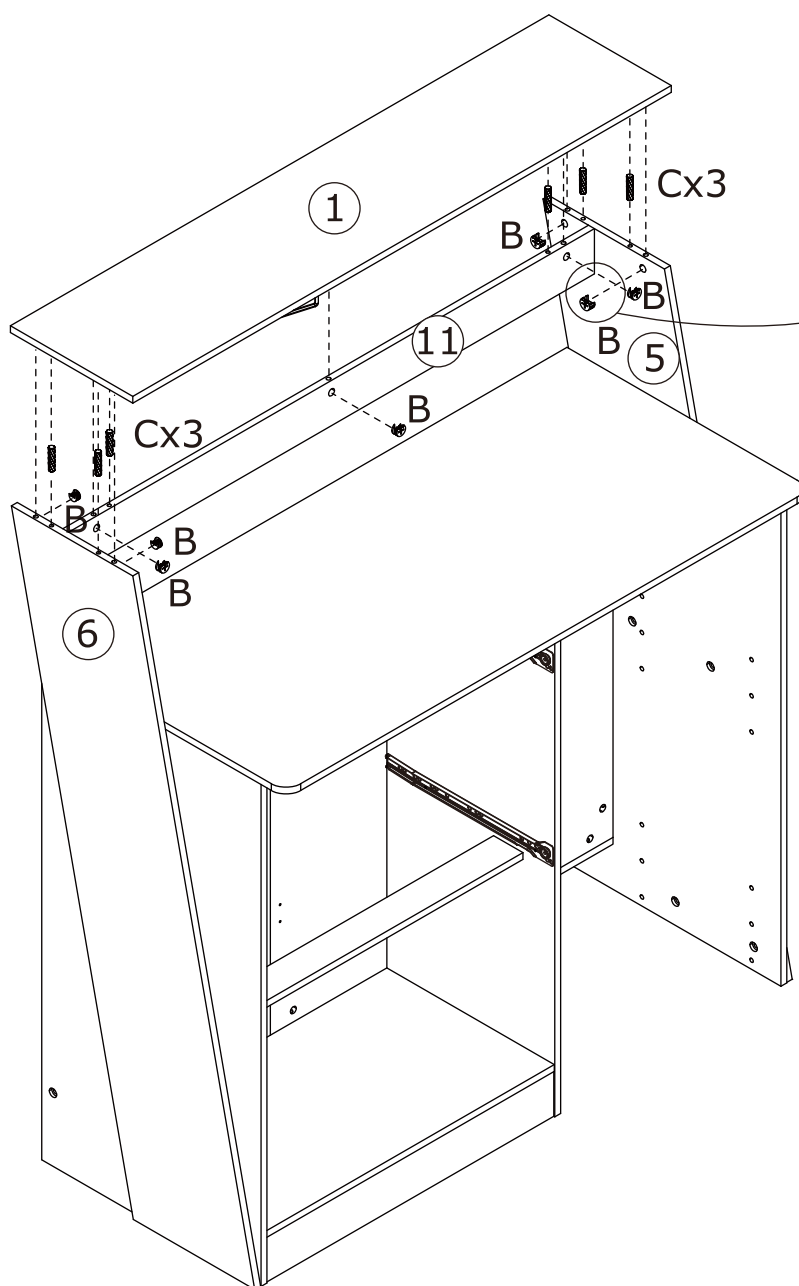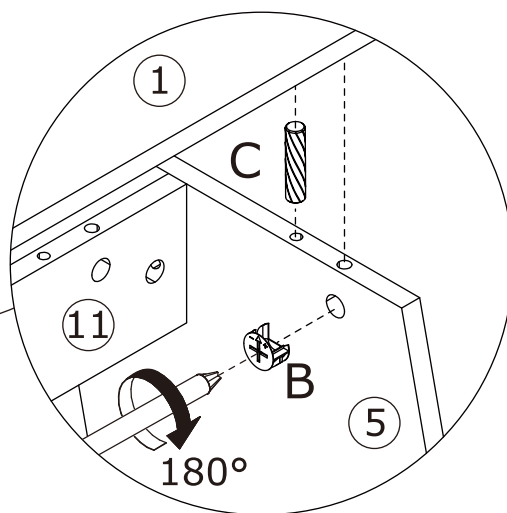



26

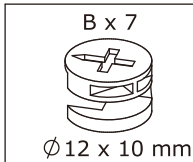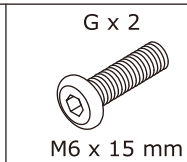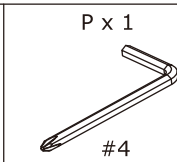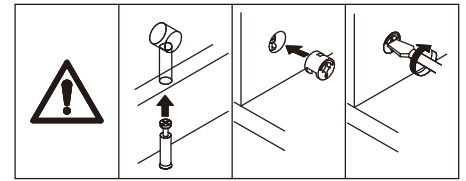    

  
 
Carefully tilt the unit on its side.
Fit cam locks (B) into position, then turn them clockwise to tighten.
Secure Panel 7 to Panel 5 with screws (G).

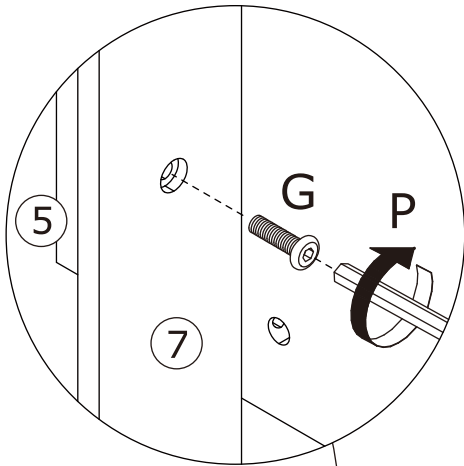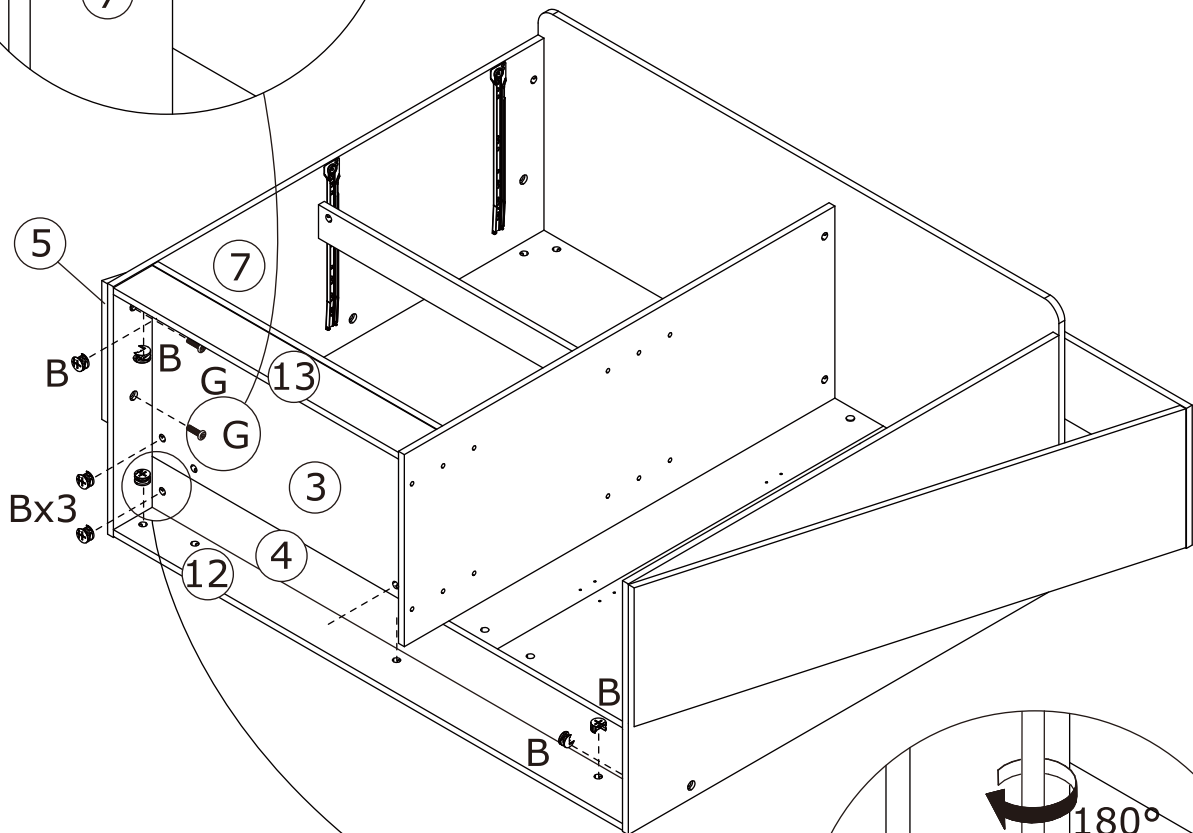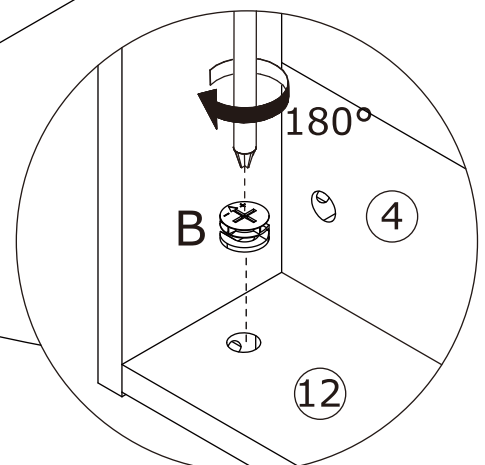




27

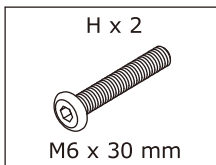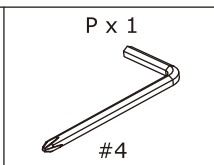  

 
 
Secure iron tube 14 to Panels 7 and 8 with screws (H).

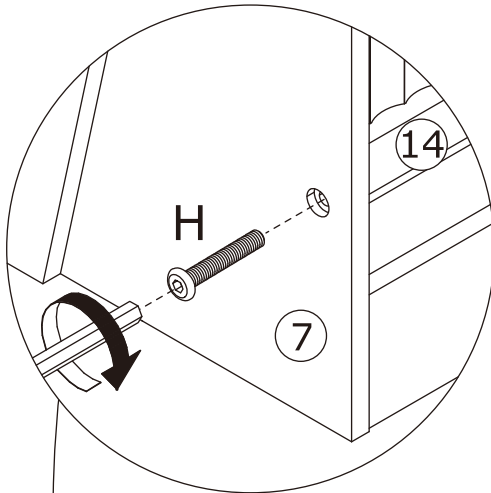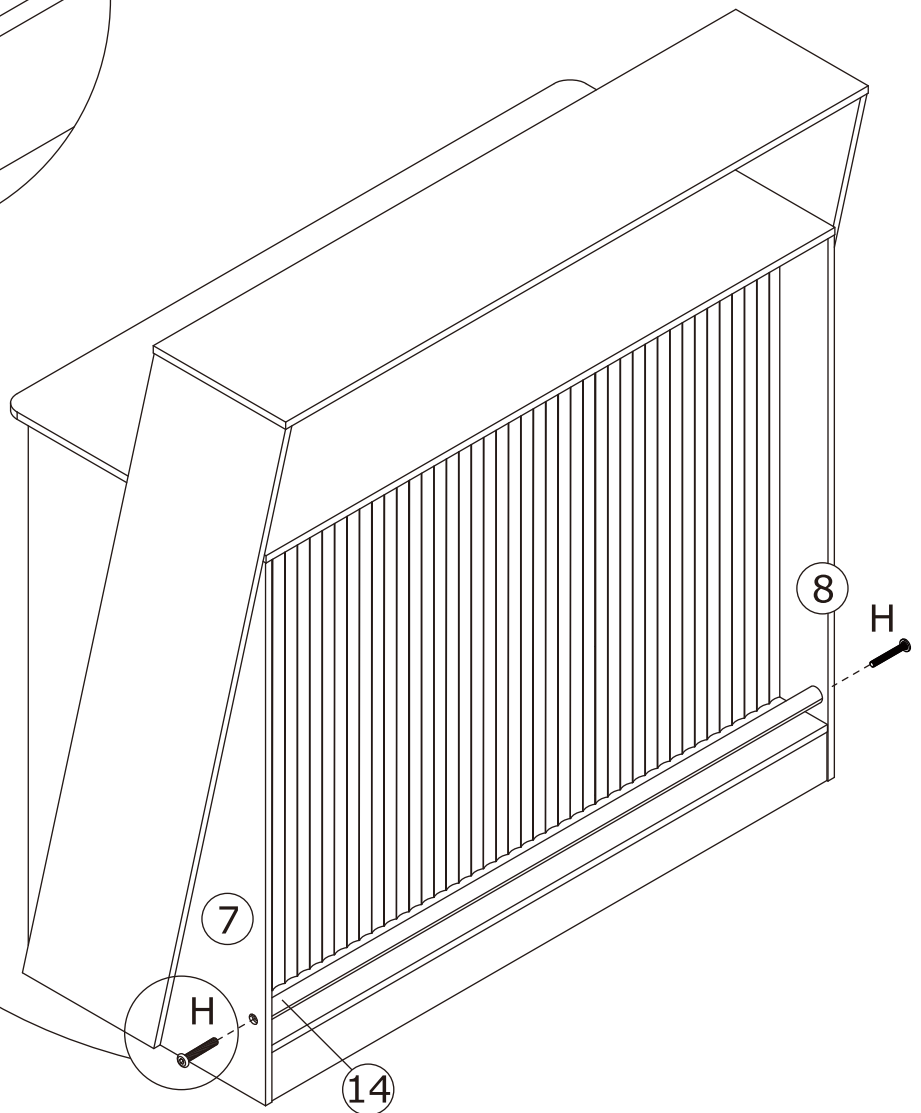



28

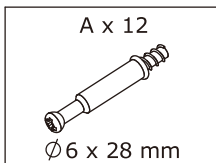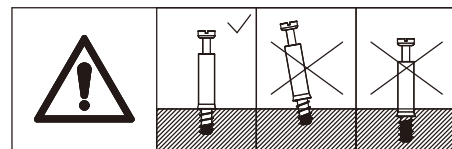   



Fasten cam bolts (A) into Panel 22.

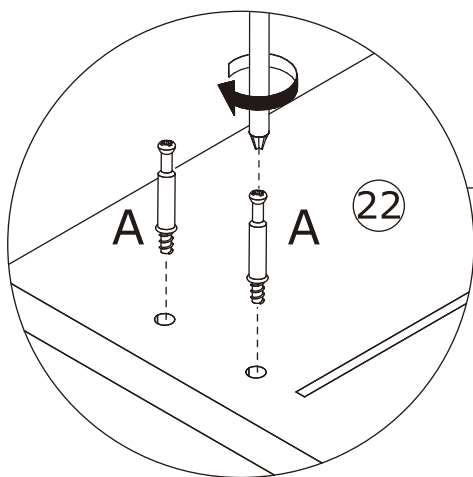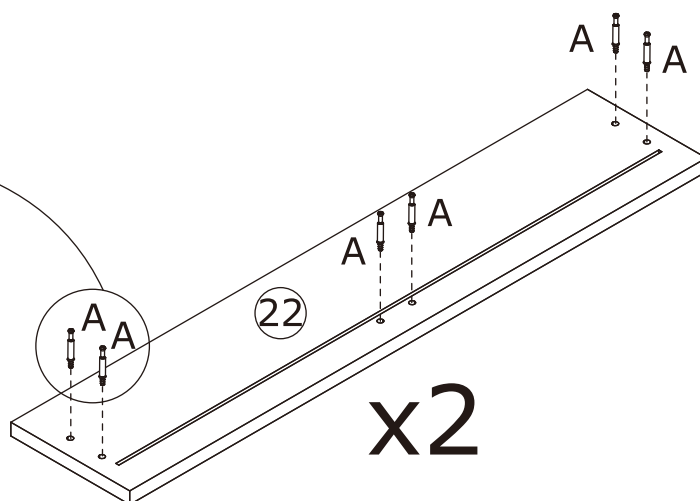  

29

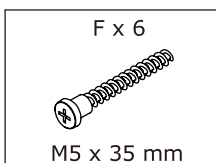  


  Secure Panel 23 to Panels 18, 19, and 26 with screws (F).

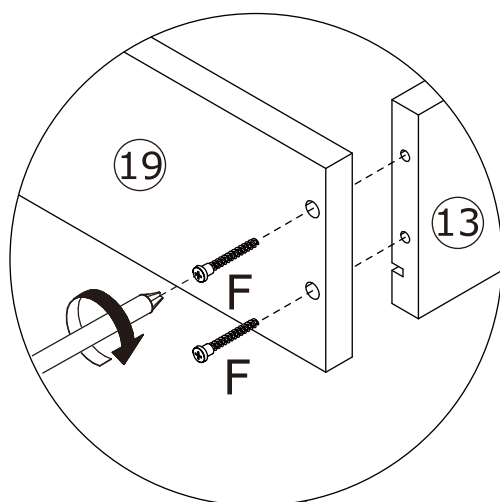
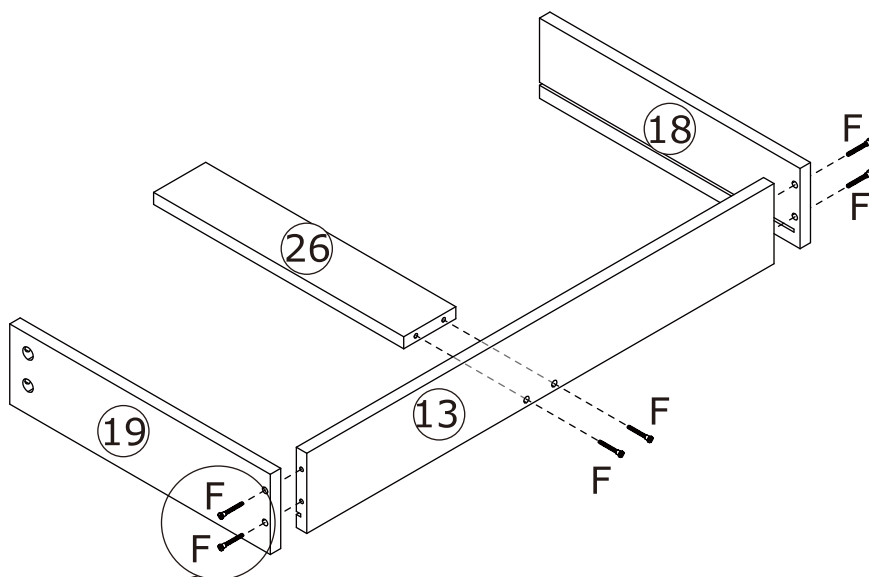


30



 
Insert Panel 25 along the grooves of Panels 18, 19, and 23.

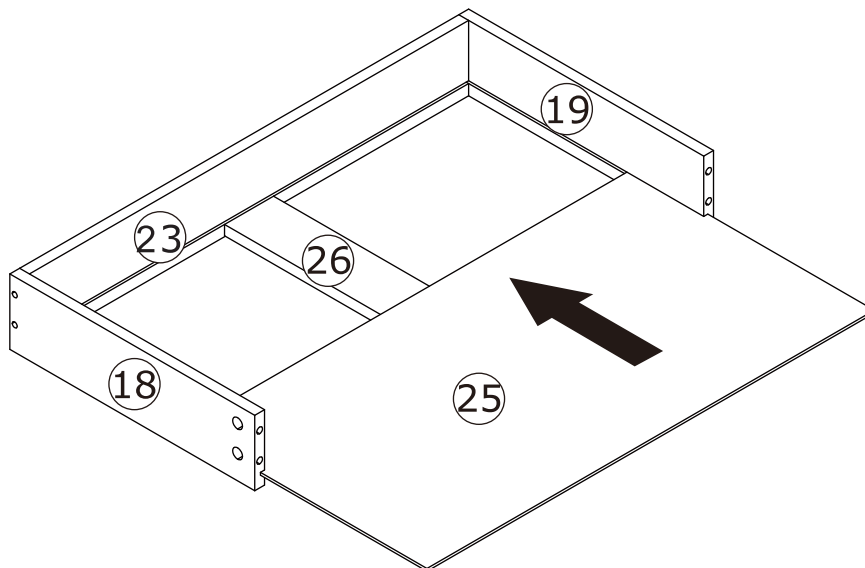

31

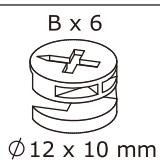  

   Connect Panel 22 to Panels 18, 26, and 19. Fit cam locks (B) into position, then turn them clockwise to tighten.

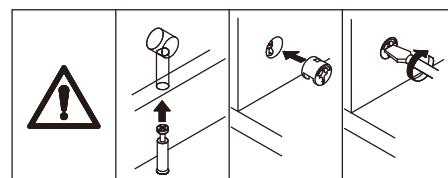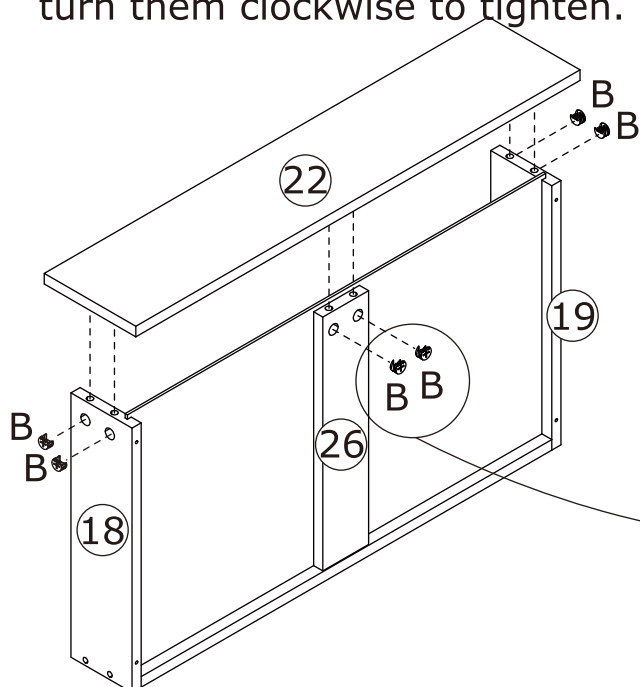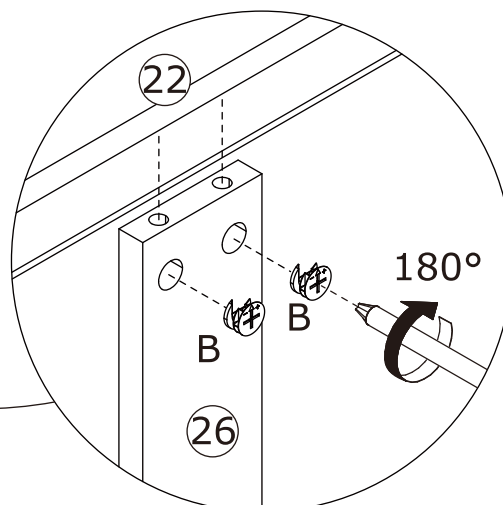


32

D x 4




Ø3.5 x 12 mm



 
E-DL x 1





E-DR x 1

 

   
Secure slide rail (E-DL) and (E-DR) onto Panels 18 and 19 with screws (D).

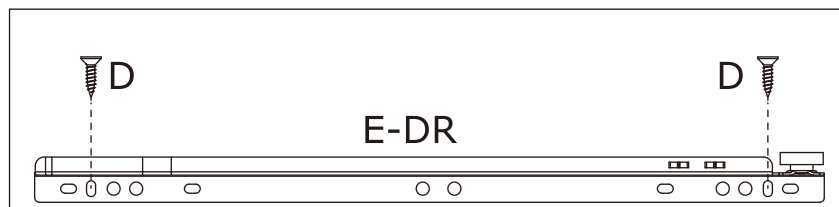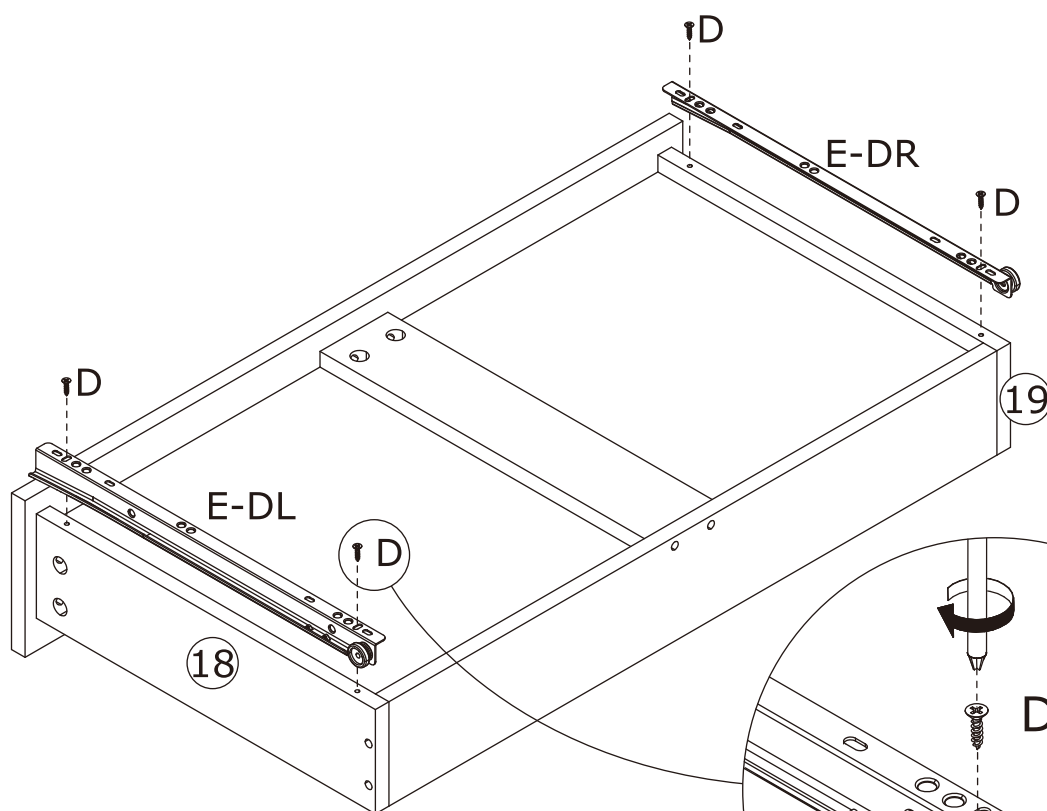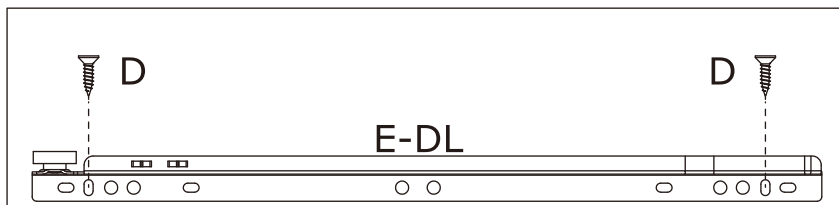

33

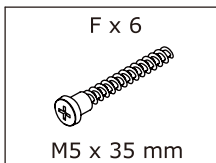  


 Secure Panel 24 to Panels 21, 26, and 20 with screws (F).



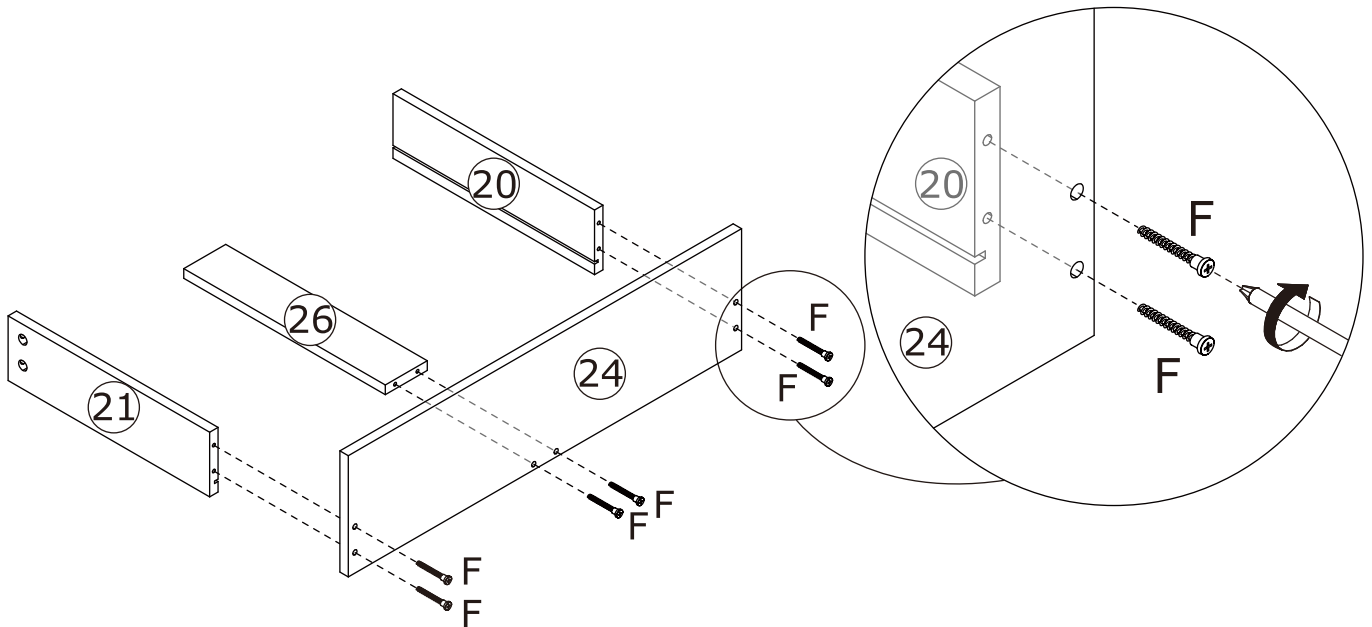


34

 
Insert Panel 25 along the grooves of Panels 20, 21, and 24.

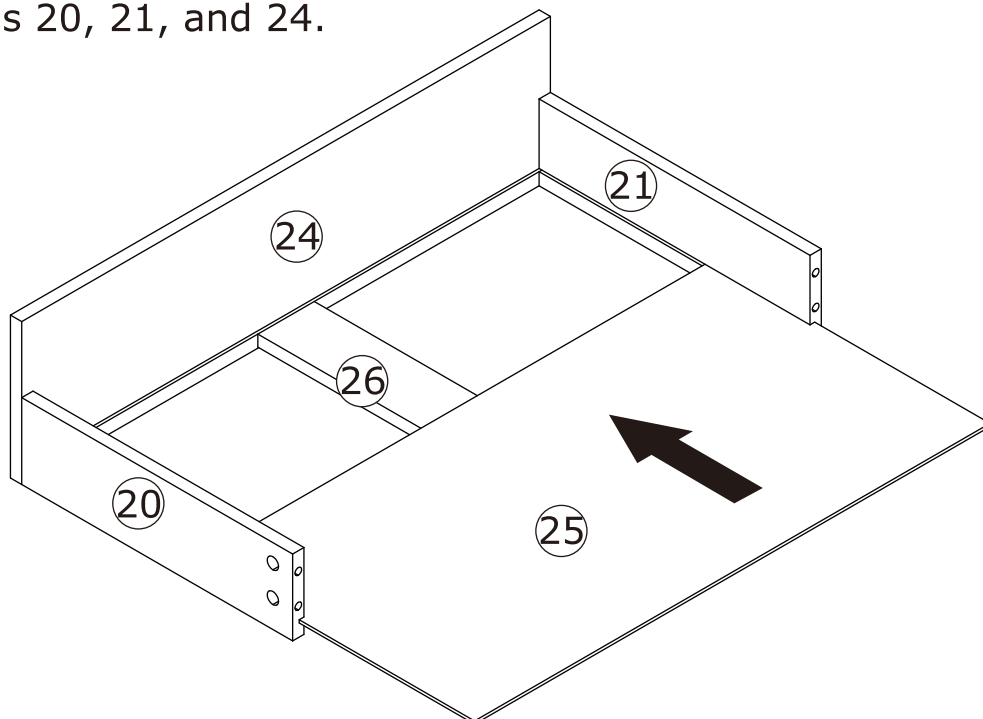


35

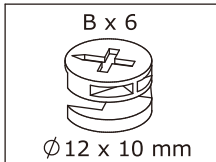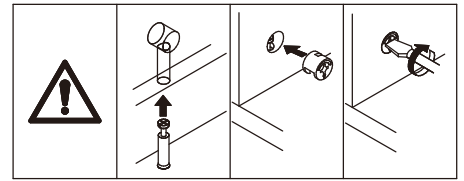   



 
Connect Panel 22 to Panel 20, 26, and 21.
Fit cam locks (B) into position, then turn
them clockwise to tighten.

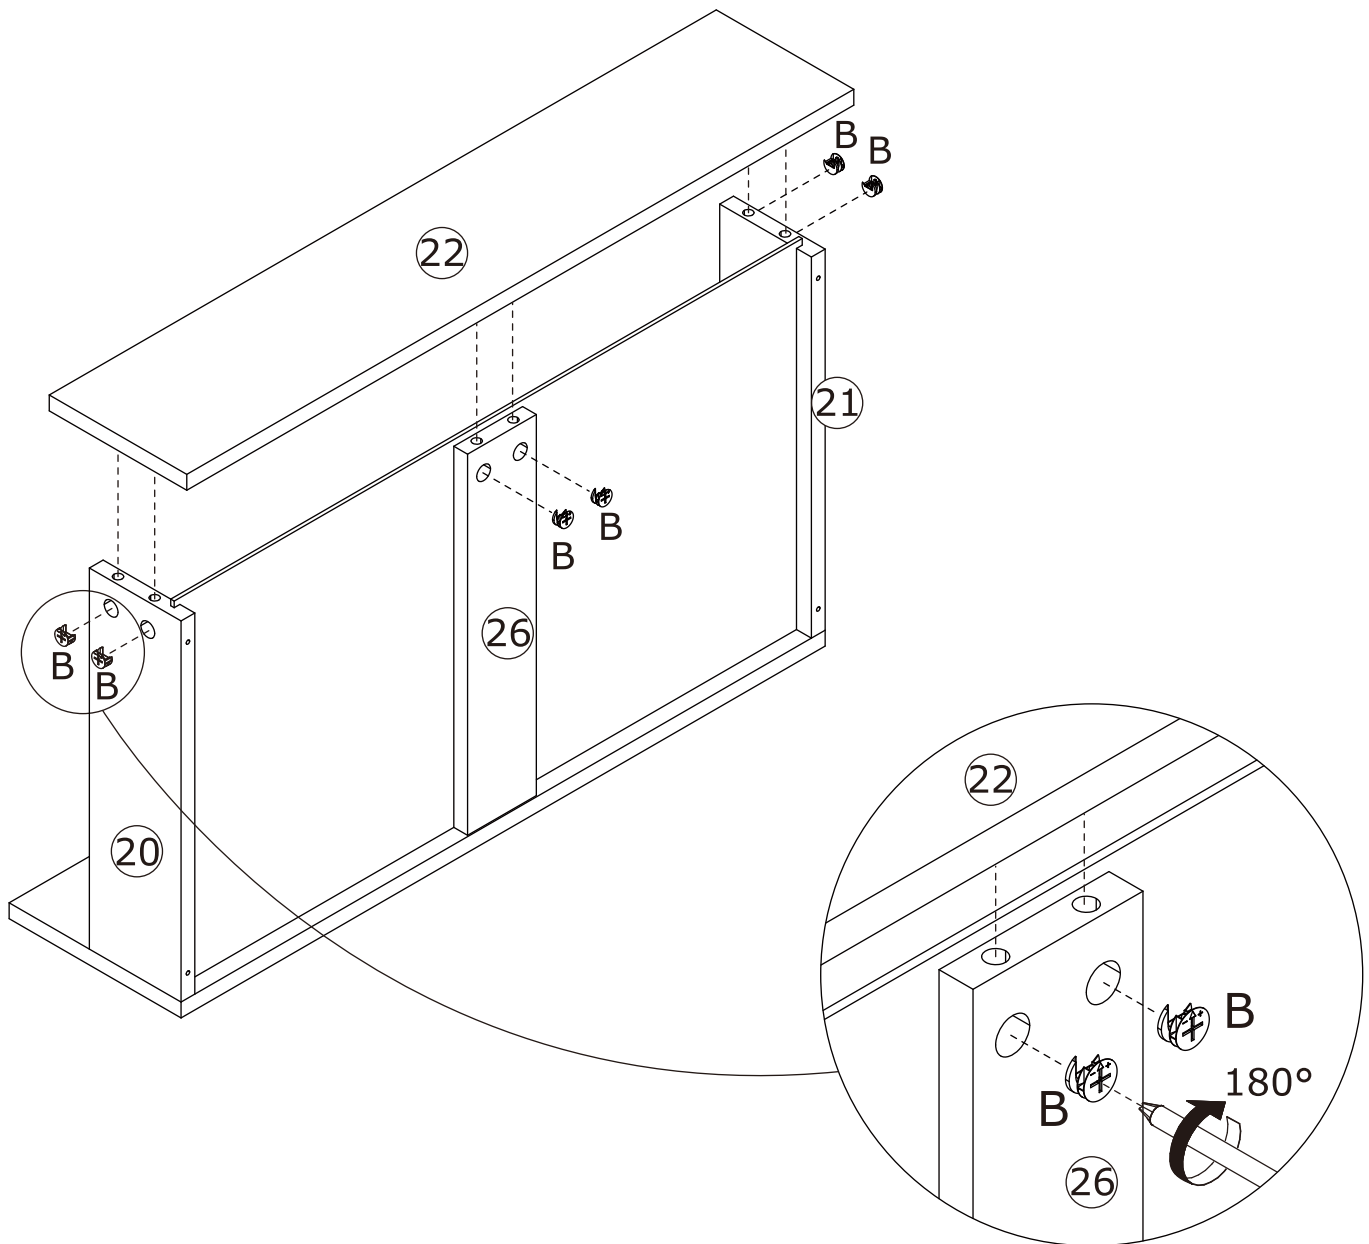

36

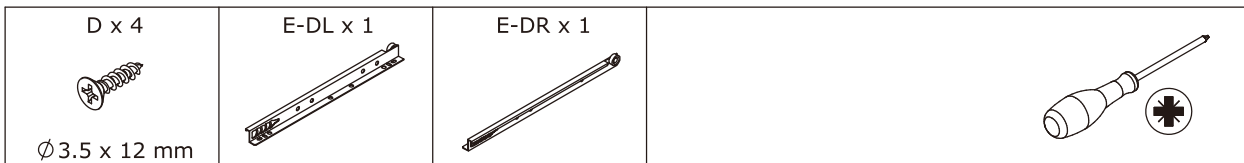 


   Secure slide rail (E-DL) and (E-DR) onto Panels 20 and 21 with screws (D).

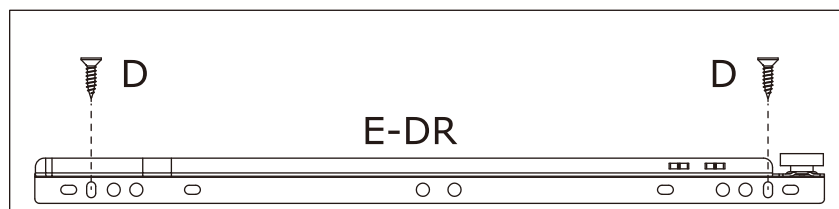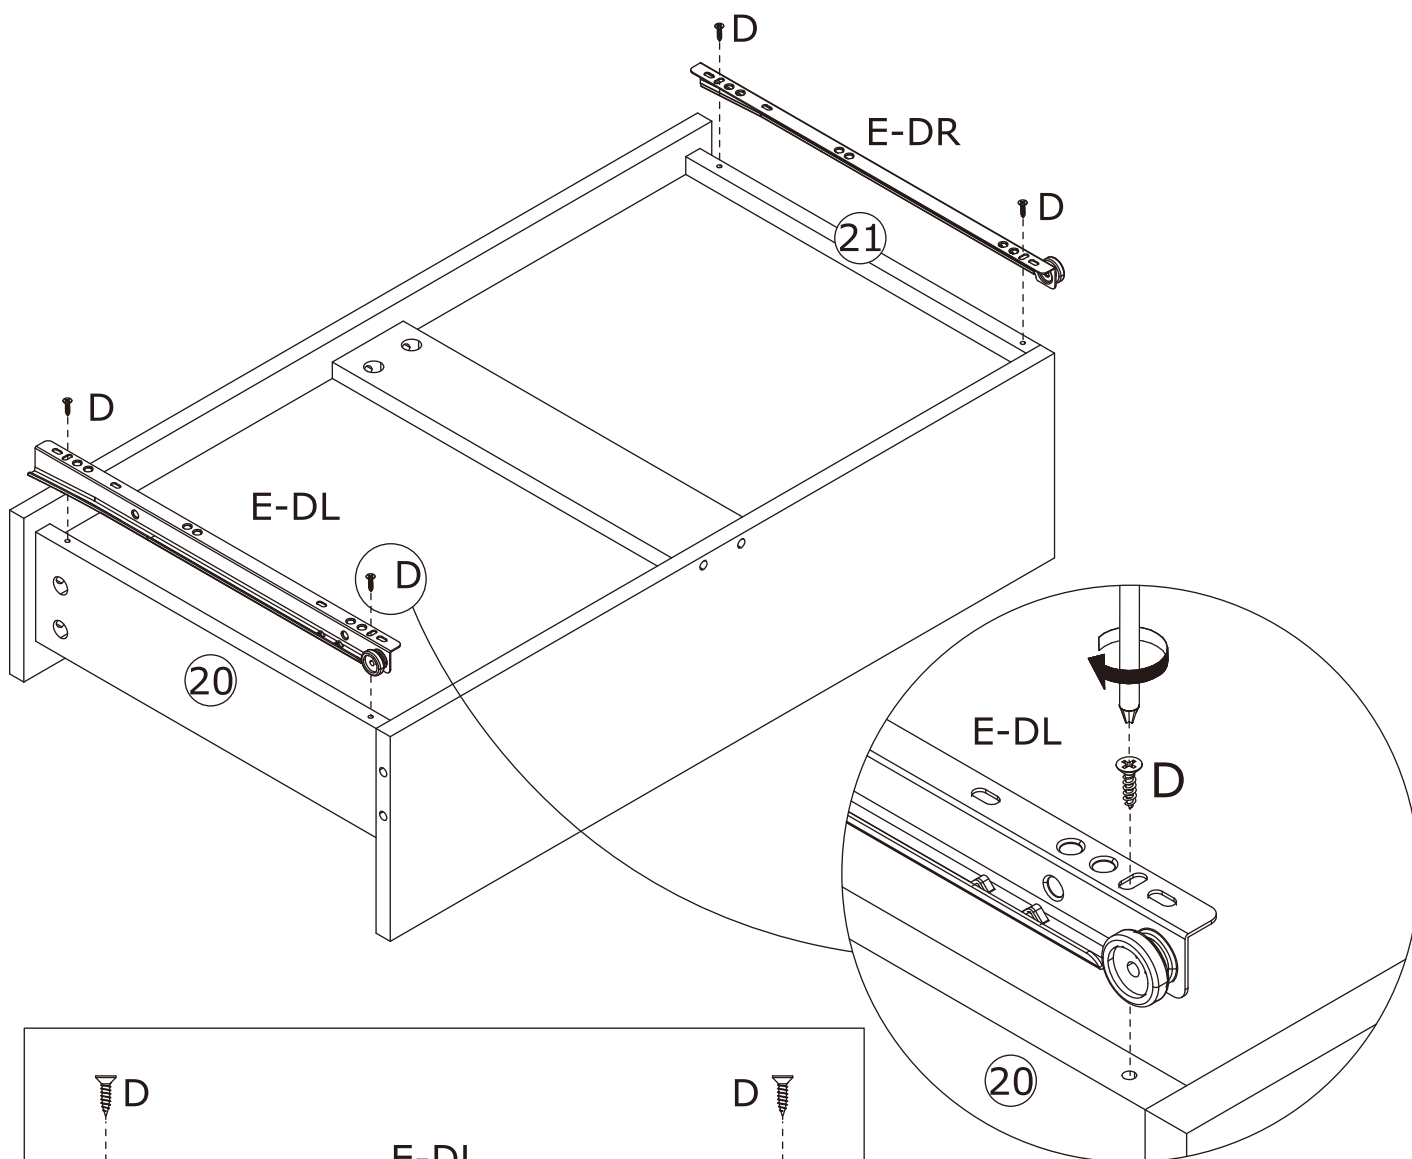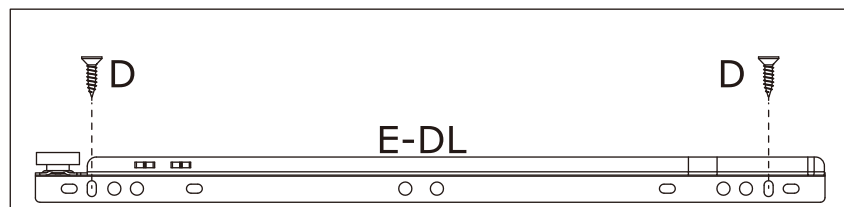


37

 Insert the drawers into the unit.


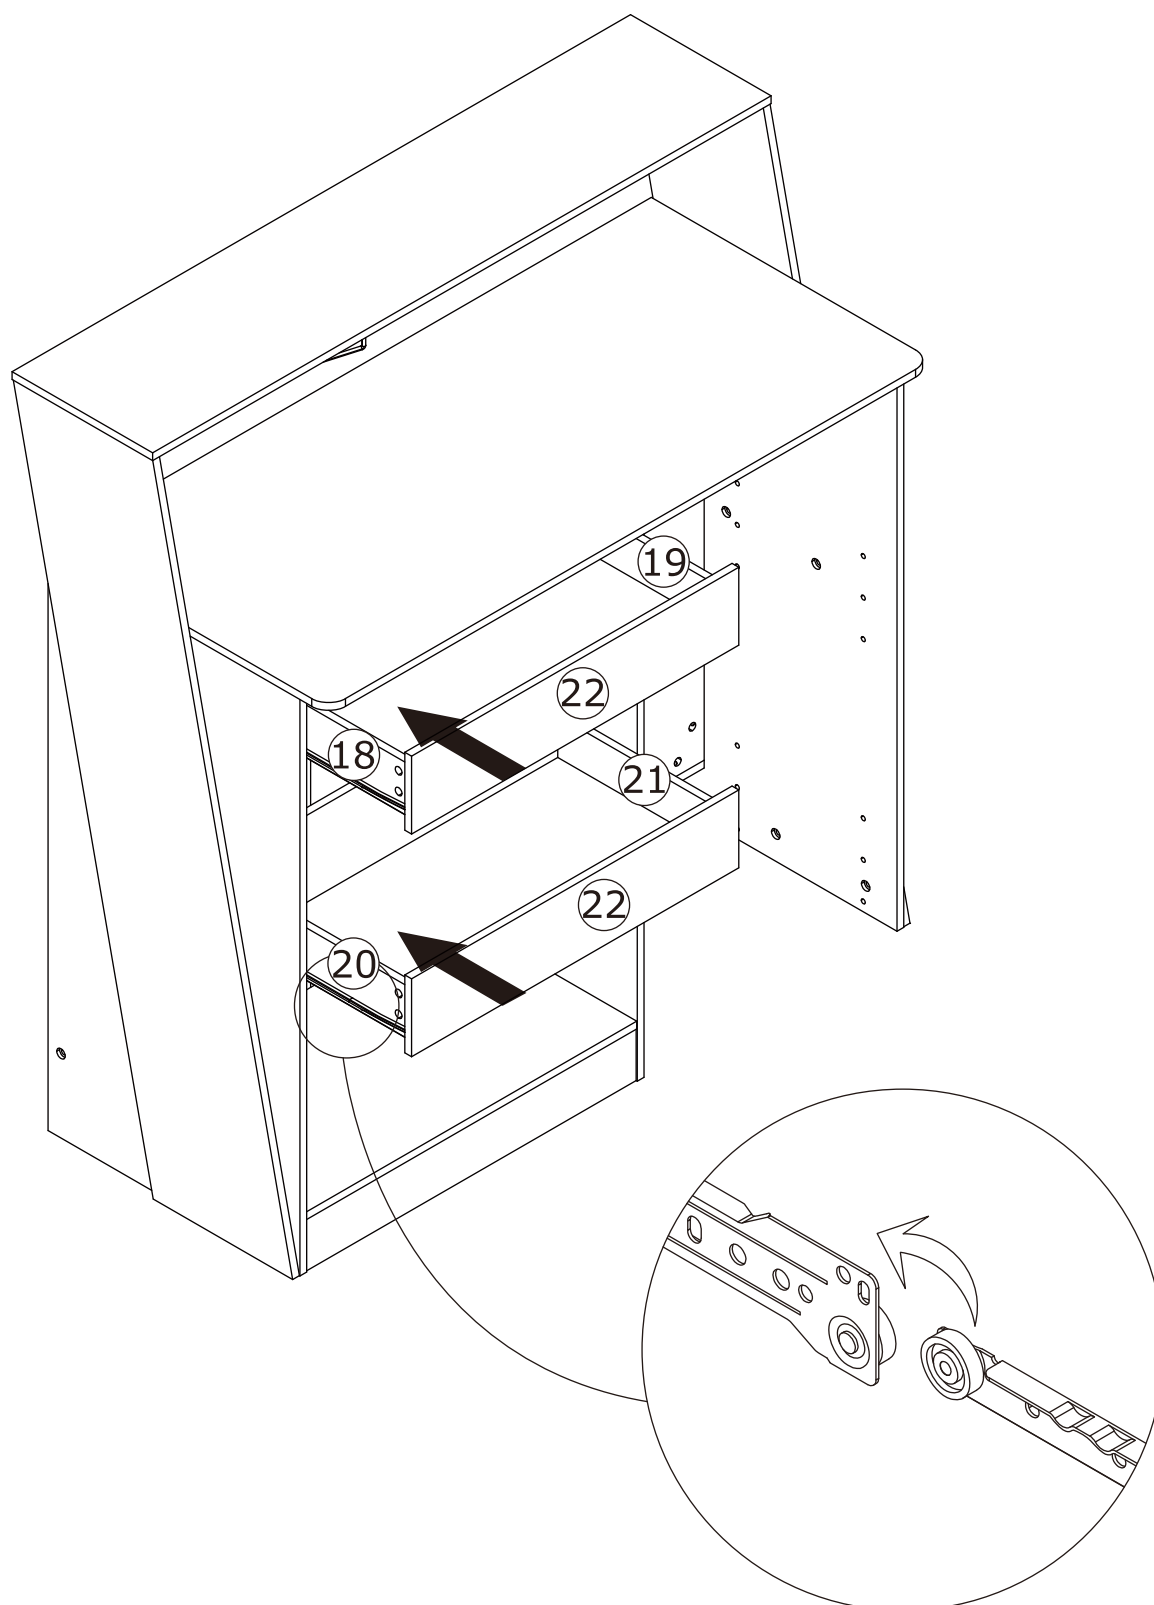


38

 
L x 8



  Insert shelf supports (L) onto Panels 7 and 9.

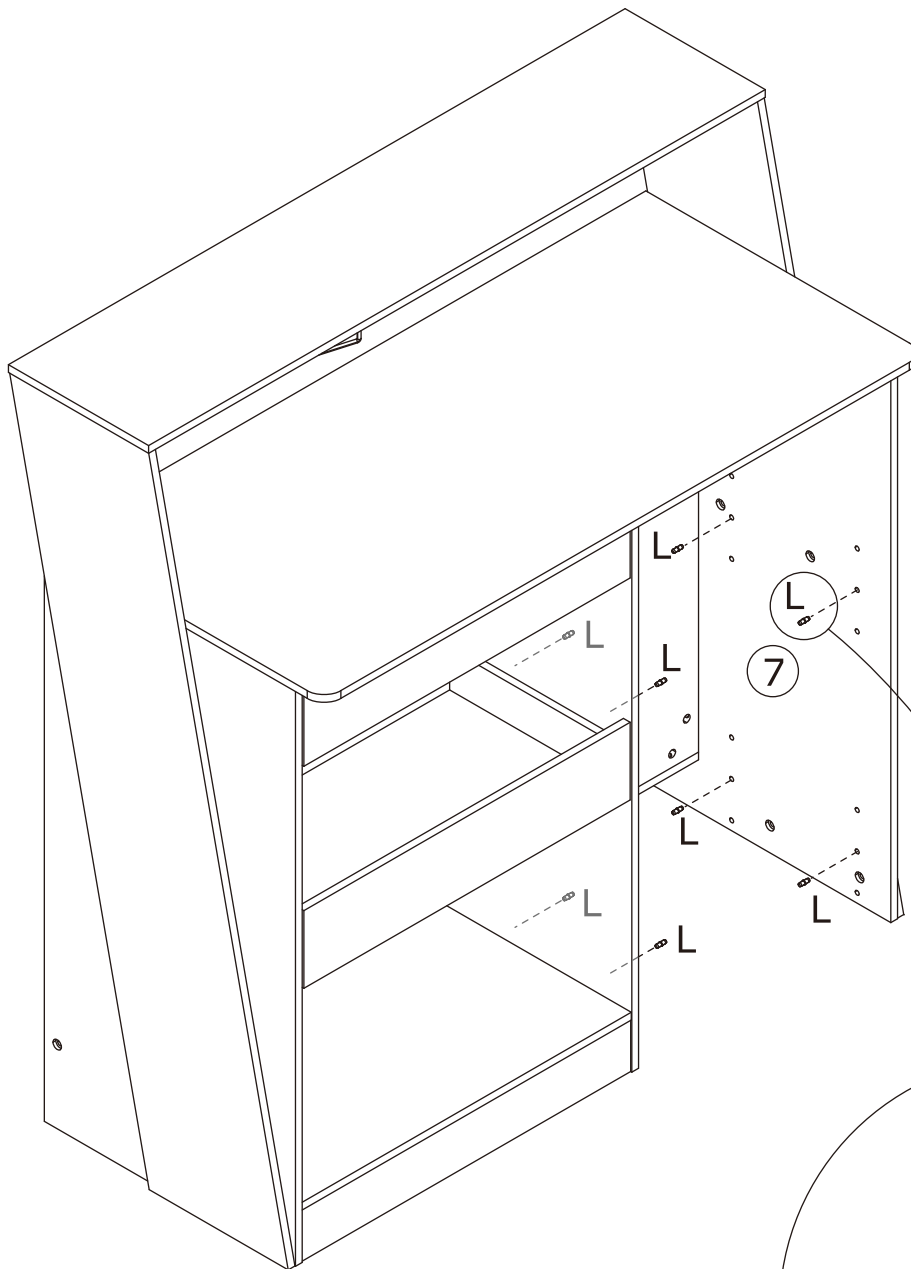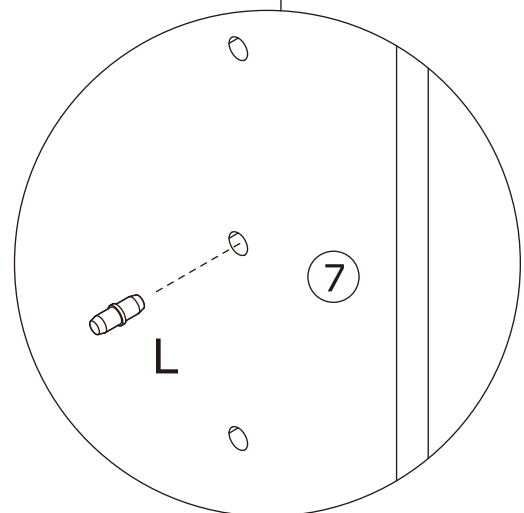

 Install Panels 10 onto the shelf supports.

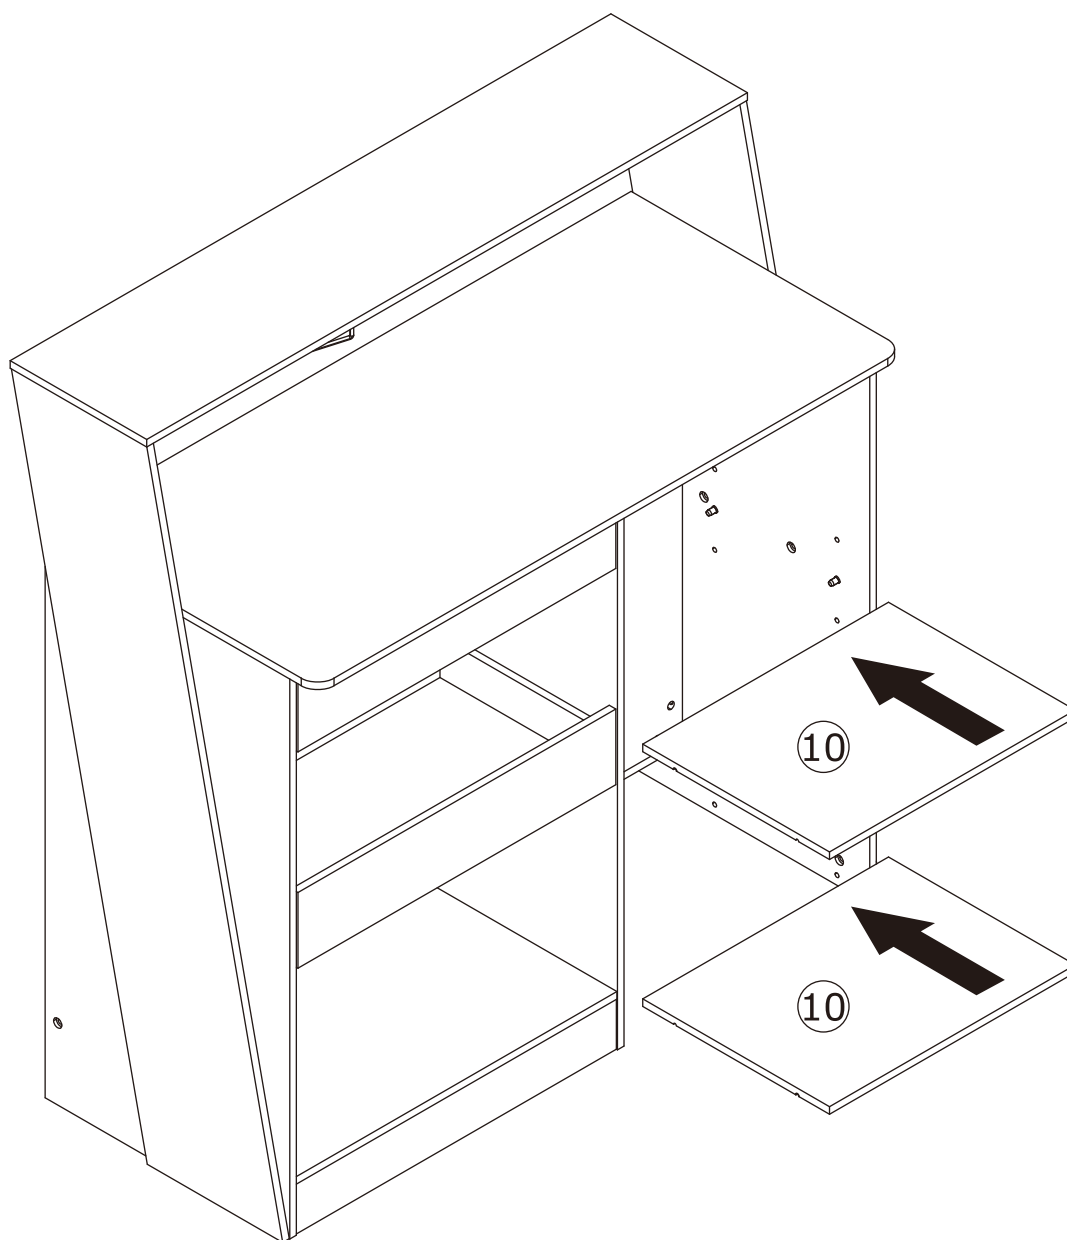

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT



XXXXXXXXXXXXXXXXXXXXXXXXXXXX



XXXXXXXXXXXXXXXXXXXX