


CUIR ÉCO CHAISE CLUB

INSTRUCTIONS DE MONTAGE

Notes Importantes:

- 1. Utilisez les outils à mains seulement pour l'assemblage comme les outils lourds peuvent provoquer des dommages
- 2. Enlevez soigneusement n'importe quelles agrafes utilisées pour l'emballage.

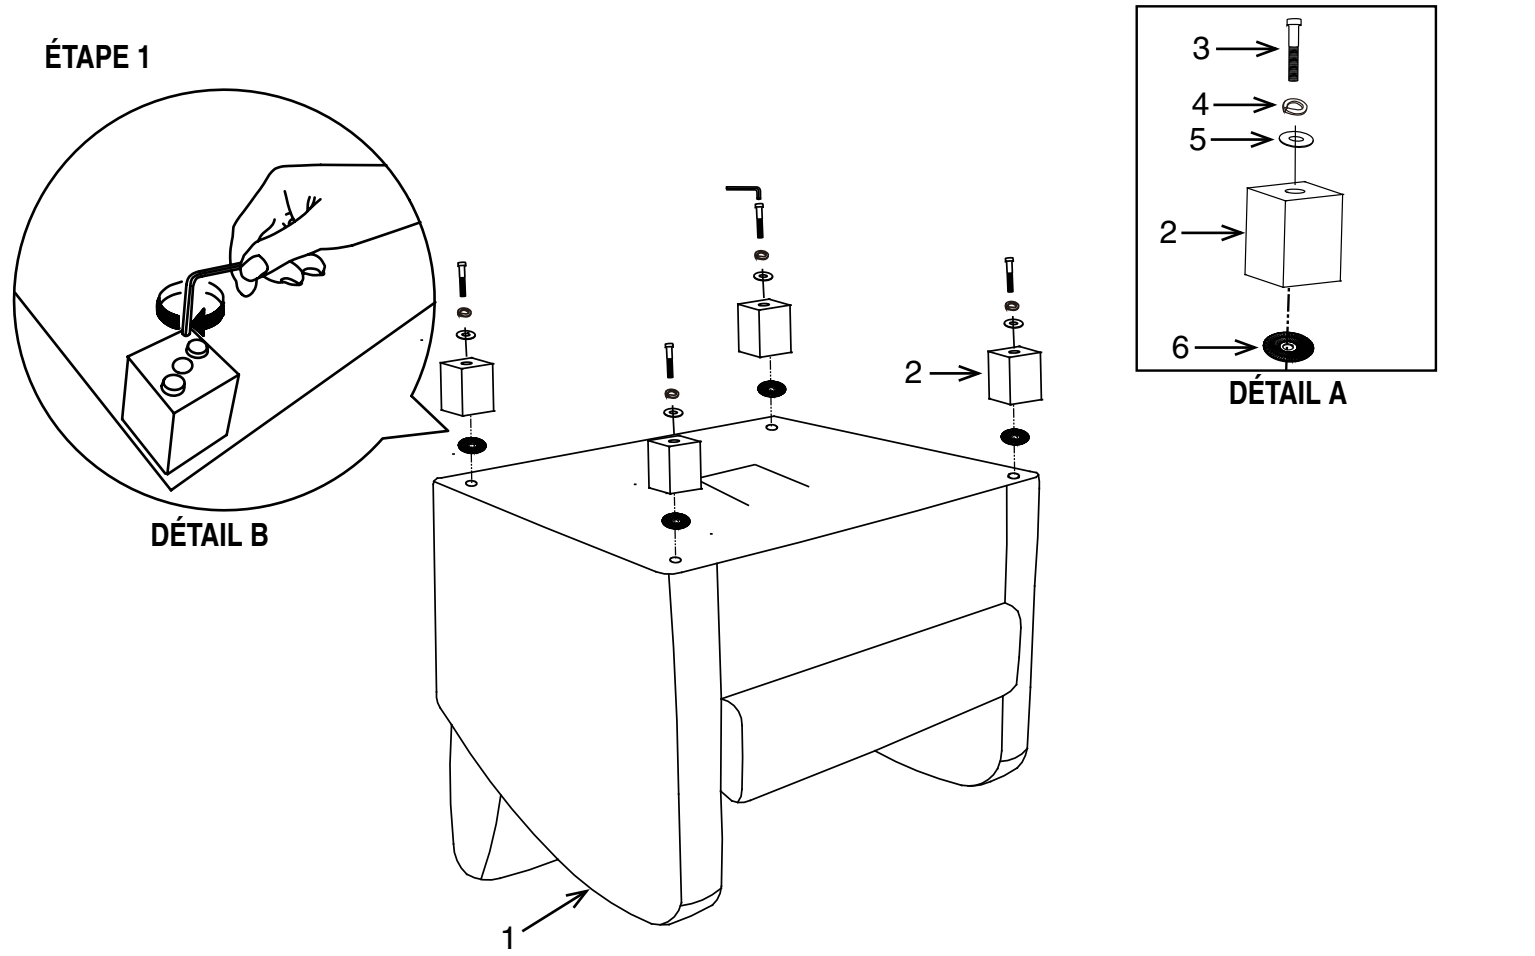


PIÈCE	QTÉ
1. Chaise	1
2. Pied	4
3. Boulon	4
4. Rondelles.	4
5. Rondelle plate	4
6. Grande rondelle plate	4
7. Clé allen (non montrée)	1

Enlever toutes les pièces du carton, les organiser selon les numéros de pièce indiqués sur la liste et vérifier les quantités des pièces.
ÉTAPE 1 Attacher les Pieds (2) à la Chaise (1) utilisant une Grande rondelle Plate (6), une Rondelle plate (4), une Rondelle (4) et une Boulon (3) pour chaque Pied (2), **VERIFIEZ LE DÉTAIL A. SERREZ COMPLÈTEMENT TOUTES LES BOULONS (3) À L'AIDE DE LA CLÉ ALLEN (7), VERIFIEZ LE DÉTAIL B.**
ATTENTION: AVANT D'UTILISER LE FAUTEUIL, S'ASSURER D'AVOIR SERRÉ COMPLÈTEMENT TOUTES LES BOULONS.

ECO LEATHER CLUB CHAIR

OPERATING INSTRUCTIONS

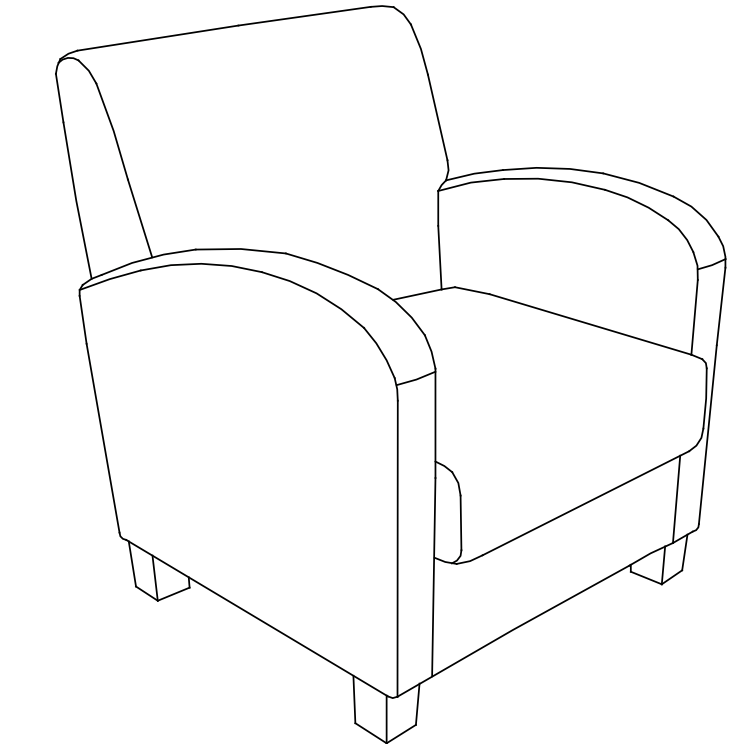

- WARNING***
- 1. Do not use this product unless all screws and bolts are securely tightened.
 - 2. Check that all screws and bolts are tight every three months or as needed.
 - 3. Dispose of packing material properly. Do not use plastic cover as head covering. It may cause suffocation.
 - 4. Do not use this product as a stepladder.
 - 5. Use this product for its intended purpose only.
 - 6. **Intended for residential use only.**

LIMITED WARRANTY

We Warrant to the original purchaser our products to be free from defects in material and workmanship for a period of 90 days. Defects and damage from misuse, abuse, negligence, alteration, accident, vandalism, rusting, acts of nature or any other event beyond the control of us is not covered. The warranty does not cover cosmetic damage that may result from normal use. Liability for incidental or consequential damages is excluded. The user assumes all risk of injury resulting from use of this product. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

To make a warranty claim, contact Customer Service, provide model number, sales receipt and description of the problem. It is the customer's responsibility to prepay freight on any components returned to the factory. We will pay return freight on components covered under terms of warranty.


Our quality standards are among the highest in the industry. Sometimes, no matter how hard we try, there are times when hardware is missing. Our Parts Department will do everything possible to promptly remedy the problem. Contact us via email, by Fax, or toll free parts number.

ECO LEATHER CLUB CHAIR

ASSEMBLY INSTRUCTIONS

IMPORTANT NOTE:

- 1. Use hand tools only for assembly as power tools may cause damage
- 2. Carefully remove any staples used for packaging.

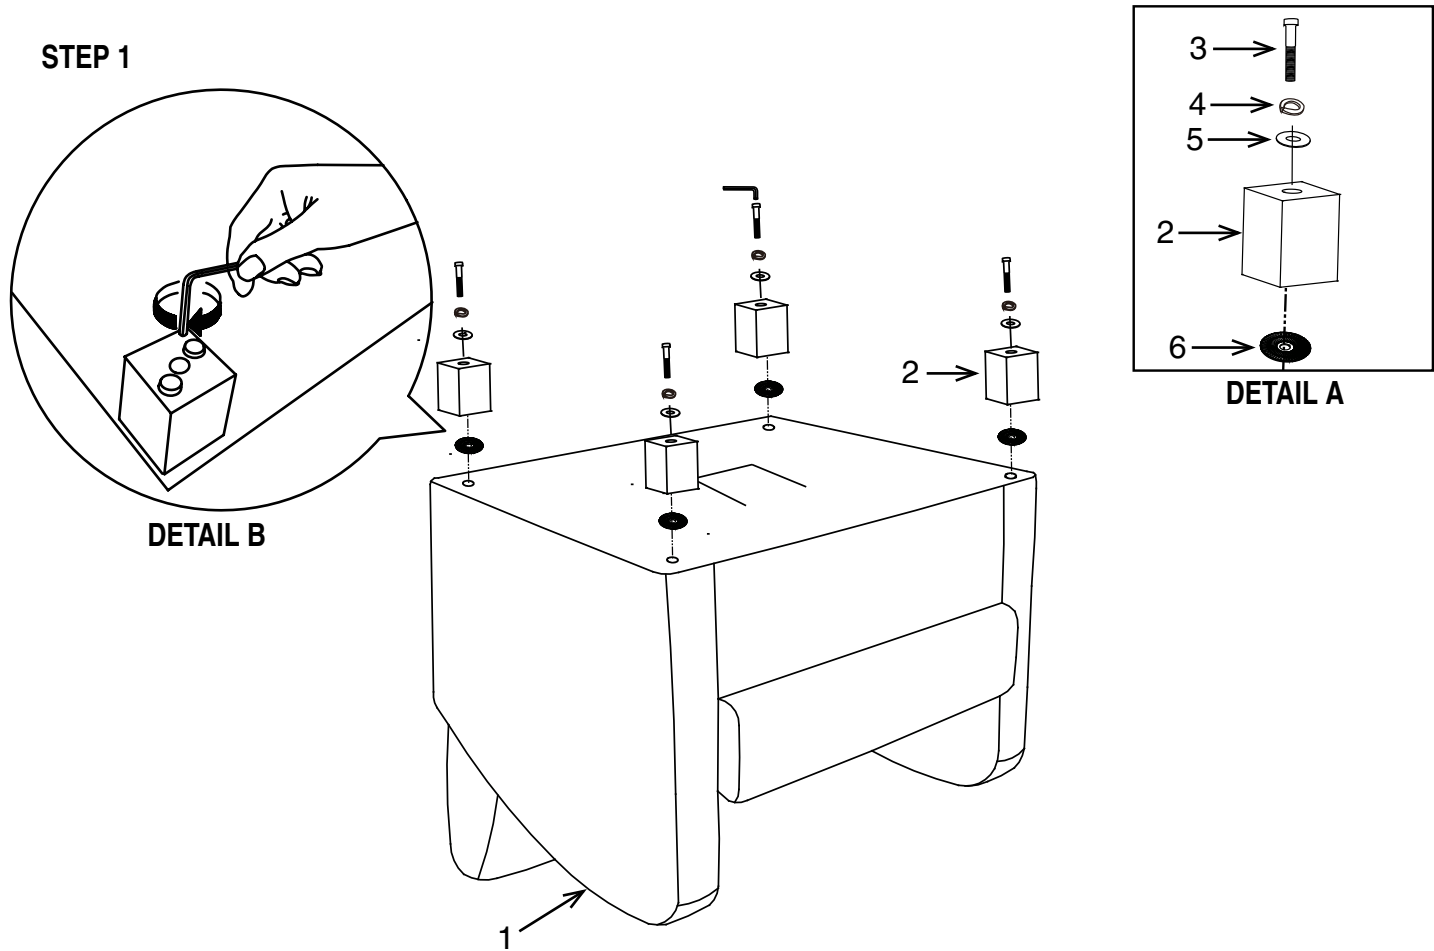

PART	QTY
1. Chair Body	1
2. Leg	4
3. Bolt	4
4. Lock Washer	4
5. Flat Washer	4
6. Spacer	4
7. Allen Wrench (not shown)	1


Remove all parts from carton, separate by part numbers indicated on parts list, and verify part quantities.

STEP 1 Attach one Leg (2) to each bottom corner of Chair Body (1) using one Spacer (6), one Bolt (3), one Lock Washer (4) and one Flat Washer (5) for each Leg (2), **SEE DETAIL A. FULLY TIGHTEN ALL BOLTS (3) USING ALLEN WRENCH (7), SEE DETAIL B.**

ATTENTION: MAKE SURE ALL BOLTS (3) ARE FULLY TIGHTENED BEFORE USING CHAIR.

CUIR ÉCO CHAISE CLUB

MODE D’EMPLOI

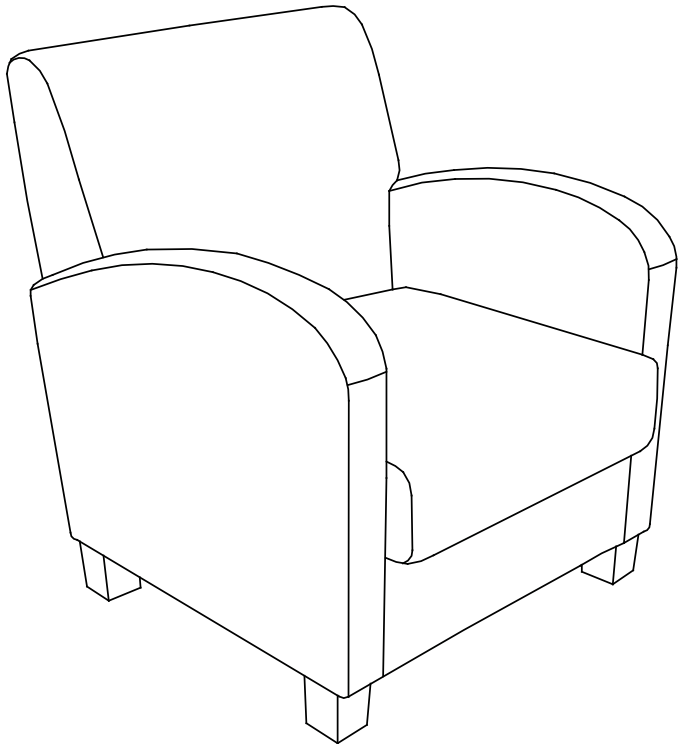

AVERTISSEMENT

- 1. Ne pas utiliser ce produit à moins que toutes les vis et tous les boulons soient resserrés.
- 2. Vérifier à tous les trois mois ou au besoin que toutes les vis et tous les boulons sont resserrés.
- 3. Éliminer les matériaux de conditionnement d’une manière convenable. Ne pas utiliser la couverture en plastique pour couvrir la tête à cause du risque d’étouffement.
- 4. Ne pas utiliser ce produit comme un escabeau.
- 5. Ce produit ne doit servir qu’à l’usage pour lequel il a été conçu.
- 6. **Prévu pour utilisation résidentielle uniquement.**