


# ASSEMBLY INSTRUCTIONS


## GOLD DINING TABLE CHROME DINING TABLE

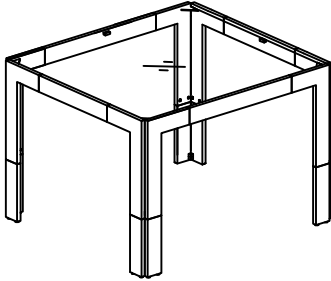

**+ Do Not Use  
PowerTools**



**+ Suggested  
Adults**

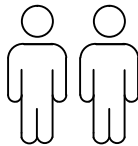

### NOTE:

- 1 Read instructions cover to cover.
- 2 Save all packaging until assembly is completed.

### 1 IMPORTANT SAFETY INFORMATION

**Do not** assemble the product if any of the following parts arrived damaged:

Part # -Table Top

**Tempered Glass Warning:** Should the tempered glass chip at ANY point throughout ownership, please immediately discontinue use of the table to avoid injury.

 
**CAUTION :** DO NOT place hot objects (100°F or more) directly on the glass surface.

### 2 IMPORTANT ASSEMBLY INFORMATION


**Assembly Step Use Bolt A to connect Part 1 to Part 2.**

### + Parts Included


- ① Leg  
4PCS



- ② Acrylic Rail  
4PCS

 

- ③ Glass Top  
1PC

 

### + Hardware Included

- A Bolt(1/4"\*3/4")  
16 PCS



- B Washer(1/4")  
16 PCS



- C Spring Washer(1/4")  
16 PCS



- D Allen Key(4mm)  
1 PC




- E Antiskid Pad  
8 PCS



# ASSEMBLY INSTRUCTIONS


GOLD DINING TABLE  
CHROME DINING TABLE

①

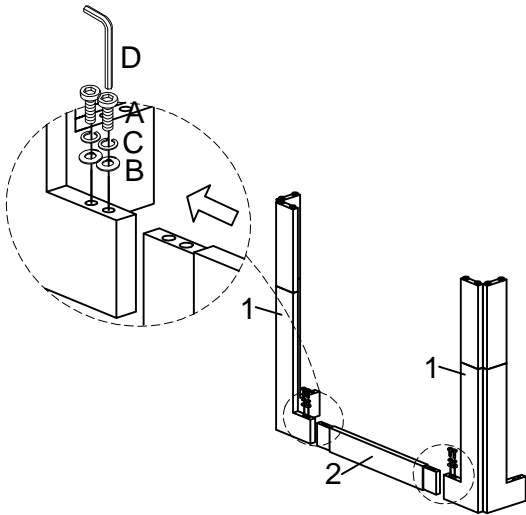


**Note: Do not fully tighten the bolts at this step.**

②

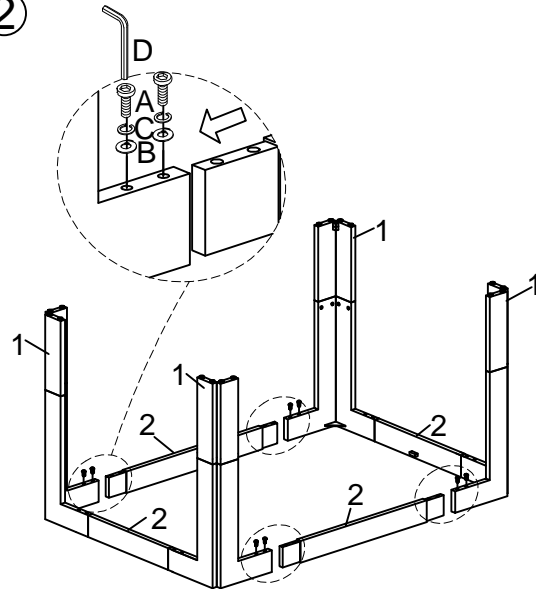

**Note: Do not fully tighten the bolts at this step.**

③

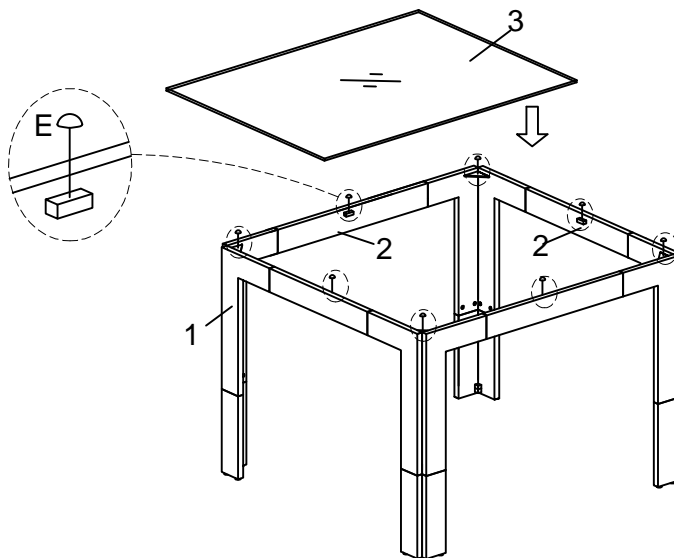

**Note: Fully tighten all bolts at this step.**