
## **ROBBIN WOOD KITCHEN CART**

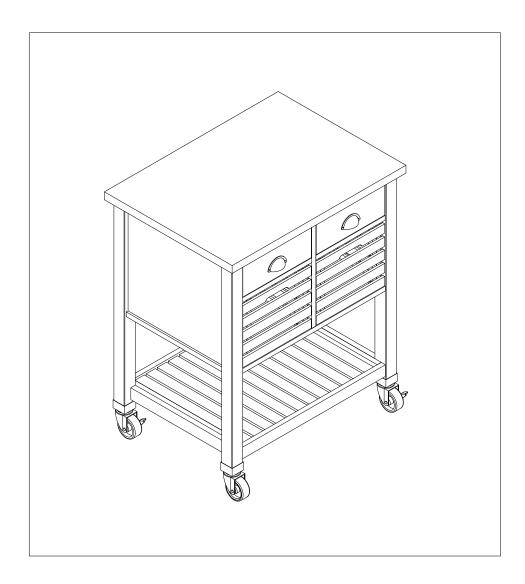

## We are here to help! Before you return it - contact us.

We do our best to insure that your furniture arrives in excellent condition. In the event that a part is damaged or missing, will be happy to provide you with replacement parts, at no charge, within 30 days of purchase, providing the parts are available in our warehouse and the item purchased is part of our current inventory. In order to receive spare parts, at no charge, you must provide proof of purchase within 30 days.

If you need assistance with assembly or replacement parts, please call Customer Service, prior to returning the item to the store.

| #1  | TOP PANEL            | #12 | DRA  |
|-----|----------------------|-----|------|
| #2  | LEFT FRAME           | #13 | DRA  |
| #3  | RIGHT FRAME          | #14 | DRA  |
| #4  | TOP FRAME            | #15 | BASI |
| #5  | SHELF FRAME          | #16 | BASI |
| #6  | BOTTOM FRAME         | #17 | BASI |
| #7  | CENTER DIVIDED PANEL | #18 | CAST |
| #8  | FRONT RAIL (2)       | #19 | CAST |
| #9  | BACK PANEL           | #20 | LEFT |
| #10 | DRAWER FRONT (2)     | #21 | RIGH |
| #11 | DRAWER LEFT SIDE (2) |     |      |
|     |                      |     |      |

#12 DRAWER RIGHT SIDE (2)
#13 DRAWER BACK (2)
#14 DRAWER BOTTOM (2)
#15 BASKET FRONT (4)
#16 BASKET SIDE (4)
#17 BASKET BOTTOM (2)
#18 CASTER (2)
#19 CASTER WITH BRAKE (2)
#20 LEFT SIDE GLIDE (2)
#21 RIGHT SIDE GLIDE (2)

