

# OVENTE®

STAINLESS STEEL COIL

# ELECTRIC COOKTOP

BGC101 SERIES



BLACK



SILVER

*Before use, please read this manual thoroughly and save for future reference.*

[ovente.com](http://ovente.com)

# STAINLESS STEEL COIL ELECTRIC COOKTOP

BGC101 SERIES

## TABLE OF CONTENTS

IMPORTANT SAFEGUARDS	. . . . .	3
PARTS & FEATURES	. . . . .	5
USING YOUR ELECTRIC COOKTOP	. . . . .	7
RECIPE	. . . . .	9
CARE & MAINTENANCE	. . . . .	10



# IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to prevent the risk of fire, electric shock, burns, or other injuries or damages.

- ❗ Before connecting the cooktop, check whether the voltage at the bottom corresponds to your local voltage.
- ❗ DO NOT operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or has been damaged in any manner. If the main cord is damaged, contact Customer Service on 1-855-926-2626 immediately.
- ❗ To protect against electrical hazards, DO NOT immerse cord, plugs, or the cooktop itself in water or other liquid.
- ❗ DO NOT let cord hang over the edge of a table or counter, and do not let it touch hot surfaces.
- ❗ Regularly check the cord to see if there are any damages.
- ❗ To avoid circuit overload, do not operate another high-voltage appliance on the same circuit.
- ❗ If there is a crack on the hot plate, immediately unplug the power supply and stop using the cooktop.
- ❗ Turn the switch off before connecting or disconnecting plug from power outlet.
- ❗ Unplug from the outlet when not in use and before cleaning.
- ❗ DO NOT place the cooktop near any flammable materials, such as fabrics or curtains.
- ❗ Always place the cooktop on a dry, level, and heat-resistant surface.
- ❗ Close supervision is necessary when the cooktop is used near children.
- ❗ This cooktop is not intended to be used by persons (including children) with reduced physical, sensory and mental capabilities. This cooktop is not for persons with lack of experience and knowledge, unless they have been given supervision or instructions concerning the use of the cooktop by a person responsible for their safety.



# IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to prevent the risk of fire, electric shock, burns, or other injuries or damages.

- ⚠ The cooktop is designed only for heating and cooking food, and must only be used with a pan with proper substances in it.
- ⚠ Works with virtually all cookware such as stainless steel, aluminum. If you use glass cookware, make sure that it is properly rated to avoid thermal shock which can lead to cracking.
- ⚠ Use pots or pans with a flat base.
- ⚠ The measurement of the cookware should be smaller than the measurement of the hot plate.
- ⚠ Metallic objects such as knives, spoons, and forks should not be placed on the hob surface since they can get very hot.
- ⚠ Allow the cooktop to cool for at least 30 minutes before cleaning or storing. DO NOT move the unit when it is still hot.
- ⚠ DO NOT touch hot surfaces.
- ⚠ DO NOT leave cooktop unattended while in use.
- ⚠ The cooktop is not intended to be operated with an external timer or separate remote-control system.
- ⚠ Do not use outdoors or for purposes other than intended use.
- ⚠ CAUTION: This cooktop generates heat during use. Proper precautions must be taken to prevent the risk of burns, fires, or other damage to property caused by touching the parts while in use or during cooling.



# PARTS & FEATURES

## COIL BURNER

Durable steel that conducts heat efficiently

## 1000-WATT COOKTOP

Heats up food quickly and evenly

## INDICATOR LIGHT

Turns on when cooktop is active

## TEMPERATURE CONTROL

Lets you set your ideal heating temperature

## METAL HOUSING

Heat-resistant metal housing for durability



**BGC101S**  
STAINLESS STEEL HOUSING

## NON-SLIP RUBBER FEET

Provide a stable base for your cooktop



# STAINLESS STEEL COIL ELECTRIC COOKTOP

	Temperature
1	450°F
2	500°F
3	550°F
4	600°F
5	650°F



# USING YOUR ELECTRIC COOKTOP

- 1 Remove all packaging materials.
- 2 Wipe the cooktop and its base with a soft, damp cloth, and wipe dry.
- 3 Ensure that it is on a dry, level, and heat-resistant surface. Allow enough space (4-6 inches) from other appliances and furniture to allow heat flow without damaging your possessions.
- 4 Plug the power cord into a standard electrical outlet.
- 5 Before first use, turn the temperature control to the highest setting (5), and allow the cooktop to run for 3-5 minutes to burn off any residue resulting from the manufacturing process.
- 6 To start operating, place the cookware on the cooktop, turn the temperature control to the desired heat setting (2-5), and adjust during cooking as needed.
- 7 The indicator light will illuminate to indicate that the cooktop is heating, and will go out when the selected temperature has been reached.
- 8 To keep your food warm, turn the temperature control to number 2 to maintain food at a constant warm temperature.
- 9 After use, turn the temperature control to off; as the hot plate gradually cools down, the food can stay warm for up to 30 minutes.



# USING YOUR ELECTRIC COOKTOP

- 10 When not in use, be sure to set the temperature control to the off position, and unplug the power cord from the electrical outlet.

## NOTE:

- Works with virtually all cookware such as stainless steel, aluminum. If you do use glass cookware, make sure that it is properly rated to avoid thermal shock which can lead to cracking.
- Do not use cookware with a concave or uneven base.
- The measurement of the cookware should be smaller than the measurement of the hot plate.



# RECIPE

## SHRIMP FAJITAS



### Ingredients:

2 teaspoons vegetable oil  
½ red pepper, sliced  
½ yellow pepper, sliced  
½ small yellow onion, sliced  
3 ounces of shrimp, peeled and deveined  
½ teaspoon chili powder  
¼ teaspoon red pepper flakes  
¼ teaspoon cumin  
¼ teaspoon paprika  
Flour tortillas

### Directions

- 1 In a small skillet placed on the cooktop, heat the oil over medium heat.
- 2 Add the peppers and onions, and sauté until tender.
- 3 Add the shrimp to the pan and cook fully.
- 4 Toss with the spices, peppers, and onions.
- 5 To serve, distribute a small serving of the mix into a tortilla – you can heat the tortillas in another skillet over the cooktop before serving for an extra treat.



# CARE & MAINTENANCE

- Turn off and unplug the cooktop from the electrical outlet prior to cleaning.
- Do not use any abrasive cleaning agents, and make sure that no water penetrates the cooktop.
- Allow the cooktop to cool for at least 30 minutes before cleaning or storing. **DO NOT** move the unit when it is still hot.
- Wipe the body with a clean, dry cloth or sponge.
- Allow cooktop to dry completely.



# ELECTRICAL REQUIREMENTS

Voltage: 120V

Hertz: 60Hz

Wattage: 1000W



# OVENTE WARRANTY

## LIMITED ONE (1) YEAR WARRANTY

At Ovente, we aim to make your life easier by producing top-quality housewares, designed with you in mind. We have pledged to uphold all our offerings to the highest standards, and we back all our cooktops with a one-(1) year warranty from the date of purchase from an authorized retailer. This warranty covers defects in workmanship and materials. It does not include damage due to abuse, misuse, commercial use, accidents or natural wear and tear. In case of replacement, shipping and handling fees may apply.

## LIMITATIONS

The warranty stated above is the only warranty applicable to this product. Other expressed or implied warranties are hereby disclaimed. No verbal or written information given by the Manufacturer, its agents or employees shall create a guarantee or in any way increase the scope and duration of this warranty. Repair or replacement as provided under this warranty is the exclusive remedy of the consumer. The manufacturer shall not be liable for incidental or consequential damages resulting from the use of this product. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited to the applicable warranty period set forth above except to the extent prohibited by law. Proof of purchase may be required to validate the order. Promotional items may not be covered under any warranty. Consumer rights may vary from state to state.

For product support email [support@ovente.com](mailto:support@ovente.com) or call **1-855-926-2626**.

Visit us at [ovente.com](http://ovente.com)



[Facebook.com/ovente](https://www.facebook.com/ovente)



[@oventeTweets](https://twitter.com/oventeTweets)



[@Ovente](https://www.instagram.com/Ovente)



[youtube.com/ovente](https://www.youtube.com/ovente)

[ovente.com](http://ovente.com)

**OVENTE®**

*Defining Housewares*