
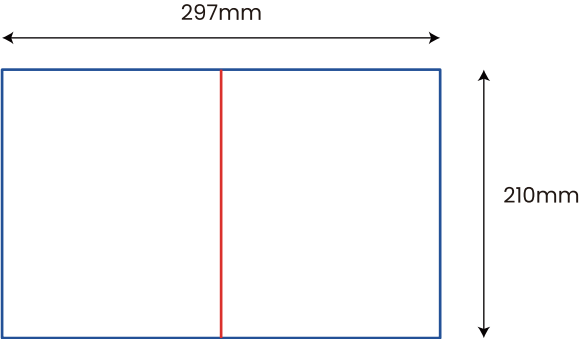


	1	2	3	4					
	注：此页为技术说明，非印刷内容								
A	刀模线：  内折线： 								
B	展开尺寸图： 								
C	装订效果图： 								
D									
E	技术要求： 1、材质：封页105g 铜板纸；内页80g双胶纸 2、展开尺寸：A4，如图所示装订成型为A5，28P 3、颜色：单色印刷 4、印刷：印刷图档见后续页，双面印刷 5、装订方式：骑马钉								
符号标识  关键尺寸  编号  参照尺寸  (.XXX)					名	EGDS15B,EGDS15B-J EGDS15W,EGDS15W-J -Manual(英日)-CX	PLM号	860-02054-00	
					称		投影法	第一角投影法	
					图				
	除 非 另 有 说 明	标记	处数	ECO#	发行时间		版 本	重 量G	比 例
	0-30 ±1	设 计		P M		材 料	01		
	30-150 ±2	绘 图	Hili	日期	2023/11/08	规 格	共29页 第 1 页		
	150-300 ±3	审 批		日期			深圳市倍思奇创		
	300-450 ±4	除去所有利边，尖点，毛刺					新科技有限公司		
	>450 ±5								
		1	2	3	4				

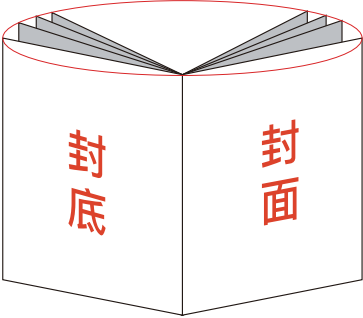

Desk Monitor Arm



モニターアーム

Instruction Manual

取扱説明書

EGDS15B/EGDS15W

Rev01

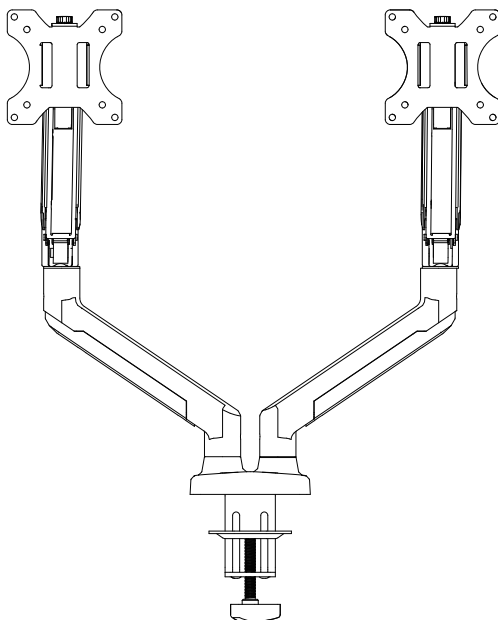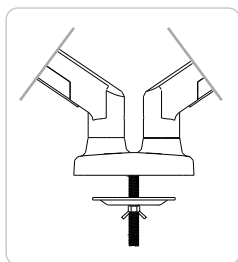

English	01-13
日本語	14-25


☎ 1-800-651-9525 (US/CA) Mon-Fri, 8am-8pm (CST)
44-808-196-3875 (UK) Mon-Fri, 2pm-10pm (UTC)

🌐 <https://ergear.com>

✉ support@ergear.com
supportjp@ergear.com (JP)

Before getting started, let's make sure this mount is compatible.

- 1** Is the VESA pattern of your monitor 75 x 75mm (3 x 3") or 100 x 100mm (3.9 x 3.9")?

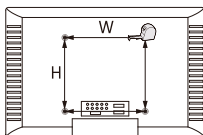


- ☐ Yes – Perfect!
- ☐ No – This mount is NOT compatible.

- 2** Does your monitor (including accessories) weigh less than 22 lbs (10kg)?



- ☐ Yes – Perfect!
- ☐ No – This mount is NOT compatible.

 - 3** Tools Needed (not included)



Electric Drill
(optional)



7/16-7/8" (11-22mm)
Drill Bit
(optional)

NOTE

- Please carefully read all instructions before attempting installation. If you DO NOT understand the instructions or have any questions or concerns, please call technical support or email customer service.
- Not all hardware included in this package will be used.

CAUTION

Avoid potential injuries and property damage!



- DO NOT use this product for any purpose that is NOT explicitly specified in this manual. DO NOT exceed weight capacity. We are NOT liable for damage or injury caused by improper mounting, incorrect assembly or inappropriate use.
- Before starting assembly, verify all parts are included and undamaged. DO NOT use damaged or defective parts. If you require replacement parts, please call technical support or email customer service.

⚠ WARNING

- This product contains small parts that may pose a choking hazard.
- This product contains gas spring arms which are under high pressure. Do not puncture these arms or expose the arms to fire or flame. If product is defective, please call technical support or email customer service.
- Do not use this product on desks made of particle board or other soft woods.
- The information contained in this manual does not cover all possible conditions or variables in relation to the installation of this product.

- 4** Important Safety Information

Product Features

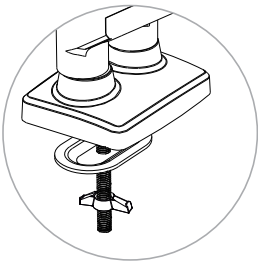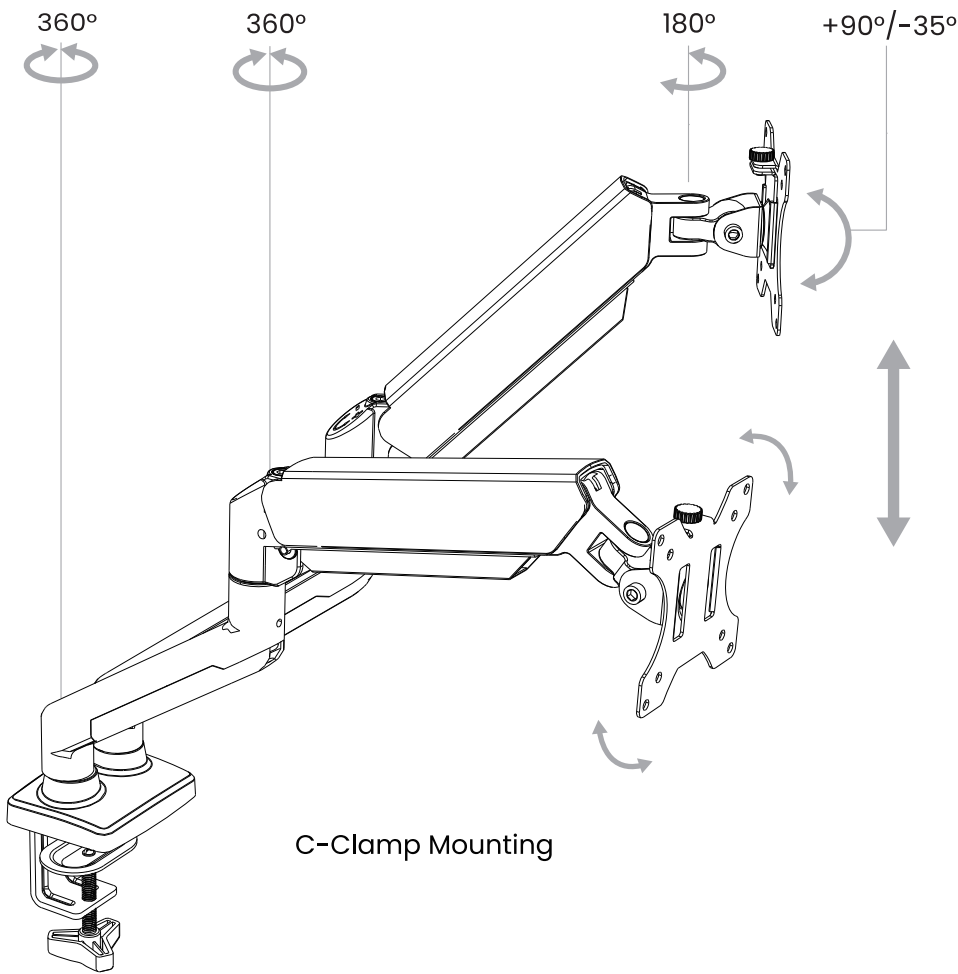

TENSION ADJUSTMENT SHOULD ONLY BE DONE AFTER MONITOR INSTALLATION



Attention


DO NOT adjust tension without monitor attached.

1. Verify the weight of your monitor (including accessories) is between 4.4-22 lbs (2-10kg). Monitor weight information can be found in the monitor instruction manual or by contacting the manufacturer.
2. Ensure monitor has been securely attached to the mount.



WARNING:


- Gas spring arm is under pressure and should be handled with care.
- Failure to follow the instructions may result in damage to the mount and/or personal injury.

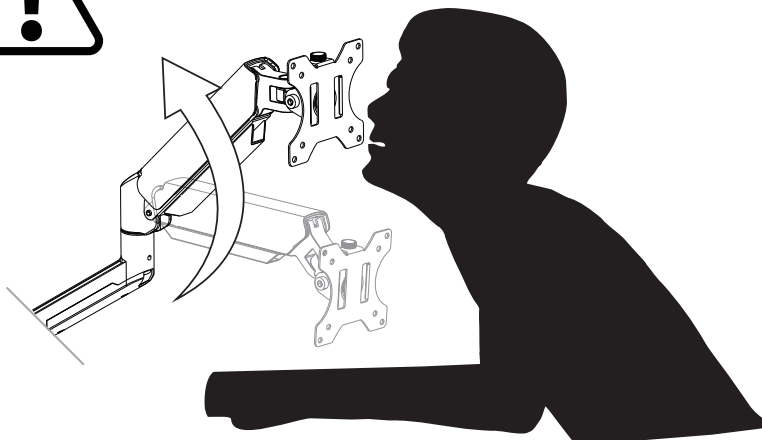

Step 1


Supplied Parts and Hardware

 03 x 1



Base

 05 x 1



C-Clamp Brace

06 x 1



C-Clamp

A x 2



Bolt

B x 1



Nut

C x 1



Grommet Bolt

D x 1



5/32" (4mm)
Small Allen Key

E x 1

 


1/4" (6mm)
Large Allen Key

Step 2


Supplied Parts and Hardware

01 x 2



Upper
Arm Section

 02 x 2



Lower
Arm Section

D x 1

 


5/32" (4mm)
Small Allen Key

Step 3


Supplied Parts and Hardware

04 x 2




Monitor Plate

 M-A x 8



M4 x 12mm
Bolt

 M-B x 8



M4 x 30mm
Bolt

M-C x 8



Washer

M-D x 8



L13mm
Spacer

E x 1



1/4" (6mm)
Large Allen Key

Step 5/7 **Supplied Parts and Hardware**

 
E x 1



1/4" (6mm)
Large Allen Key

Step 9 **Supplied Parts and Hardware**

07 x 2



Cable Cover


E x 1



1/4" (6mm)
Large Allen Key

Step 1 Install the Base


For C-Clamp Mounting

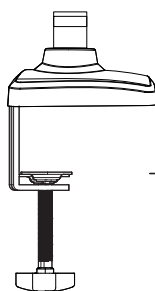

For desk thickness:
0.39-2.56"
(10-65mm)

OR


For Grommet Mounting Skip to Page 08

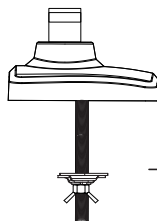


For desk thickness:
0.39-2.17"
(10-55mm)

Option A For C-Clamp Mounting

1

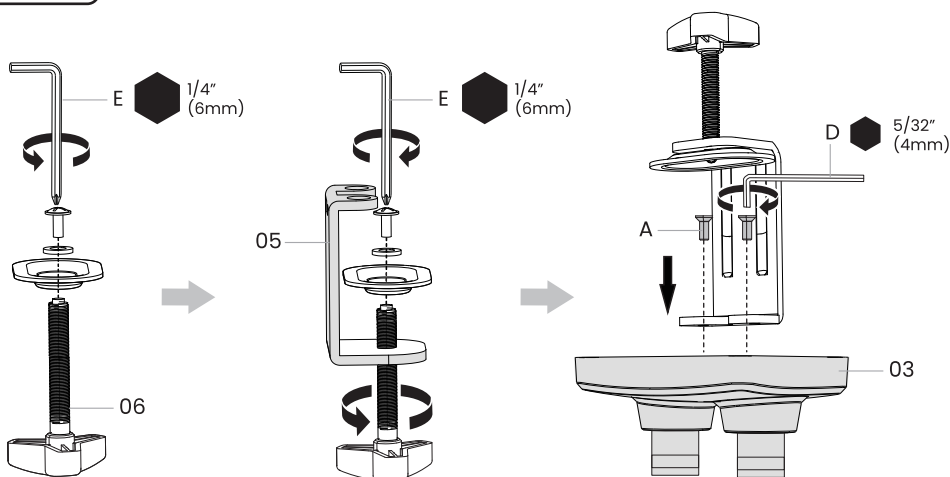


2

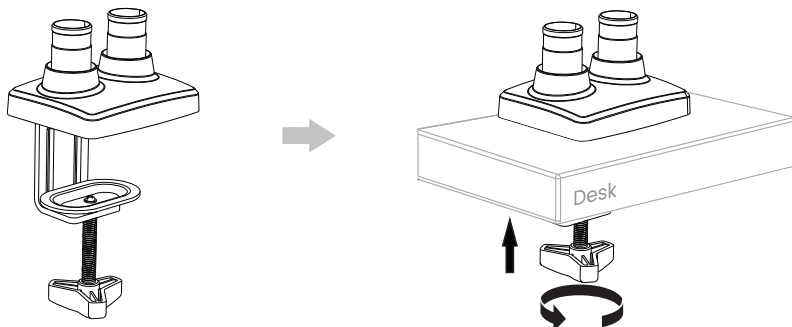

If your desktop is too thin, you may be able to use a wood board or block as a spacer. Please note that the C-clamp plate must make full contact with the desk and/or wood spacer.


Example 1

If there is a crossbar underneath the desk, you need to use a spacer that is the same height as the crossbar.

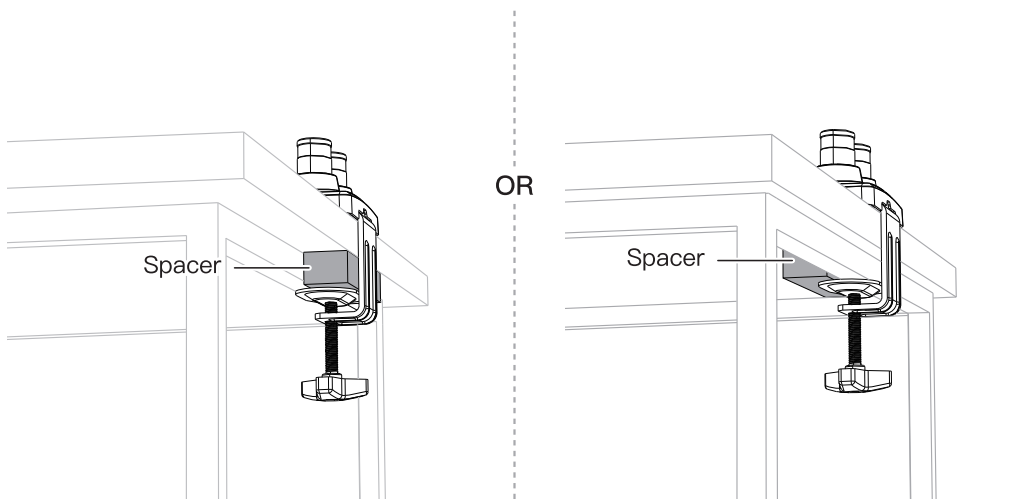


Example 2

A spacer can be placed on top of the desk to fulfill the required dimensions.

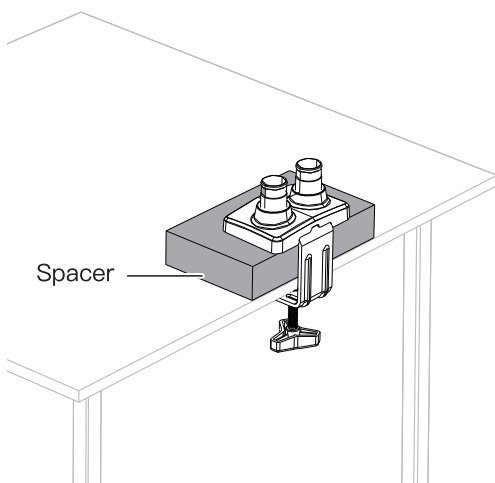


Example 3


A spacer can also be placed on top of the desk to maximize installation height.

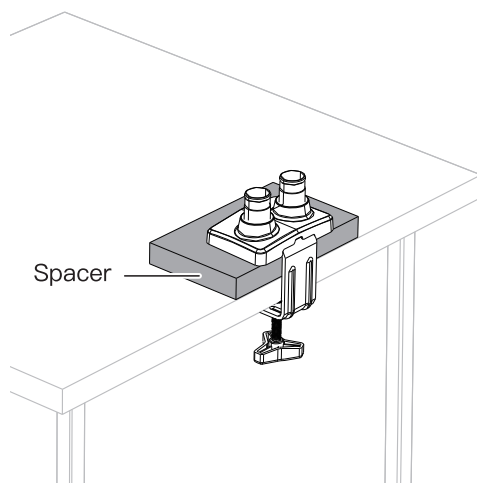





Option B For Grommet Mounting

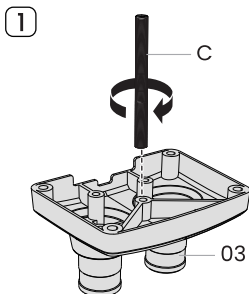

CAUTION:  Ensure the grommet bolt is screwed securely into the base.


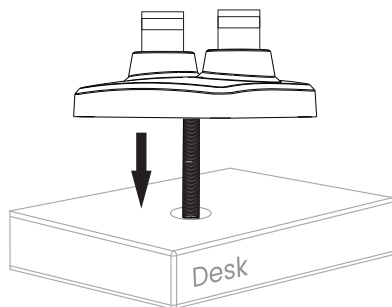


2 Separate the C-clamp and keep the locking plate [06a] for later use.

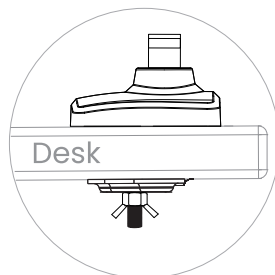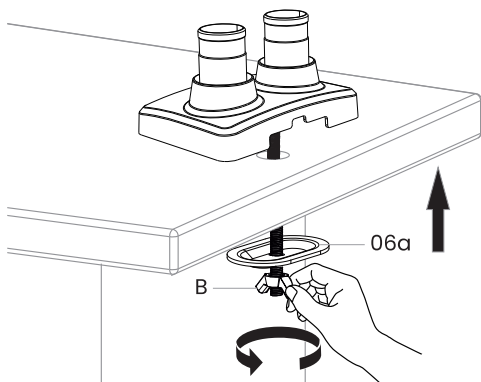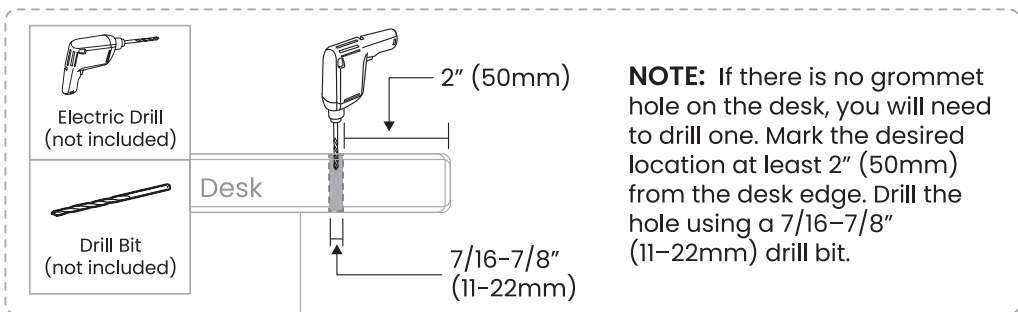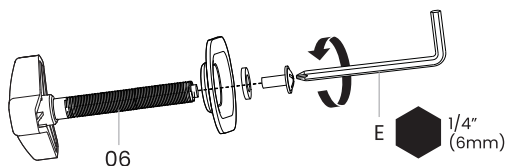

Step 2 Attach the Lower and Upper Arm Sections




Attach the upper and lower arm sections [01] and [02], then tighten the set screws. Do not overtighten, as this may affect the rotation of the arm.

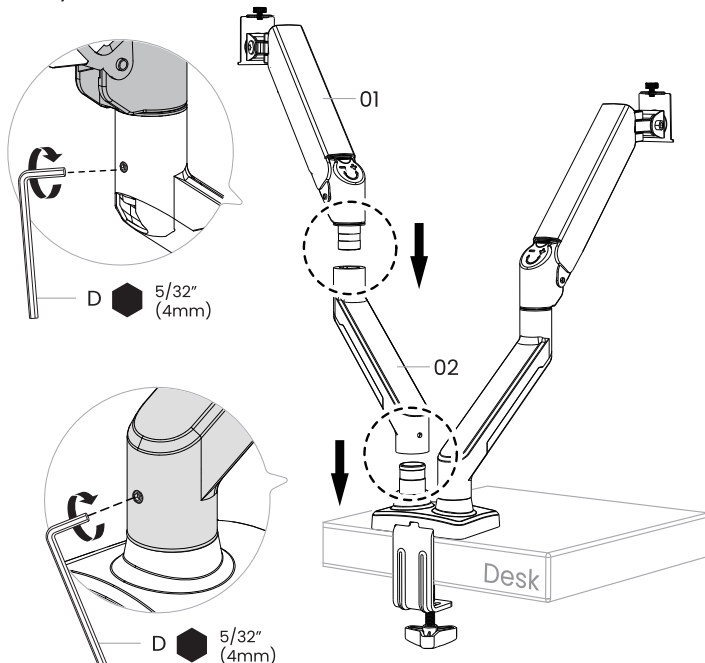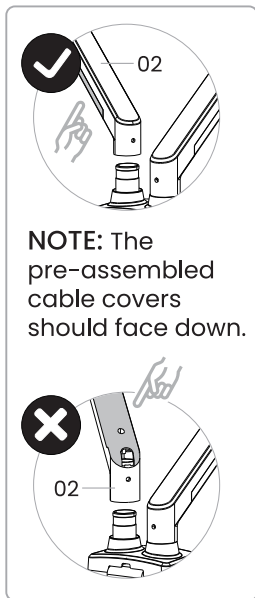


Step 3 Attach the Monitor Plates to the Monitors

Hand thread bolts into the threaded inserts on the back of your monitor to determine which bolt (M4 x 12mm or M4 x 30mm) to use. A minimum of 4-5 turns into the threading is required. Do not turn past the bottom of the hole.

 Only one bolt size fits the monitor.

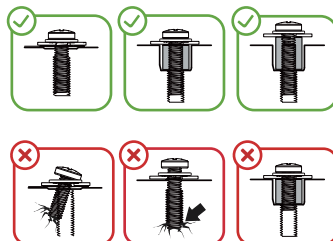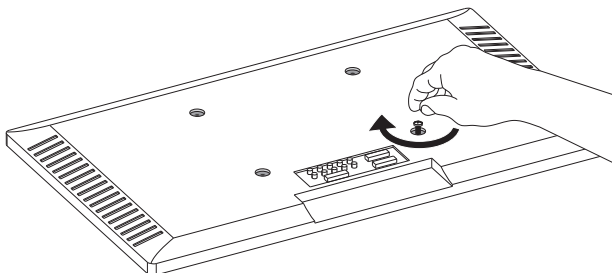


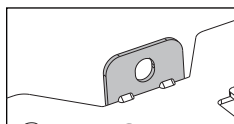

The hanging tab should be directed toward the top of the monitor.




For Flat Back Monitor

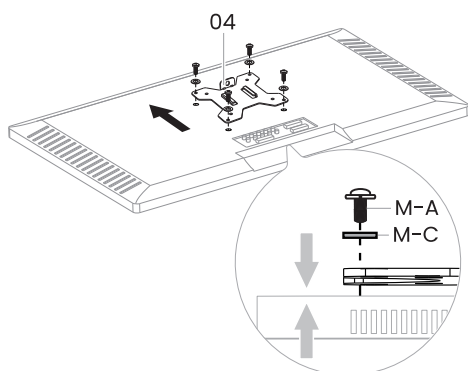

OR

For Curved Back Monitor

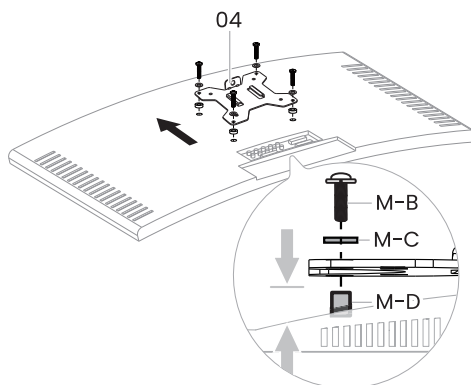



Step 4 Hang the Monitors on the Mount

Remove the knobs [S] from the monitor plate connectors, then hang the monitors and secure them by tightening the knobs [S].



HEAVY! You may need assistance with this step.

NOTE: Gas spring tension is preset at 11-13.2 lbs (5-6kg). After hanging the monitor on the mount, release the monitor slowly so it doesn't sink down too quickly.

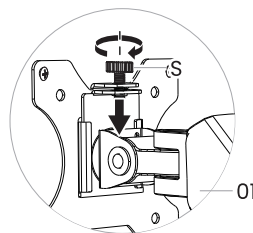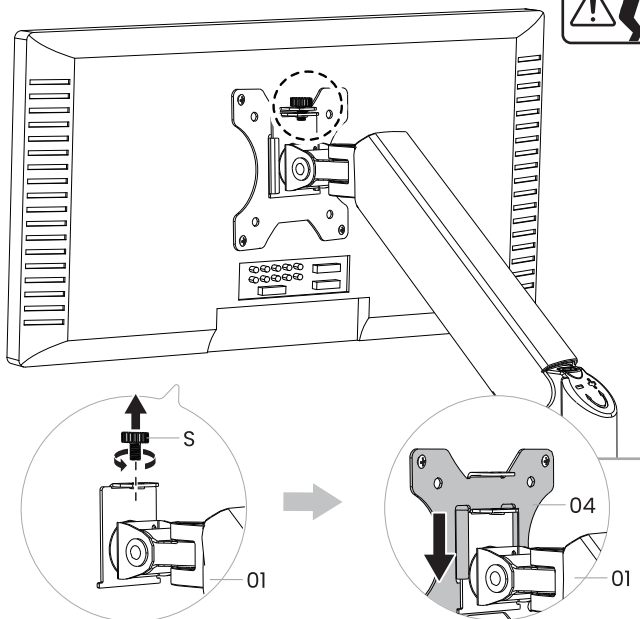


Step 5 Adjust Gas Spring Tension

- 1 Hold the upper arm in a horizontal position. In this position, you can access the gas spring tension adjustment bolt to increase or decrease tension until the arm stays in position by itself.




CAUTION:

To avoid damage to monitor or mount, always keep the arm in a horizontal position while making adjustments. You may need assistance with this step.

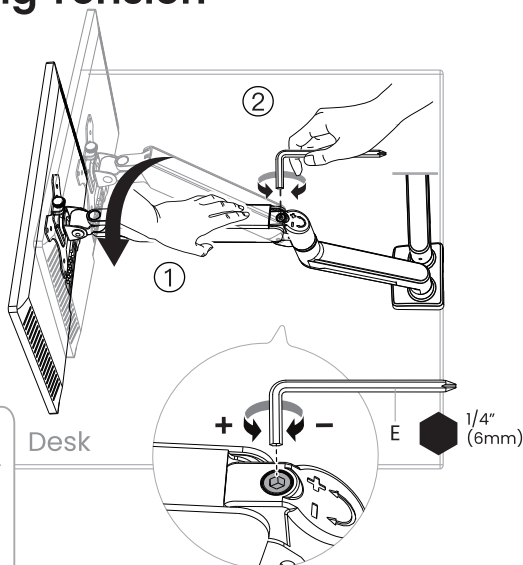


- 2 Use the large Allen key to adjust gas spring tension until the arm stays in position by itself. Once correctly adjusted, you can raise and lower your monitor and it will stay in position.

Scan the QR code to watch the arm adjustment video.

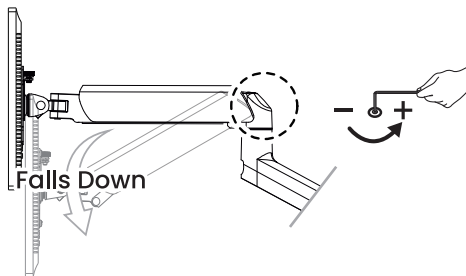

If the monitor falls below the desired height:

Turn counter-clockwise (+) to increase gas spring tension until the monitor can stay at the desired height by itself.


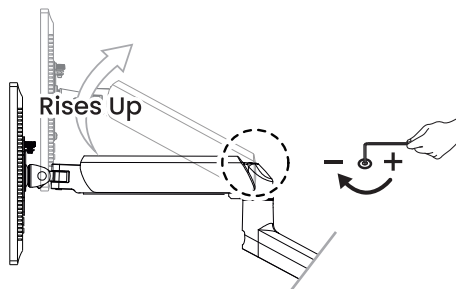


If the monitor rises up above the desired height:


Turn clockwise (-) to reduce gas spring tension until the monitor can stay at the desired height by itself.

Step 6 Swivel Restriction

Incorrect

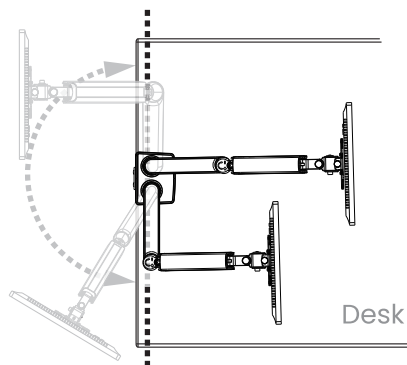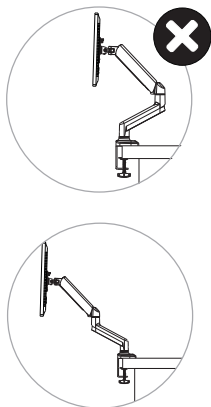

Correct

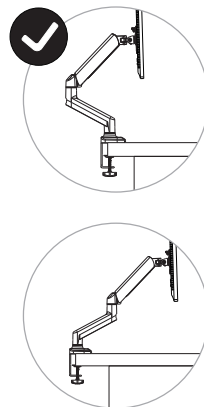

WARNING:



Do not position or swivel the monitor beyond the edge of the desktop. Doing so may cause the unit to tip over and fall.





Step 7 Tilt Adjustment



Adjust your monitor by gripping the monitor edges. Do not press on the screen itself. If it is difficult to adjust, loosen the tilt-lock bolt [T] on the monitor plate connector. Adjust the monitor to the desired angle, then fully tighten the bolt to lock the tilt angle.

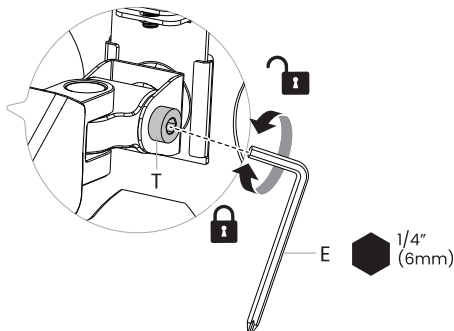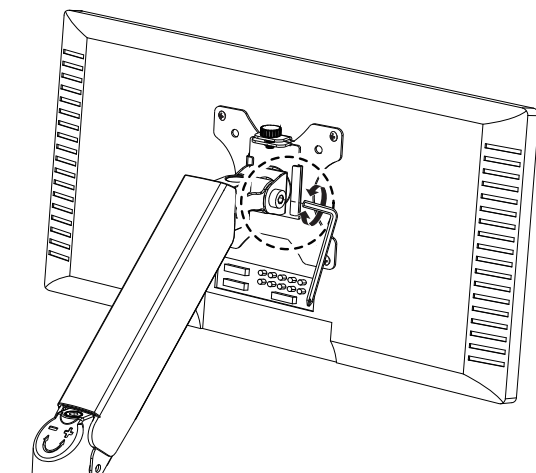


 Step 8 Monitor Rotation

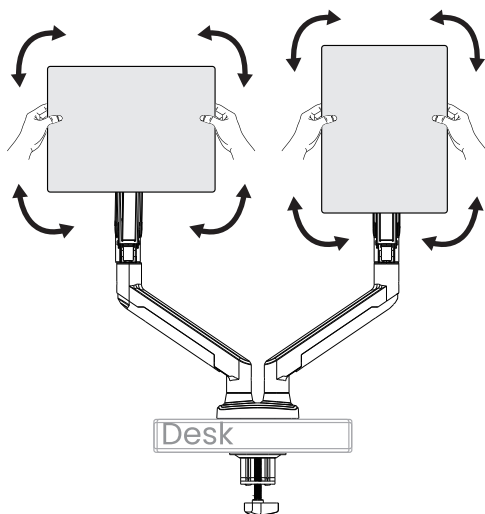


360°
Rotation

Step 9 Route Cables Down the Arm

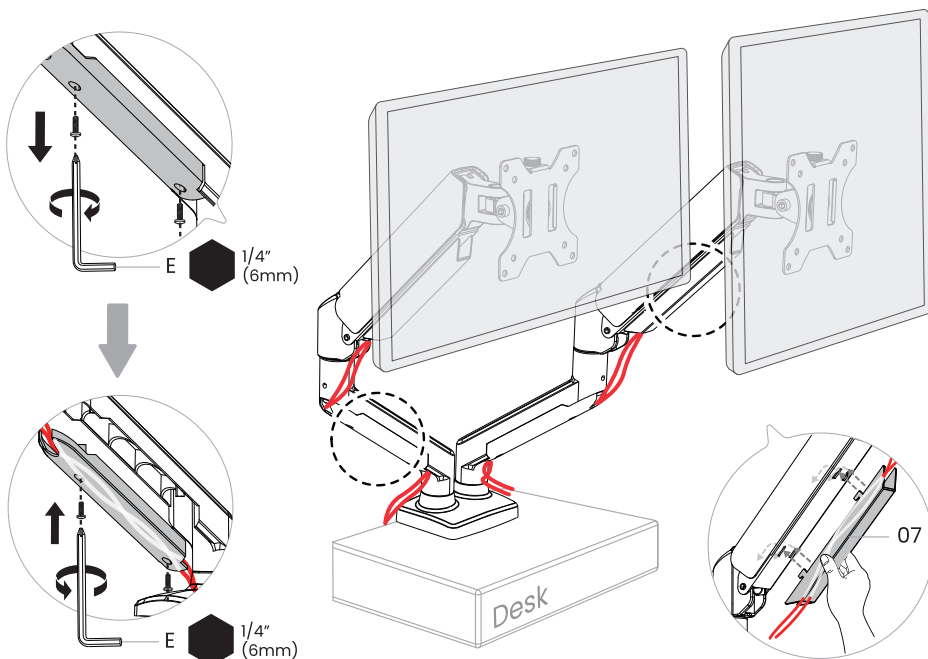

取付条件の確認

- 1 お持ちのモニターの VESA規格は 75×75mmですか? それとも、100×100mm ですか?

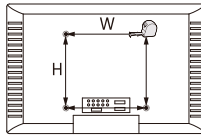


- ☐ はい-モニターに適合
☐ いいえ-モニターに不適合

- 2 お持ちのモニターの 重量(アクセサリ 含み)は10kg未満で ですか?



- ☐ はい-モニターに適合
☐ いいえ-モニターに不適合

 - 3 必要の工具類 (別売)



電動ドリル
(オプション)



11-22mm
ドリルビット
(オプション)

注意

- ご使用の前に、この取扱説明書をよくお読みになり、正しくお使いください。取扱説明書に何かご不明な点がございましたら、必ず、販売者や工事専門業者に連絡してください。
- 付属の部品はすべて使用する必要がありません。

注意

お使いになる人や他の人への危害、財産への損害を未然に防止するため、必ずお守りいただきたいことを説明しています。

- 最大耐荷重以上のモニターを絶対取り付けしないでください。設置の際は取扱説明書で記載される以外の使用目的で使用しないでください。取り付け不備や、取り扱い不備による事故や損傷については、当社では一切の責任を負いません。
- 組み立てる前に、すべての部品が揃っており、破損していないことを確認してください。足りない部品又は破損している部品がある場合は、当社に連絡してください。



お問い合わせ先: supportjp@ergear.com

警告

- 小さな部品がありますので、誤って飲み込まないようにご注意ください。窒息などの危険があります。
- 当製品内部がガสปリリングが含まれているため、火気・暖房器具・熱具に近づけないでください。本製品を分解、改造しないでください。不用品回収をプロに依頼してください。お問い合わせ先: supportjp@ergear.com
- 当製品をパーティクルボードデスクに使用しないでください。
- この取扱説明書には、インストール中発生するすべての問題が含まれていません。

- 4 安全上のご注意

製品の特徴

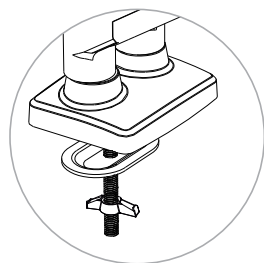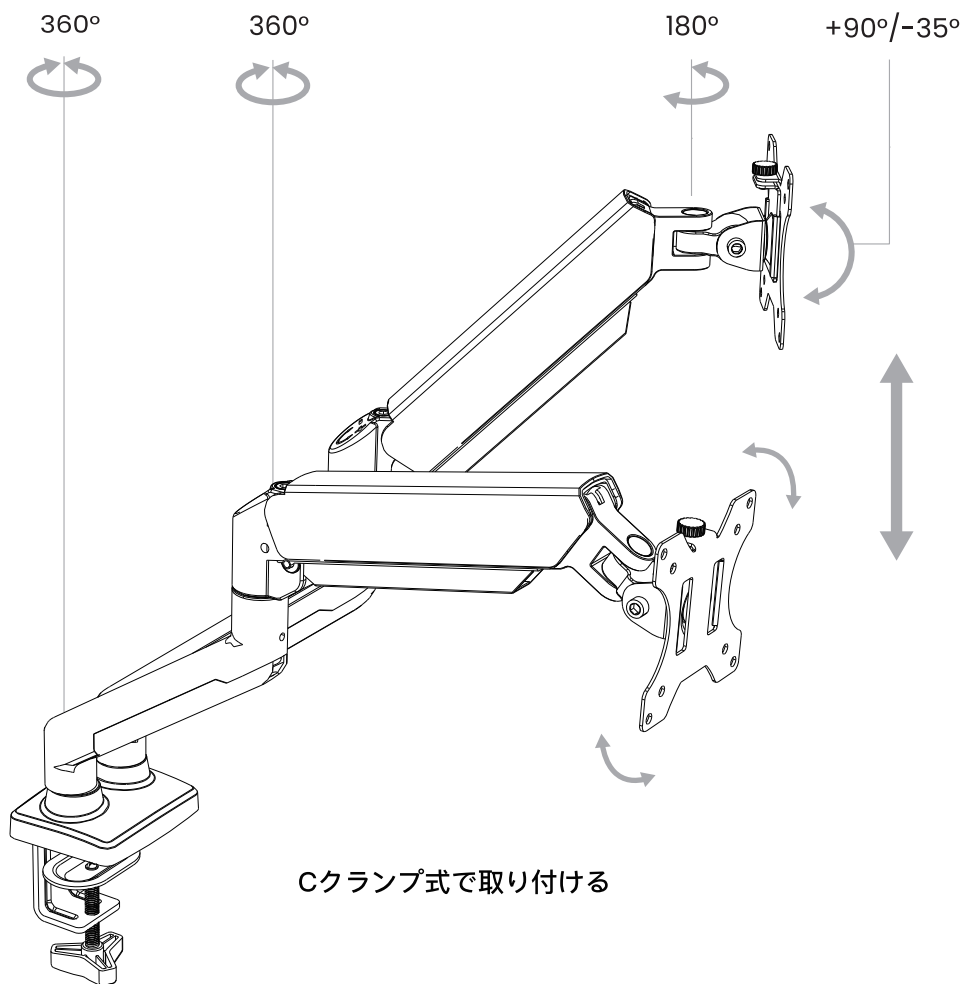

必ずモニターを取り付けてから、 張力を調整してください




張力の調整はモニターを取り付けた状態で行ってください。

1. 当製品の耐荷重は2~10kgです。お持ちのモニターは当製品の耐荷重の範囲内であることをご確認の上、使用してください。
2. モニターをアームにしっかり取り付けられていることを確認してください。

⚠ ご注意:


- 当製品内部がガススプリングが含まれているため、注意して使用してください。
- 説明書を守らないと、けがをしたり、ディスプレイが破損する原因となります。

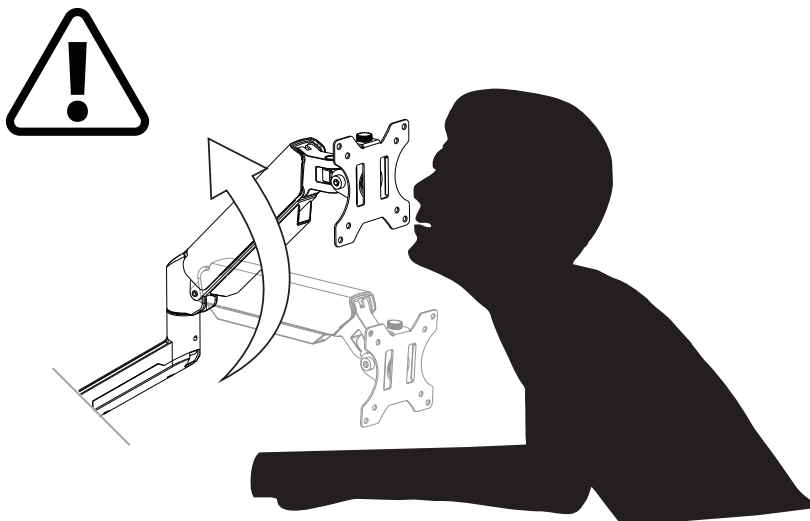

手順 1


使用する部品

 03 x1



ベース

 05 x1



L型金具

06 x1



Cクランプ金具

A x2



ボルト

B x1



ナット

C x1



グロメットボルト

D x1



4mm
小六角レンチ

E x1



6mm
大六角レンチ

手順 2

 
使用する部品

01 x2



上部アーム

02 x2



下部アーム

D x1




4mm
小六角レンチ

手順 3


使用する部品

 04 x2




VESAプレート

 M-A x8



M4 x 12mm
ボルト

 M-B x8



M4 x 30mm
ボルト

M-C x8



ワッシャー

M-D x 8



L13mm
スペーサー

E x 1



6mm
大六角レンチ

手順 5/7

使用する部品

E x 1




6mm
大六角レンチ

手順 9

使用する部品

 07 x 2



ケーブルカバー


E x 1



6mm
大六角レンチ


手順1 ベースを取り付ける

Cクランプ式で取り付ける

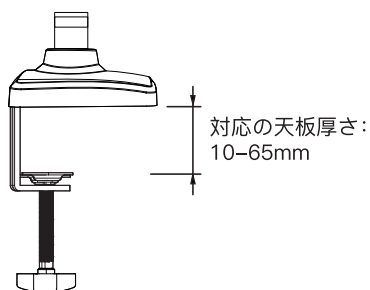


グロメット式で取り付ける
20ページへ進みください

又は

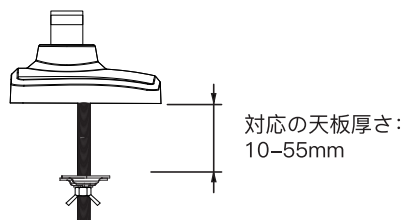


オプションA Cクランプ式で取り付ける

①

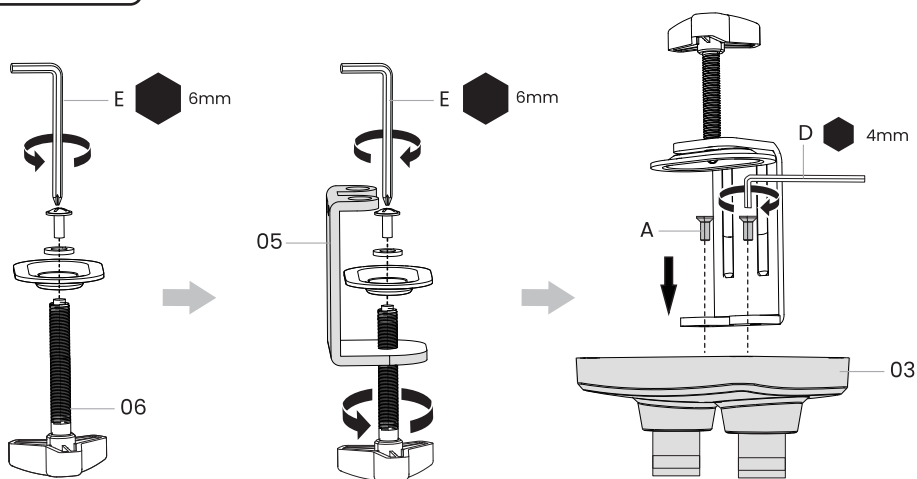


②

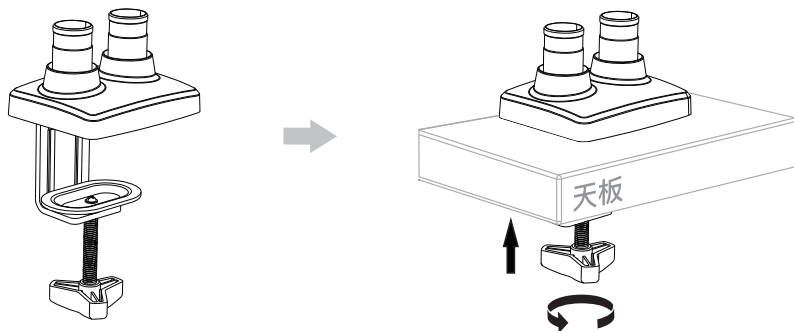


オプションB グロメット式で取り付ける


①

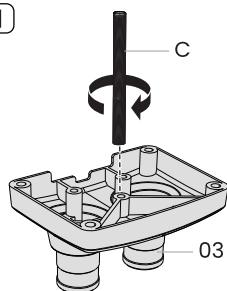


ご注意:
グロメットボルトがベースに
しっかり取り付けられている
ことを確認してください。

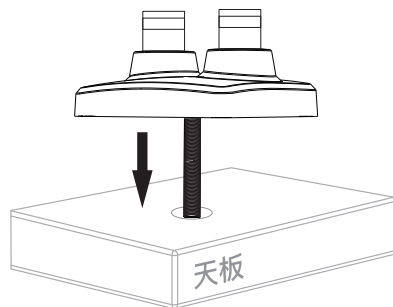

② Cクランプを分離し、クランププレート [06a] は後で使用できるように保管してください。

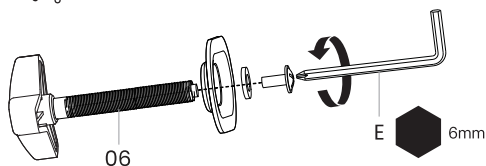


電動ドリル
(別売り)

 



ドリルビット
(別売り)

天板

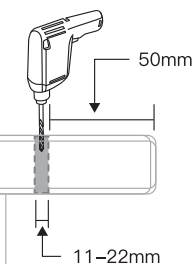

ご注意:

デスクにグロメット穴がない場合は、目的の位置に穴をマークして(デスクの端から少なくとも50mmを離れてください)、ドリルで直径11mm~22mmの穴を開けます。

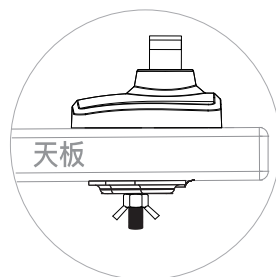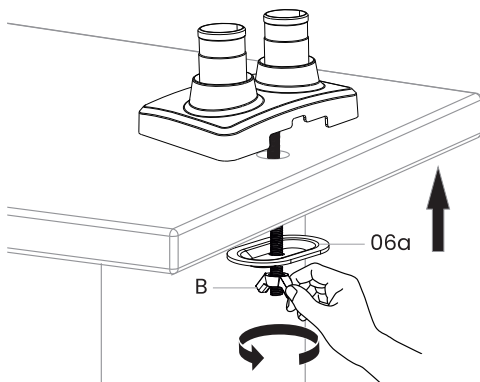


手順2 アームをベースに取り付ける

上部と下部のアーム[01]、[02]を取り付け、ネジを締めます。アームの回転に影響を与える可能性があるため、締めすぎないでください。






ご注意：
事前に取り付けた
カバーを下向きに
してください。

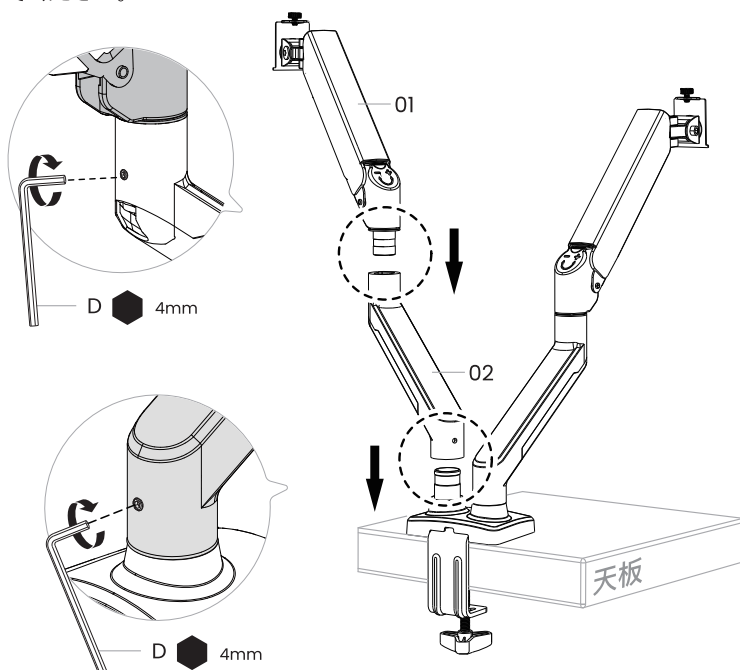


手順3 VESAプレートをモニターに取り付ける

モニター背面のネジ穴に手でボルトを締め込み、適合のボルトサイズ(M4×12mmまたはM4×30mm)を選択してください。

1つのボルト
サイズだけモ
ニターに対応
する。

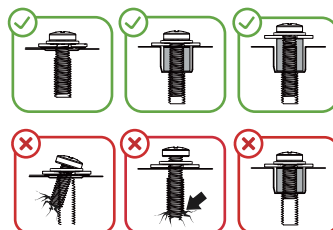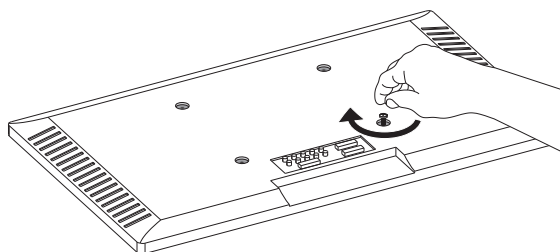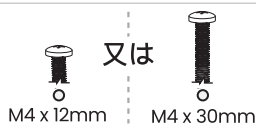


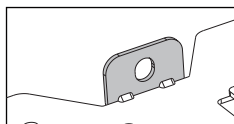

吊り下げタブはモニターの上部に向けてください。




背面が平面なモニター

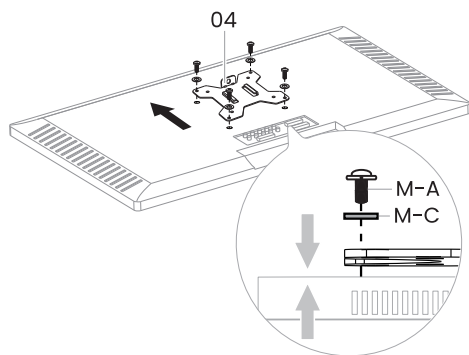

又は

背面が湾曲なモニター

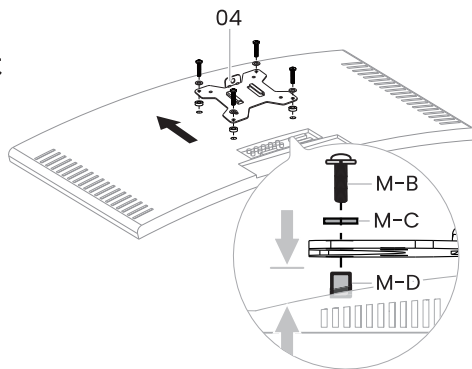


手順4 モニターをアームにかける

モニタープレートコネクターのノブ付ボルト[S]を緩め、モニターを取り付け、ノブ付ボルトを締めて固定します。






ご注意：二人以上でこの作業を行ってください。

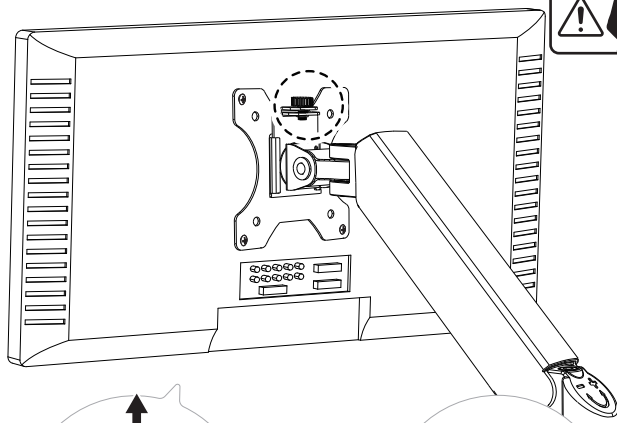

ご注意：

ガス圧の初期設定耐荷重は5~6kgです。落下する恐れがあるので、モニターをアームにかけた後ゆっくりと手を離してください。

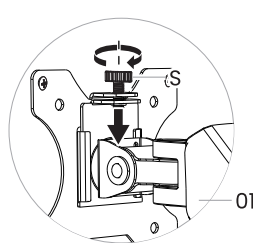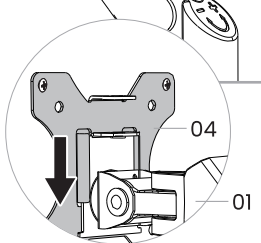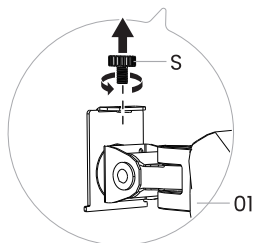


手順5 ガススプリングを調節する

- ① モニターを水平にするために手で下に押し付けてから、ガス圧を調節してください。(これは相当な力が必要かもしれません。)




ご注意:

モニターやアームを破損する恐れがあるので、張力を調節しているときに、アームを水平にしてください。

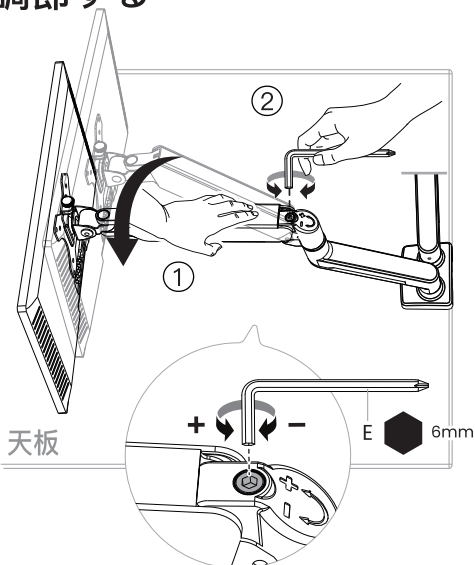


- ② モニターを取り付けたアームのガス圧を正しく調節するため、下記の手順を従ってください。

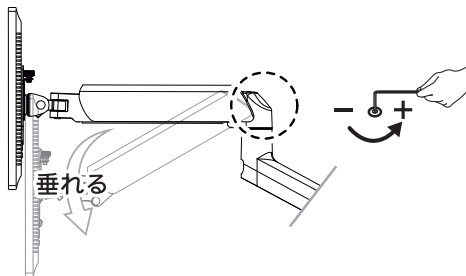

モニターが垂れる場合:

モニターを水平にするために手で上に持ち上げて、レンチで「+」方向にアームをお好みの位置で固定できるまでにボルトを反時計回して張力を増やします。


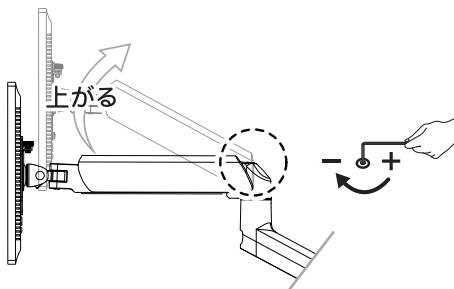


モニターが上がる場合:


モニターを水平にするために手で下に押し付けて、レンチで「-」方向にアームをお好みの位置で固定できるまでにボルトを時計回して張力を減らします。

手順6 回転制限

間違い取り付けの方

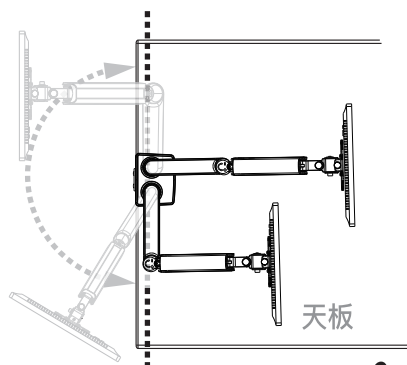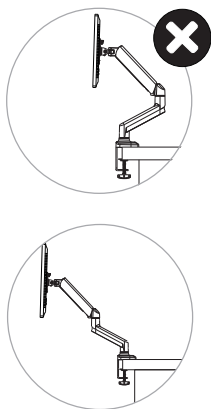

正確な使用方向

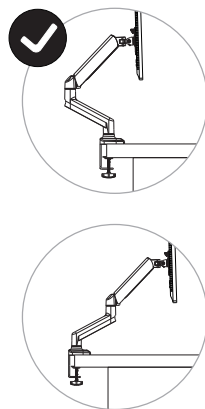

警告:



落下する恐れがあるので、天板の外にモニターが出る状態では使用しないでください。





手順7 ティルト調節



モニターが自由に所定の位置に留まります。固くて移動できないや固定できない場合は、ボルトを調整してください。


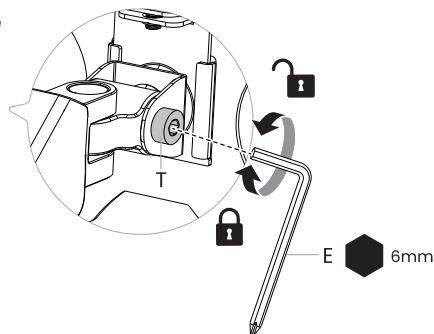
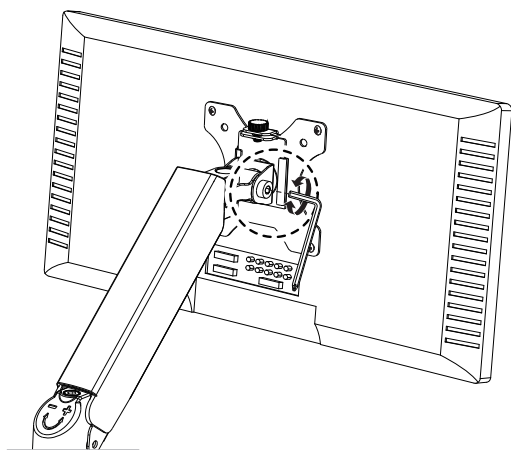


手順8 回転調節

 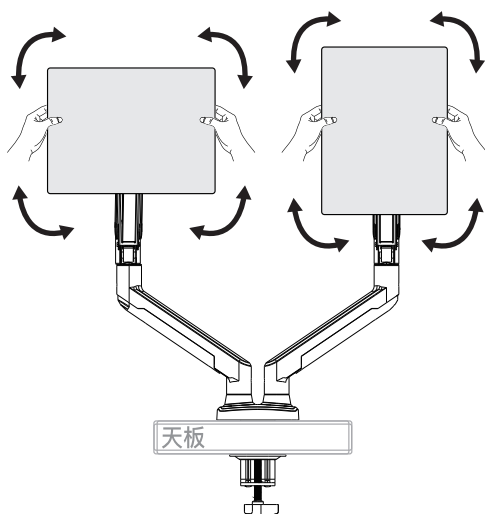

360°
回転

手順9 ケーブル収納

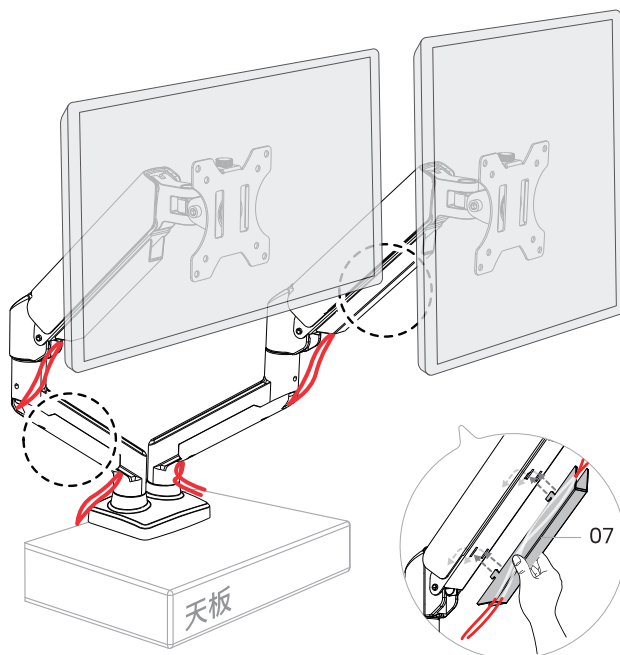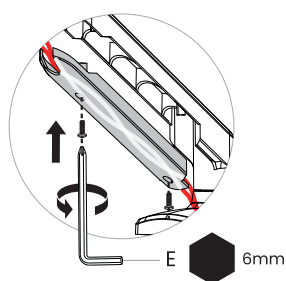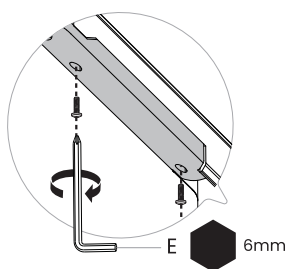



Complete Flexibility. Total Freedom

デスク環境に 新たな自由をもたらす。

Thank you for choosing this ErGear product. At ErGear we strive to provide you with the best quality products and service in the industry. Should you have any issues, please don't hesitate to contact us.

このErGear製品をお選びいただきありがとうございます。
ErGearでは、業界で最高品質の製品とサービスを提供するよう努めています。
ご不明な点がございましたら、お気軽にお問い合わせください。



1-800-651-9525 (US/CA) Mon-Fri, 8am-8pm (CST)
44-808-196-3875 (UK) Mon-Fri, 2pm-10pm (UTC)



support@ergear.com
supportjp@ergear.com (JP)



<https://ergear.com>