
Accessories List

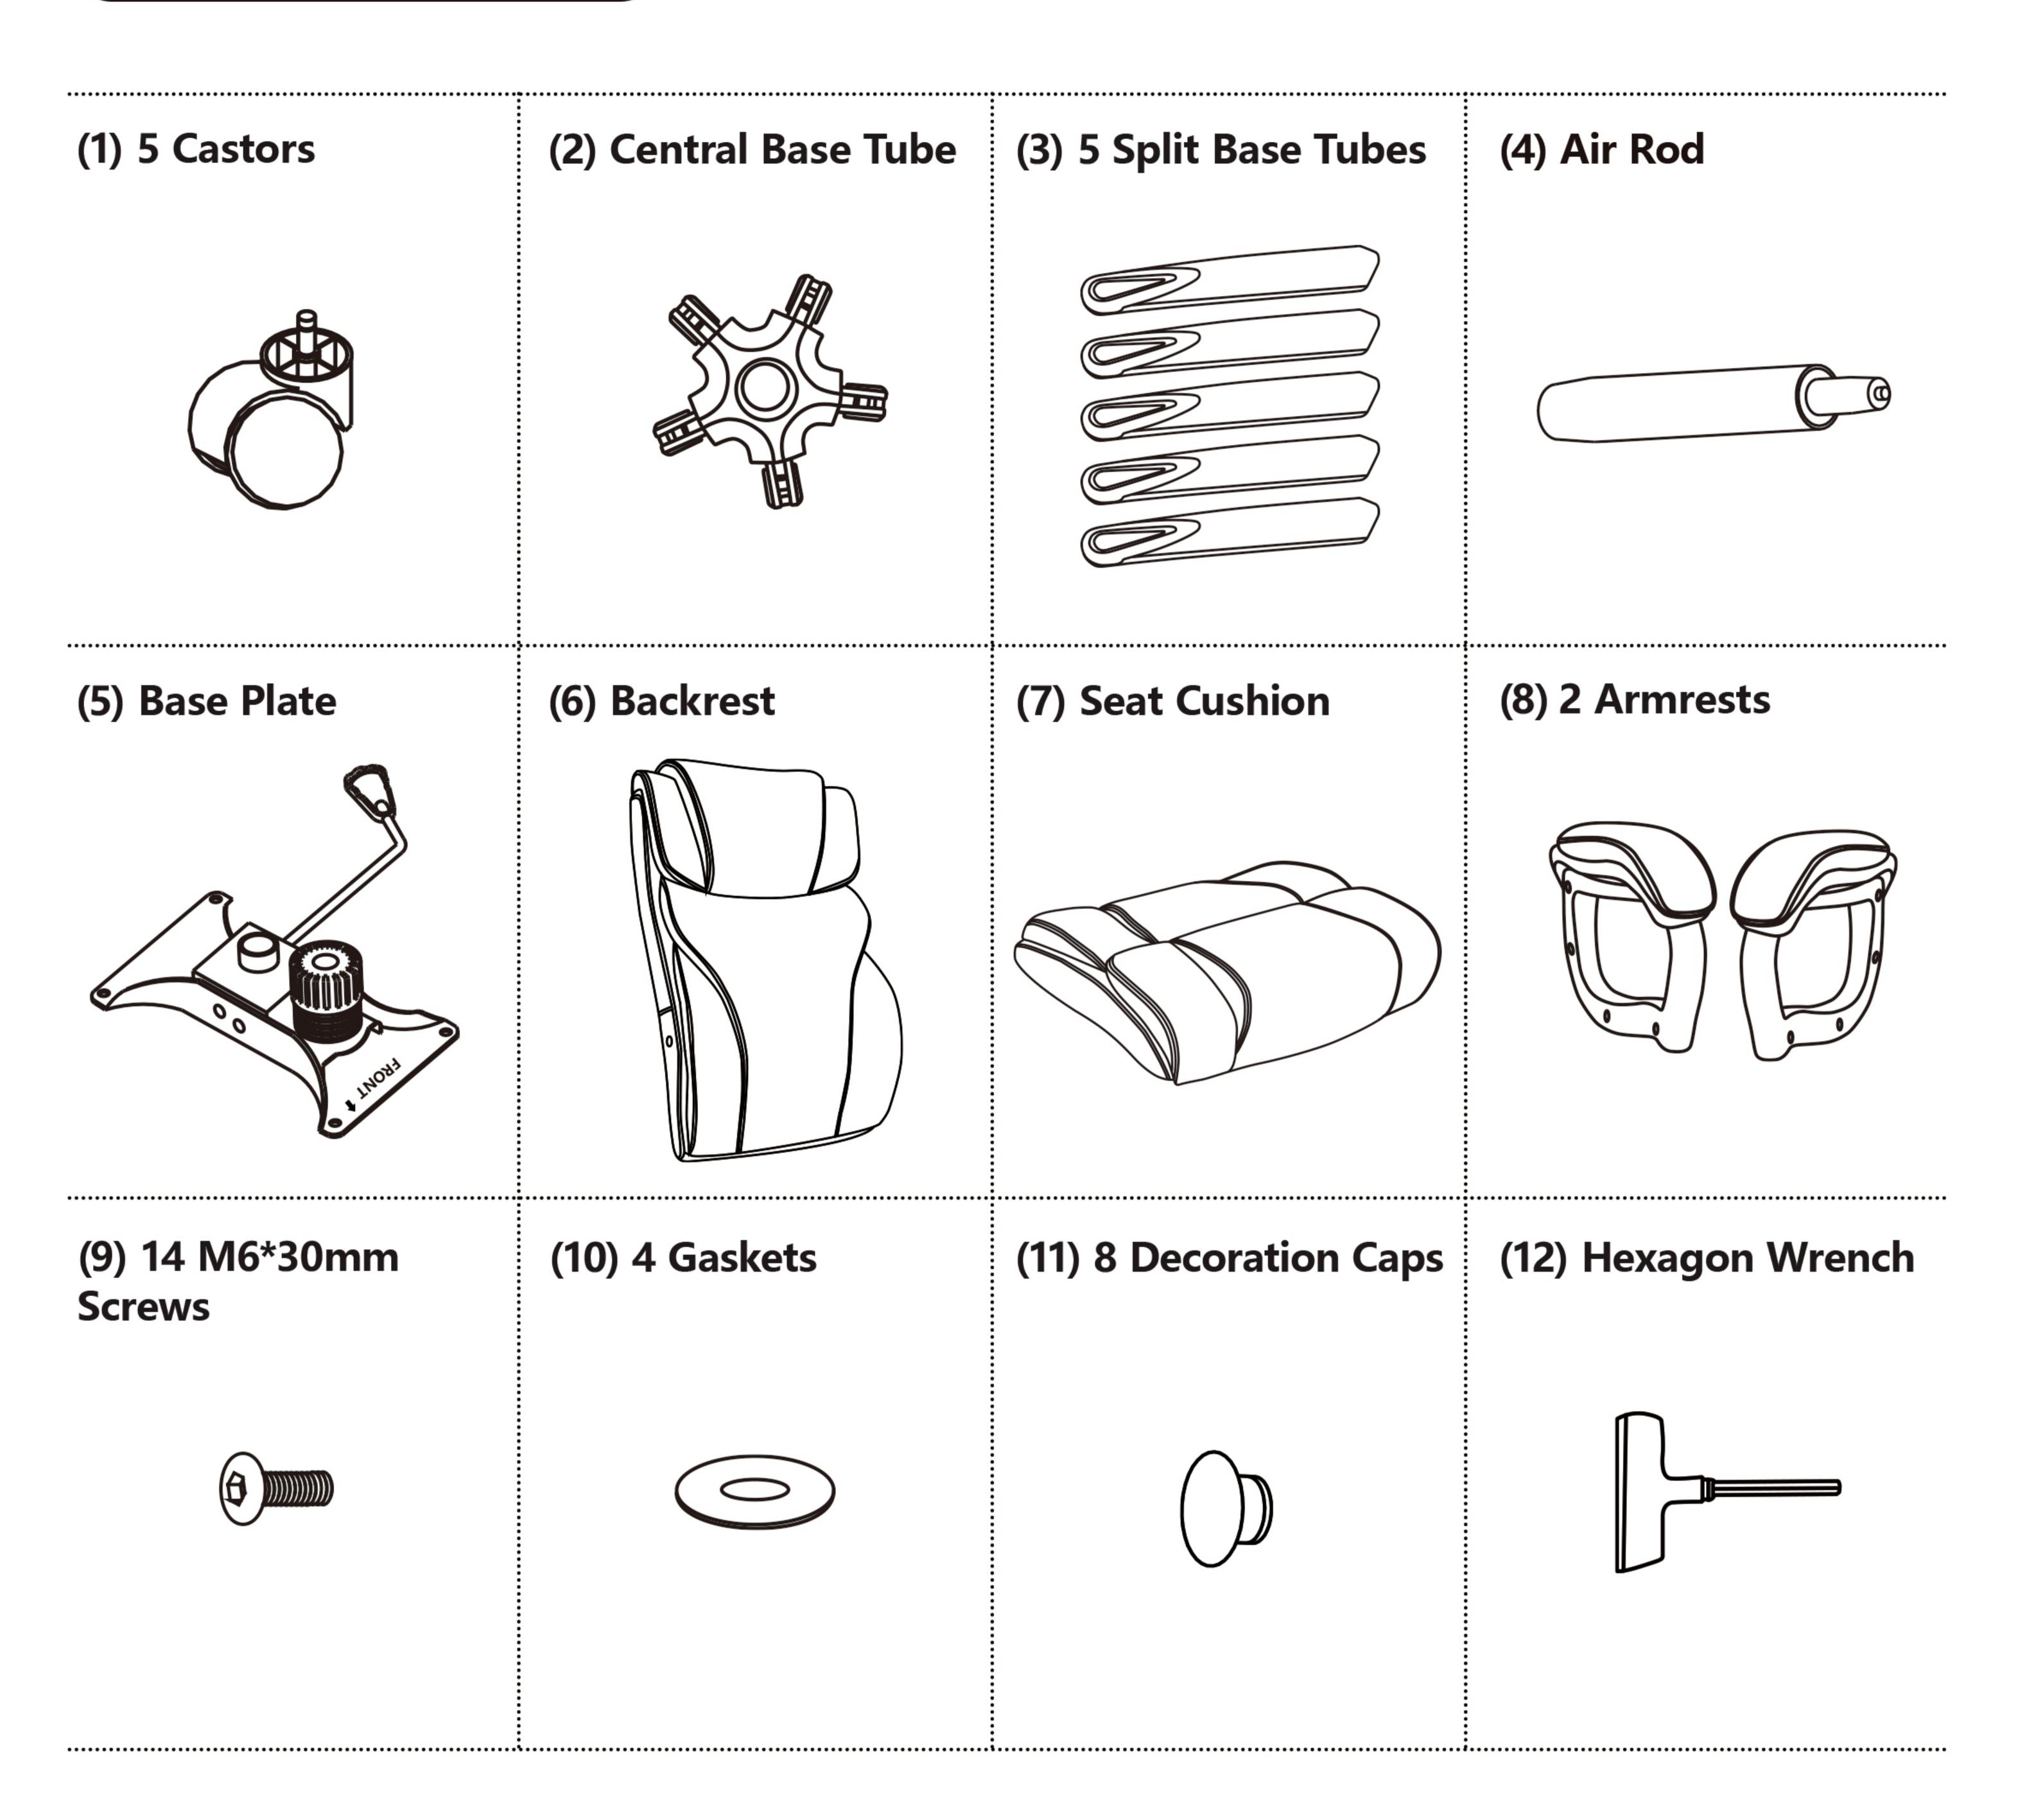

Notice

- Do not stand in this chair or use the chair as a step ladder use it as chair only. This chair is designed for one person to use at a time.
- Do not use this chair unless all bolts, screws and knobs are firmly secured.
- Check all bolts, screws and knobs every 90 days. Tighten them if any are loose.
- Failure to follow these instructions may result in serious injury or death of yourself and people around you.
- Some of the parts are heavy or have sharp edges, please install them carefully to avoid hurting you and people around you.

Instructions for Use




Adjustable Height



Rocking Function



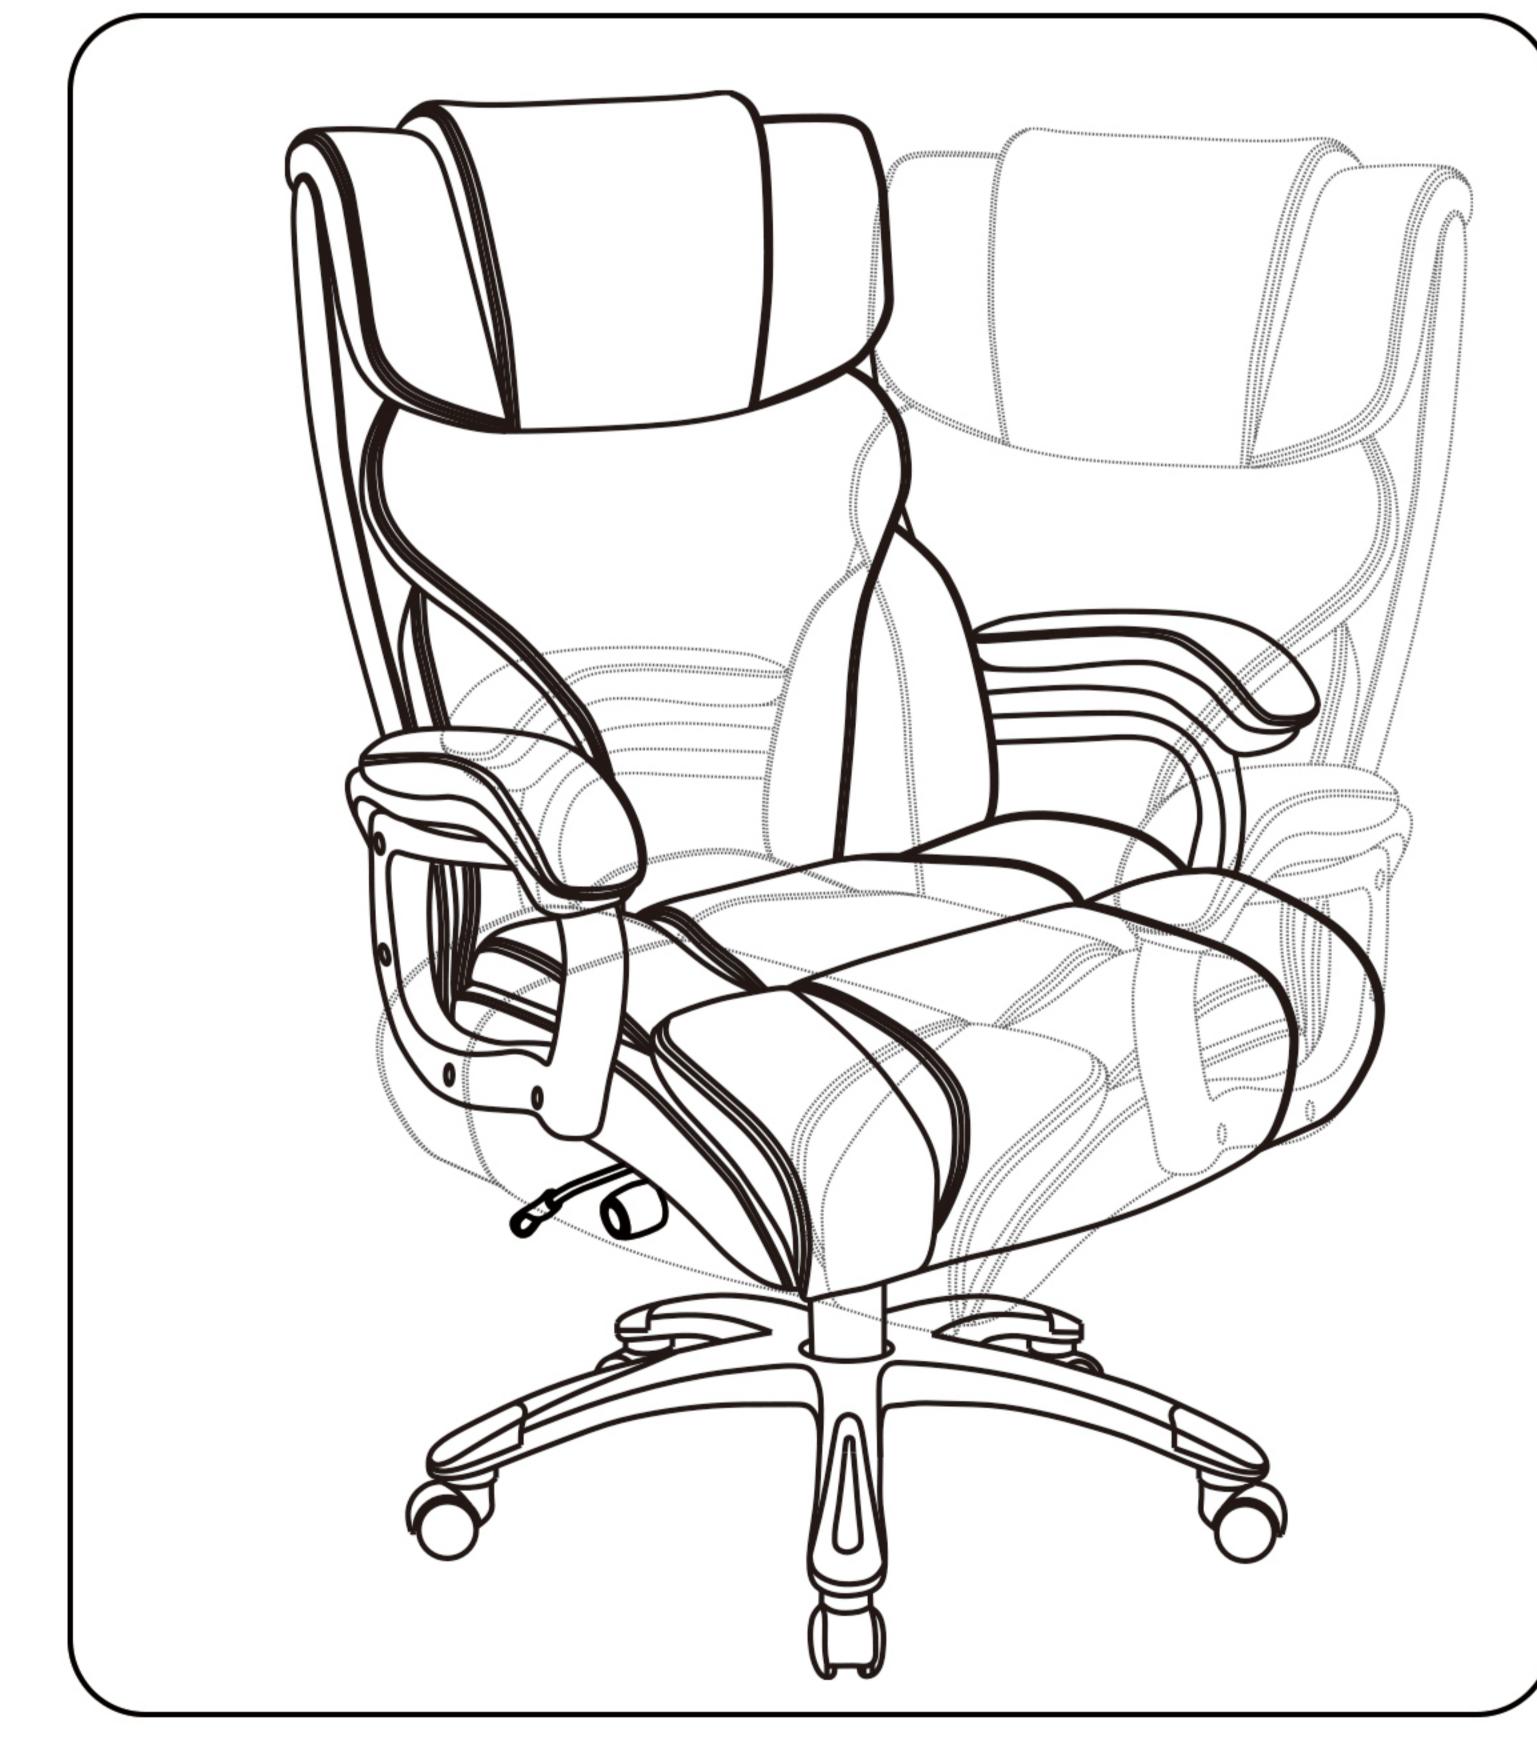

360° Rotation


Thanks for purchasing our products. Please read this manual before assembly. And please assemble in order. After the assembly, keep the instruction properly. Make sure all the parts are included (12 kinds in total).

Assembly Instruction

Please assemble in a wide and flat place.

Step 1


Take out 5 Split Base Tubes (3) and Central Base Tube (2). Insert 5 Split Base Tubes (3) into Central Base Tube (2) as shown. Hold the Split Base Tube (3) perpendicular to the Central Base Tube (2) and press the inside bulge on the foot stool into the groove of the central tube. Once it is pressed in, lift the foot stool up. Repeat it five times.

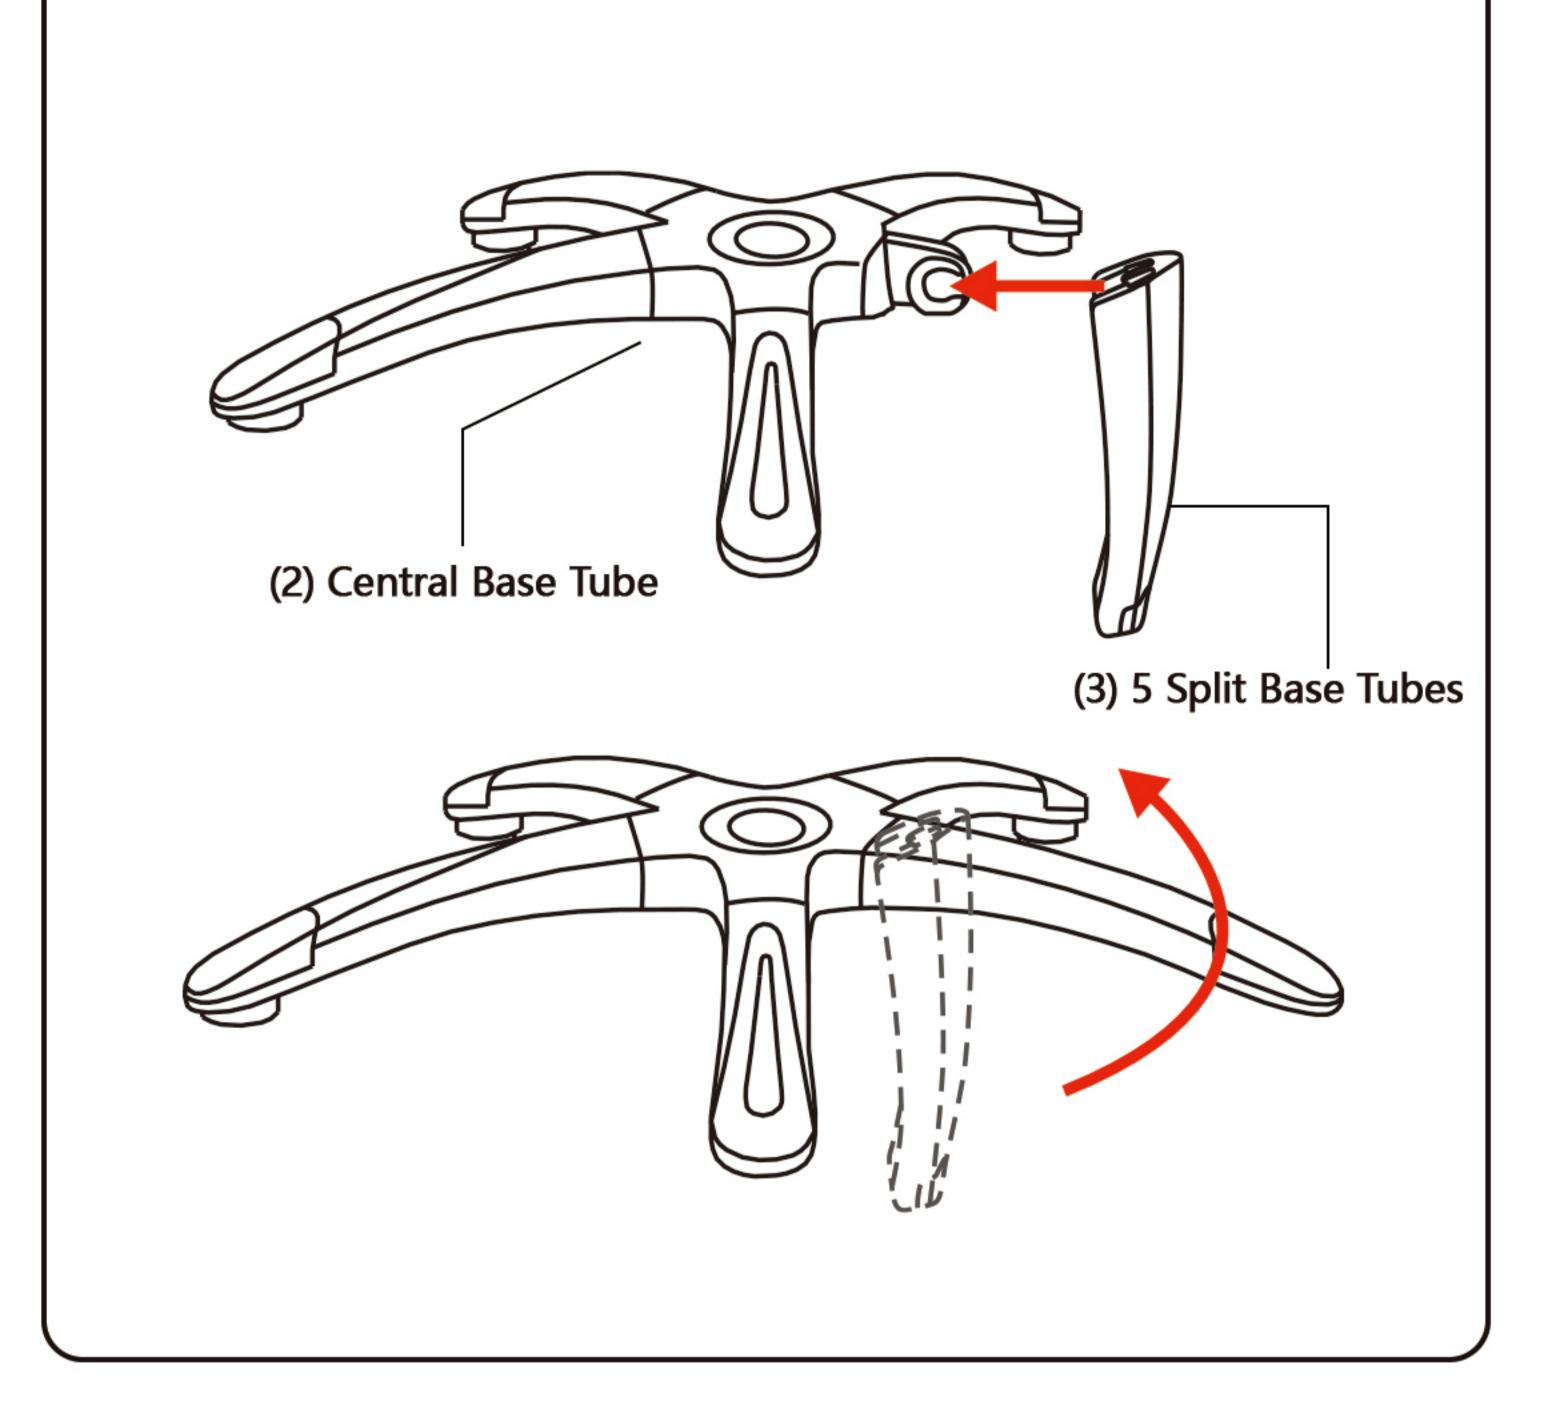

Step 2

Take out 5 Castors (1) and Air Rod (4). Insert 5 Castors (1) into part of Step 1 as shown. Insert Air Rod (4) into the hole of Central Base Tube (2) as shown. Put it aside and we'll use it in Step 7.


*Caution: Confirm Castors (1) must be inserted deeply. Otherwise the castors could easily fall out and the chair could fall down.

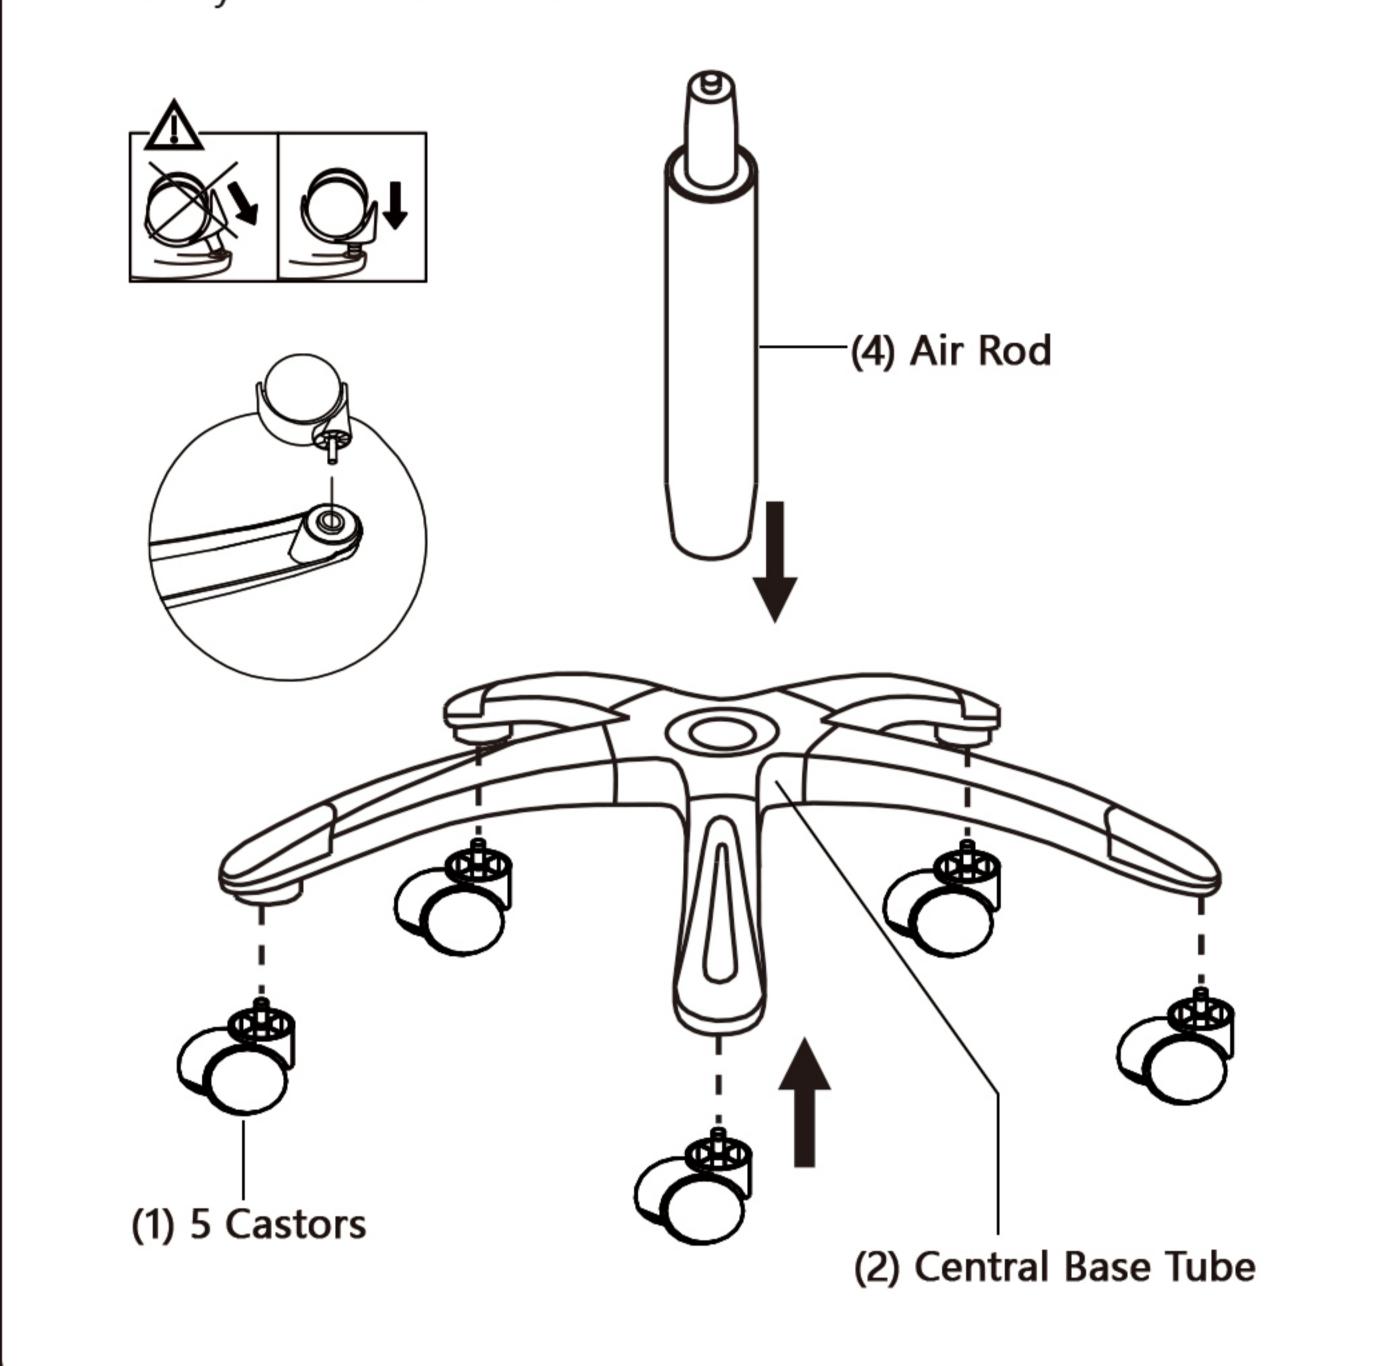

Step 3

Take out the 2 Armrests (8), tighten the 4 M6*30mm Screws (9) with Hexagon Wrench (12), and fix the 2 Armrests (8) to the 2 sides of the Seat Cushion (7). Tighten the 4 screws firmly and then cover the screws with 4 Decoration Caps (11).


*Caution: Align the 4 screws with the holes until they are screwed in 80%, then after the backrest has been inserted between the two armrests, fasten all the screw holes and finally tighten them in 100%.

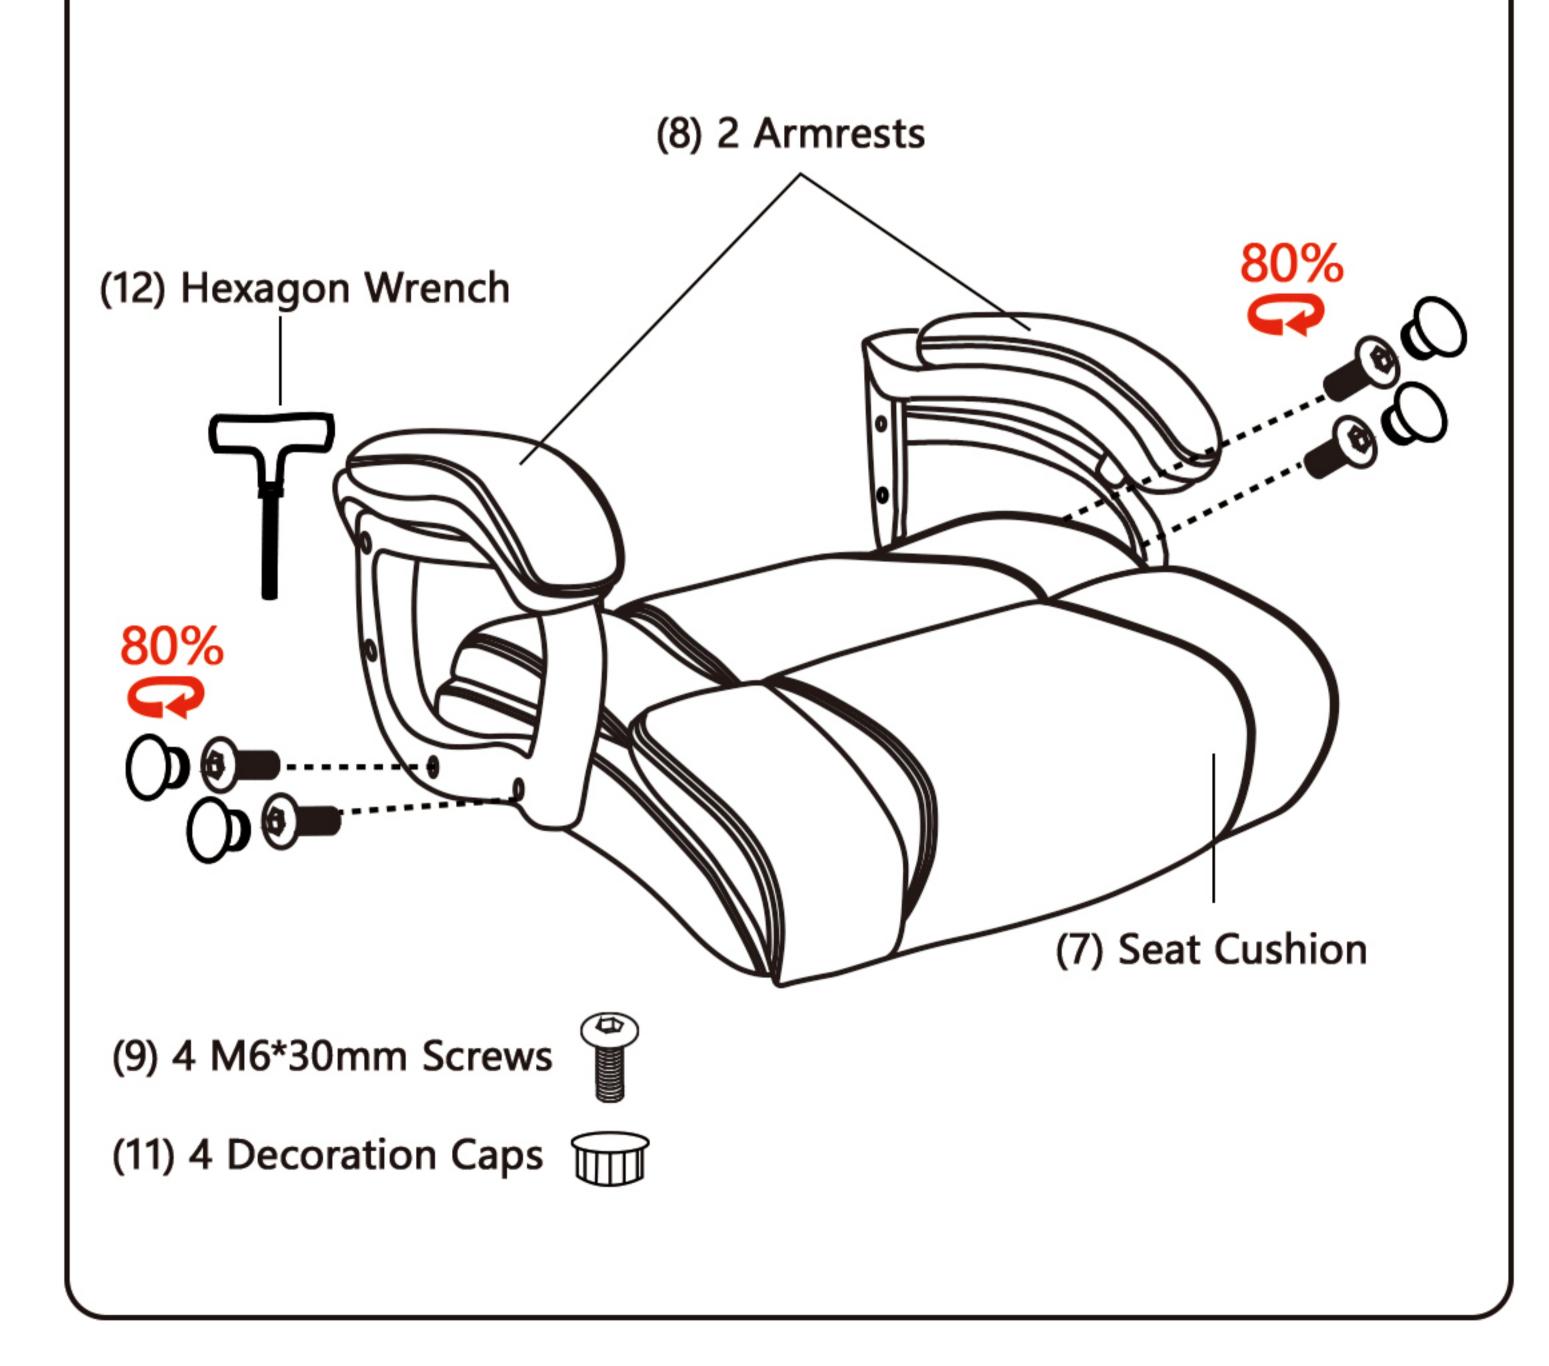

Step 4

Insert the Backrest (6) between the 2 Armrests (8), align the holes then press the armrests in and fasten them. Then tighten the 4 M6*30mm Screws (9) to 80% first, and when all 8 screws are aligned with the holes, tighten all the screws to 100%. Tighten the 4 screws firmly and then cover the screws with 4 Decoration Caps (11).


*Caution: As the chair is heavy, it is better for two people to put the backrest into the middle of the armrests together.

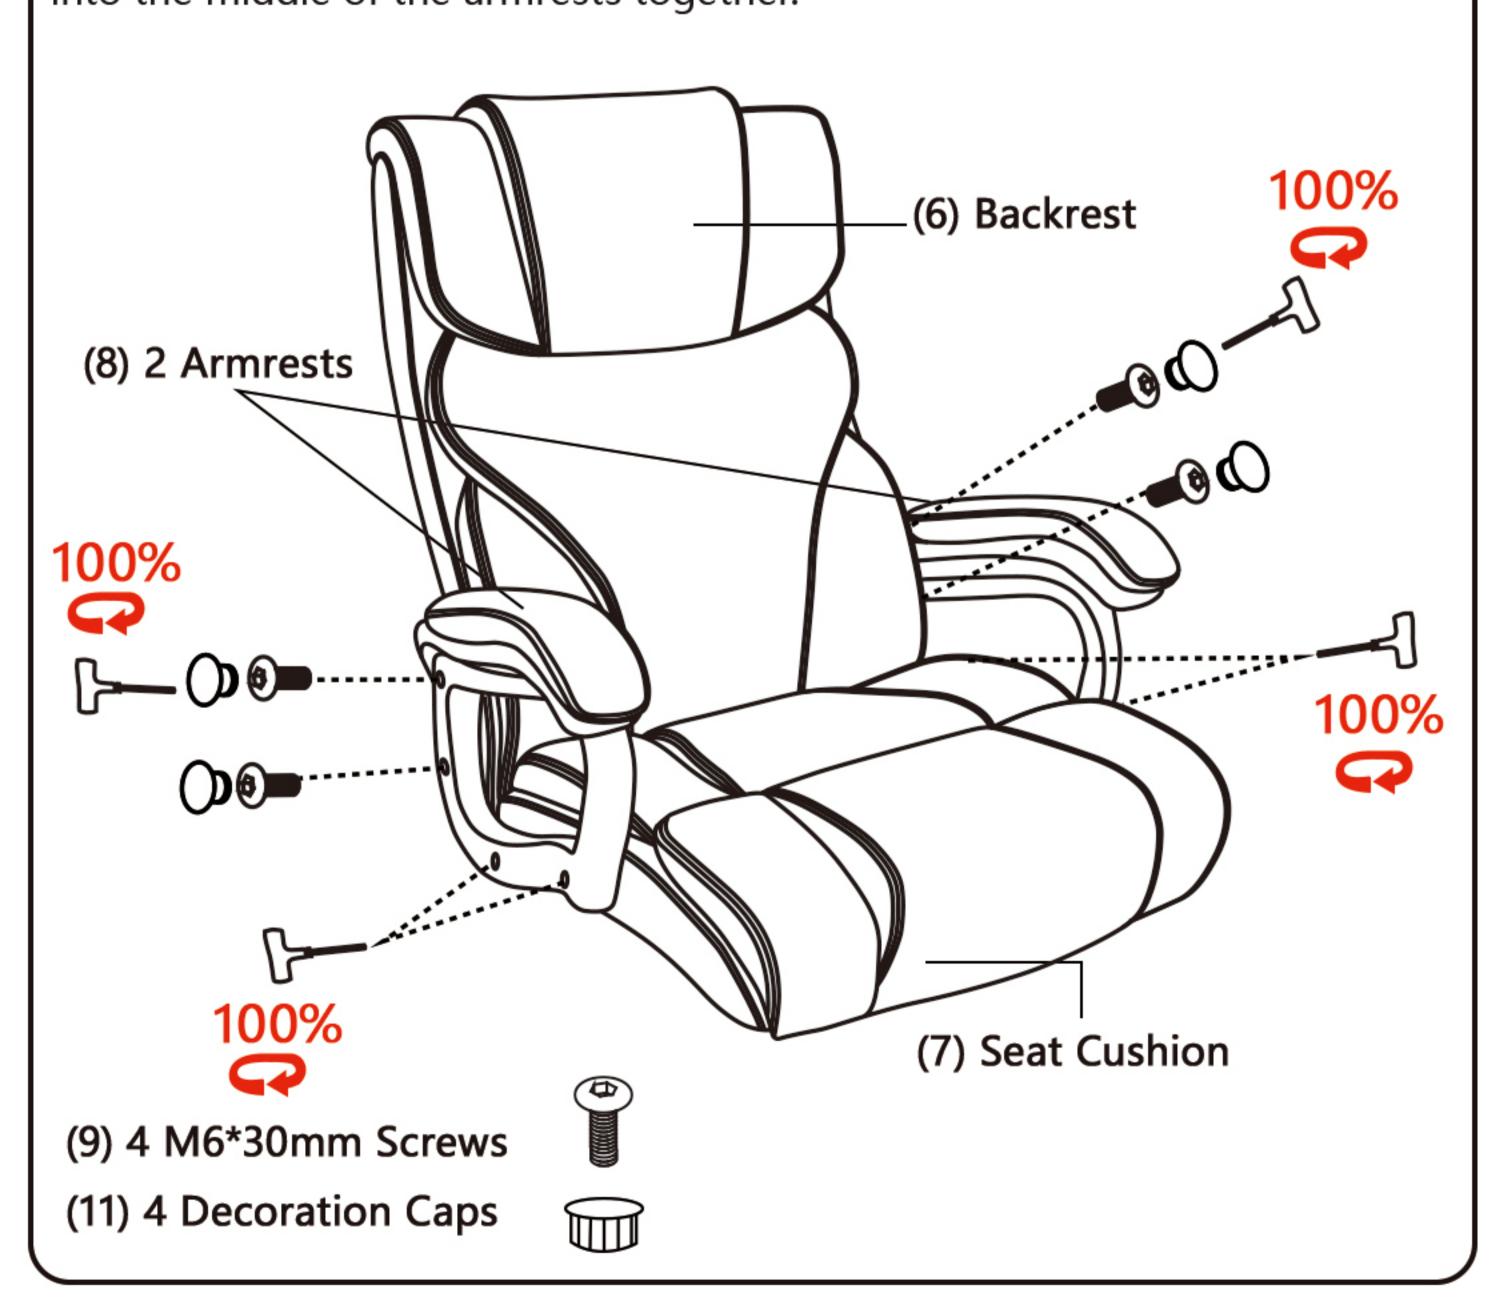

Step 5


Fix the Base Plate (5) to the bottom of the Seat Cushion (7). Tighten the 4 M6*30mm Screws (9) and 4 Gaskets (10) with Hexagon Wrench (12) firmly.

*Caution: Align the direction with the 'FRONT' mark for installation, half-tighten the screws first, and tighten the 4 screws after aligning the holes to prevent the chassis from shifting and being difficult to tighten.

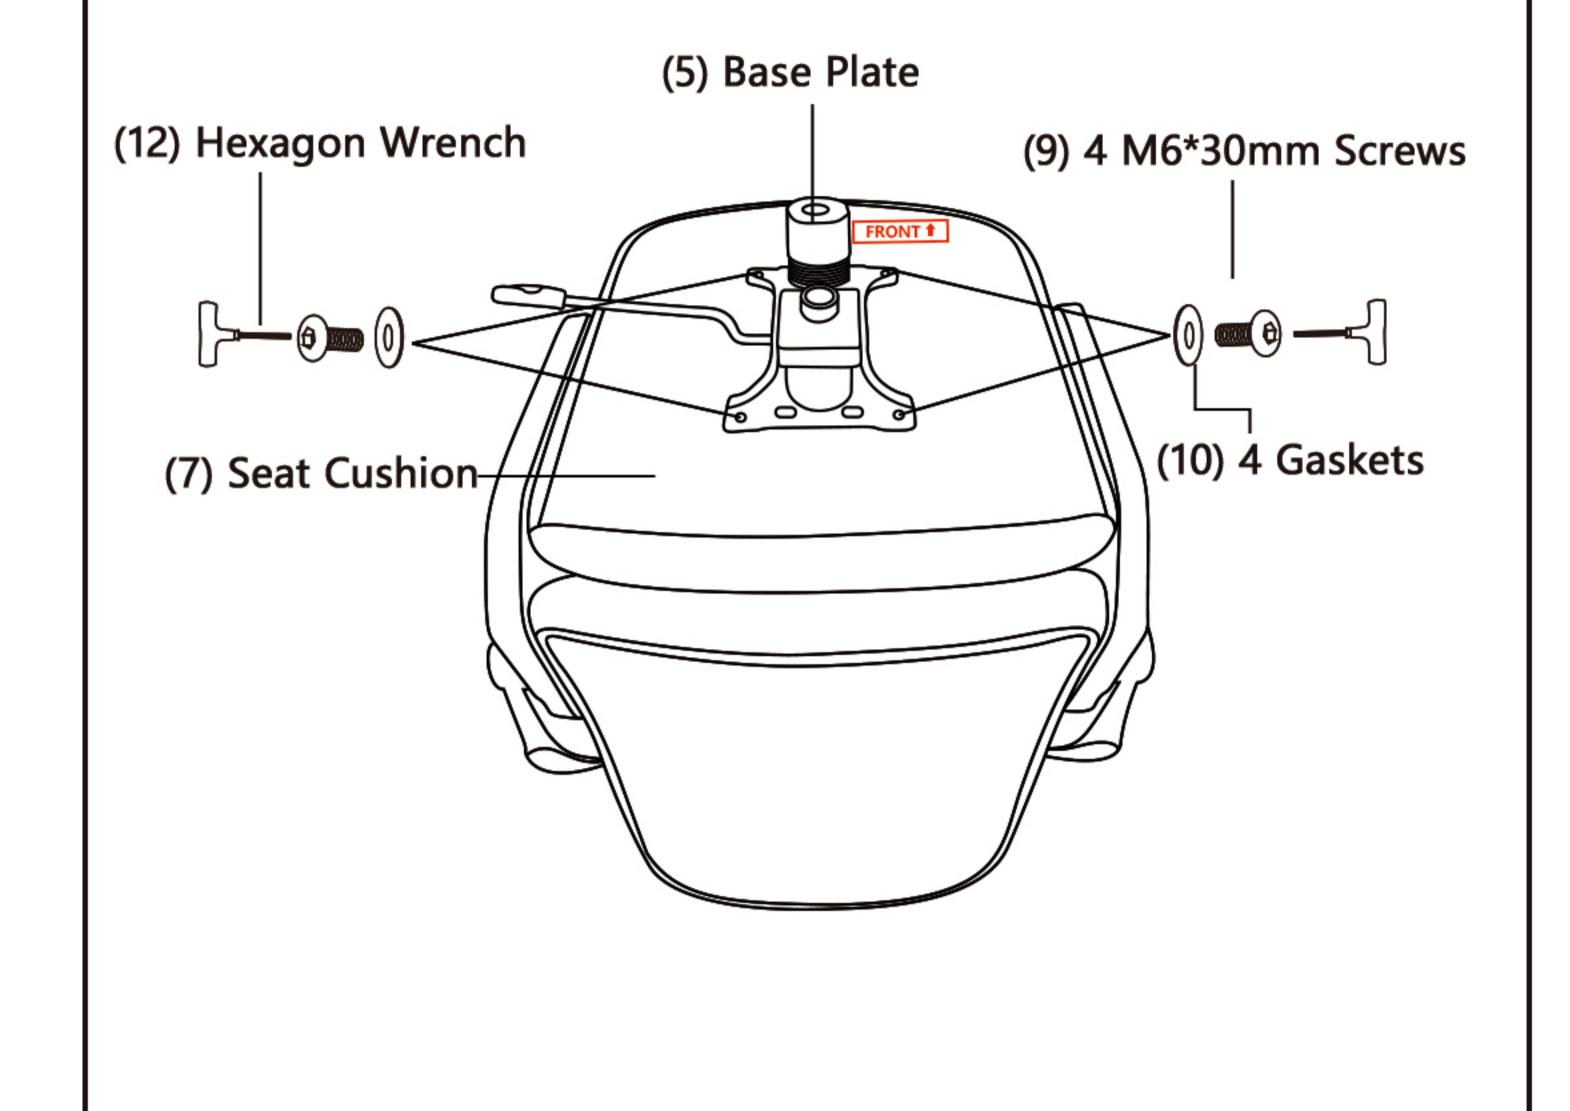

Step 6

Install the lumbar support adjuster on the Backrest (6) of the chair on the bottom of the Seat Cushion (7), align the adjuster with the holes according to the 'FRONT' mark, and install with 2 M6*30mm Screws (9).

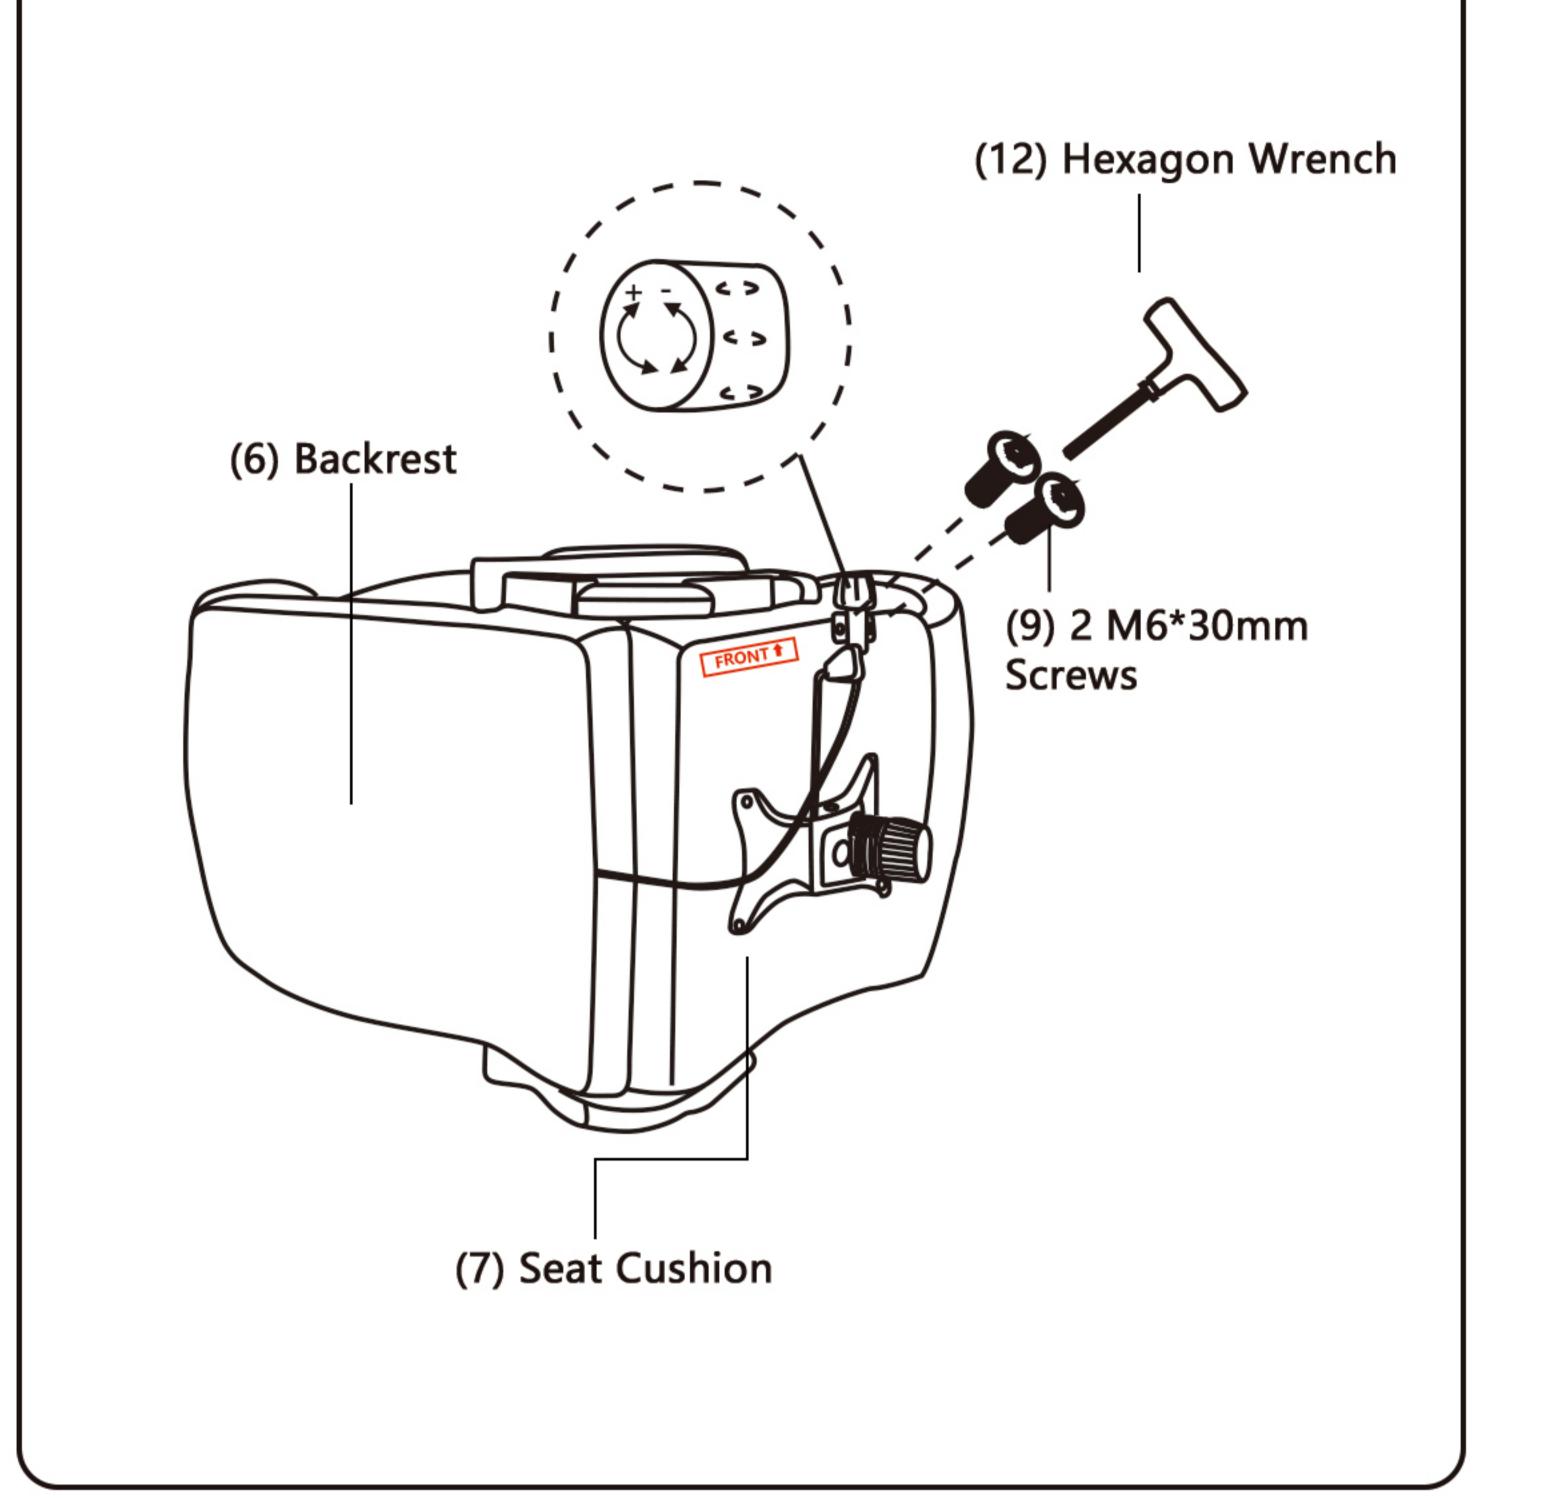

Step 7

Pick up the Step 2's Air Rod (4) and Central Base Tube (2). Insert the Air Rod (4) into Step 5's Base Plate (5). There's a hole in the middle of Base Plate (5). Press the Seat Cushion (7) from top to bottom, and use your whole body's strength to insert it firmly, the assembly is complete now.

