

Instruction Manual

HDPE Porch Swing



1. Please find the assembly guidelines on Page 2 - 5.
2. You can scan the QR code of our official website and leave a message to register for the 10-year manufacturer warranty.

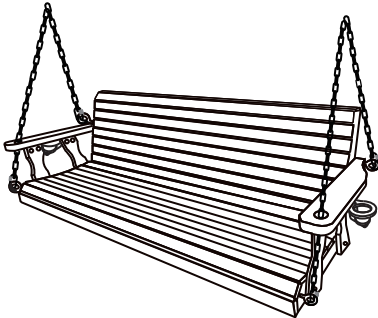
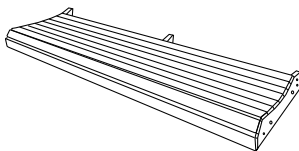
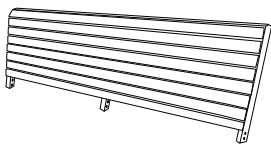
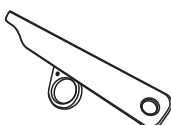
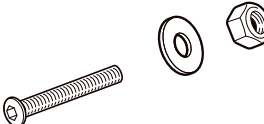
 
 
 
 
 


3. If you find any defective parts, please feel free to contact us through Amazon messages or any of the contact methods below. We will respond within 8 hours and provide free replacement parts plus partial refund or other services you need. Please tell us which replacement part you need and we will ship out the parts as soon as possible.

Fortunecandy Inc.

✉ customerservice@fortune-candy.com


🔗 Connect with us on fortune-candy.com

				
	SWING SEAT	SWING BACKREST	FRONT ARM SUPPORT	
	A x 1	B x 1	C x 2	
				
	REAR ARM SUPPORT	RIGHT CHAIR ARM	LEFT CHAIR ARM	
D x 2	E x 1	F x 1	G x 2	
				
M6X55mm	M10X85mm	M6X35mm		
H x 18	I x 4	J x 2		
				
CARABINER	CHAIN	WRENCH	ALLENWRENCH	
K x 4	L x 2	M x 1	N x 1	


Precautions before Assembly

1. If any parts are defective, please contact the seller or Fortune Candy customer service for partial refund and replacement parts.
2. Please follow the steps below to install the swing and do NOT tighten all screws until last step. Fixing a single part too early may make other parts difficult to assemble.
3. Please assemble the nuts and washers correctly according to the schematic diagram and tighten the screws at the last step, to maximize the load-bearing capacity of the swing.

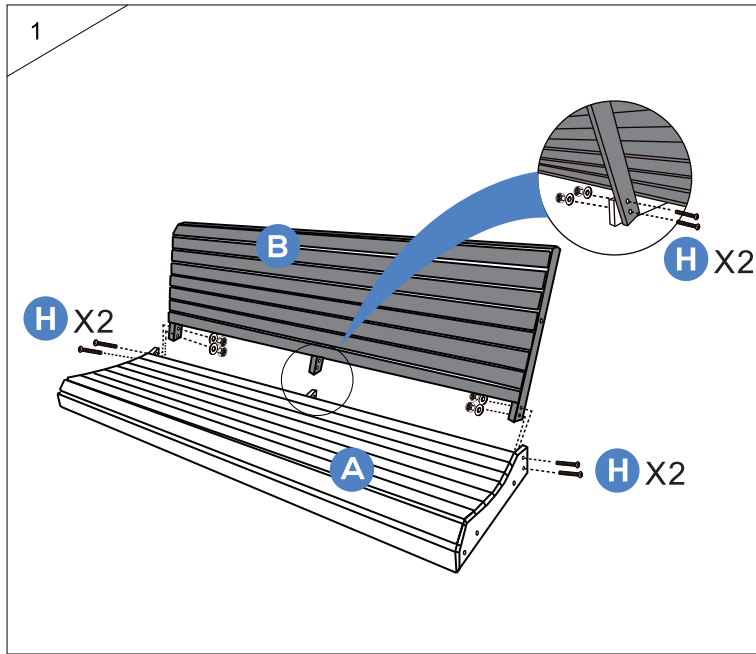
* We provide excellent after-sales service, which is appreciated by many buyers. Your satisfaction is our main goal.



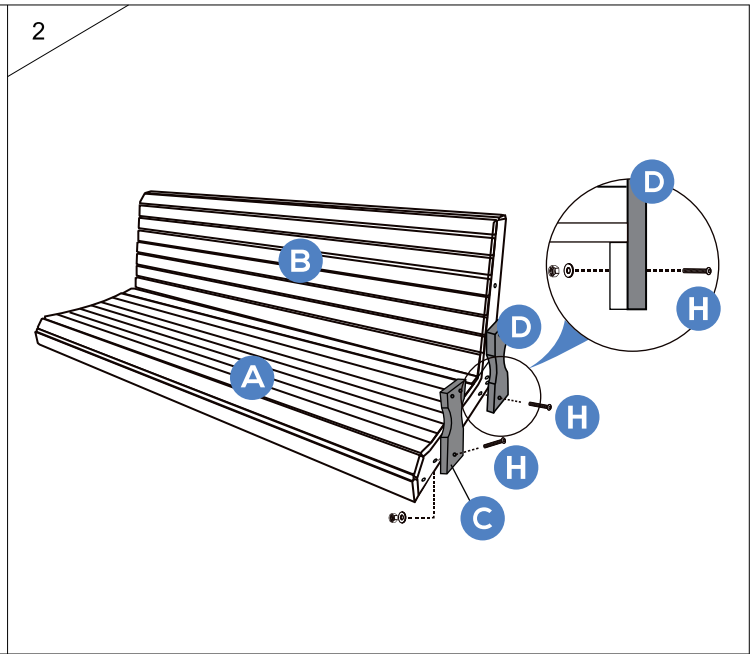
- 1** Place part A (Swing Seat) on flat surface and attach part B (Swing Backrest) to Swing Seat with 6 sets of hardware H (Bolt, Washer and Nut).



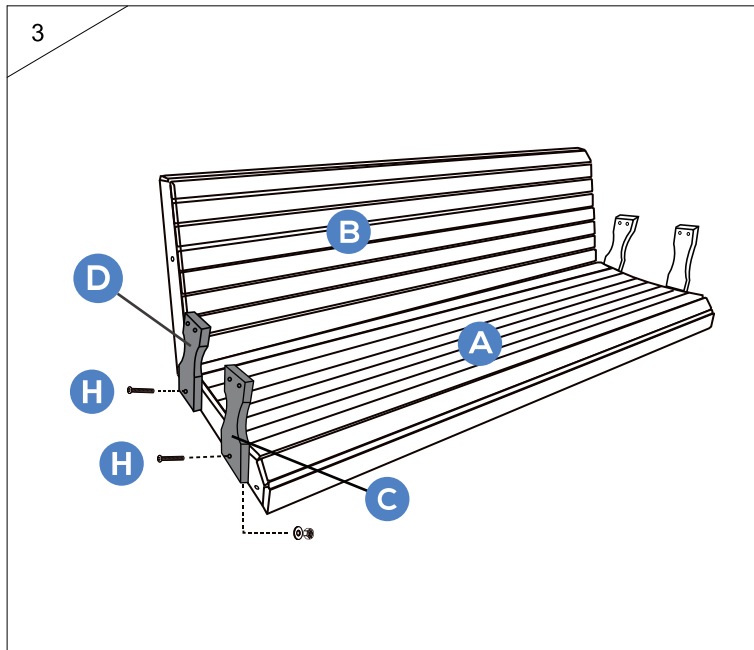- 2** Attach part C (Front Arm Support) and part D (Rear Arm Support) to the assembled part (A+B) with 2 sets of hardware H (Bolt, Washer and Nut).



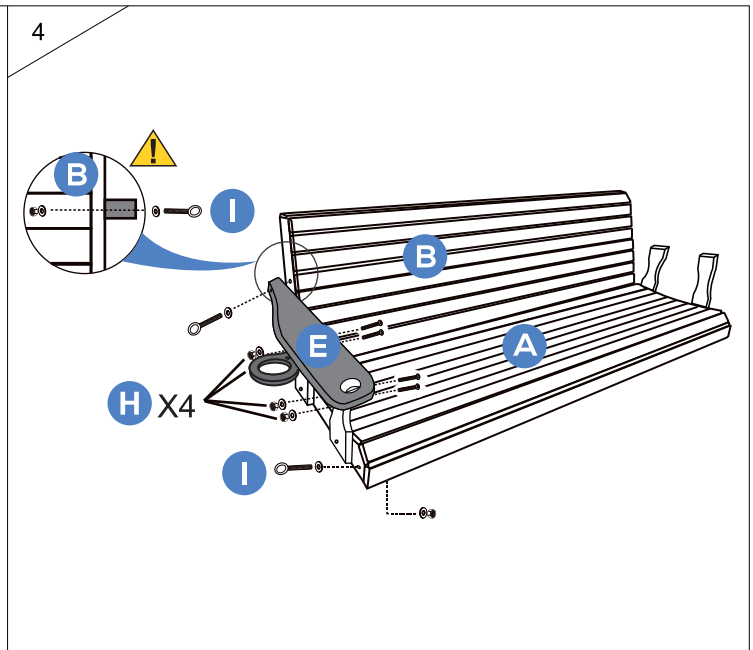- 3** Attach another part C (Front Arm Support) and part D (Rear Arm support) to the assembled part (A+B) with 2 sets of hardware H (Bolt, Washer and Nut).




- 4** Place part E (Right Swing Arm) onto part C and D (Arm Support), Attach them with 4 sets of hardware H (Bolt, Washer and Nut). Attach part E (Right Swing Arm) to part B (Swing Backrest) with 1 set of hardware I (Eyebolt, Washer and Nut). Attach another hardware set I to part A (Swing Seat).



ATTENTION: One washer shall be on the outside and one inside as shown in the figure when attaching hardware set I.

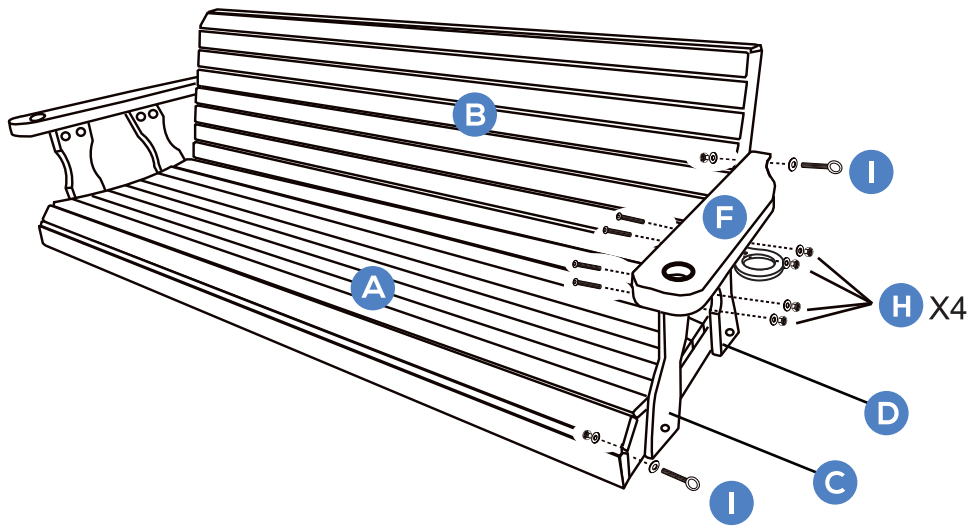5




5

Do the same to attach part F (Left Swing Arm) to part C and D (Swing Arm support) with 4 sets of hardware H (Bolt,Washer and Nut).

Attach 2 sets of hardware I (Eyebolt, Washer and Nut) to the assembled part (A+B).

Tighten all the screws and nuts to the tightest.

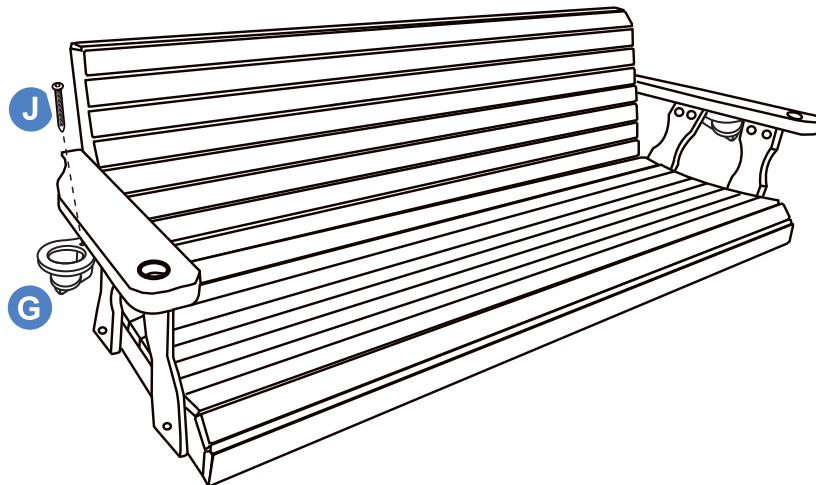
6



6


Install the part G (Cup Holder) with part J (Bolt).

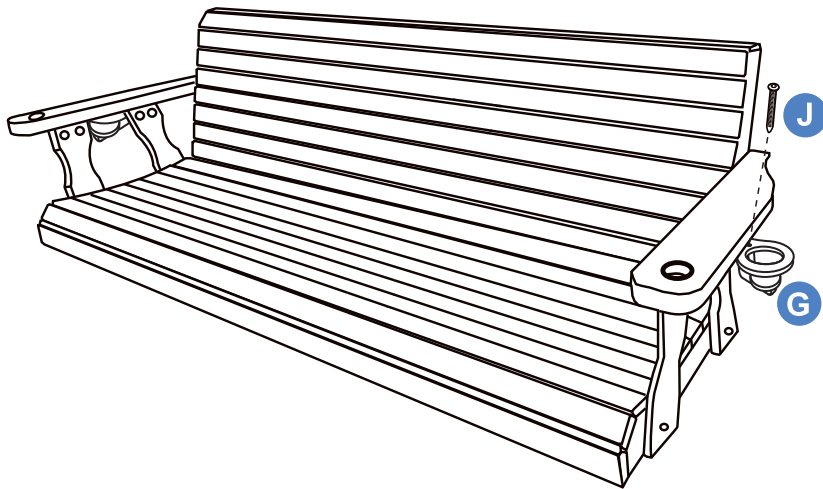7



7 Install the part G (Cup Holder) with part J (Bolt).

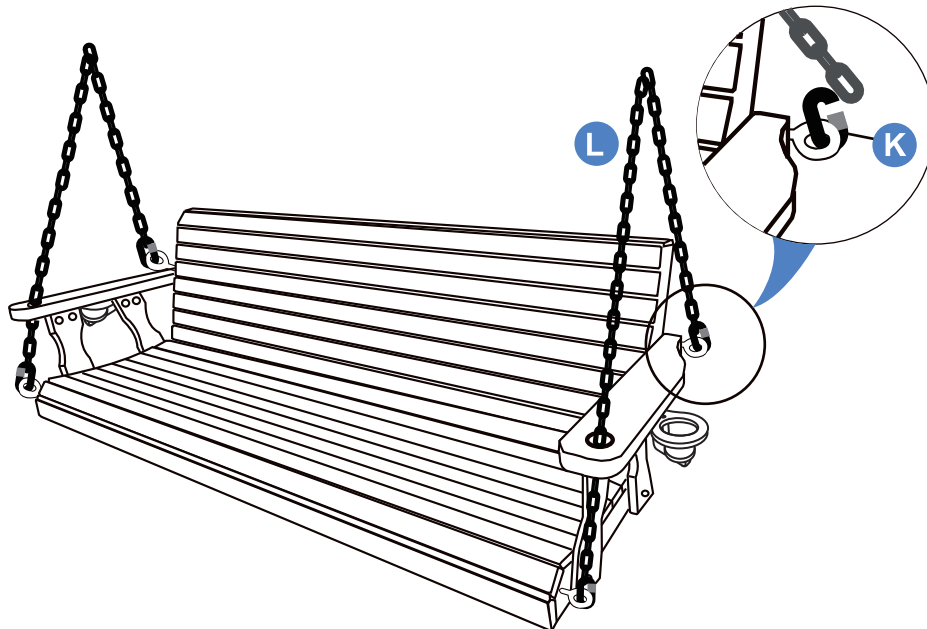8



8 Pass the chains through the holes on the Swing Arms and attach the chains to the eye hooks with 4 pcs of hardware K (Carabiner).

Turn and tighten the lock to secure the connection of the chain to the carabiner.

FAQs for This Product :

Q: How to maintain this product?

A: Please check the nuts regularly for looseness and tighten them. This product is completely weather-resistant and very suitable for outdoor use. HDPE (High-Density Polyethylene) is the most durable material used to make outdoor furniture.

Q: How to register for the warranty?

A: Please scan the QR code on the first page to go to our official website <https://fortune-candy.com>, and use the online chat tool to send your order number, then we will register your product for warranty. You can also send an email to customerservice@fortune-candy.com.

Q: How to contact us to send replacement parts?

A: If you found any defects or scratches or missing parts, the easiest way is to tell us which part you need using Amazon messages. In this way we can find out which product you purchased and your address. Or you can send an email to customerservice@fortune-candy.com. Please tell us your order number, shipping address, and which part is needed. No matter which way you contact us, we will reply within 8 hours and give you a satisfactory solution.