 




LED FLOOR LAMP
PRODUCT MANUAL



PRODUCT SKETCH OF STRUCTURE

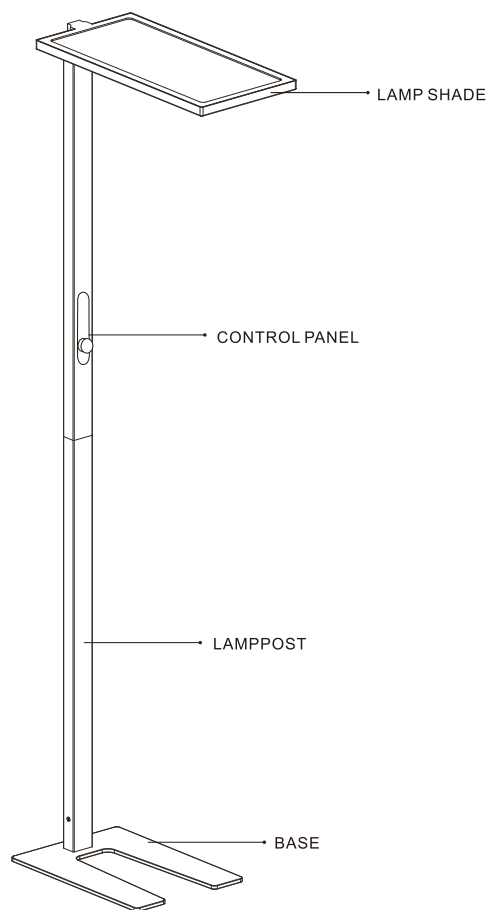

PARAMETER

PRODUCT NAME: LED FLOOR LAMP
PRODUCT MODEL: 6008FL-100WT-US
CONTROL MODE:ROTARY AND DIMMER SWITCH
RATED POWER:100W(286×1W/LED MODULE)
RATED VOLTAGE:100-240V~50/60Hz
COLOR TEMPERATURE : 4000K
SIZE :680x300x2058mm

COMPONENT PACKING LIST

LED FLOOR LAMP	1PCS
PRODUCT MANUAL	1PCS
PRODUCT CERTIFICATE	1PCS
POWER CORD	1PCS
HEXAGONAL PLATE HAND	1PCS
HEXAGON SOCKET SCREW	10PCS

INSTALLATION PROCEDURE

Before installation,please lay a carton or protective materials on the ground to protect the product and the floor.

1.Place the lamp base on a flat surface, insert the lower lamppost into the hole of the base, take out screws from the accessory package for installation, and tighten the screws to secure the lamppost;

2.Put down the lamppost base, and place the lamp head on a flat surface, then connect the quick-connect terminals on both ends of the lamp head and the upper lamppost, slide the upper lamp post onto the lamp head connecting post,take out screws from the accessory package for installation,and tighten the screws to secure the lamppost;


3.Put the lamp cap down and parallel to the lower lamppost, connect the quick-connect terminals between the lamp cap and the lower lamppost, and sleeve the upper lamp pole opening of the lamp cap part into the lower lamp pole,take out screws from the accessory package for installation, and tighten the screws to secure the lamppost;

4.Put the lamp cap down and parallel to the lower lamppost, connect the quick-connect terminals between the lamp cap and the lower lamppost, and sleeve the upper lamp pole opening of the lamp cap part into the lower lamppost,take out screws from the accessory package for installation, and tighten the screws to secure the lamppost;

ACCESSORY DETAILS

	power supply cord 1PCS
	M5 Inner Hexagon Wrench 1PCS
	Hexagon Socket Screw 10PCS

 USING SPECIFICATION

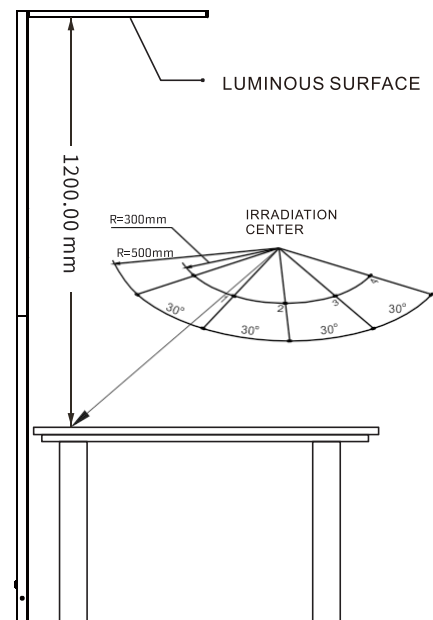


WARNING

Because this lamp's size and weight are significantly larger than those of a typical lamp, it is essential to ensure safety when using it. It should be placed near a wall, desk, or other sturdy object, with the base placed under the desk or secured with a heavy object to prevent it from being knocked over and causing injury or property damage. This lamp can not be used on a surface with an angle greater than 6 degrees! The light source within this lamp should be replaced by the manufacturer, its service agent, or someone with similar qualifications! If any abnormalities occur, please quickly turn off the power and contact the manufacturer immediately. If the product malfunctions, please have a professional inspect and repair it. To prevent the risk of electric shock, this lamp uses a three-pronged power cord, and the user should confirm that the power outlet is properly grounded.


INSTALLATION ATTENTIONS




This lamp is using indoor only

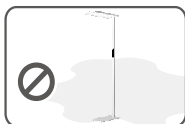

Don't use in a humid environment

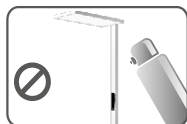


Don't scrub with acidic or alkaline cleaners

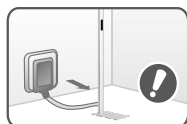

Remove the power adapter if it is not used for a long time



Don't disassemble and repair yourself

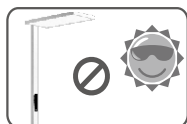

Don't place lamps in direct sunlight or near heat sources



Keep away from flammable objects



Don't touch the plug with wet hands




Don't store in a soft or flammable place



Cause fire, electric shock



When an exception occurs during use (such as smoke or odor), unplug the plug immediately

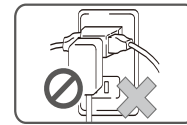


Don't use the multi-function adapter socket



The output wire can't be knotted in the process of use, bundled into a ball, etc., must let the wire naturally stretch out, and don't use the multi-function adapter socket

INSTRUCTION OF FUNCTION OPERATION

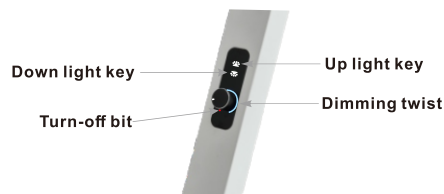

Twist operation function description :

1.Spinner key :

 
Selected brightness adjustment
Turn clockwise 5-100% to increase,
Turn counterclockwise 5-100% down,
The adjusted value is displayed in the middle.

2.Dimmer twist press down :


Turn clockwise from the off position,
We can start by turning on the down lights,
Press the down light knob once
in each turn to switch between the
up and down lights in turn

Assembly procedure


1

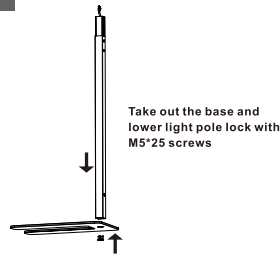


2

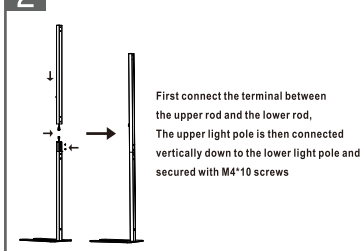 

3

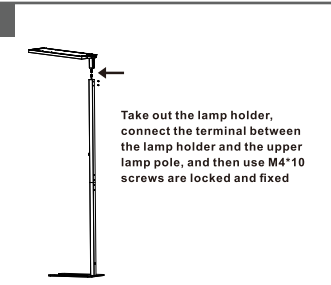 

4

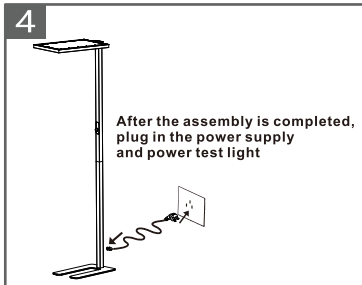 

COMMON PROBLEMS AND SOLUTION METHODS

Floor lamp is not on/ blinking

Possible causes of formation

The power outlet is not powered on

The controls are not connected properly

The DC plug is improperly connected to the DC socket

Solution

Check whether the power supply is normal

Check whether the LED control device has been connected

Check whether the LED plug is properly connected to the DC socket

Excluding the above reasons, the floor lamp is still not bright or flashing, please do not open the shell to repair, contact the local dealer for repair.