 
 
 
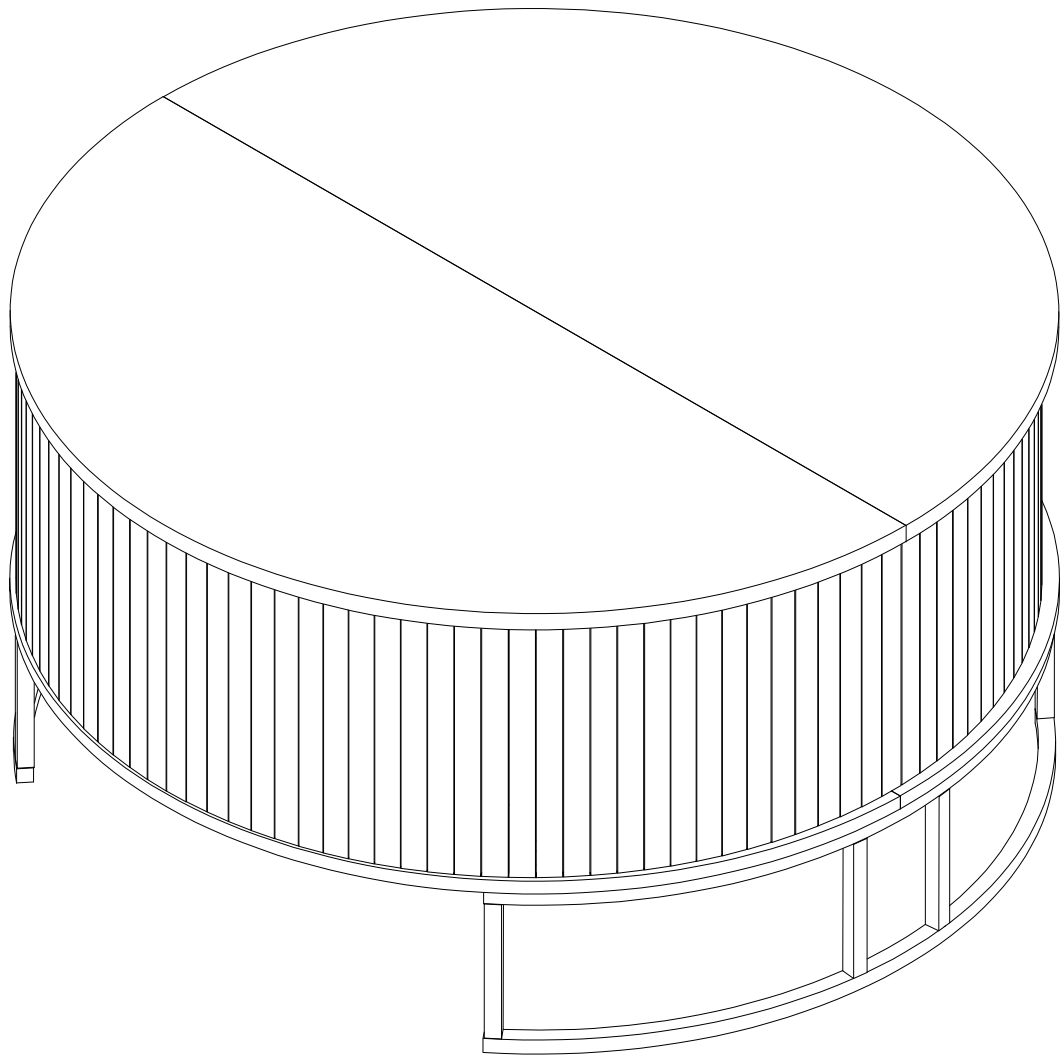 
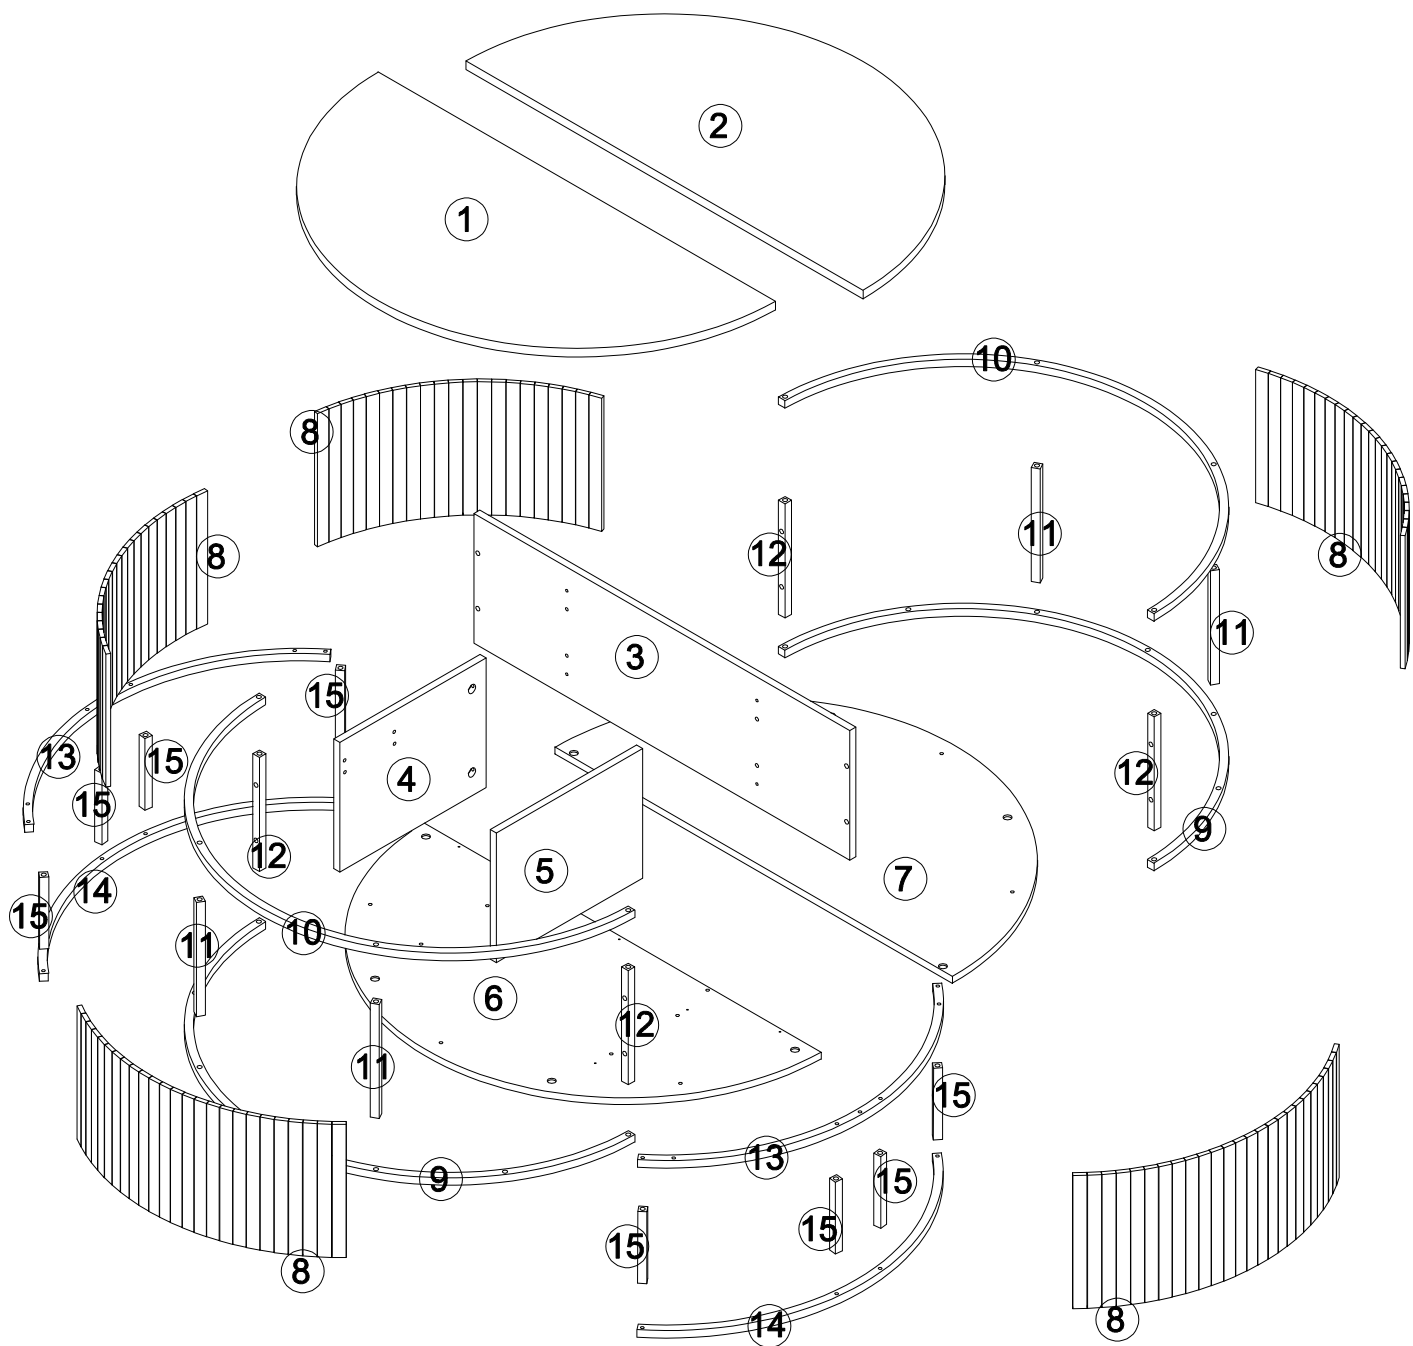 
 
 




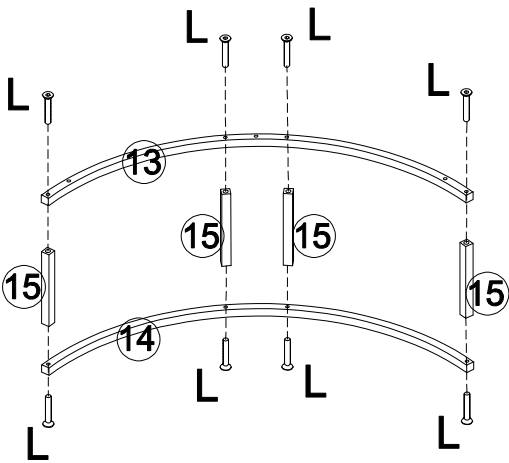

A x4  Ø6x35mm	B x4  	C x10  Ø6x30mm	D x7  M4x35mm	E x16  M4x12mm	F x2 
G x12  M6x20mm	H x4  M5x25mm	I x8  M5x10mm	J x4  M4x10mm	K x4  M5x22mm	L x32  M6x28mm
M x2  	N x1  	O x1  	P x1  	Q x1  	R x6 



Step 1

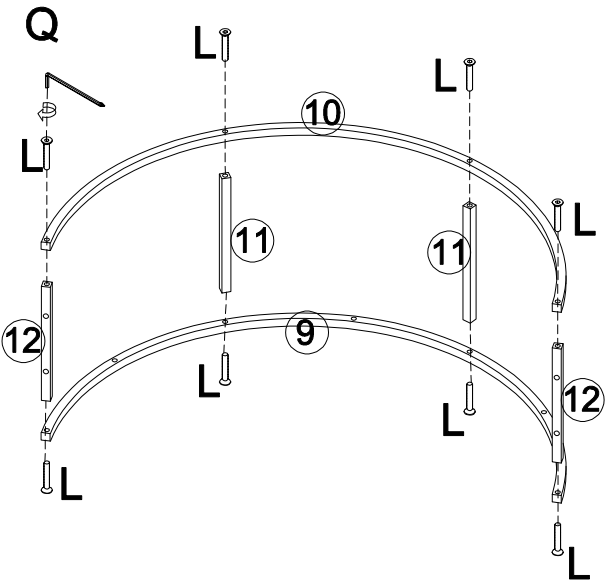

L	x32	Q	x1
			
M6x28mm			


X2

  Step 2

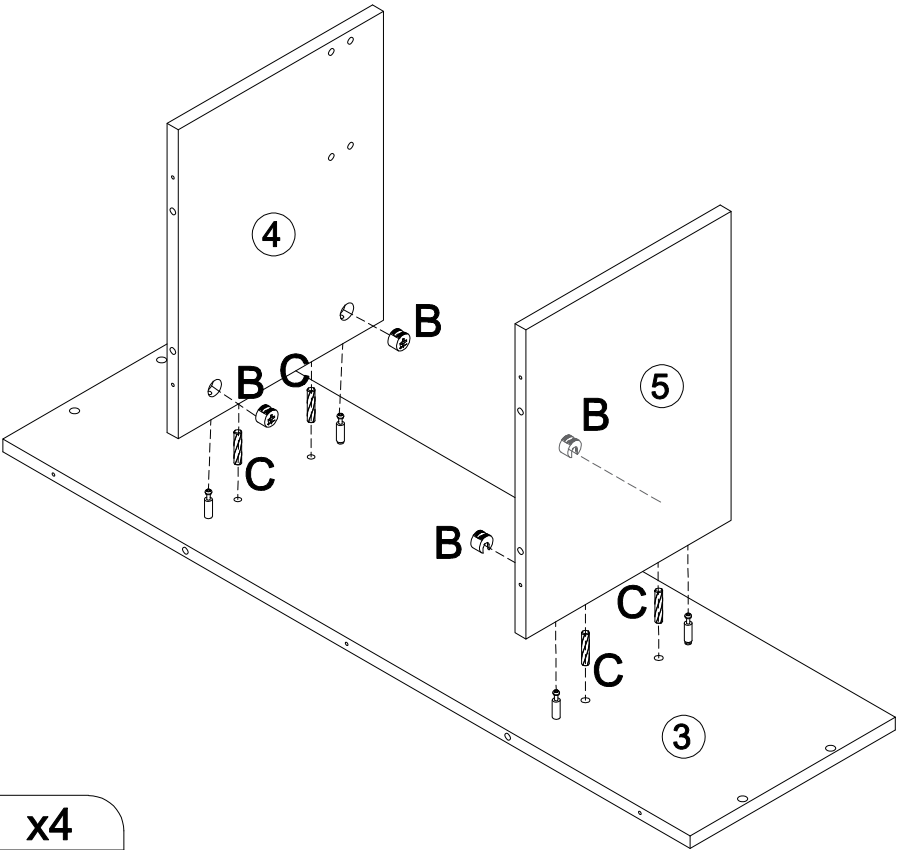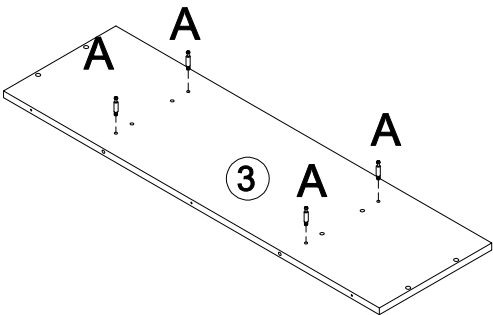


A	x4	B	x4	C	x4
					
Ø6x35mm				Ø6x30mm	

 Step 3

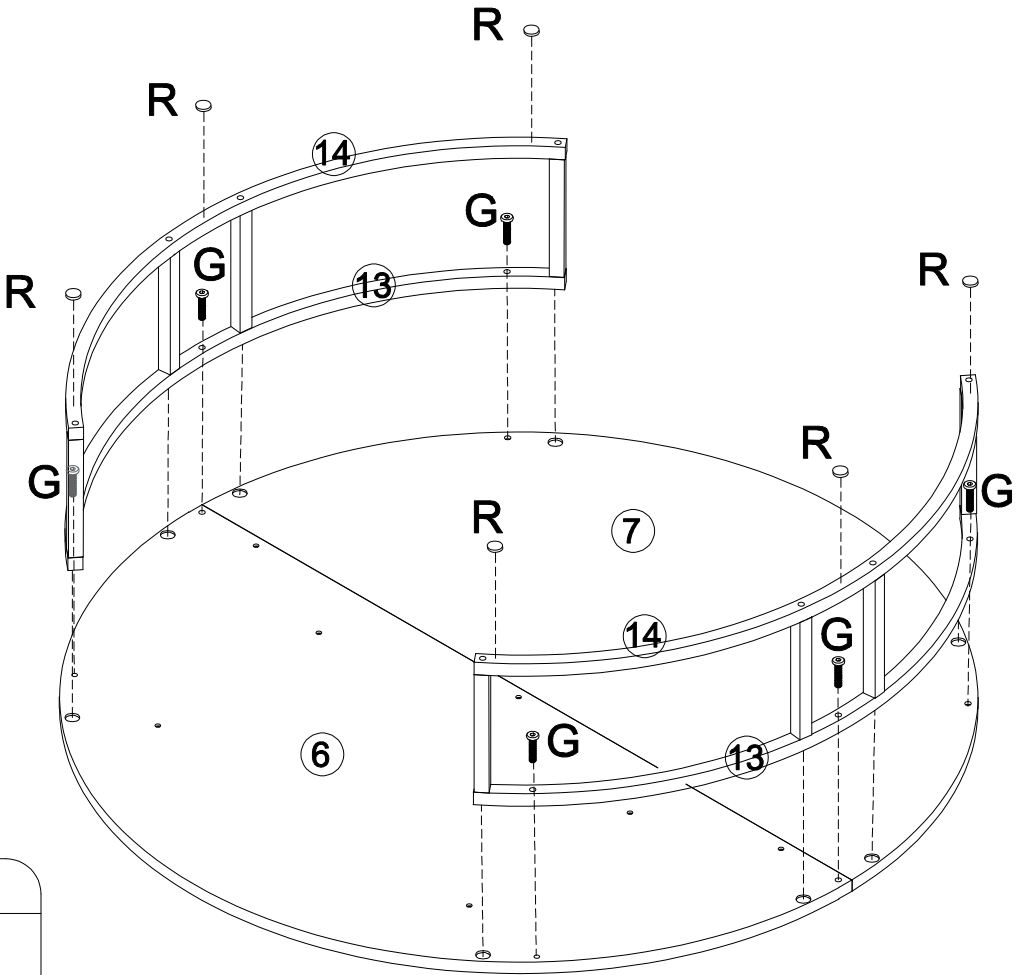


G x6	R x6
	
M6x20mm	

 Step 4

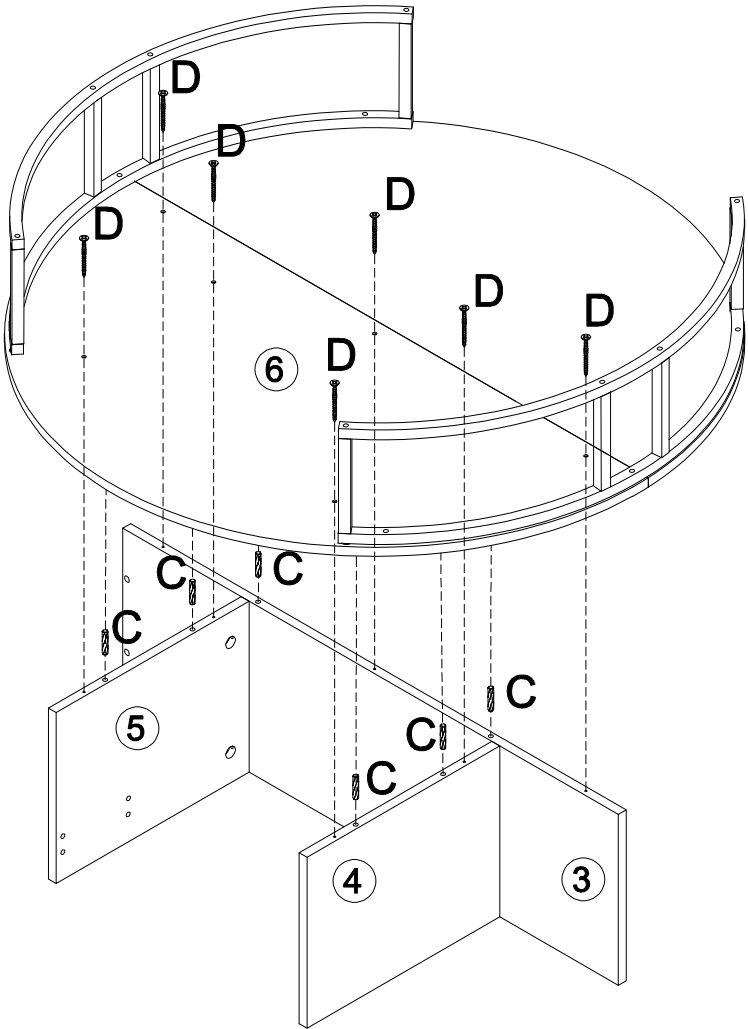

C x6	D x7
	
Ø6x30mm	M4x35mm

 
Step 5

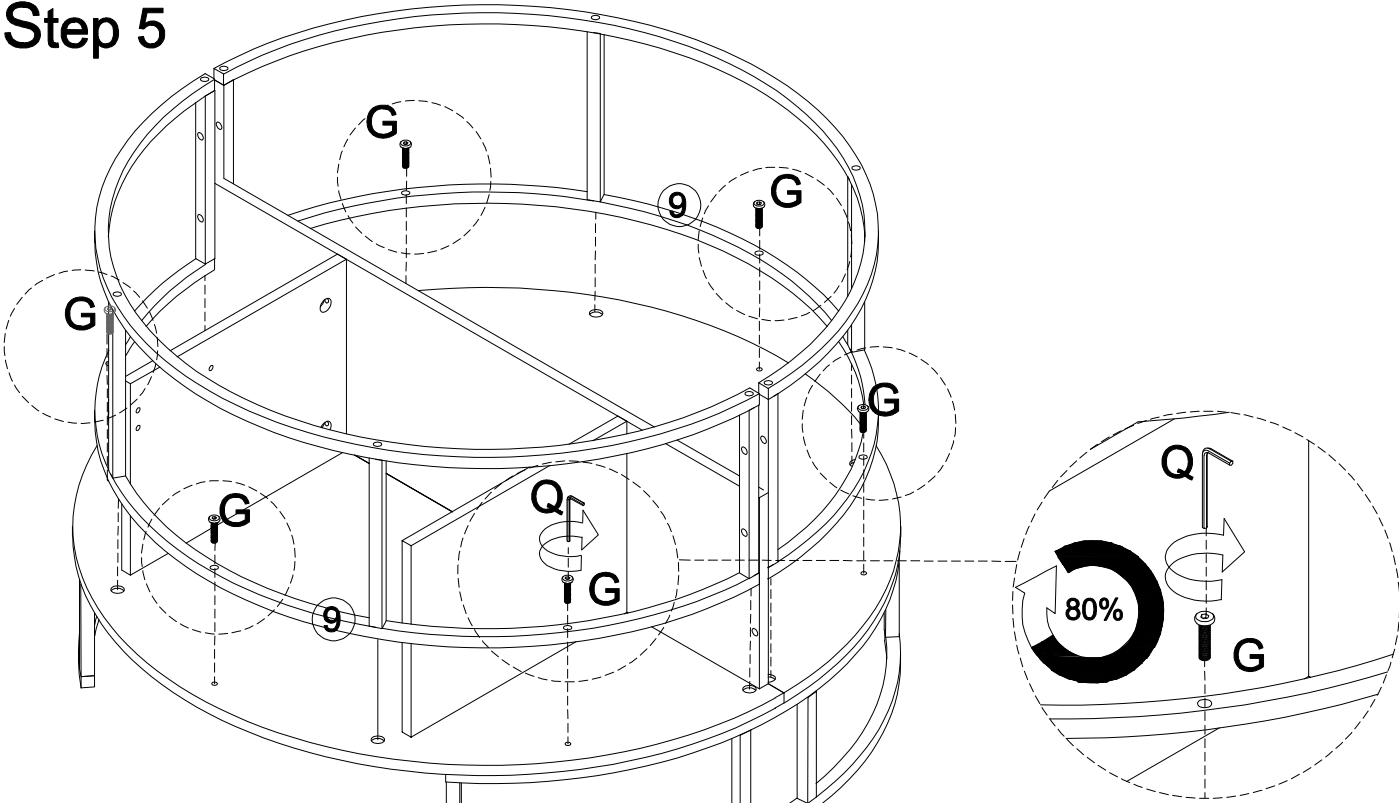

G	x6
	
M6x20mm	

Q	x1
	


 
Step 6

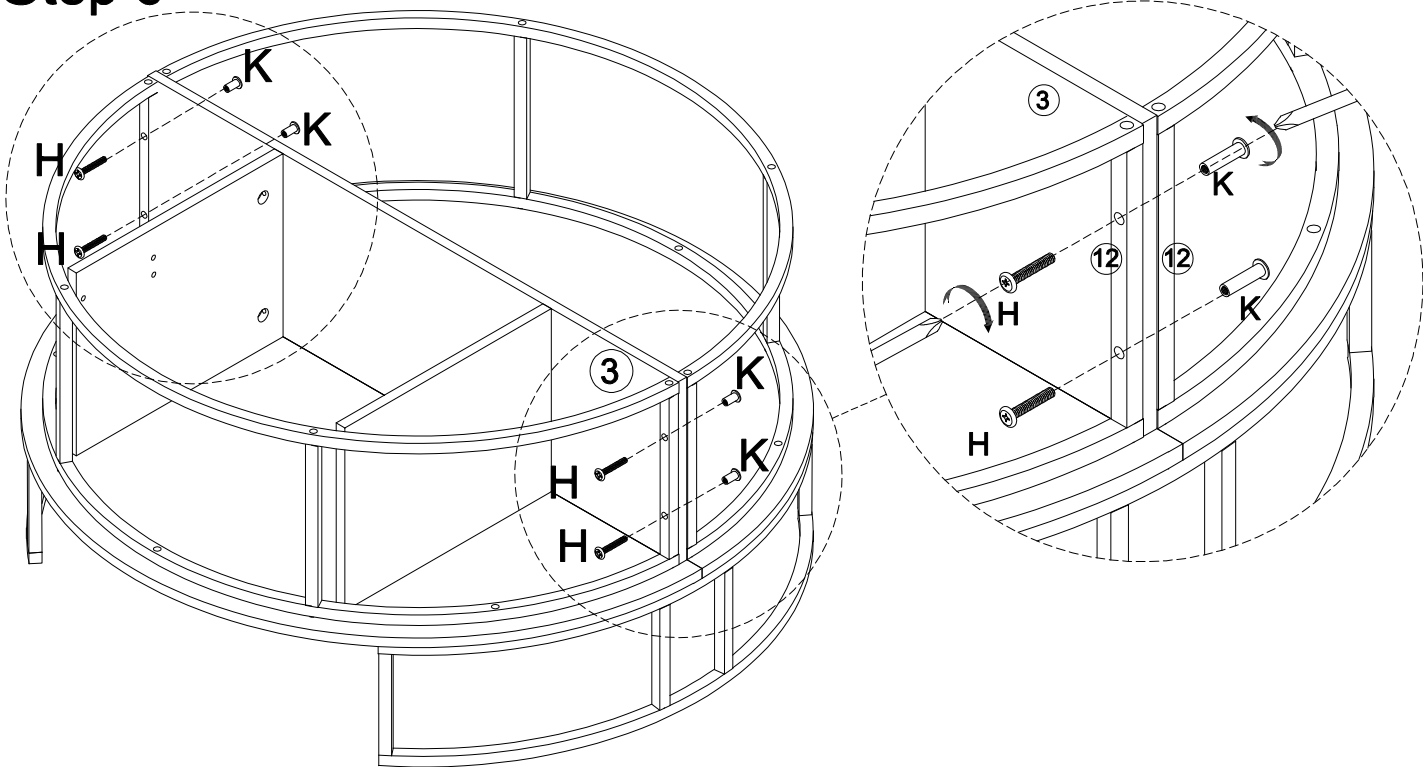

H	x4
	
M5x25mm	



K	x4
	
M5x22mm	

  
Step 7

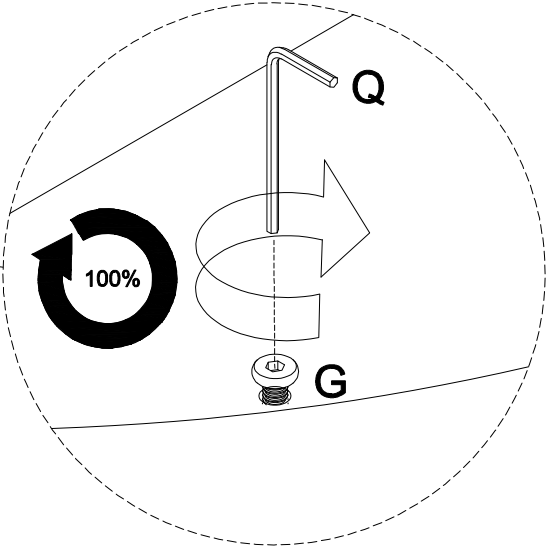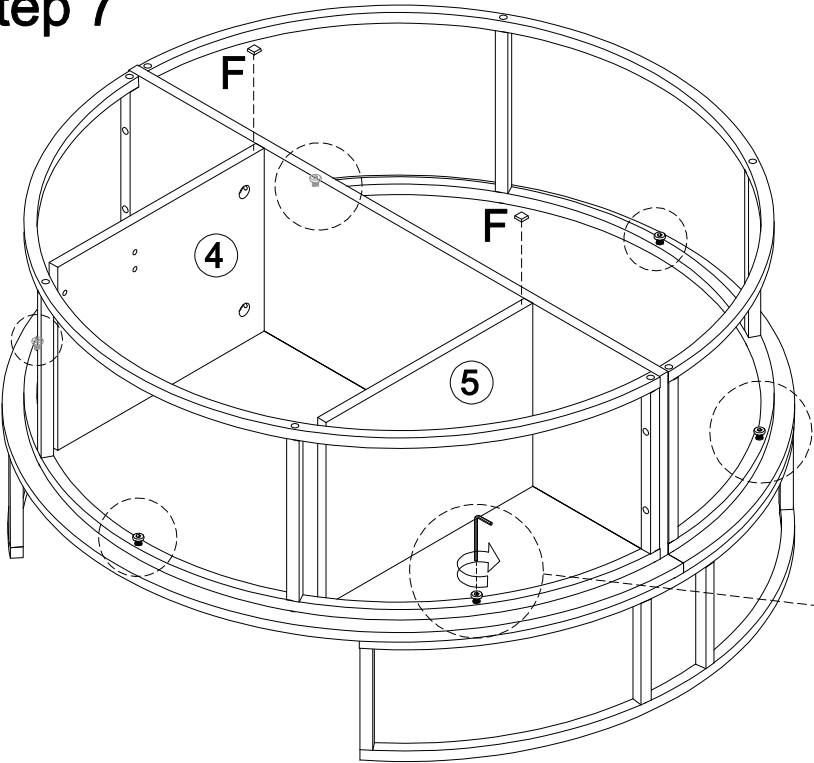



Q	x1	F	x2
			

   Step 8

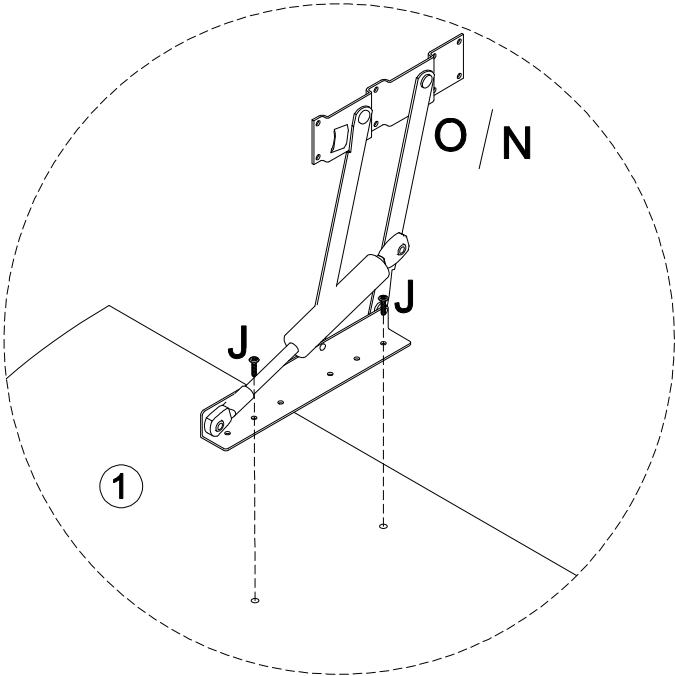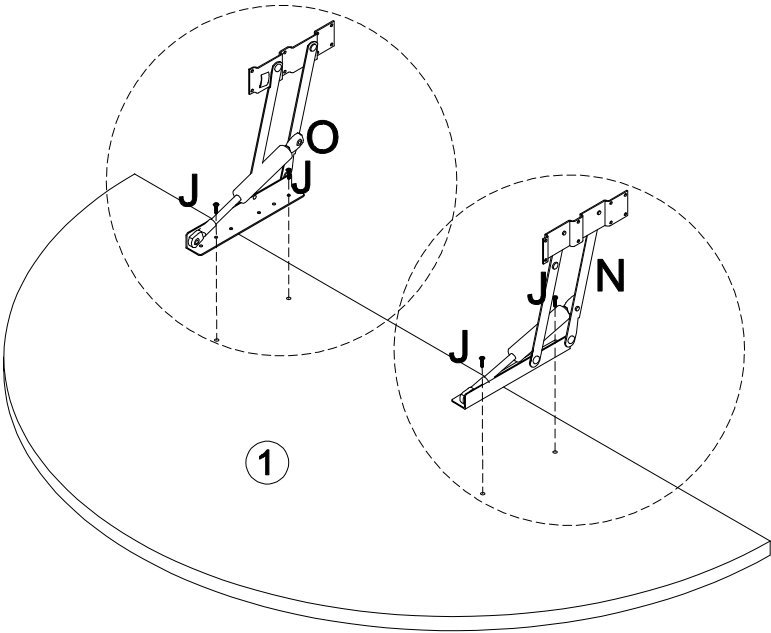

J	x4	N	x1	O	x1
					
M4x10mm					


 
 
Step 9

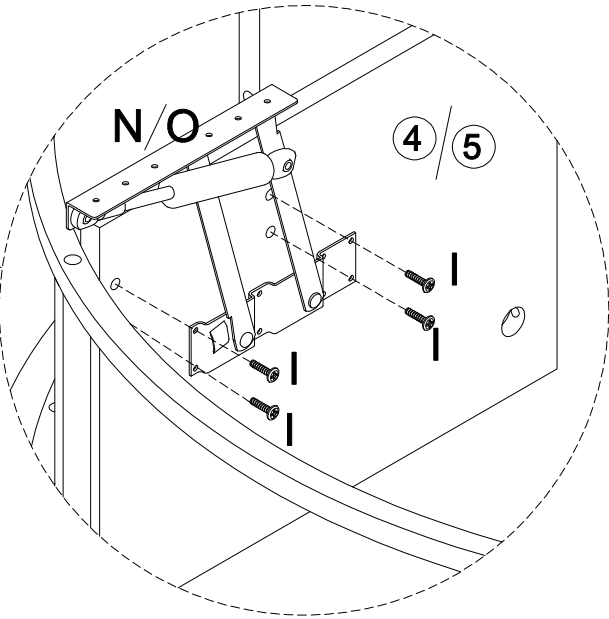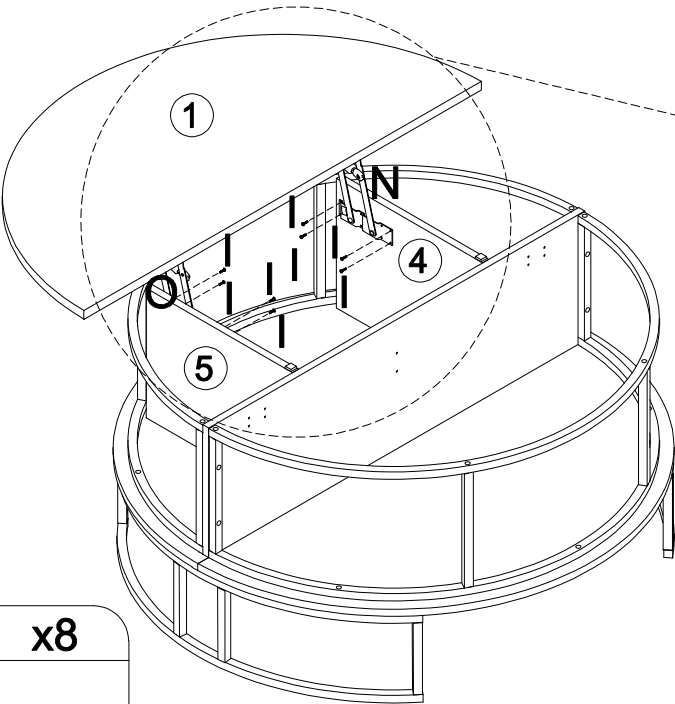

I x8


M5x10mm

   Step 10

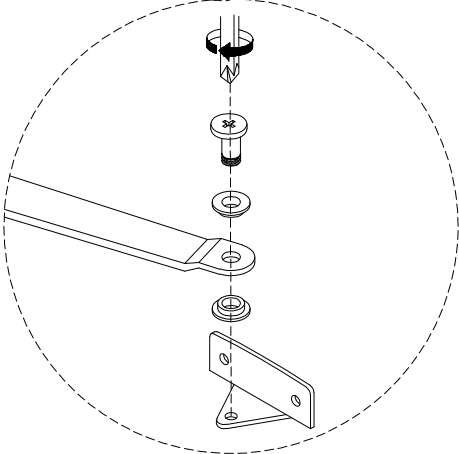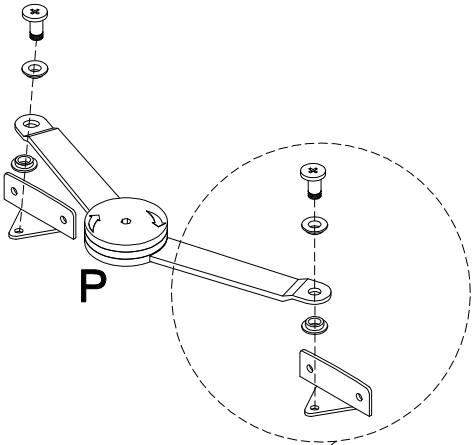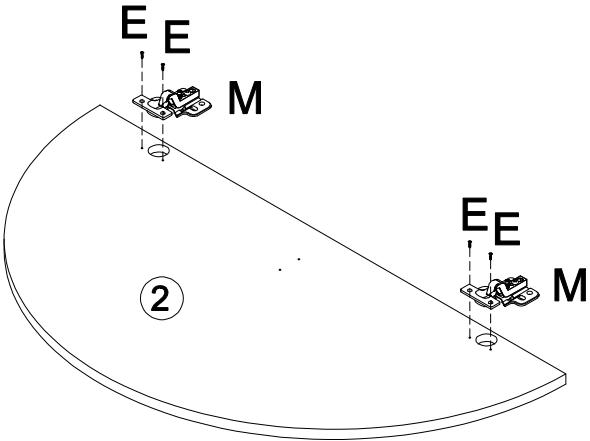


E x4


M4x12mm


M x2



 
P x1



 Step 11

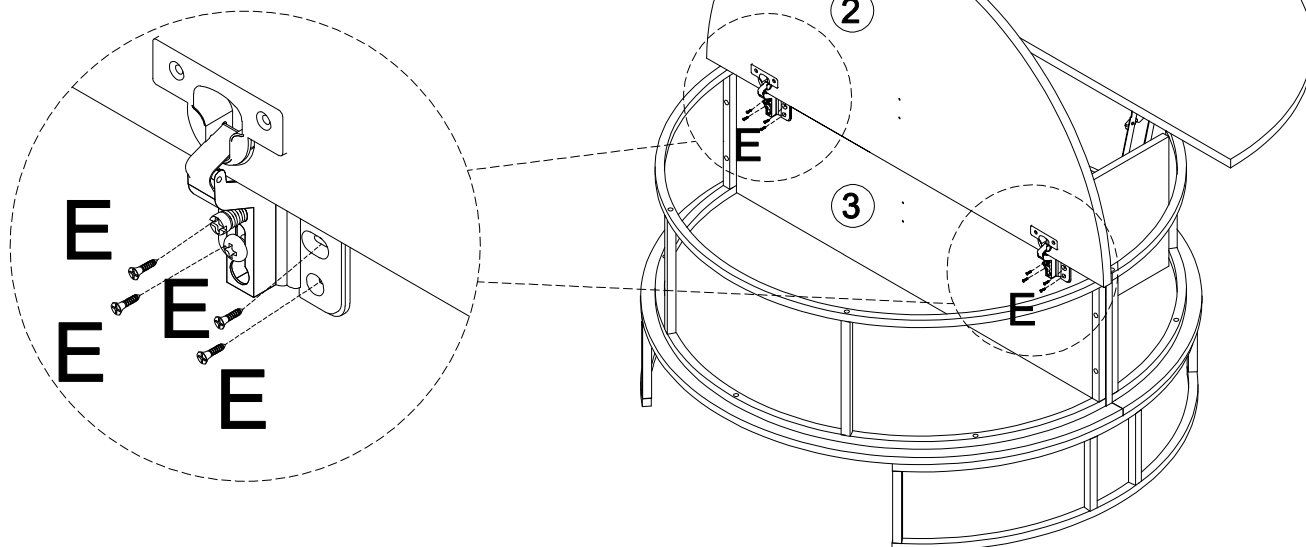




Please adjust the hinge if necessary

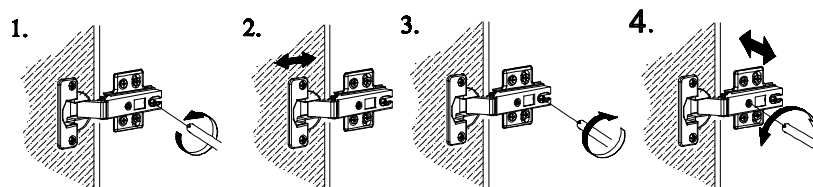 

E x8



   Step 12

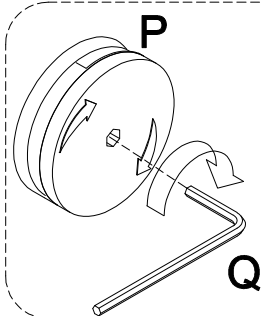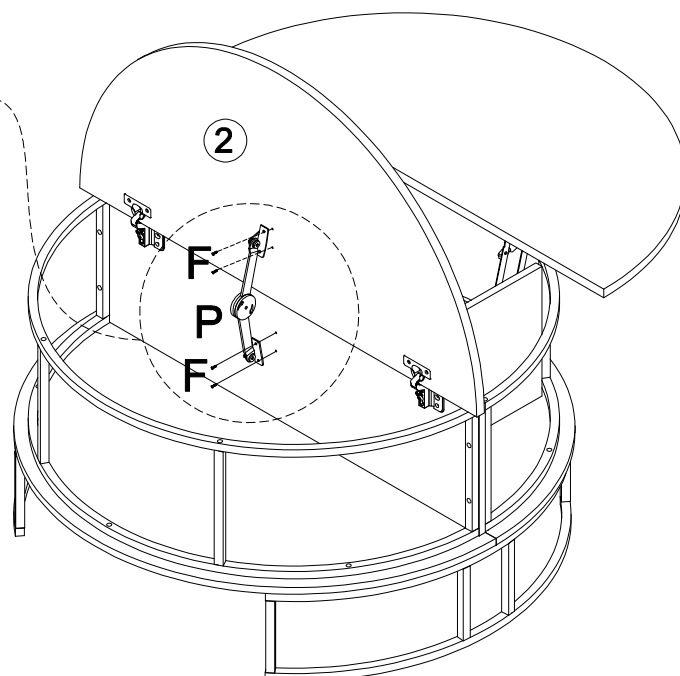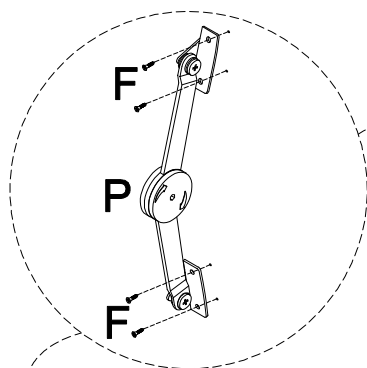


Pls tighten the screw
when it's loose to keep
the stop function working.

E x4



 P x1



Step 13

