

 
ASSEMBLY INSTRUCTIONS ANNELI DINING CHAIR ITEM # 93718

ASSEMBLY
REQUIREMENTS

2-PERSON
ASSEMBLY

30 MINUTES
ASSEMBLY TIME
(APPROXIMATE)

TOOLS REQUIRED
(NOT PROVIDED)



Thank you for purchasing our product!

Please refer and use this assembly instruction to assemble the product. Contact our customer service department in case there are any missing or damage parts or hardware. Replacement parts are normally shipped within 2 or 3 days

Email: replacementparts@buylateral.com
Within 30 days from delivery date

**PRODUCTS PURCHASED THROUGH OUR AUTHORIZED
VENDORS ONLY ARE ELIGIBLE FOR REPLACEMENT PARTS**

We appreciate your business!

**THIS PRODUCT IS FOR INDOOR AND HOUSEHOLD USE ONLY -
NOT FOR COMMERCIAL USE.**



ASSEMBLY PREPARATION

1. Remove all packing materials, staples and packing straps from the carton.
2. Refer to Part List and Hardware List. Ensure all the parts, hardware and quantities are correct before assembling the product. Contact customer service for missing part.

SAFETY PRECAUTION

1. KEEP ALL HARDWARE PARTS OUT OF REACH OF CHILDREN.
2. DISPOSE PLASTIC PACKAGING MATERIAL IMMEDIATELY TO AVOID ANY RISK OF SUFFOCATION TO CHILDREN AND ANIMALS.

TIPS FOR ASSEMBLY

1. Allow ample room for assembly and in close proximity to where product will be placed.
2. Assemble the product on a surface that does not scratch or damage the exterior gloss and finish of the furniture.
3. Identify all of the parts, hardware and quantities required for each step.
4. During assembly, do not over-tighten any fittings as this may cause damage.
5. DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT.
6. Always place the product on a flat, level surface.
7. Do not sit or stand on the partially assembled product; only use the product for which it is intended.

CARE AND MAINTENANCE

- Wipe clean with a soft, dry cloth; avoid the use of harsh chemicals or household cleaners as they may damage the exterior finish of the furniture.
- Hardware may loosen over time. Periodically, check that all connections are tight; re-tighten as necessary.**
- Solid wood is impacted by heat and humidity fluctuations which may cause small joint separations or hairline cracks; place the furniture away from direct sunlight and air conditioning vents, heating vents or units to protect the furniture.

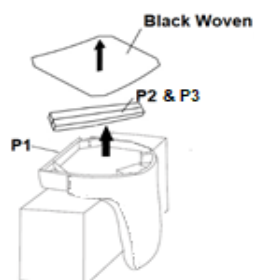
ASSEMBLY INSTRUCTIONS

ANNELI DINING CHAIR ITEM # 93718

PARTS LIST (FOR 2 CHAIRS)

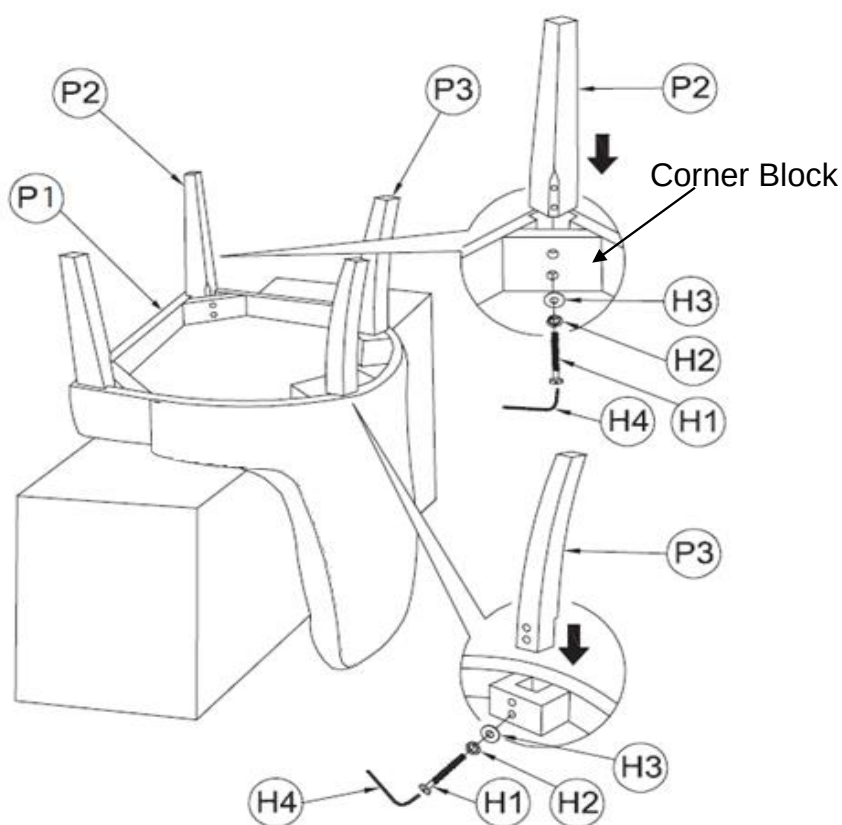
NO.	COMPONENT	QTY.
P1	CHAIR SEAT	2
P2	FRONT LEGS	4
P3	BACK LEGS	4

Lay Chair Seat (P1) bottom-side up as shown and remove black woven to get the Front Leg (P2) and Back Legs (P3).

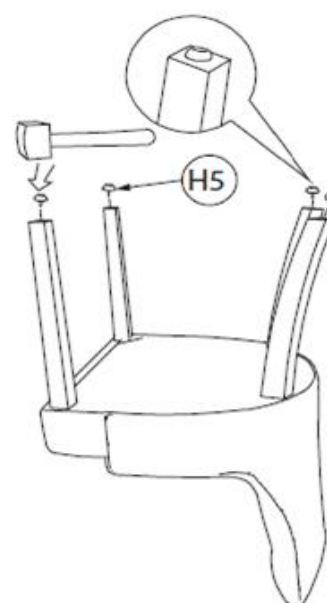
**HARDWARE LIST (FOR 2 CHAIRS)**

NO.	DESCRIPTION	QTY.	EXTRA
H1	JCBC SCREW M6 X 60 	16	1
H2	SPRING WASHER 	16	2
H3	FLAT WASHER 	16	2
H4	ALLEN KEY 	1	
H5	LEG STUD 	8	2

* Extra Hardware For Spare Use

STEP 1

- Place Chair Seat (P1) bottom-side up on an elevated surface (e.g. table top) as shown.
- Fit a Front Leg (P2) into the slot behind front corner block of (P1) and align the screw holes on (P2) to the screw holes on corner block.
- Insert JCBC Screw (H1) fitted with Spring Washer (H2) and Flat Washer (H3) through each of the screw hole on the corner block to screw onto (P2). Use Allen Key (H4) to drive (H1). Do not tighten (H1) completely until both screws are in place. Do not over-tighten the screws.
- Use the same procedure above to install the other Front Leg and Back Legs (P3).

STEP 2

- Use a mallet to nail Leg Stud (H5) onto each end of Leg (P2) & (P3). Set the chair right-side up. The assembly of the chair is complete.