

The picture only provides the reference and the kind is a plant with the plant home proptosis for the preparation. If have the variety, device is not another line circular.

QUALITY PRODUCT TRADE ROOF

CE

*Ultrasonic hair steamer
Hair salon equipment
Salon equipment
Microwave sprayer
Hair steamer*



NANO STEAM HAIR-WASHING MACHINE


Before use

- ★ Please read the safety precaution and use the product properly
- ★ In order to ensure the product being used properly, routine inspection must be given to the product according to the guidance of the routine inspection at page.
- ★ Using the machine for a long time without giving any routine inspection may lead to the breakdown of the machine or even operating accident.

The precaution here is stated for the following purposes

- ★ To ensure the correct use of the machine and to prevent harm to operator and others
- ★ Each precaution determines the relative safety matters, please follow them strictly.
- ★ The following is detailed explanation of the safety precautions; please fully understand the meaning of the safety precautions before reading the main body.

Status Indicator

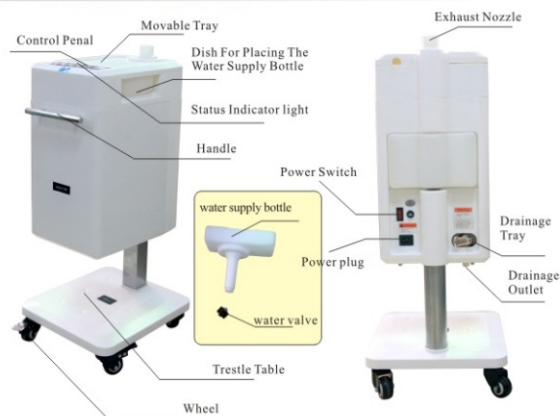


Status Indicator

- Warning: it may cause electric shock. Do not disassemble.
- Caution: it may cause burn, note the hot water.
- After finishing the operation, please open the drainage valve, and let out the surplus water.
- Caution: it may cause burn. Do not open the cap of the water supply bottle. Do not pour any liquor other than ionized water. Keep adding water if you can not see the water level.



Fragrance Diffuser Pads

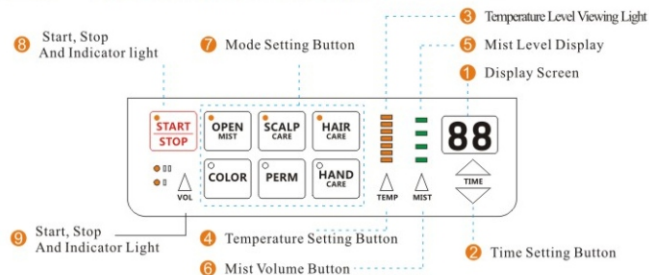

GUIDES OF THE DAILY CHECK

Warnings

Please read this when doing the daily check. It will cause the failure accident of the machine without doing the daily check, especially when you often use this product.

To make sure of using the products safely, please DO THE CHECK AS FOLLOW

- The items that should be checked every day(the items that should be checked before working.

Items that should be checked	Checking processes	The possible danger during the inspection
To check whether the power plug and the power line have deformed, broken or aging.	Check before using the products To check whether the power plug and the power line have deformed, broken or aging. The inspection during the producing process. When the plug or the power line get aging, the plug or the power line will generate heat. If the machine won't generate heat, please touch it and check.	It will cause electric shock or burn due to a fire or a leakage of electricity. If the accessories need to be changed, please stop using the machine immediately. Cut off the power and pull off the plug, and contact the local distributor or our company immediately.
To check whether the external parts have broken or have been aging.	Inspect the whole machine and check whether the machine's external parts have broken or have been aging.	If the machine can not work normally, it may cause personal injury. For example, the fire burn. Please stop using the machine immediately. Cut off the power and pull off the plug, and contact the local distributor or our company immediately.

- The items that should be checked every day(the items that should be checked before working.

Items that should be checked	Checking processes	The possible danger during the inspection
To check whether the power switch works normally and the light of the control pulse is on or not.	It should not cause any problem when using the power switch of the operating system. Besides, all the lights should be on when checking the power switch.	If the power switch can not be used correctly when using the machine, the power source may accidentally cut off during the operating process. Besides, if the light on the control pulse is not on, the machine can not be used as the setting status can not be confirmed.
To check whether the flexible tube has broken or bent.	It can be checked by visual inspection.	If the flexible tube has broken or bent, it will be hard for the machine to atomize and it will cause accident due to the rise of temperature. Please make the flexible tube recover to its original shape. If the flexible tube can not recover to its original shape, please stop using the machine immediately. Cut off the power and pull off the plug, and contact the local distributor or our company immediately.
Make sure that the water bottle and the drainage tray are not broken and have no flaws.	It can be checked by visual inspection.	If the the water bottle and the drainage tray turn out to be broken or have some flaws, please stop using the machine immediately. Cut off the power and pull off the plug, and contact the local distributor or our company immediately.
To make sure there is no air twisting in the wheels.	It can be checked by visual inspection.	Clean it clearly if there is hair twisting in the wheels. Give the wheels inspection and maintenance according to the daily check.

Major Technical Guides

Model	M2
Rated Voltage/Rate	AC110V/220V.50/60Hz
Rated Power Consumption	500W
Water Supply Capacity	1400mL
Drain Tank Capacity	450mL

Indicating „excessive water inside“ → 1. dismantle the water bottle to drain the water out of the machine;
2. give an overall check to the water bottle and then pour water into it;
↓
3. if there is nothing wrong, install the water bottle into the machine;
4. after it finishes adding the water, press button START or STOP to remove the error condition.
It might be the shaking of the machine or the water bottle is not closed tightly.
Check if the volume of water is abnormal and the water level is too low.
※ if there is any problem in the machine, its status will show in the machine and its indicating light will keep blinking with the pressing indicating sound to indicate the abnormal condition of the machine.

Indicating the temperature of the water in the machine is abnormal or the calorifier is abnormal.
1. it might due to the lack of flexible tube, check it out and solve this problem.
2. Restart it after it cuts off light temporarily
3. If these kind of problems happen again, contact our maintenance personnels nearby or our factory.

If the machine can not work normally, please read the notes before sending for maintenance.

If the problems still can not be solved after being checked according to the following table, please stop using the machine immediately. Press the power switch as well as the plug, and contact the local distributor or our company immediately.

Appearance	Checking point	Countermeasures
Do not turn on the machine	To check whether the power plug has inserted into the plug which is on the wall or not	Insert the power plug firmly into the plug which is on the wall
	To check whether the power switch is on or not	Turn the power switch on
No response on the controlling screen	To check whether the fuse wire of the switchboard or the store's short-circuiting are on	Turn the the fuse wire of the switchboard or the store's short-circuiting on
	The problem still can not be solved after the plug is pulled off and is inserted again?	Please stop using the machine immediately. Cut off the power and pull off the plug, and contact the local distributor or our company immediately.
The power switch is "NO", yet the machine can not work.	There may be some trouble in the machine	Please stop using the machine immediately. Cut off the power and pull off the plug, and contact the local distributor or our company immediately.
No spray has spewed out	If any indicating light blinks, please read the indication status	Even if the countermeasure has been taken, the power switch and the power plug should be cut off and pulled off, and then contact the local distributor or our company immediately.
	Check out the water in the flexible tube	Release the water in the flexible tube
The temperature of the spray is abnormal, appearing high and low.	Check out whether the level of the temperature has been correctly set	Press the button to set the temperature level
	Check out the water in the flexible tube	Release the water in the flexible tube
There are some spray leakage around the spray cap	To check whether there is gap between the head cloth and the spray cap	Install the spray cap again and please don't leave any space.
	To check the stick buckle belt has been buckled tightly	Buckle the stick buckle belt again and please don't leave any space.
There is leakage in the sinkhole	To check whether the drain valve has been closed	Close the drain valve

Consumptive materials (including the accessories)

Consumptive materials' means that the accessories are worn and teared, aging and its appearance has changed and broken when using the machine. It also means that the warranty terms that are being fixed or changed don't apply to the above part, or it costs some money when the accessories are fixed or changed.

How serious the accessories are worn and teared, aging and broken depends on the phenomenon or the condition.

Besides, you can change the some of the following accessories by yourself.

Under such circumstance, you have not only to pay for the prime cost and the technical fee, but also should responsible for all the transportation expenses.

If the products are obviously worn and teared, aging or even broken, it is necessary to check the scrapped parts or change the accessories. If this really happens, please contact the local distributor or our company immediately.

INSTRUCTION FOR BUTTON

1. Display Screen	2. Time Setting Button
Display the time you set Display the remaining time Display operation, such as the preheat condition.	Control time setting by pressing this button. For both button Δ (up) and ∇ (down), each pressing will increase or decrease 1 minute. Besides, continuing press will increase or decrease 5 minute.
3. Temperature Level Viewing Light	4. Temperature Setting Button
There are 8 ranks for temperature level.	Change mist volume and temperature by pressing this button. Each press will increase the temperature up to one rank. When the rank has reach 7, it will turn back to 0.0, it means the heating machine has been turn off.
5. Mist Level Display	6. Mist Volume Button
There are 4 ranks for mist level	Change the mist volume by pressing this button. Each press will increase one rank. When it reach rank 4, press it one more time and it would turn back to rank 1.
7. Mode Choosing Button And Indicator Light (The Light Will Lit Up When Power On)	
Turn on the spray When washing hair or doing massage, press this button when words such as "detergent", "solution" appear on the SPA menu ※no need to use spray cap.	Dyeing. Use this button to heat the acid tint. ※cooling time: 5 minutes. Please use the specified spray cap.
Scalp care Please use this button before or after giving massage to scalp. Strengthen the hair care solution by using detergent in advance. Please use the specified spray cap.	Hair perming Please press the perm agent if the perm agent is pre-heating type. ※no need to use spray cap.
Hair care Please press this button to heat the scalp before using the hair mask ※cooling time: 2 minutes. Please use the specified spray cap.	Hand care Press this button to heat cosmetic the when giving massage on hand or after using the cosmetic for hand care. ※no need to use spray cap.

NOTES the time for every mode can be changed and be remembered according the different condition.

START/STOP button and indicator light (the indicator light will lit up when turn on the machine)

Press this button to preheat.
Press this button to stop preheat.
Press this button to begin operation.
Press this button when operating and the machine would stop operating.
If the operation was break off, press this button to recover operating.

Air volume controlling button and indicator light.

The indicator sound volume for operation can be set up. Lights would light up according to the quality of the sound.
Class e indicator lit up.
Rank 2: two indicators lit up.
Press the START/STOP button for tow seconds can remember the sound volume you set. (When finish setting the time volume, you will hear two transient sounds, it means the setting is finished.
This function can only come into effect after connecting power and before choosing the mode.

DEFAULT SETTING MODE/ CHANGING AND SETTING MODE

mode	time			
	time	Temperature rank	High and low level of the mist	Cooling time
Open-type mist spray.	60minutes	6class	3class	No cooling
Scalp care	5 minutes	5class	3class	No cooling
Hair care	8 minutes	5class	3class	2minutes
Color	15 minutes	4class	1class	5minutes
perm	10 minutes	3class	1class	No cooling
Hand care	5 minutes	3class	1class	No cooling

Dyeing mode

The default setting is class 1, including the dropping mode.

If you want to enhance dyeing effect, please increase the class of spray.

Please pay attention to the drop of water when using the dyeing mode.

NOTE: Do not touch the spray cap when the spray mode is on. When the machine is operating under the high temperature, the temperature of the spray cap would keep rising. Be cautious of dizzy or burn.

STANDARD TEMPERATURE FOR EACH CLASS IN THE SPRAY MODE

Temperature class	0	1	2	3	4	5	6	7
Standard temperature in spray mode	—	36	39	42	45	48	50	52

The standard temperature of the spray cap is the reference temperature measured after the machine began operating for 5 minute. (the measure result of our company is measured under the indoor temperature 25°C.

MEMORY CHANGE AND MEMOR RETENTION

1. Please see the required condition of mode setting in the form above.
 - ※ The time for the highest temperature class, start up cooling and forbid cooling can not be changed.
- 2 , In order to save the mode you reset, please press on the present mode for more than two second. After you finish memory retention, you will hear the swoosh sound witch means the reset mode has been saved.
 - ※ If you want to turn the reset mode back to the default setting, please turn off the power and press the ON button at the same time, stop pressing the button.

BUTTONS FOR THE REQUIRE MODE

- Choose the 6 modes provided on the control penal, and press the button.
The default setting of the chosen mode will be displayed on the control panel.
※NOTE: if you want to change the mode setting. Please see the "memory changing and saving"
※After finish the mode choosing, the START/STOP button would begin to shine.

PREHEAT BY PRESS THE ON/OFF BUTTON.

Pressing the ON/OFF button can keep the water in the machine at the setting temperature and the machine is at ready mode.

HINT:

- PH indicator light and time setting light will shine alternately. At the same time, the temperature level light and mist level light will shine too. Press the START/STOP button when preheating would stop the preheating mode and the machine would turn back to the state of keeping warm.
- You can change setting during the preheating phase. But when the temperature is 0°C , preheating would stop and the machine will turn back to the state of keeping warm..
- When the temperature turns up to any class from 0°C , the machine would change to the preheating mode.

NOTE:

- When the PH light is shining, the temperature level will be changed. When the temperature displays 0°C , it means temperature changed from 0°C to any other level. The low-temperature spray would be atomized.
- Therefore, the control system shows "temperature probe problem", and gives out E2 instruction. Besides, the same situation will happen during the operation, temperature would turn up from. Therefore, you can not perform the operation. Please note that E2 instruction doesn't mean operation failure. Please turn off the power and try again according to the instruction.
Hands-on example: when E2 would occur
- The temperature level change from class 5 to class 2 during the operation
Temperature class: 5→6→7→0→1→2
(mist comes into being)
- The temperature level change from class 0 to class 4 during the operation
Temperature class: 1→2→3→4

NOTE: if the hose of the machine was bend or wrapped, it may leads to the lack of the mist, machinery malfunction or the accident caused by the raising temperature.

PRESS THE ON/OFF BUTTON TO BEGIN OPERATING

After the preheating phase is finished, and the machine is at the standby mode, please press the START/STOP button.

DURING THE OPERATION

During the operation, the lights of START/STOP button and chosen mode would light up, and the remaining time would be shown.

ALTER THE SITUATION DURING THE OPERATION.

Use the following button can change the situation during the operation.

- ① operating time
- ② mist temperature
- ③ mist level
- ④ mode
- ⑤ air regulation



HINT:

- When the mode is changed during the operation (the perm mode and the dyeing mode can not be changed), the machine would stop working and show the standard mode after changing the mode.

STOP OPERATING

If you want to stop the operation, please press the START/STOP button.

HINT:

- When the machine stops working, the indicator lights of the ON/OFF button and remaining time would shine. After 10 minutes, the operating status would return back to the constant temperature.

WHEN THE MACHINE STOPS OPERATING, YOU CAN USE THE FOLLOW BUTTON TO CHANGE THE CONDITION

- ① operating time
- ② mist temperature
- ③ mist level
- ④ mode
- ⑤ air regulation



RECOVERY OPERATION

Please press the START/STOP button to recovery operation.

COOLING SYSTEM (IT CAN ONLY BE USED IN HAIR CARE MODE AND HAIR DYEING MODE)

When the setting time is over, you will hear two transient sound alerts, which means the machine is on the cooling system. (Other modes do not have the cooling mode)
During the cooling time, "C" and remaining time would be shown on the screen.
Use the time setting button can change the cooling time.
Use the START/STOP button can stop the cooling operation.
You will hear two transient sound alerts after the cooling operation is finished; the machine is on the cooling system.

Time-up

When the setting time is over, the machine will stop operating, and you will hear three transient sound alerts (the first two alarm alerts are shorter than the last one), the machine is no longer on the Time-up status.
On the time-up status, the time after stop operating will be displayed on the screen.
When the machine is at the time-up status, please press the time setting Δ button and START/STOP button to prolong the original setting time.
When the machine is on the time-up status, press the mode choosing

Status Indication

If the instrument of the machine indicates as follow, adjust it according to the indication.

After to the water bottle. Press button START or STOP to remove the error condition.