

 
INSTALLATION

Product Manual



IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

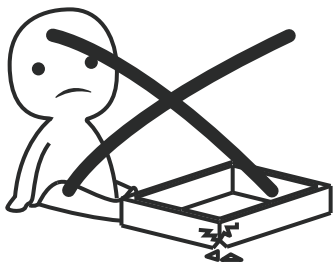



AVOID SCRATCHES!

In order to avoid scratching this furniture should be assembled on a soft layer- could be a rug.



IMPROVE EFFICIENCY !

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

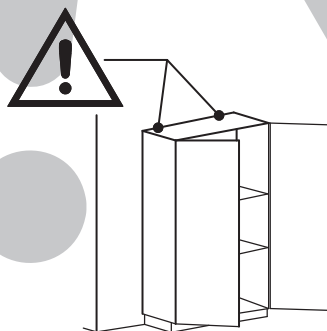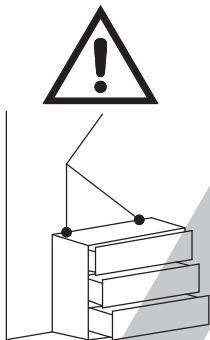

ANTI-TOPPLE WARNING !

Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !

 
 
 
It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.




Please prepare the following tools



When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

 A x 94+5

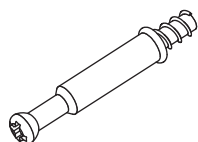


Ø 6 x 35 mm

B x 58+5




Ø 15 x 11 mm

 C x 30+2

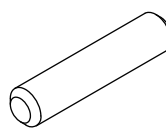

Ø 8 x 30 mm

 D x 9

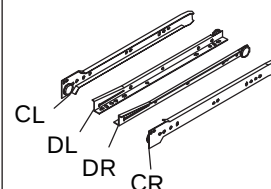


L=350 mm

E x 102+5




Ø 3 x 12 mm

 F x 6



Ø 6 x 20 mm

 G x 11+1

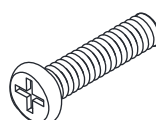


Ø 6 x 25 mm

H x 12



Ø 4 x 18 mm

 J x 6

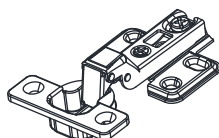

K x 36+3



Ø 15 x 9.5 mm

 
L x 30+4



M x 11+2




N x 4

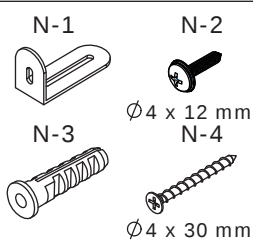

Ø 4 x 12 mm


Ø 4 x 30 mm

 P x 36+3




Ø 3.5 x 14 mm

 
Q x 39+3

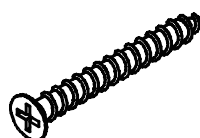

Ø 4 x 30 mm

  R x 94+5

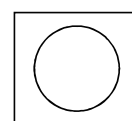

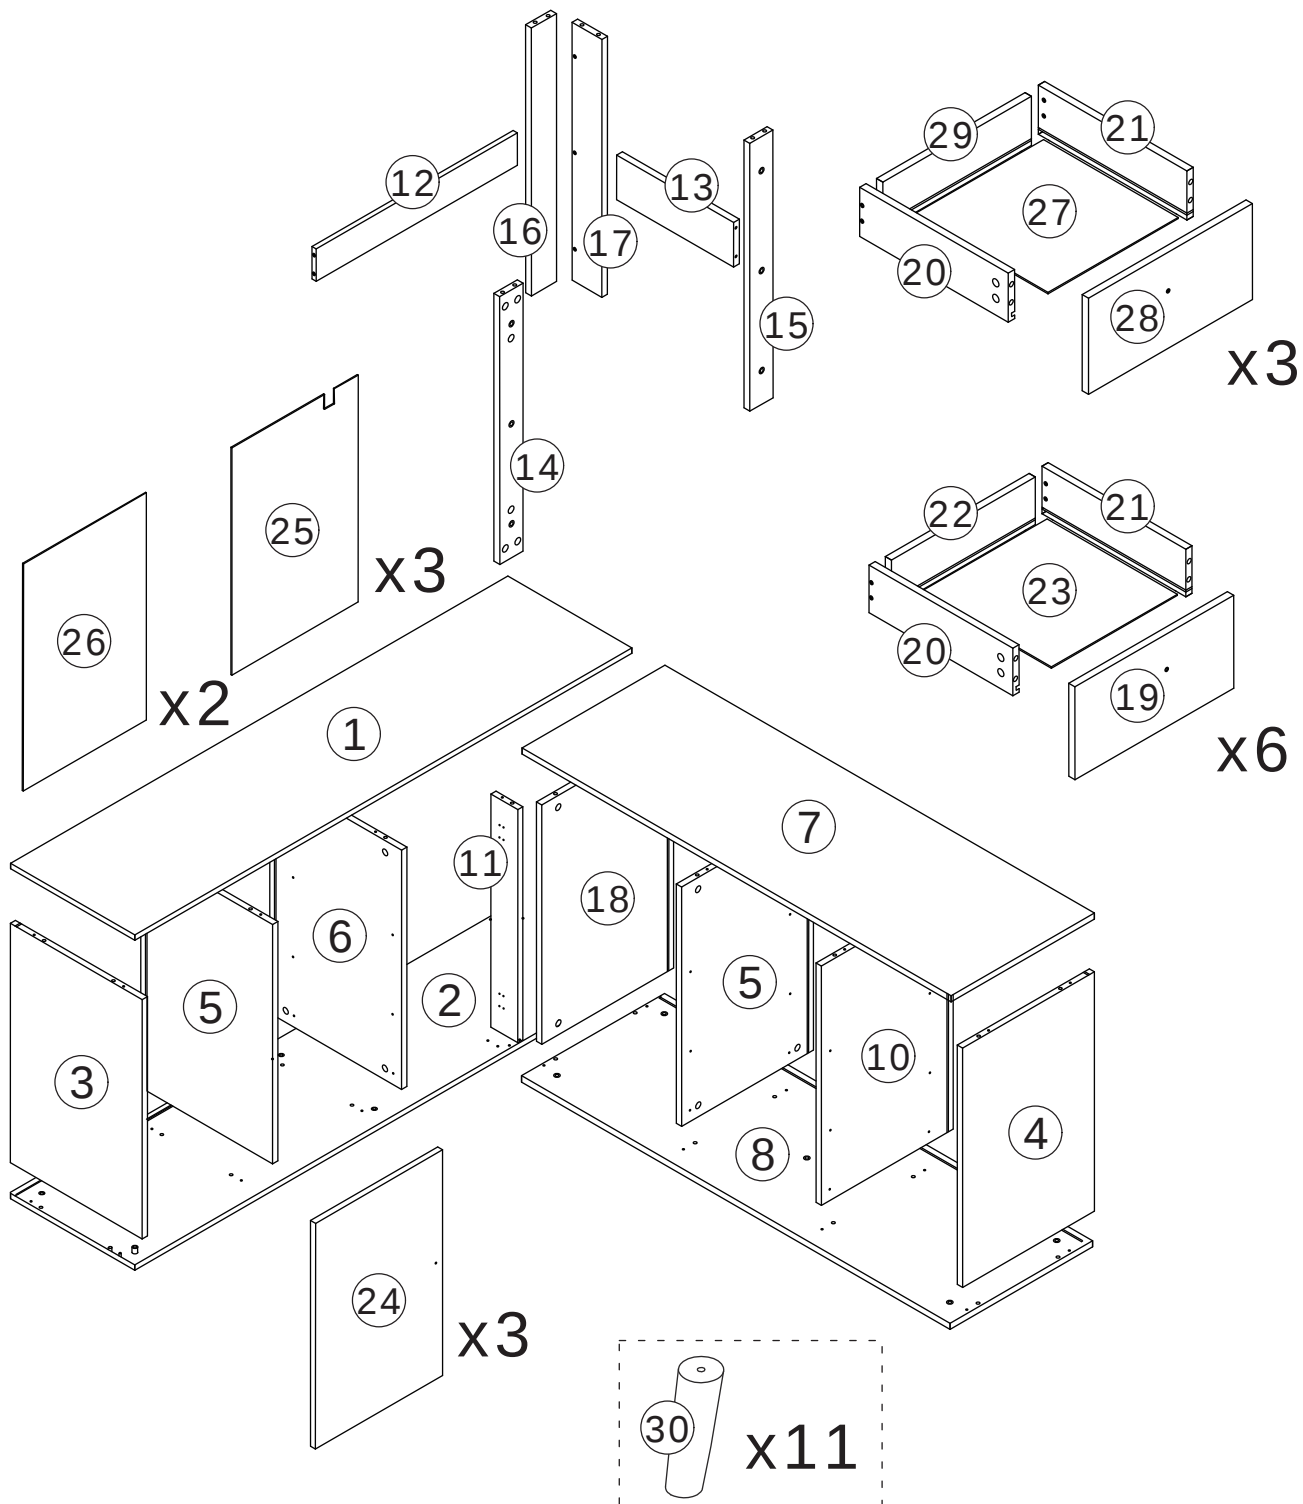


⚠ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

 
*This is a permanent label.
Do not remove!*

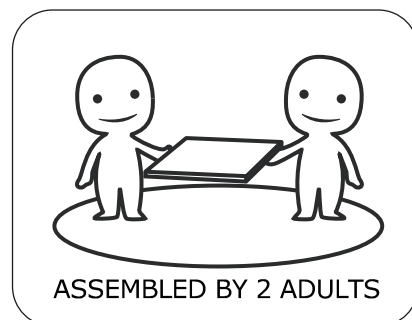




1

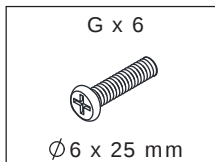  

 
Secure part 30 to part 2 using screw (G).

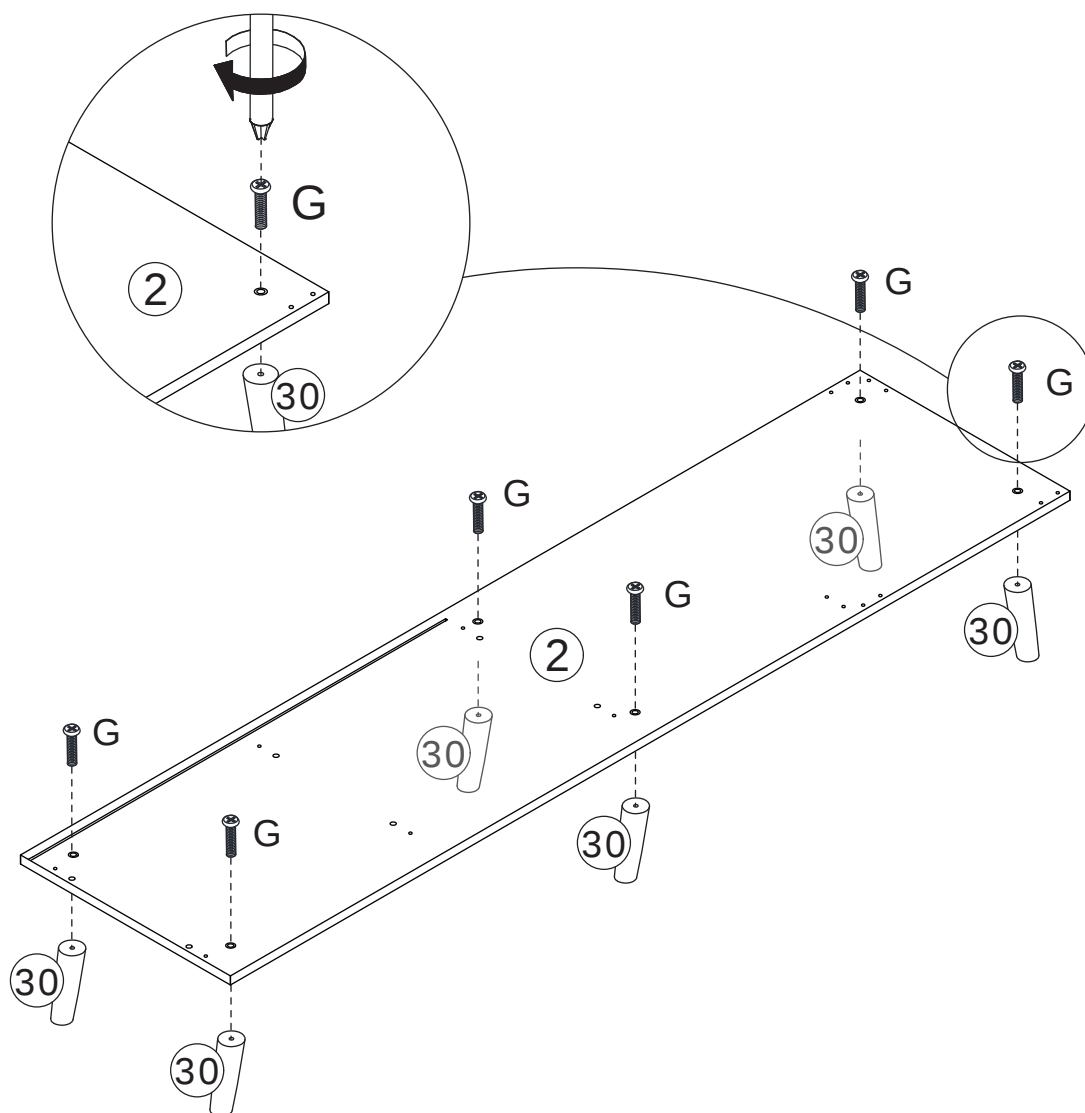


2

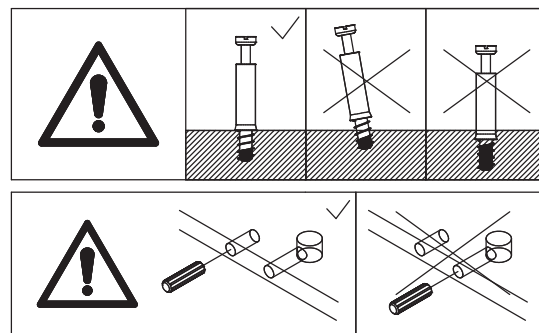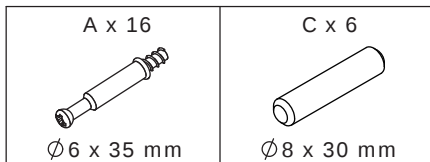   

 
Screw eccentric rod (A) and insert wooden dowel (C) to part 2, as shown.

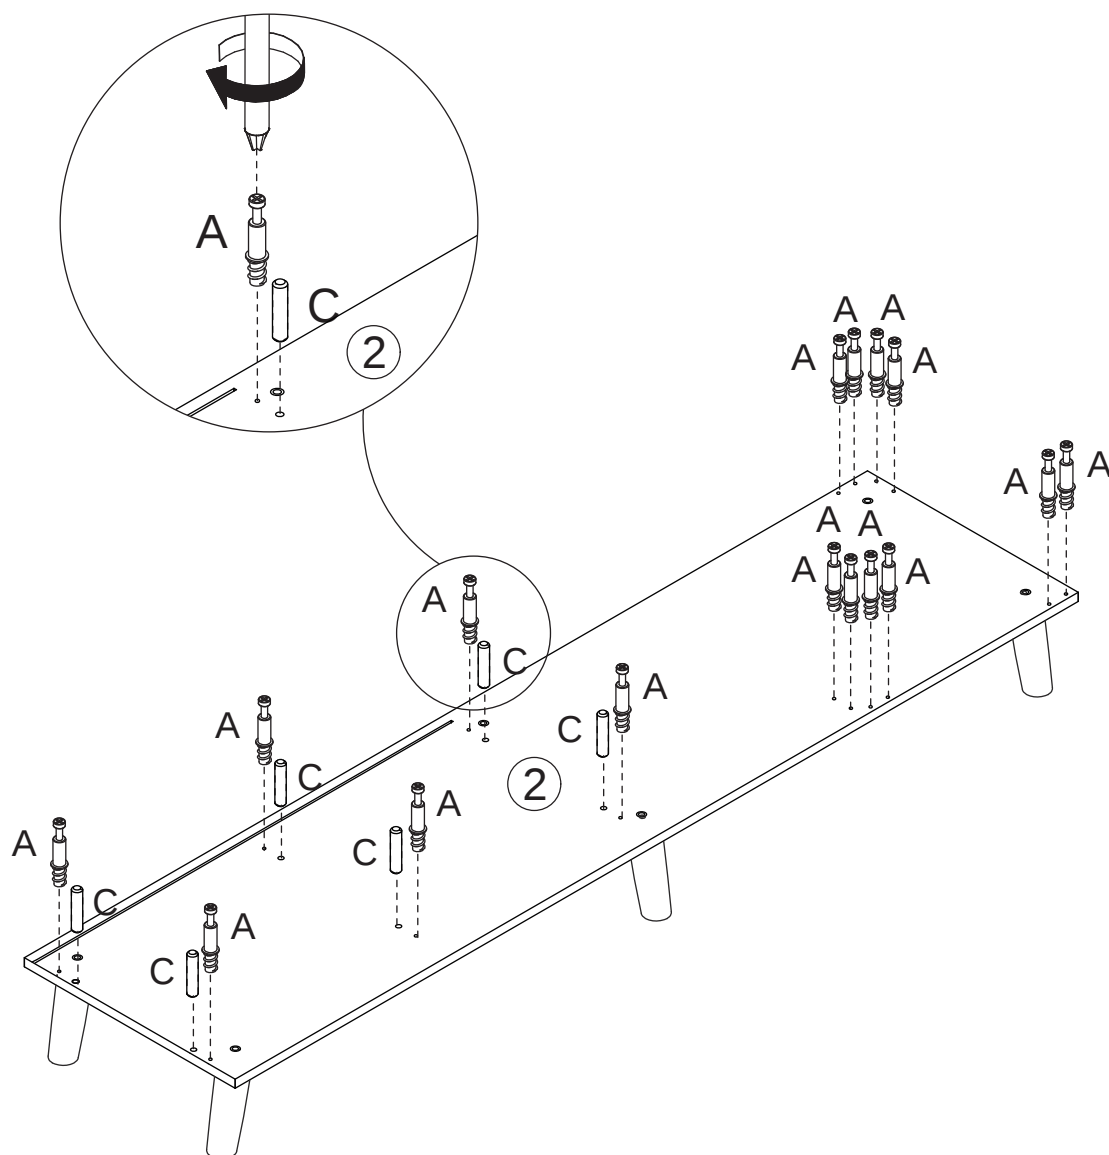

3

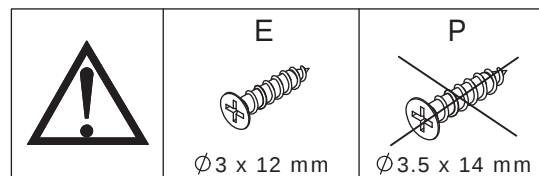 

 Secure slide rail (D-CL) to part 5 using screw (E).




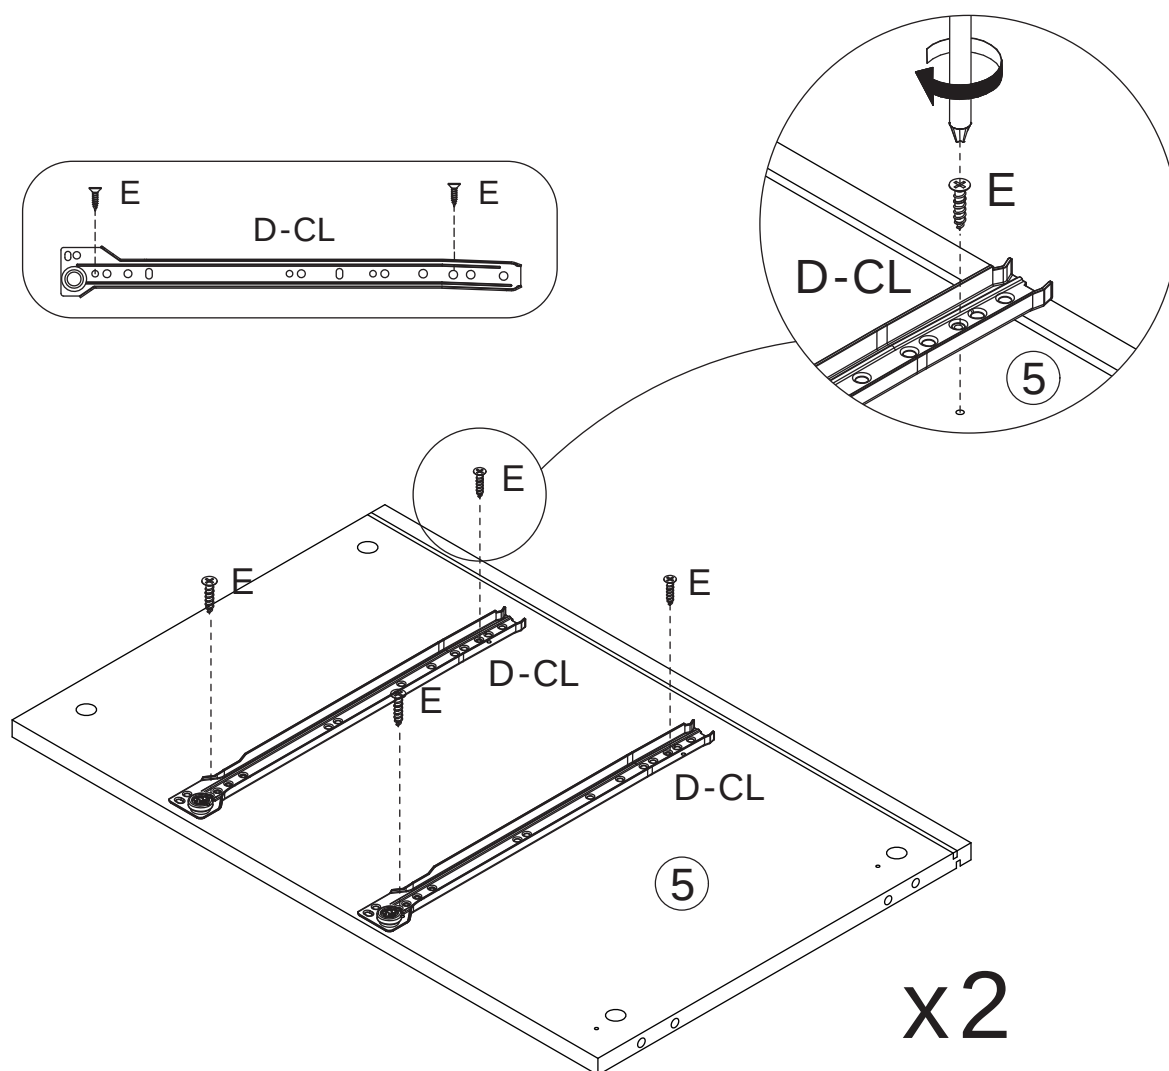


4

B x 4



    Ø 15 x 11 mm

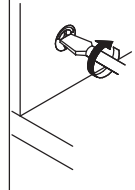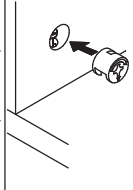

B



 
Ø 15 x 11 mm

K





Ø 15 x 9.5 mm

Connect part 3 and 5 to part 2, tighten by turning cam lock (B) clockwise as shown.






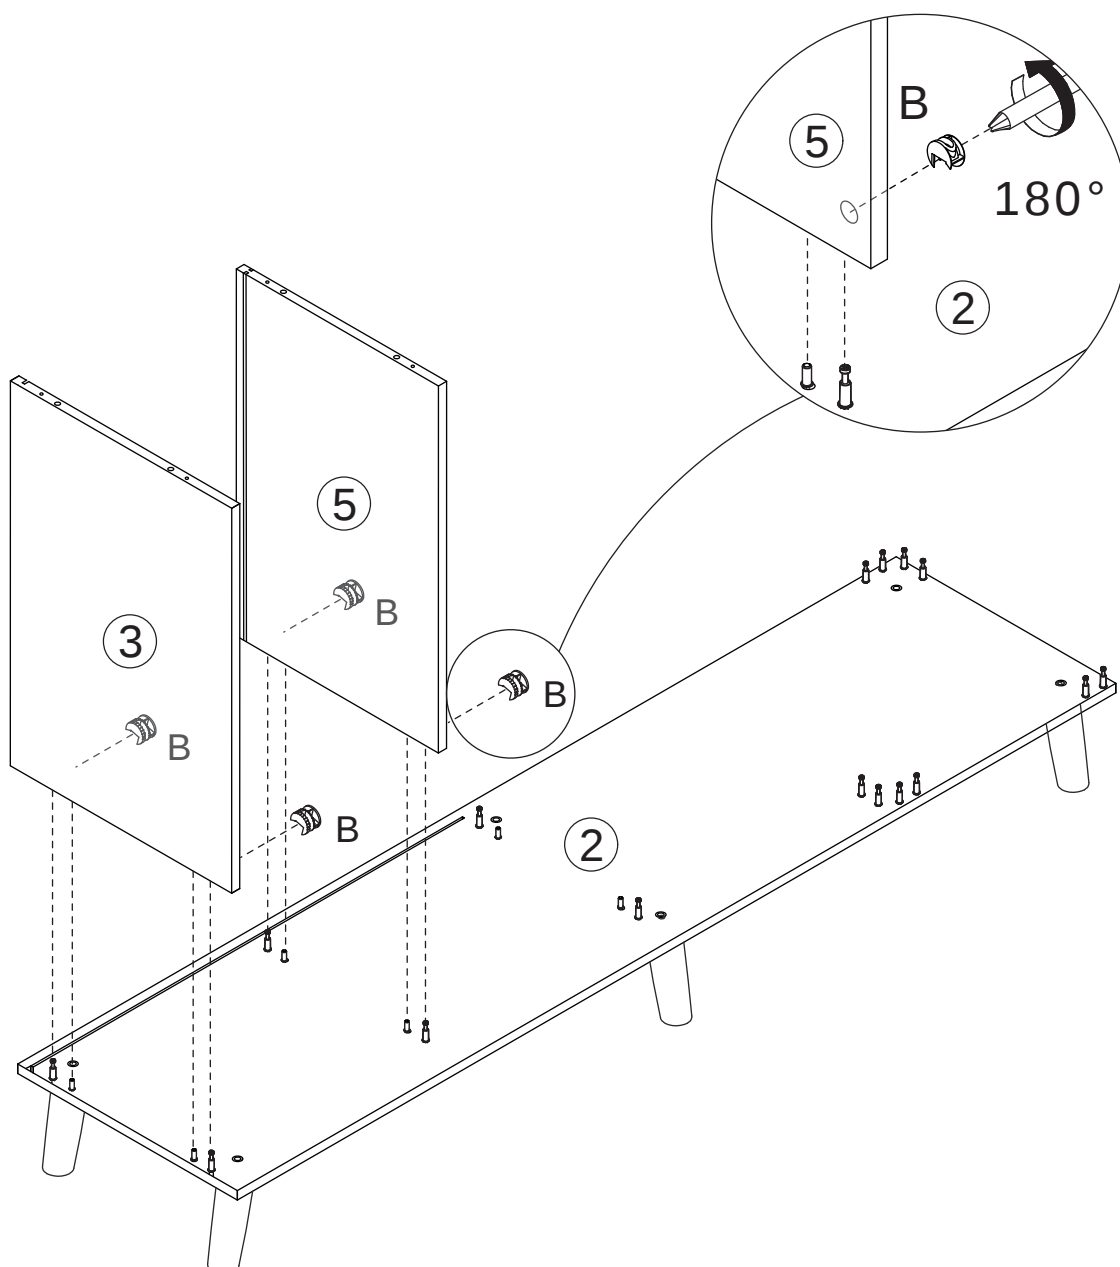


5

  A x 2  Ø 6 x 35 mm	D x 2 CR L=350 mm 	E x 4  Ø 3 x 12 mm	
---	--	---	---



Secure slide rail (D-CR) to part 6 using screw (E).

      Flip the same part to other side,
and screw eccentric rod (A) onto part 6,
as shown.

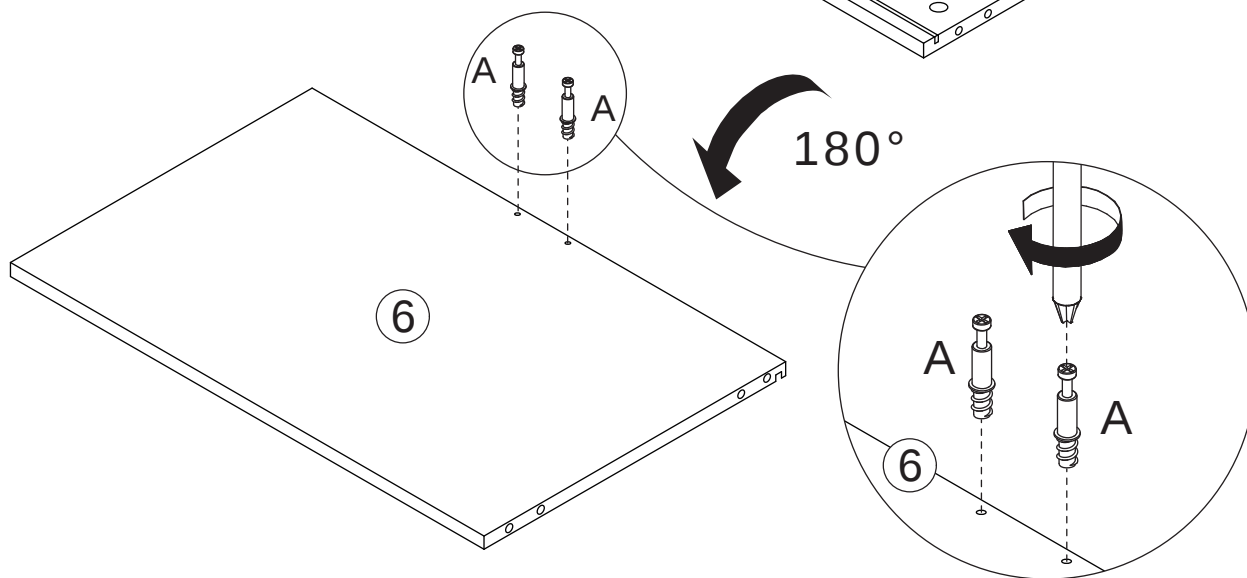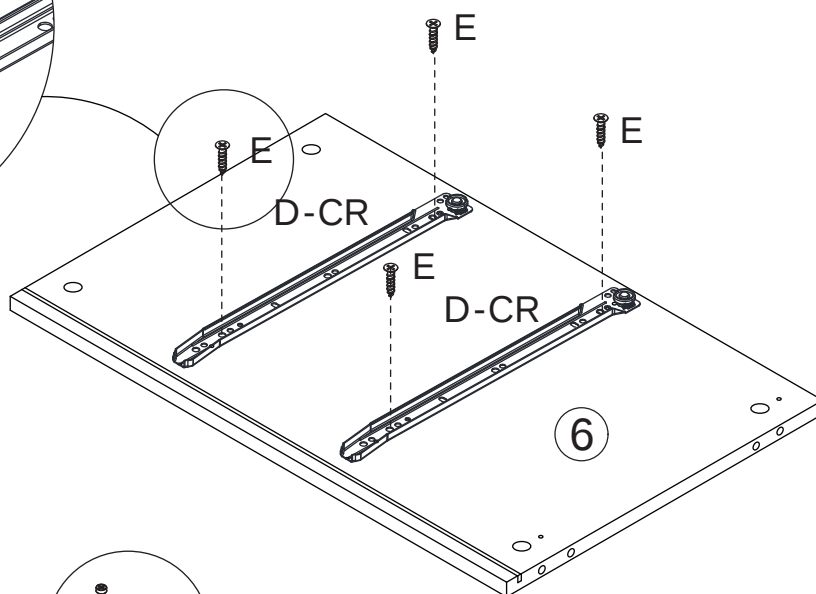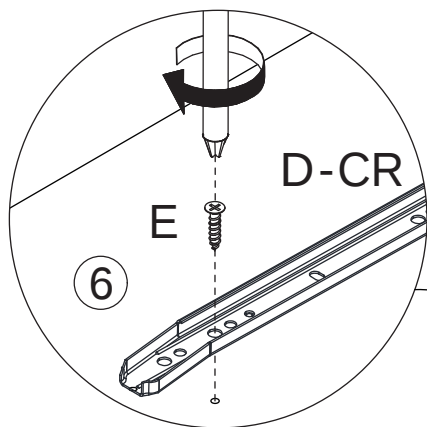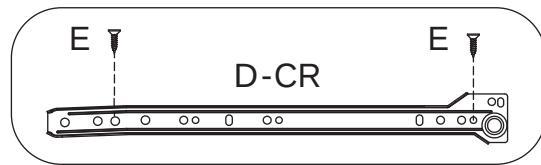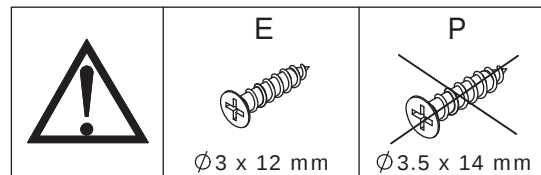
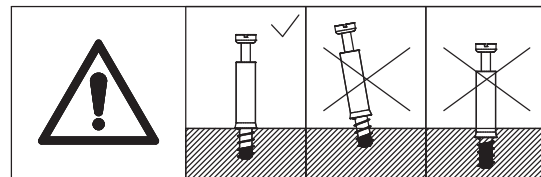


6

 
 
A x 4
Ø6 x 35 mm

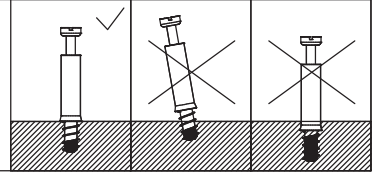

 
 
Screw eccentric rod (A) onto part 16
and 17, as shown.

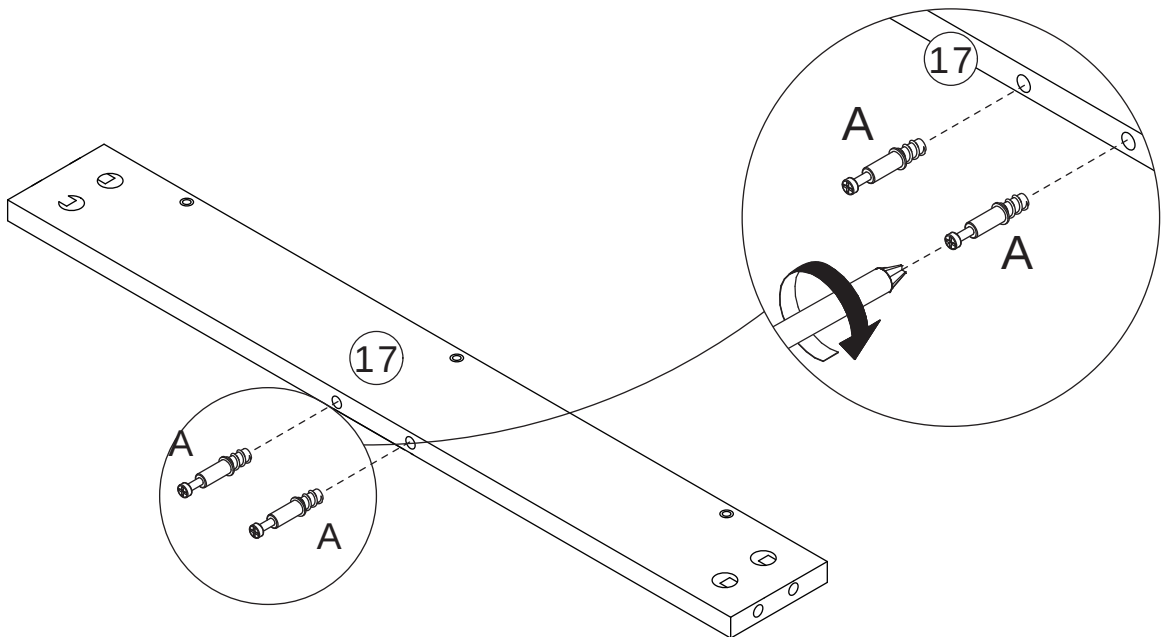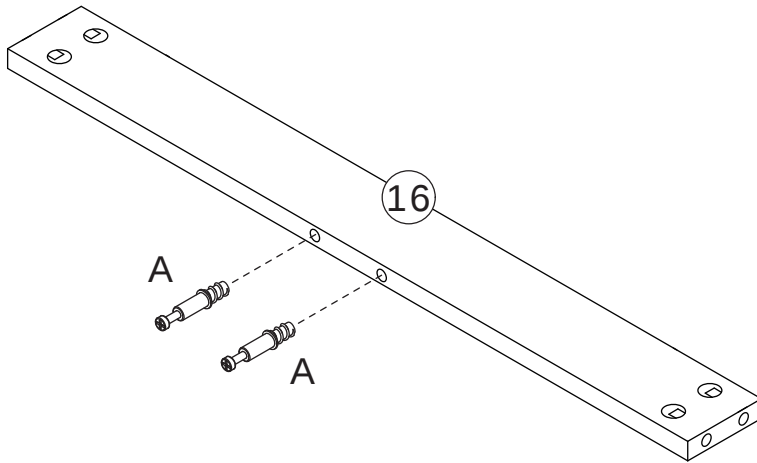





7

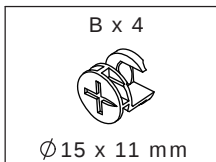  

  
Connect part 6 and 16 to part 12, tighten by turning cam lock (B) clockwise as shown.

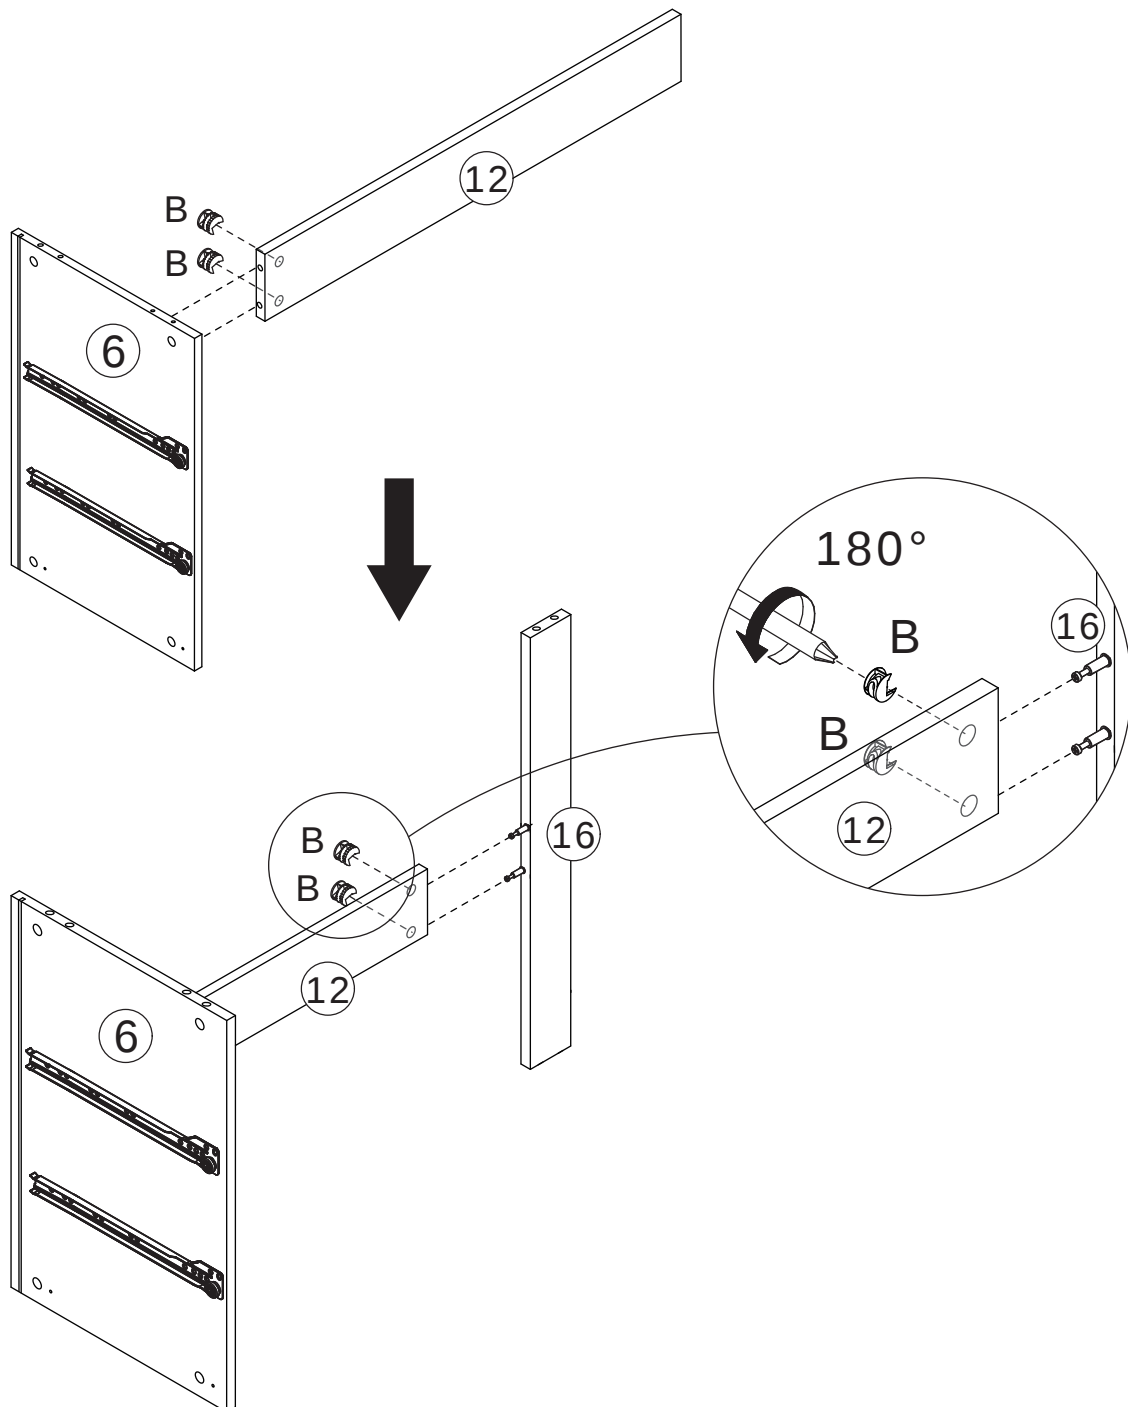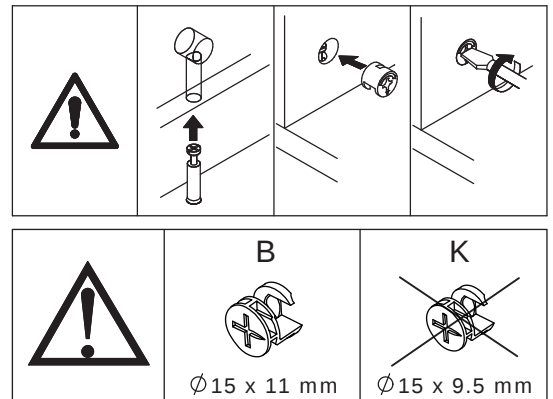

8

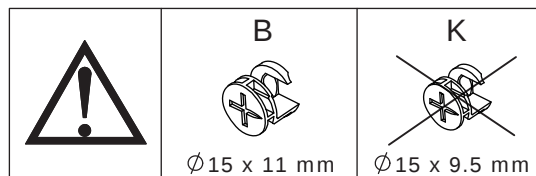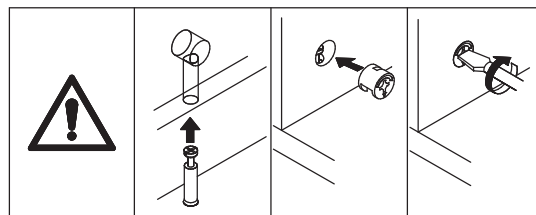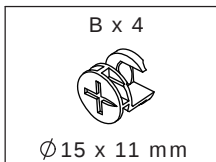    

 Connect part 6 and 16 to part 2, tighten by turning cam lock (B) clockwise as shown.


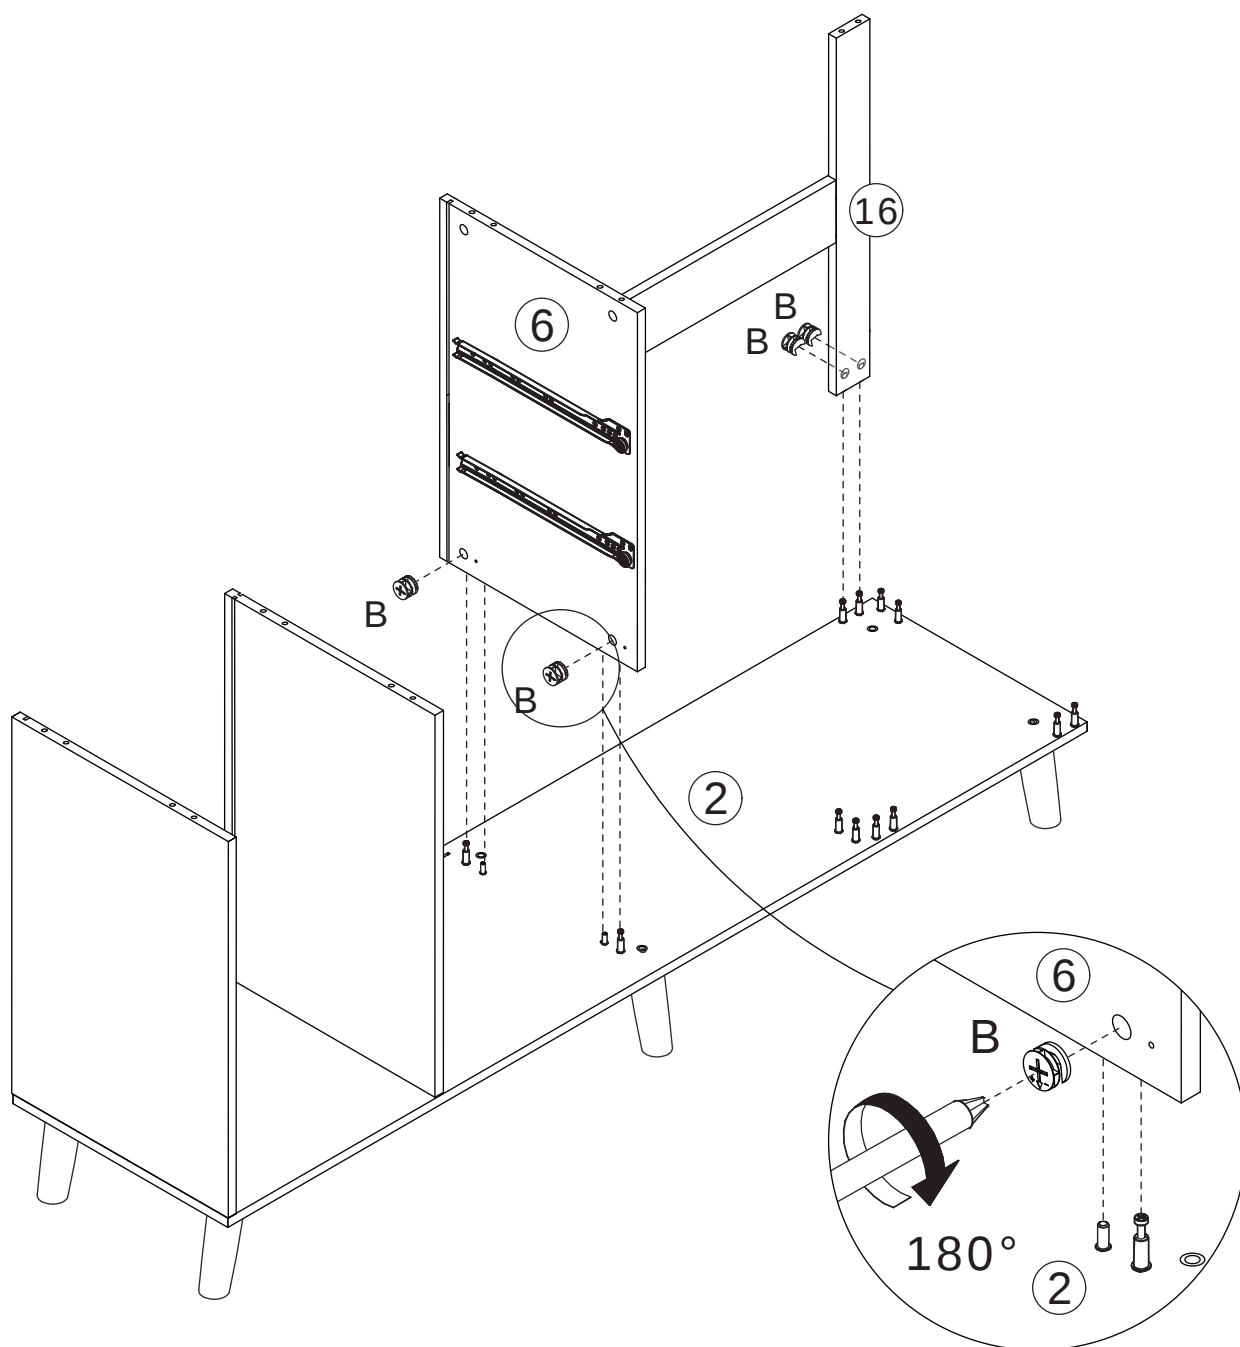


9

A x 2





  B x 4


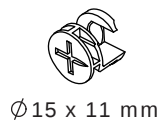


Screw eccentric rod (A) onto part 15.

 
 
Connect part 15 and 17 to part 13, tighten by turning cam lock (B) clockwise as shown.

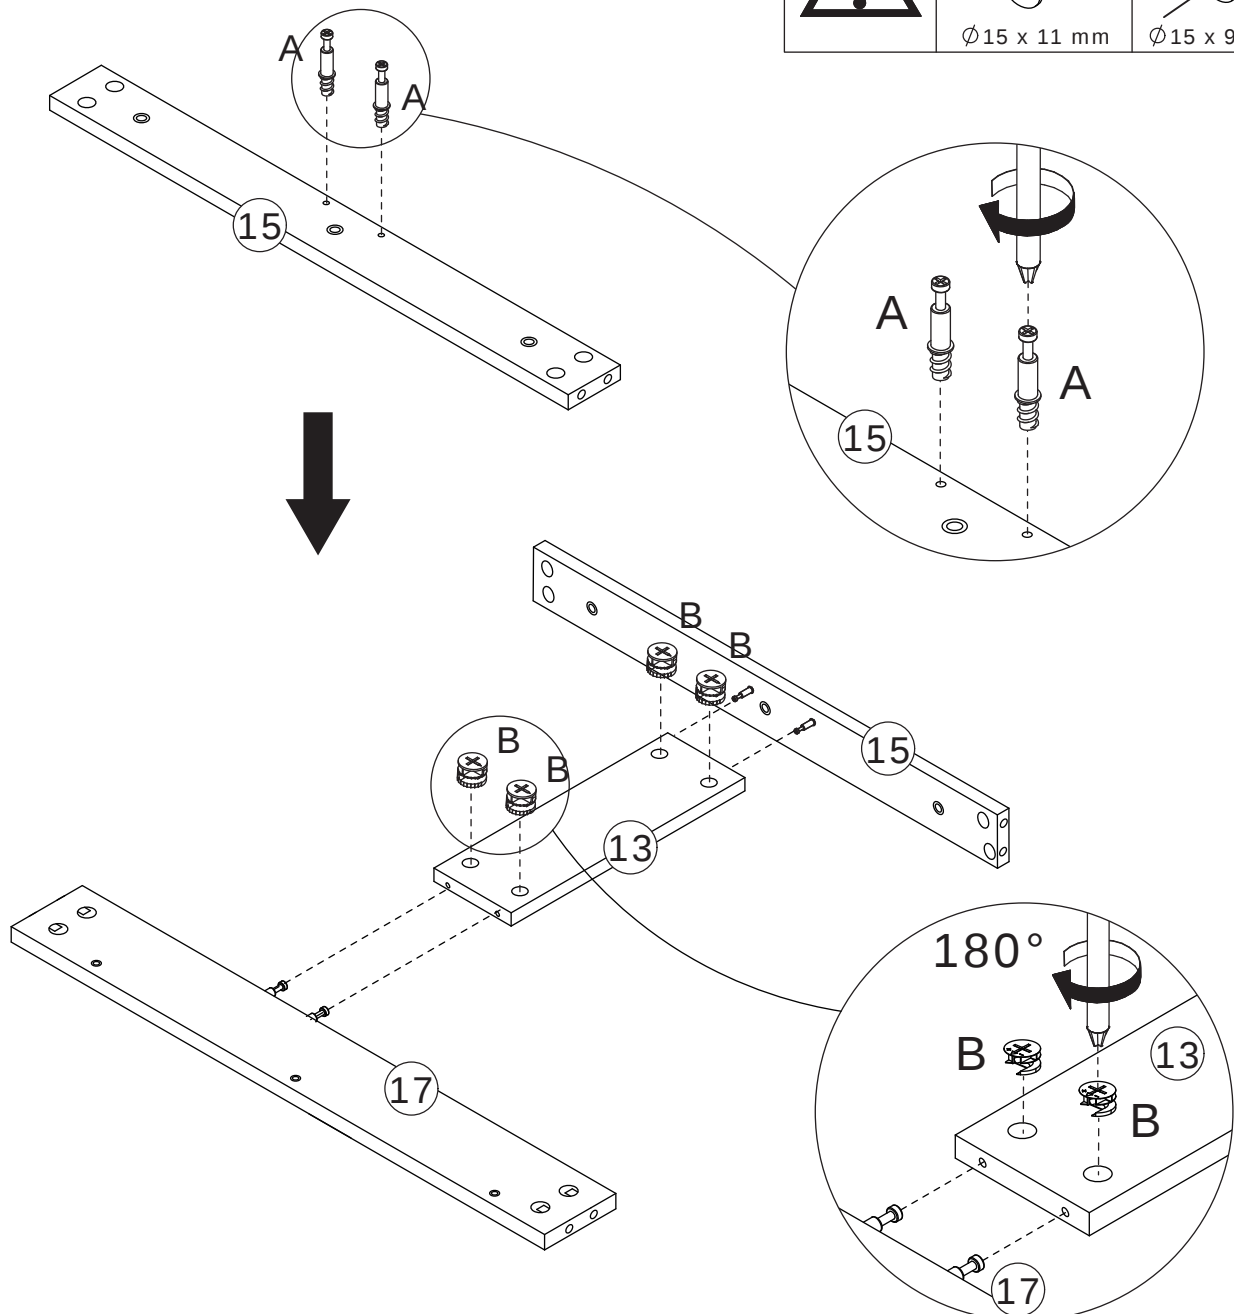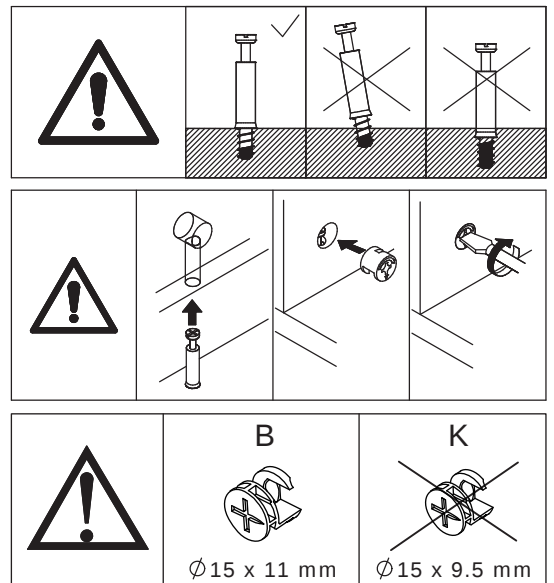

10

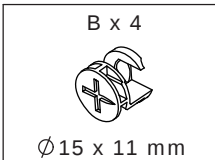  


  Connect part 15 and 17 to part 2, tighten by turning cam lock (B) clockwise as shown.

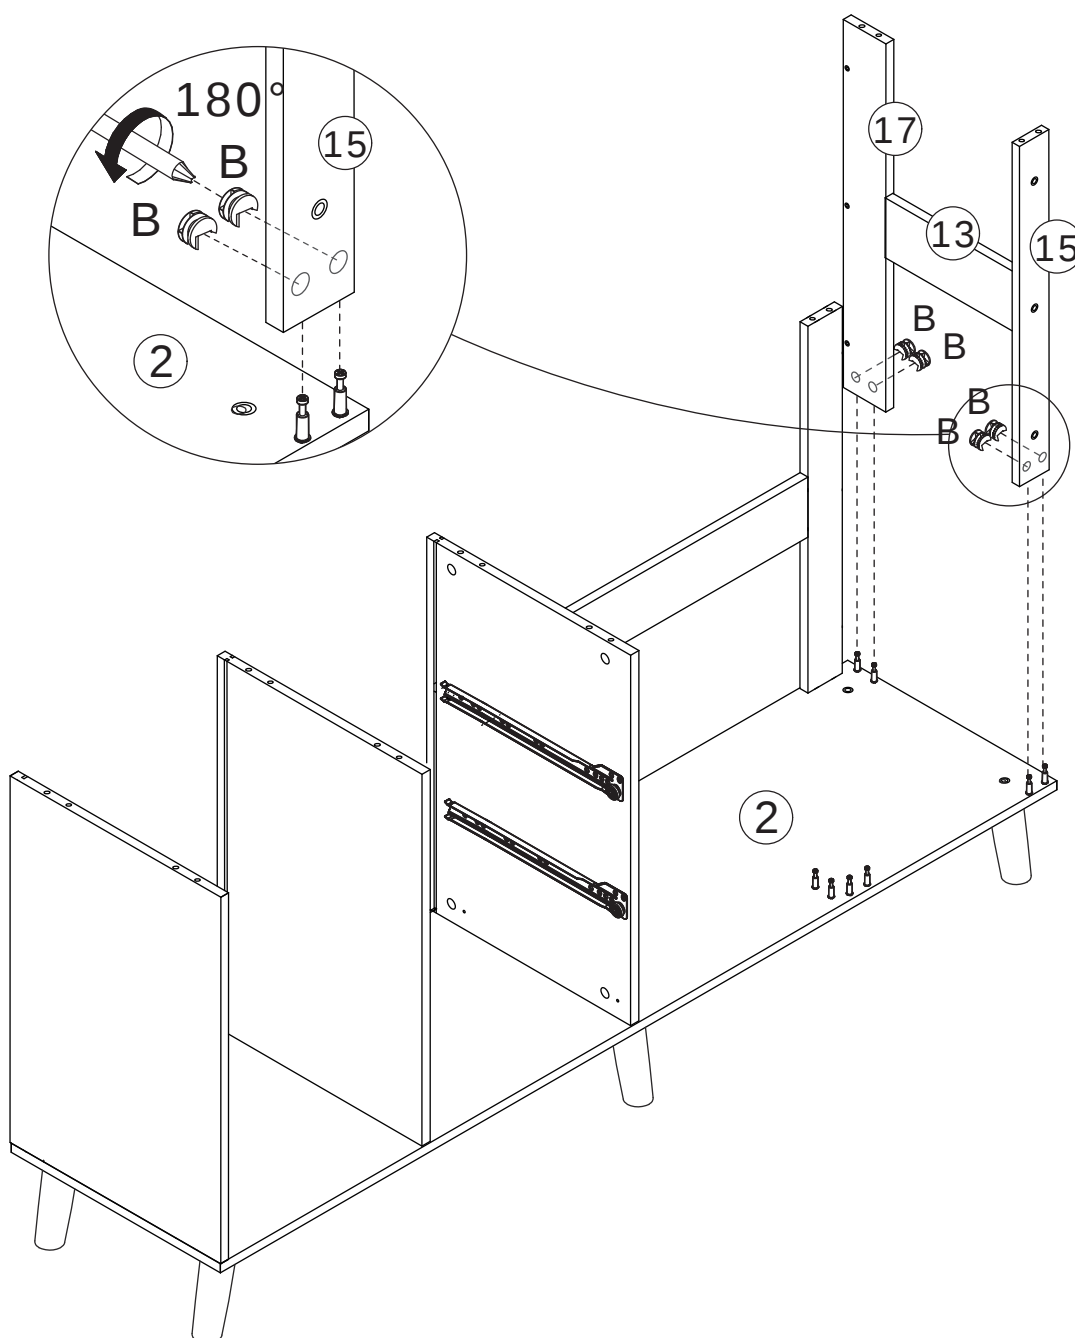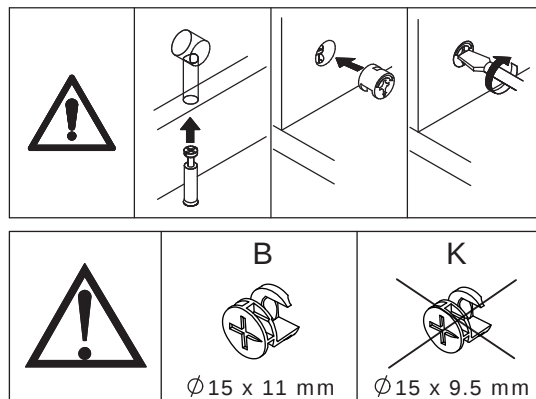


11

 
Q x 3





Ø4 x 30 mm

 

 Secure part 17 to part 16
using screw (Q), as shown.


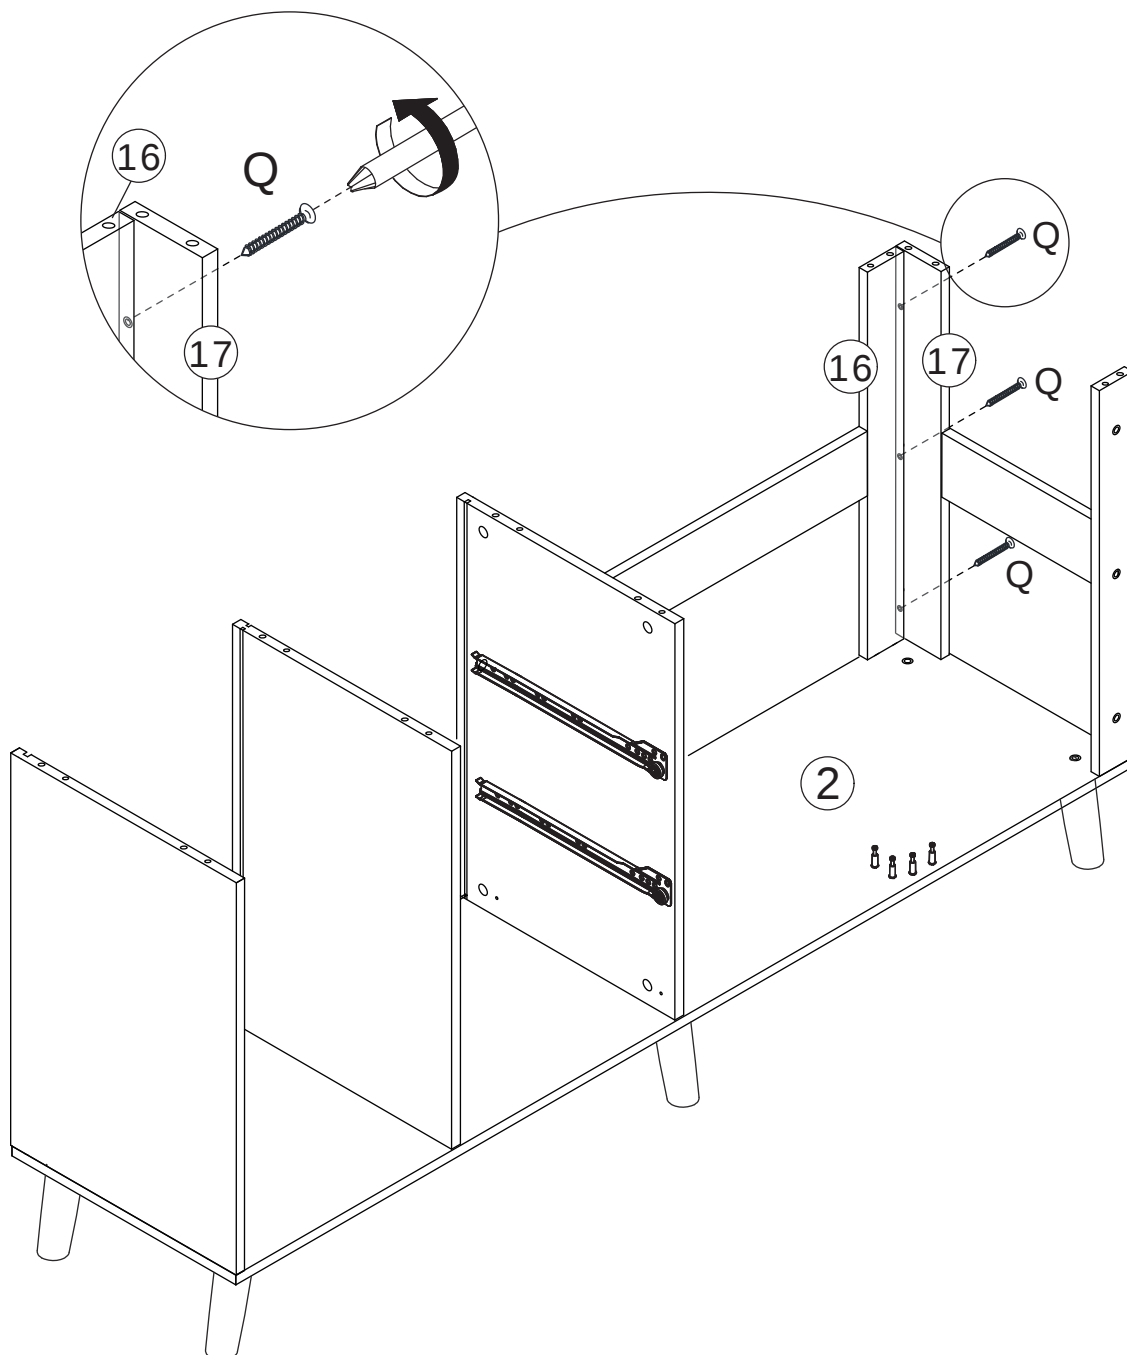


12

  A x 2  Ø 6 x 35 mm	B x 2  Ø 15 x 11 mm	C x 2  Ø 8 x 30 mm	
---	--	---	---

Screw eccentric rod (A) and insert wooden dowel (C) to part 11.

  Connect part 14 to part 11, tighten by turning cam lock (B) clockwise as shown.



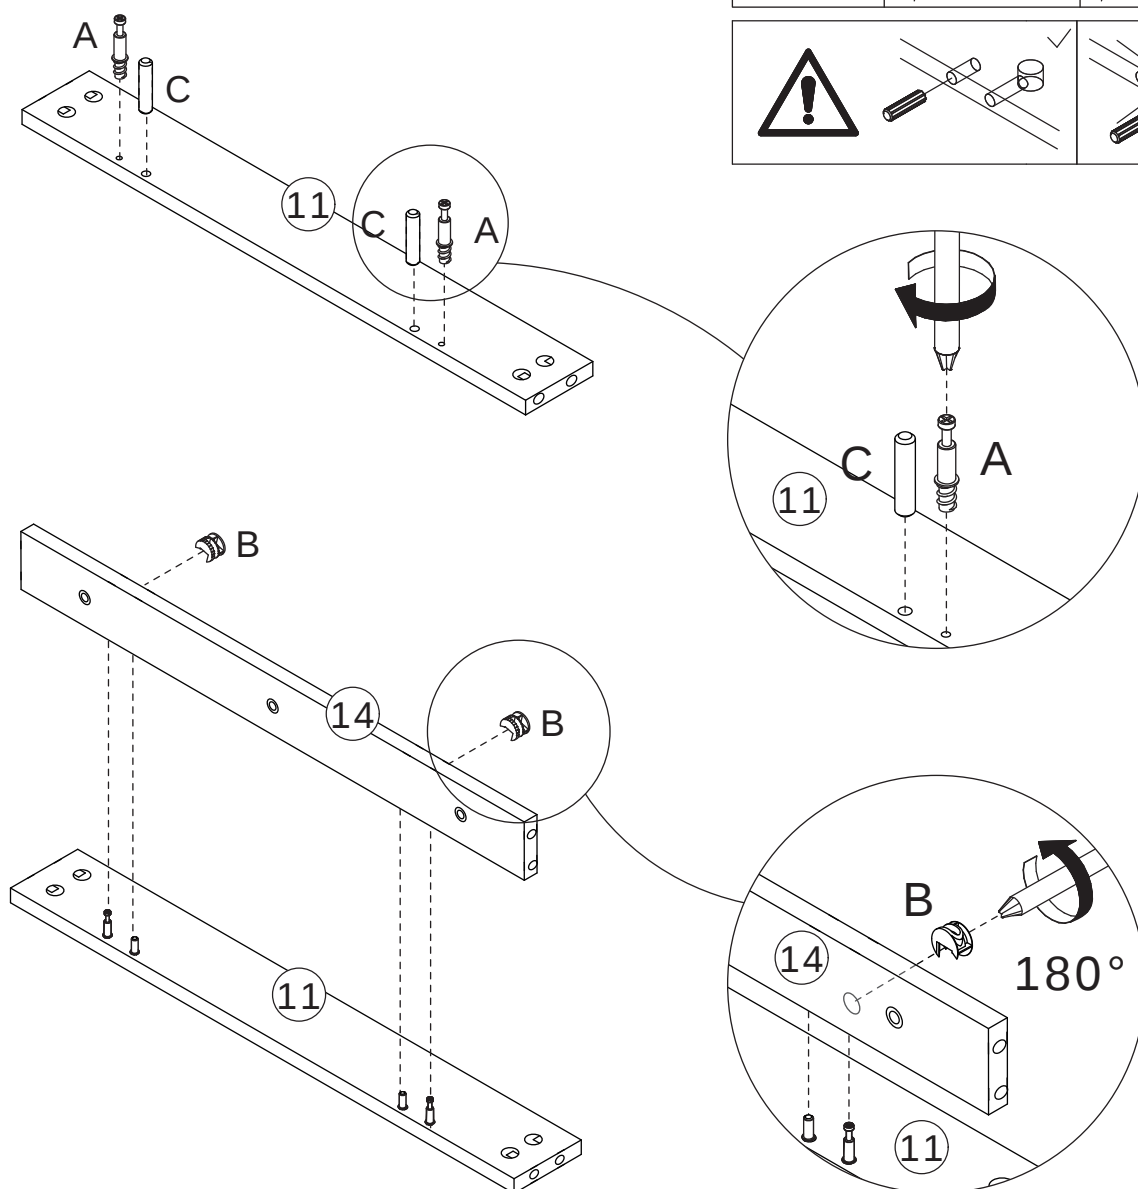
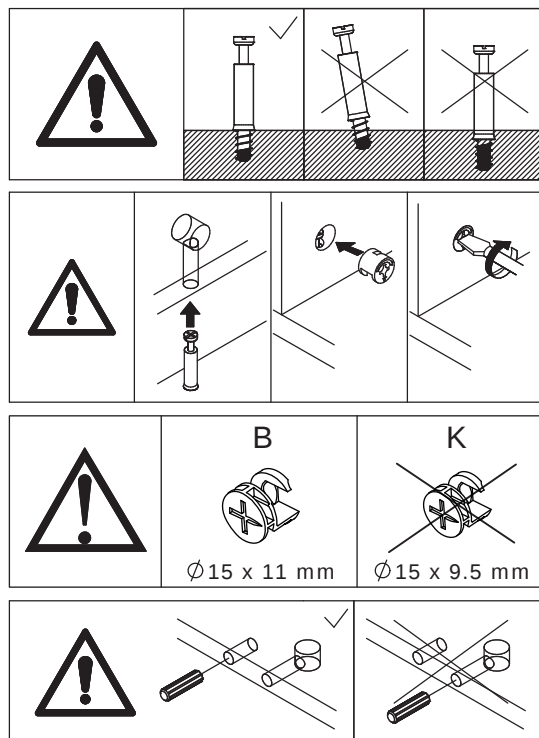


13

B x 4



    Ø 15 x 11 mm




B






Ø 15 x 11 mm

 K








Ø 15 x 9.5 mm

 
 
 
Connect part 14 and 11 to part 2, tighten by turning cam lock (B) clockwise as shown.

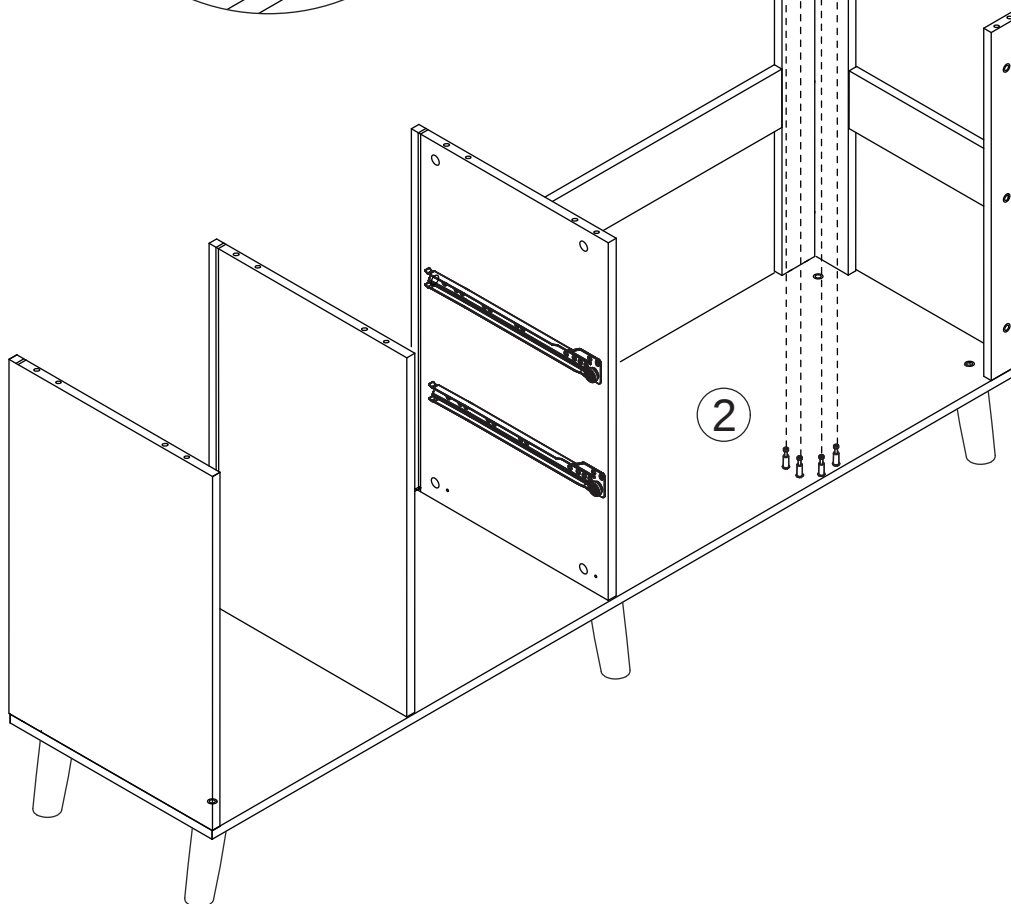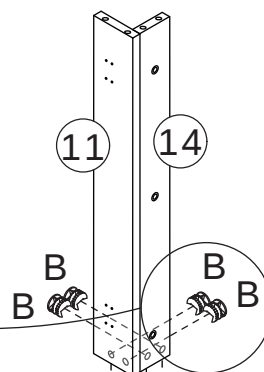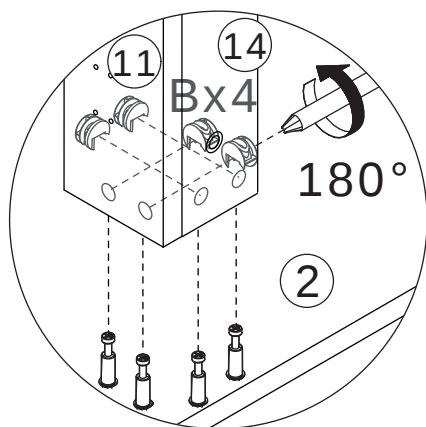

14

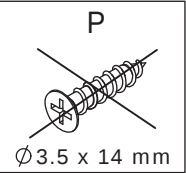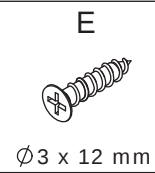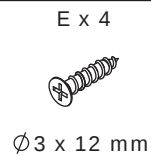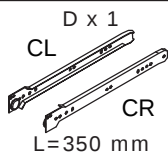     

   Secure slide rail (D-CL) and (D-CR) to part 5 and 6 using screw (E).

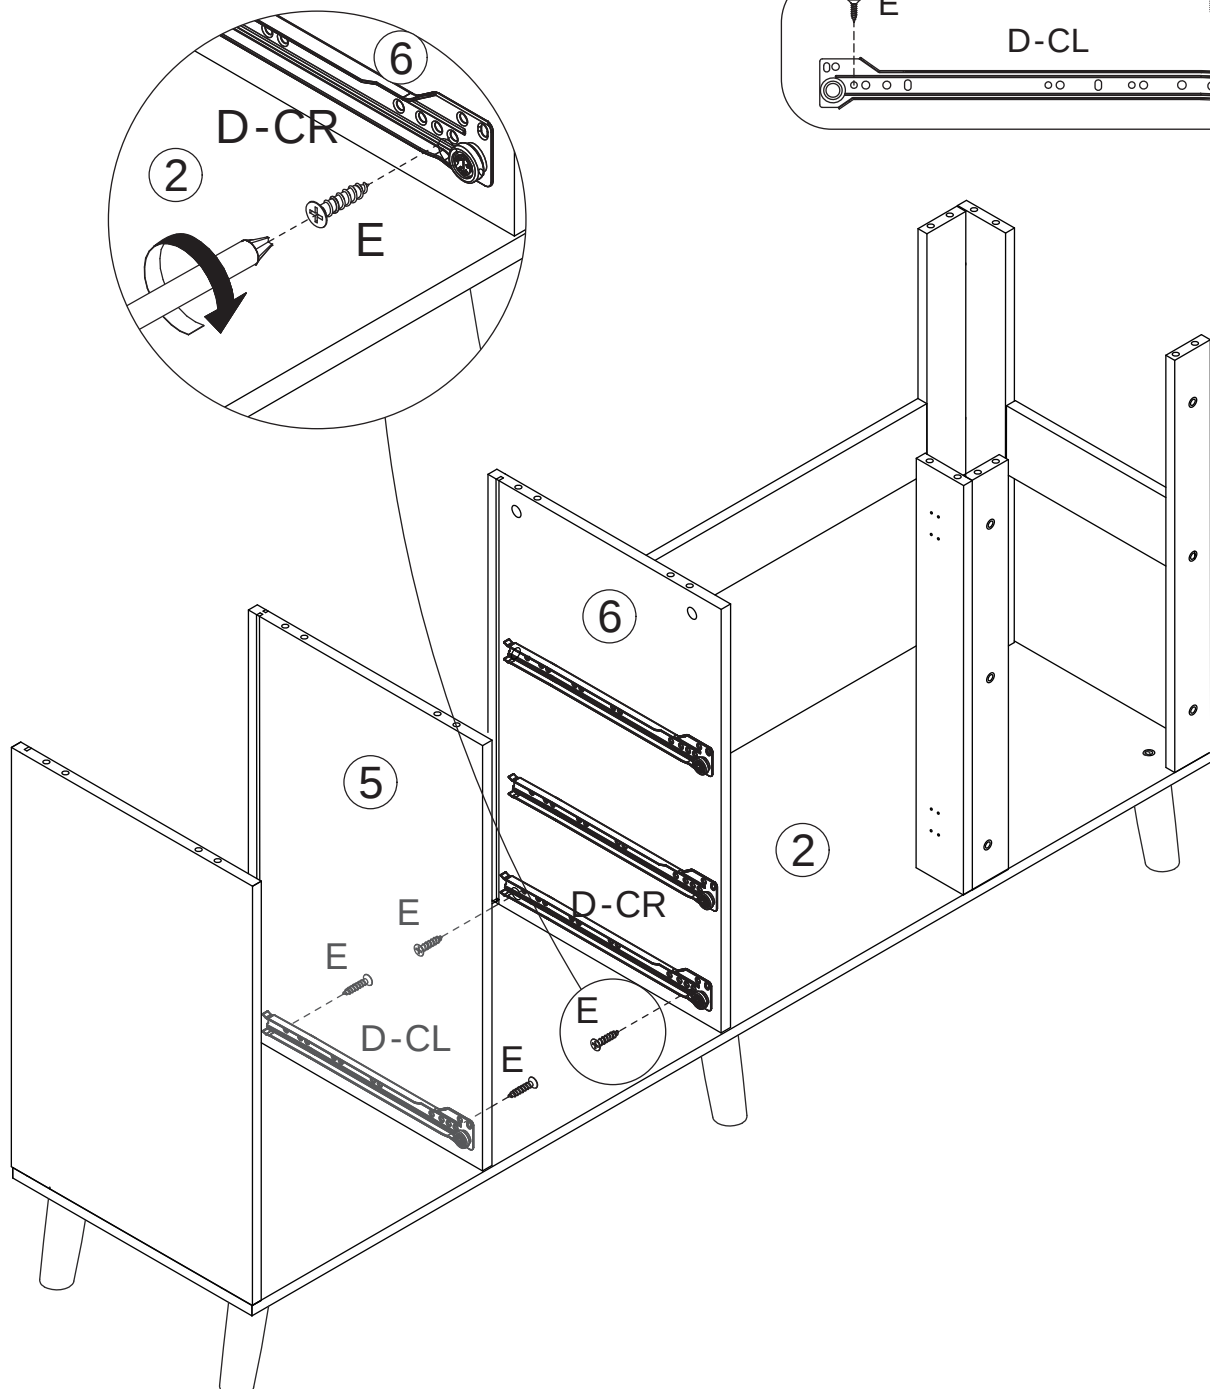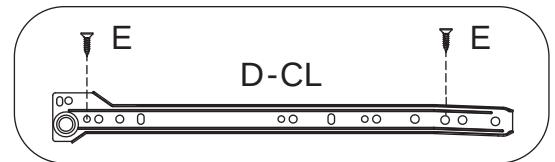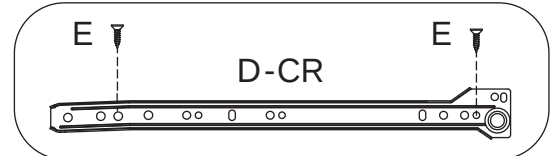


15


G x 5






 
Ø6 x 25 mm



 
Secure part 30 to part 8 using screw (G), as shown.

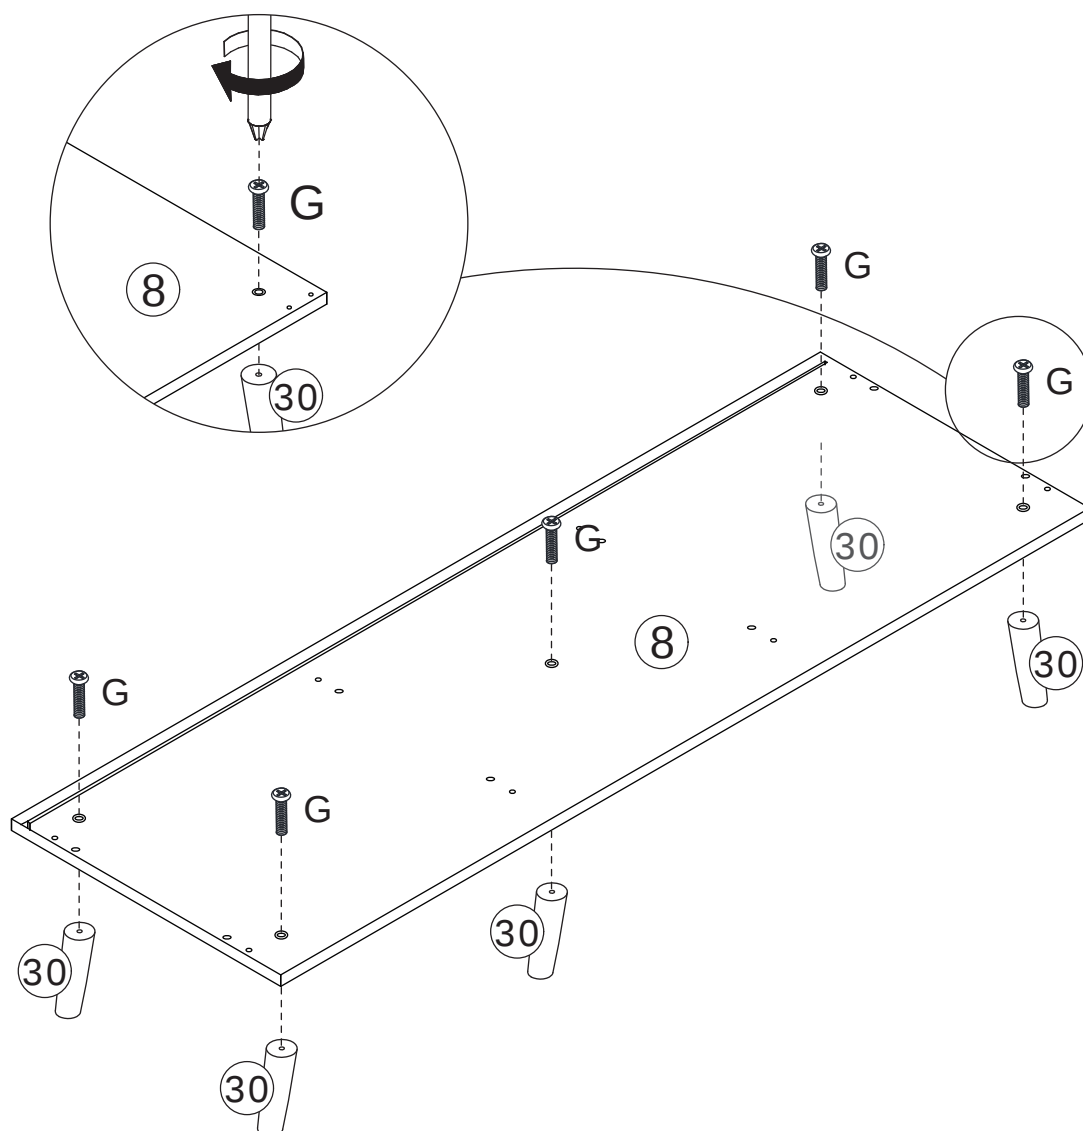



16

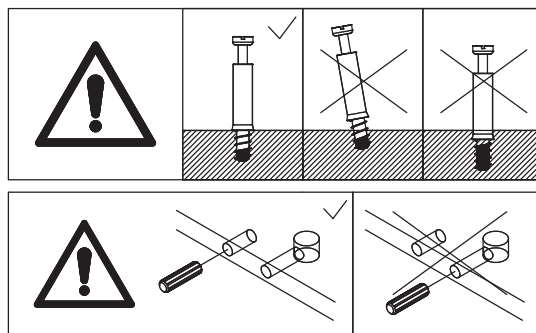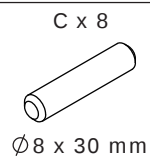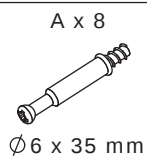    


 Screw eccentric rod (A) and insert wooden dowel (C) to part 8, as shown.

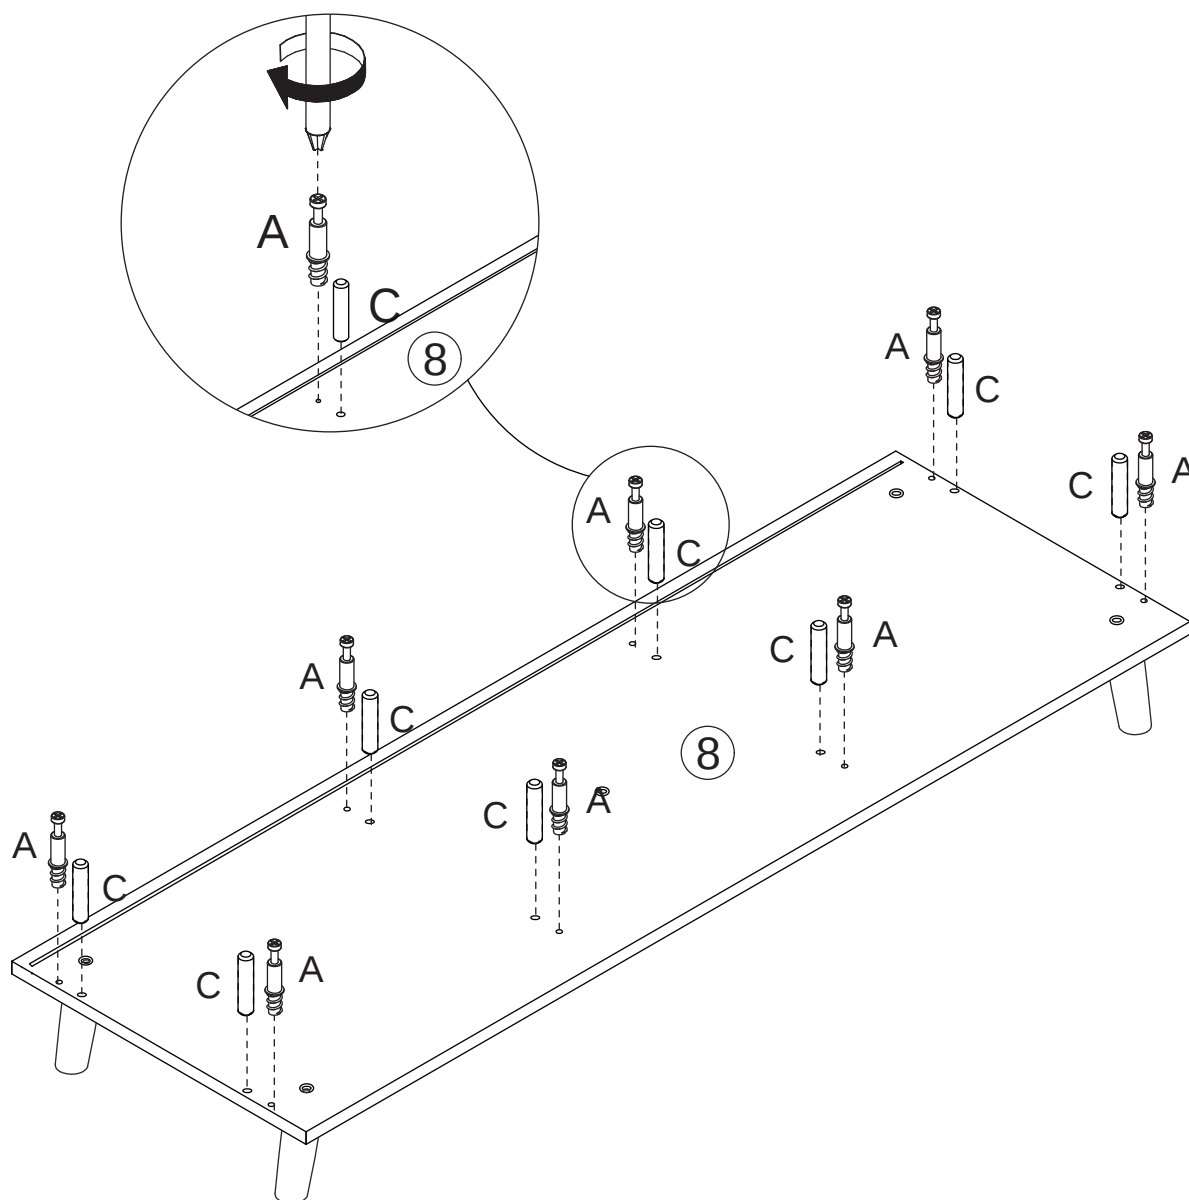


17

  D x 3  CL L=350 mm	D x 2  CR L=350 mm	E x 10  Ø3 x 12 mm	
--	--	---	---


 
	E  Ø3 x 12 mm	P  Ø3.5 x 14 mm
--	--	--

Secure slide rail (D-CL) to part 10 using screw (E).


 
Flip the same part to other side, and secure slide rail (D-CR), as shown.

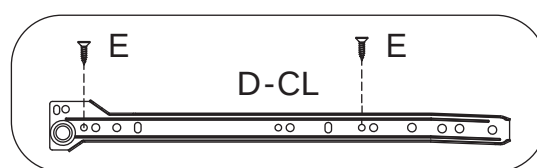


  - Please note that the hole positions of the screws on these two slide rails are different.

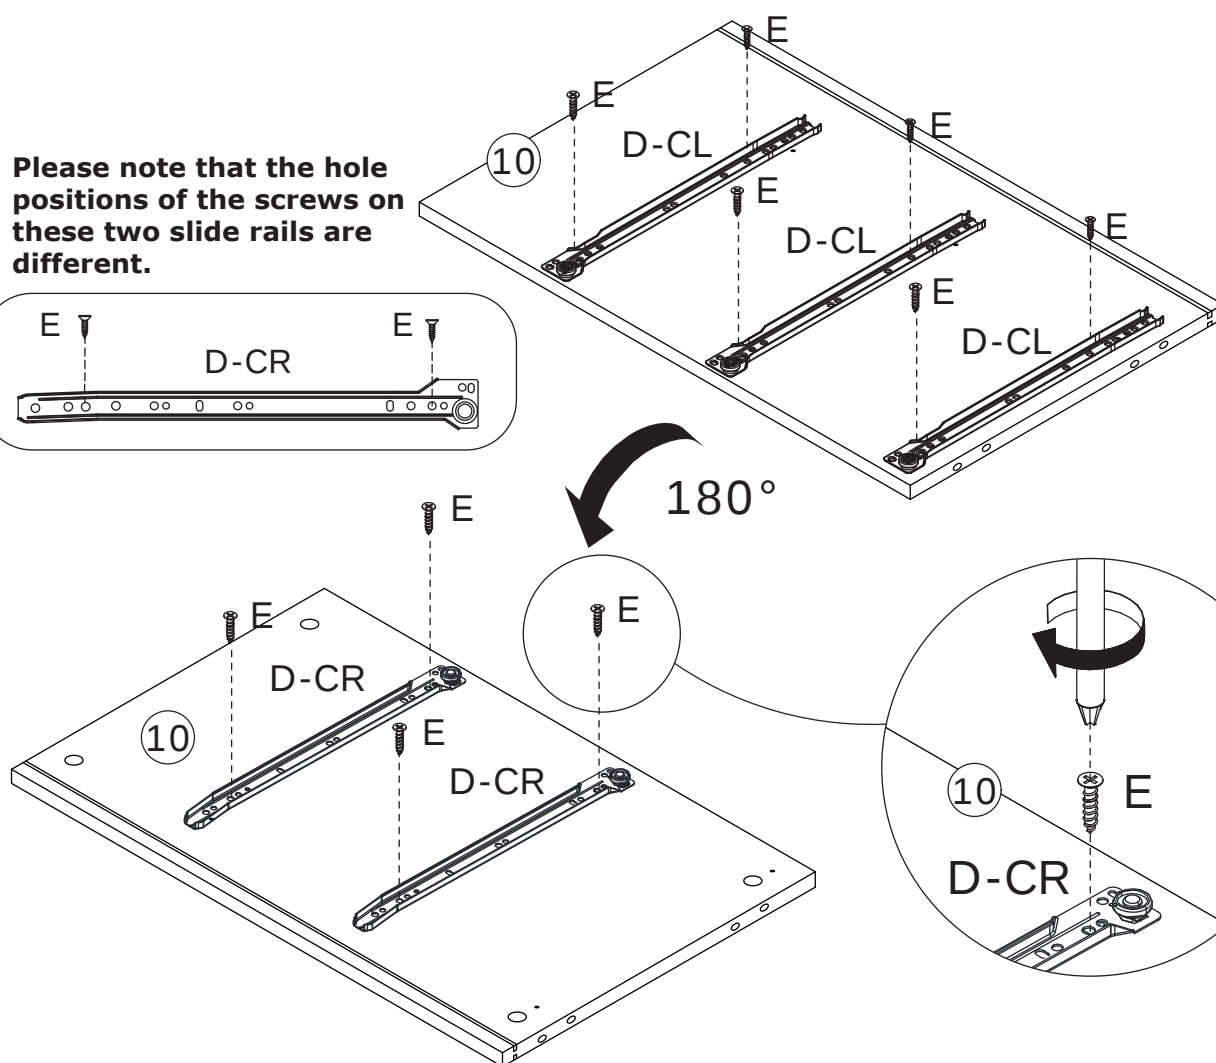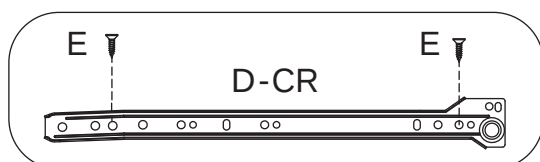


18

  D x 2  CR L=350 mm	E x 4  Ø3 x 12 mm	
--	--	---

 	E  Ø3 x 12 mm	P  Ø3.5 x 14 mm
--	--	--

 Secure slide rail (D-CR) to part 4 using screw (E), as shown.




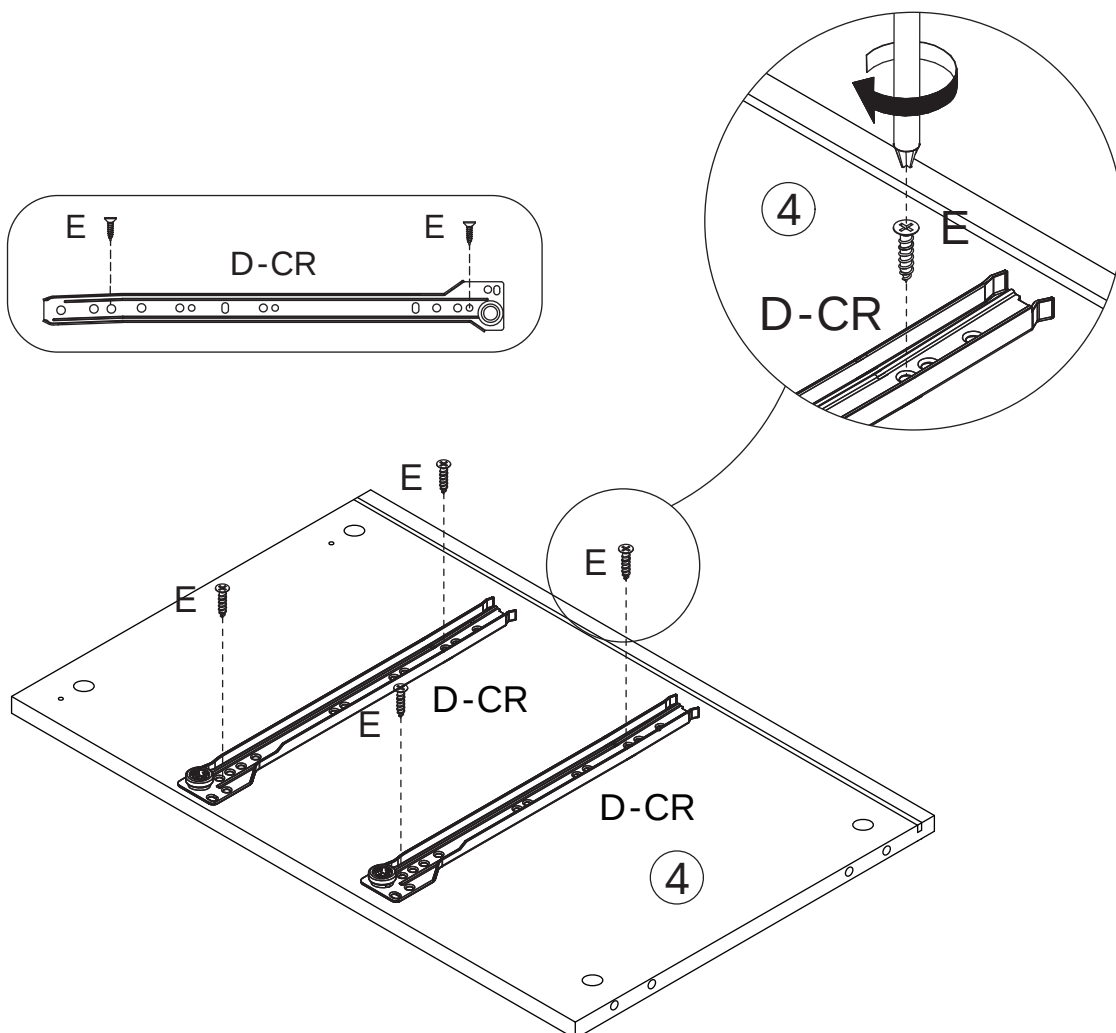


19

B x 2



    Ø 15 x 11 mm

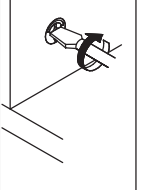


B




Ø 15 x 11 mm

 K







Ø 15 x 9.5 mm

 
Connect part 18 to part 8, tighten by turning cam lock (B) clockwise as shown.

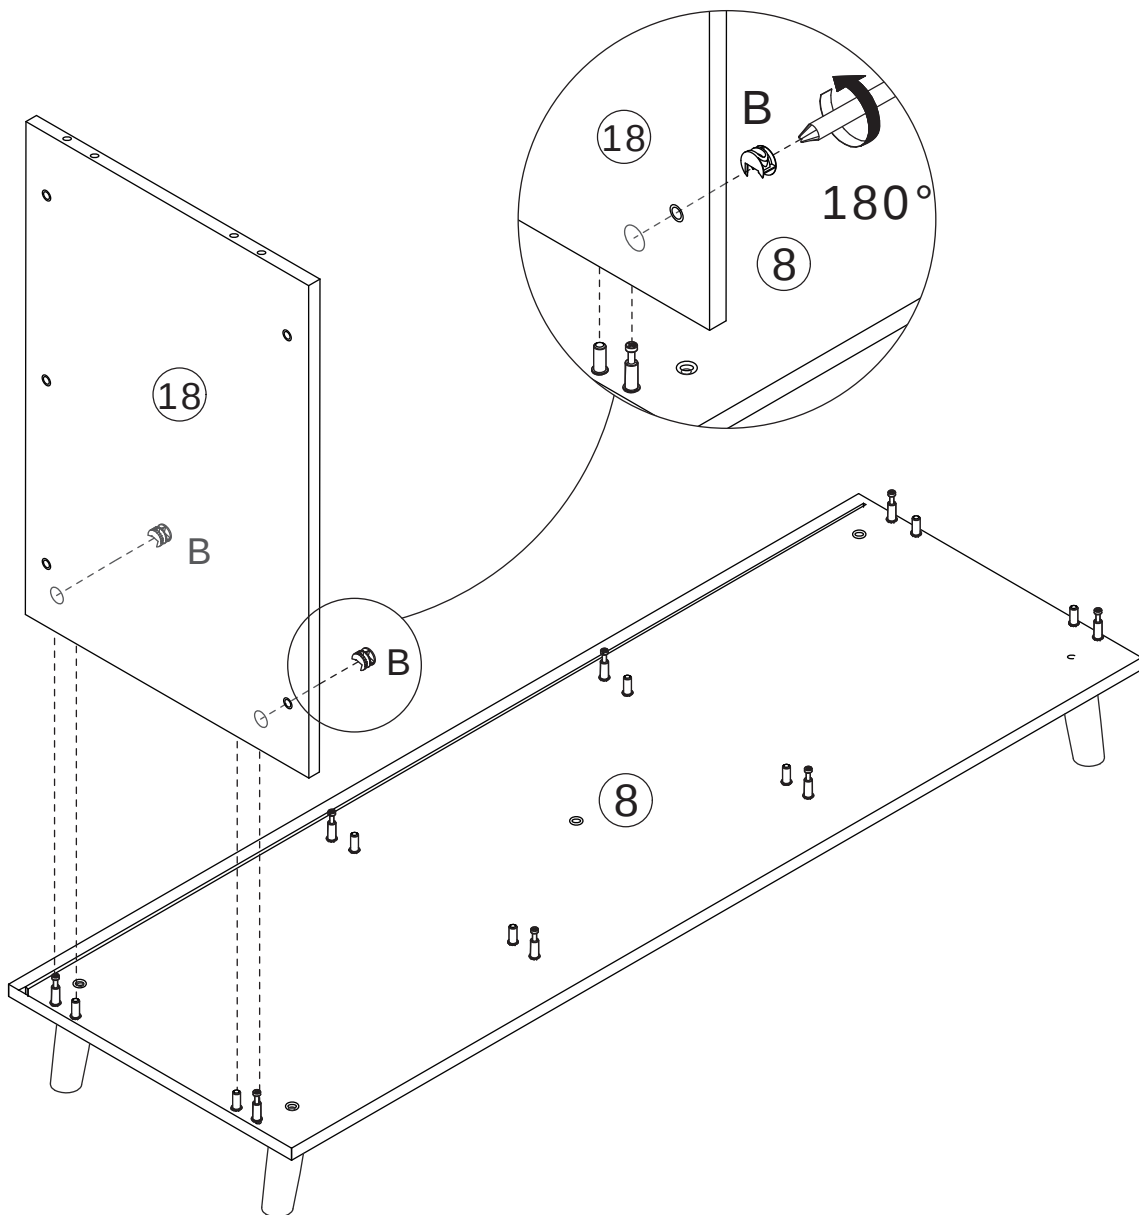



20

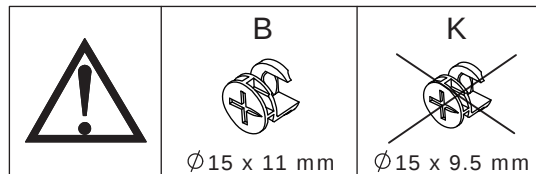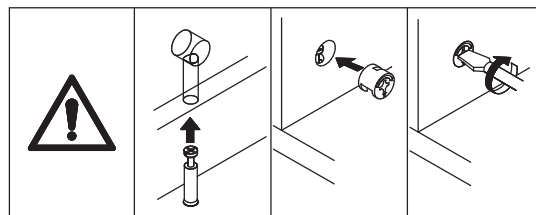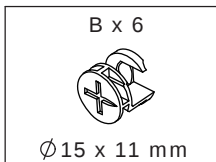    



 
Connect part 5, 10 and 4 to part 8, tighten by turning cam lock (B) clockwise as shown.

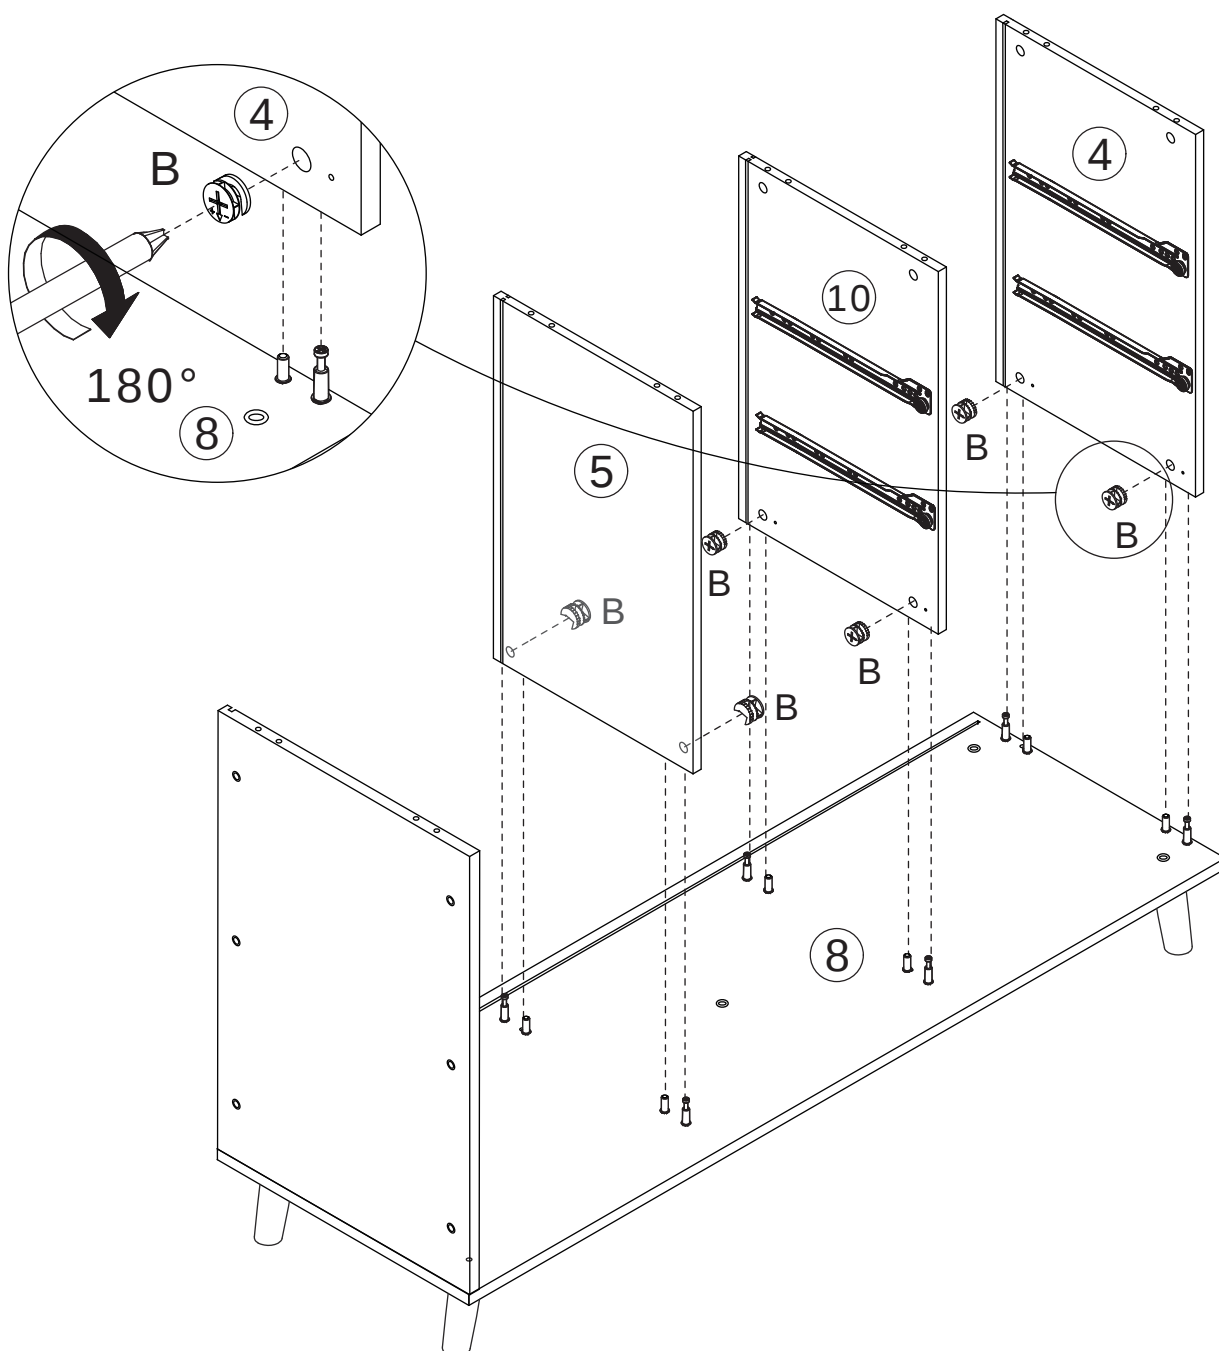


21

  D x 1  CL L=350 mm	D x 2  CR L=350 mm	E x 6  Ø3 x 12 mm	
--	--	--	---

 	E  Ø3 x 12 mm	P  Ø3.5 x 14 mm
--	--	--

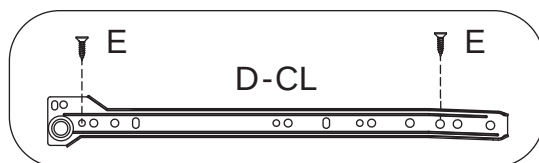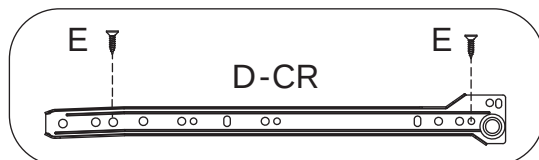  

 Secure slide rail (D-CL) and (D-CR) to part 5, 10 and 4 using screw (E).

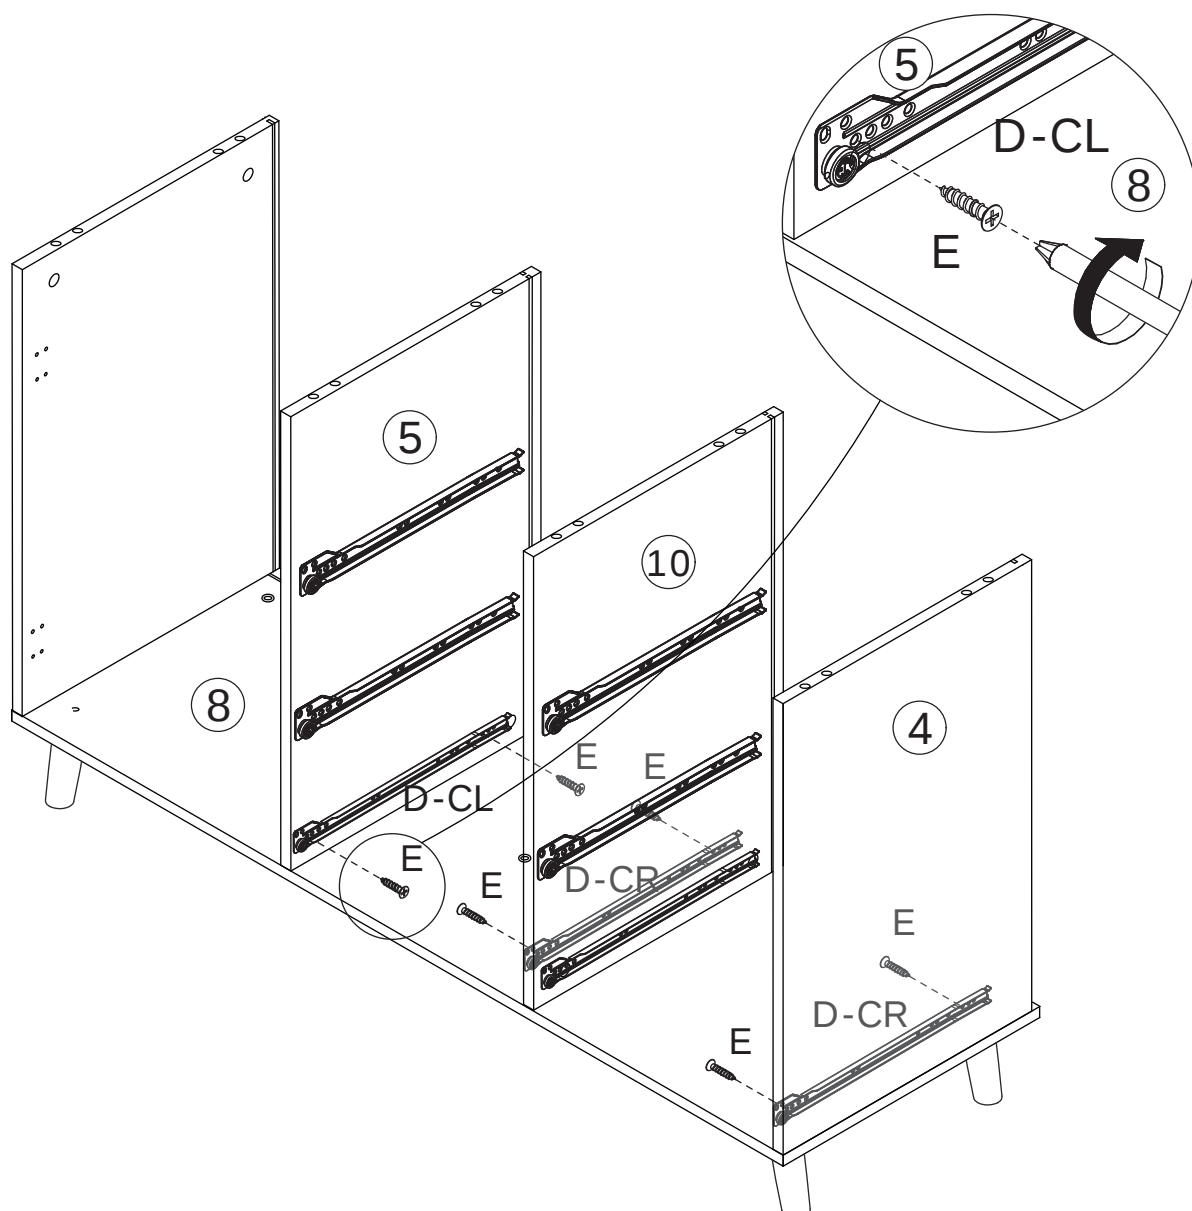


22


F x 6



 
Ø6 x 20 mm





 
Secure part 14 and 15 to part 18 using screw (F), as shown.

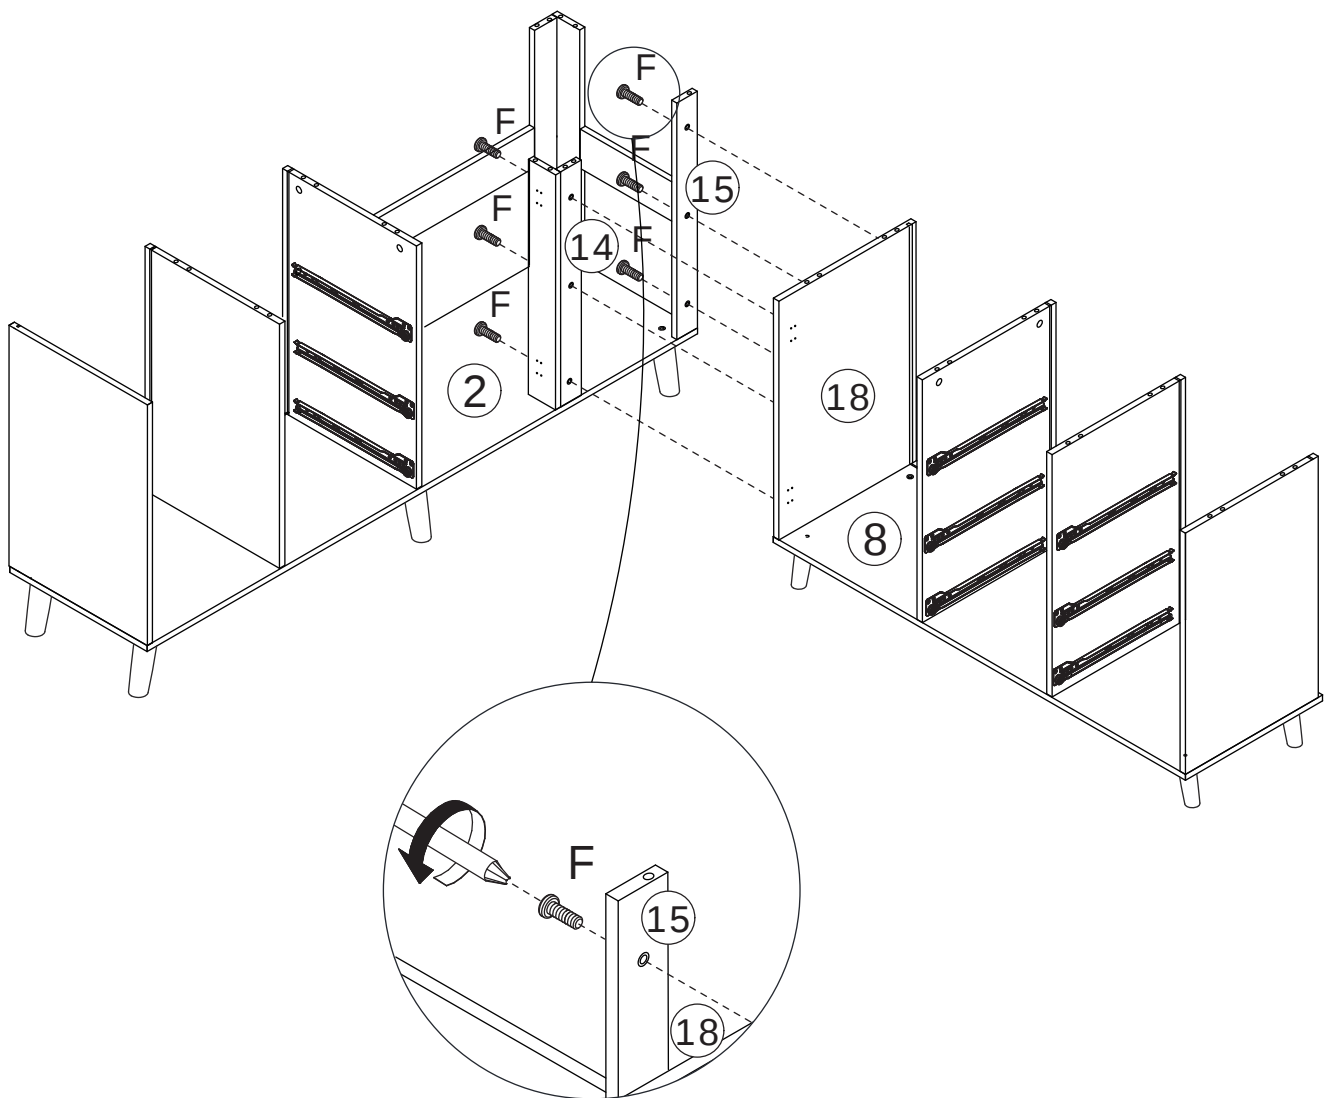

 
Insert part 25 and 26 along the available grooves.

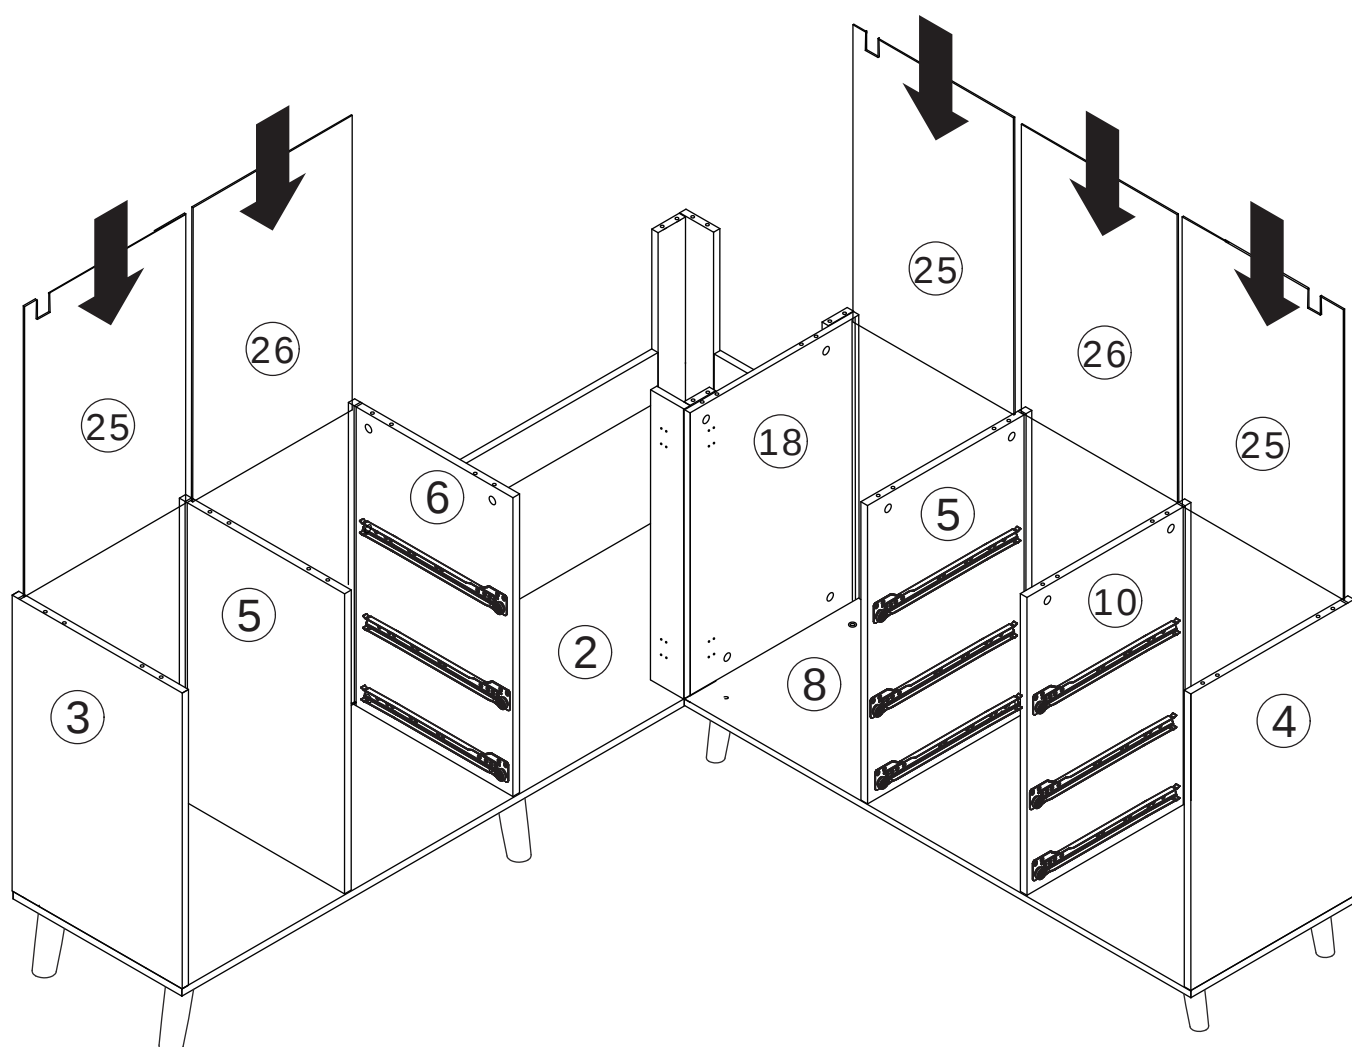



24

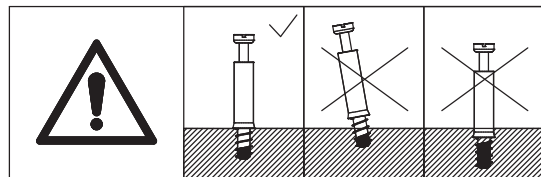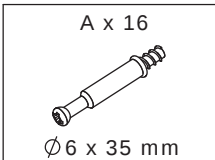   

 
Screw eccentric rod (A) onto part 1, as shown.

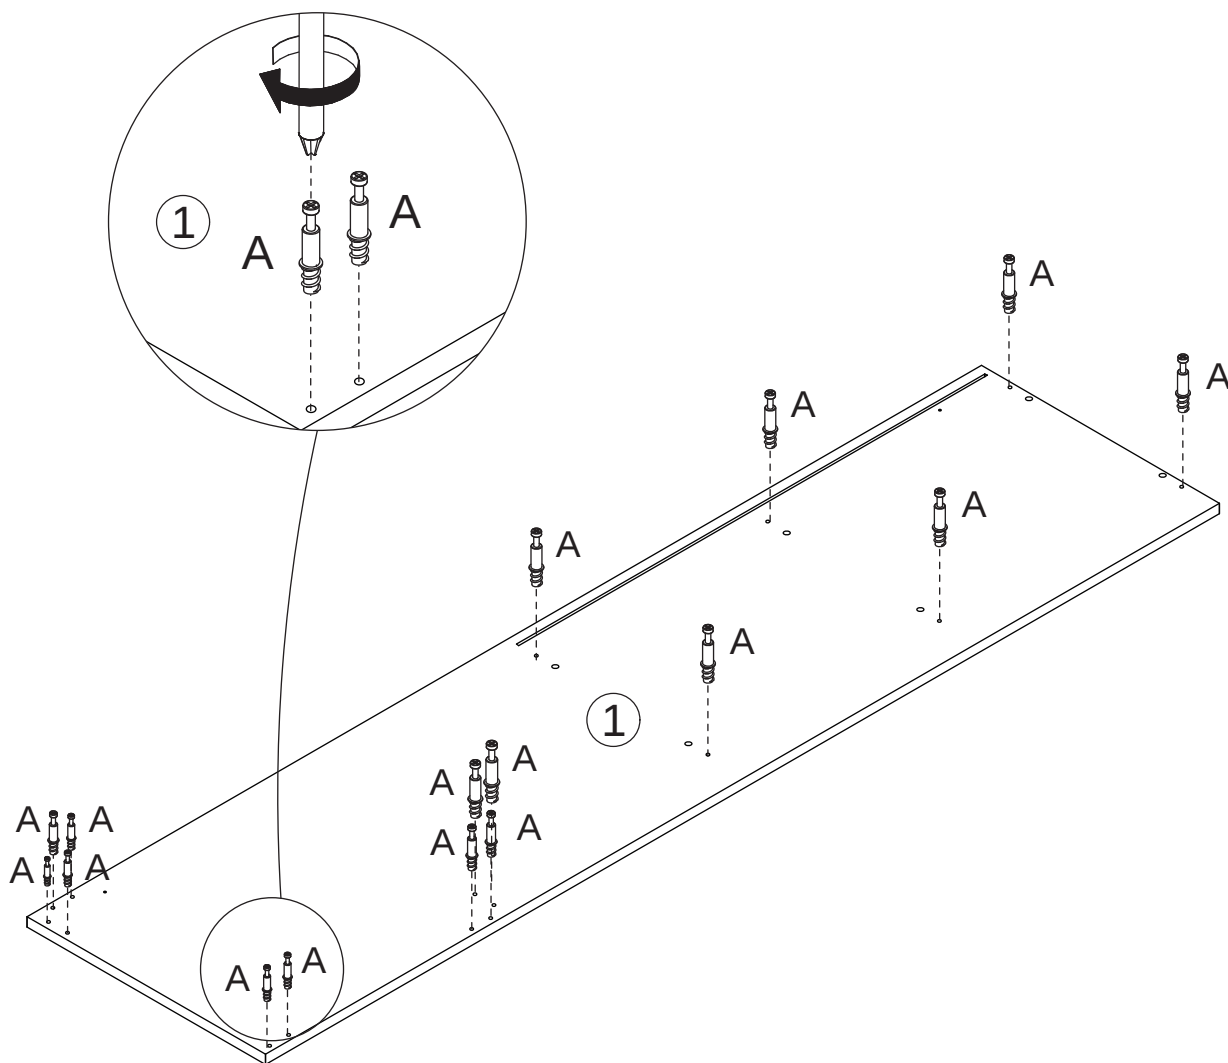

25

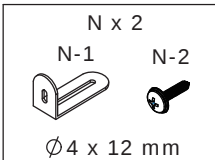  

 Secure bracket (N-1) to part 1,
as shown.

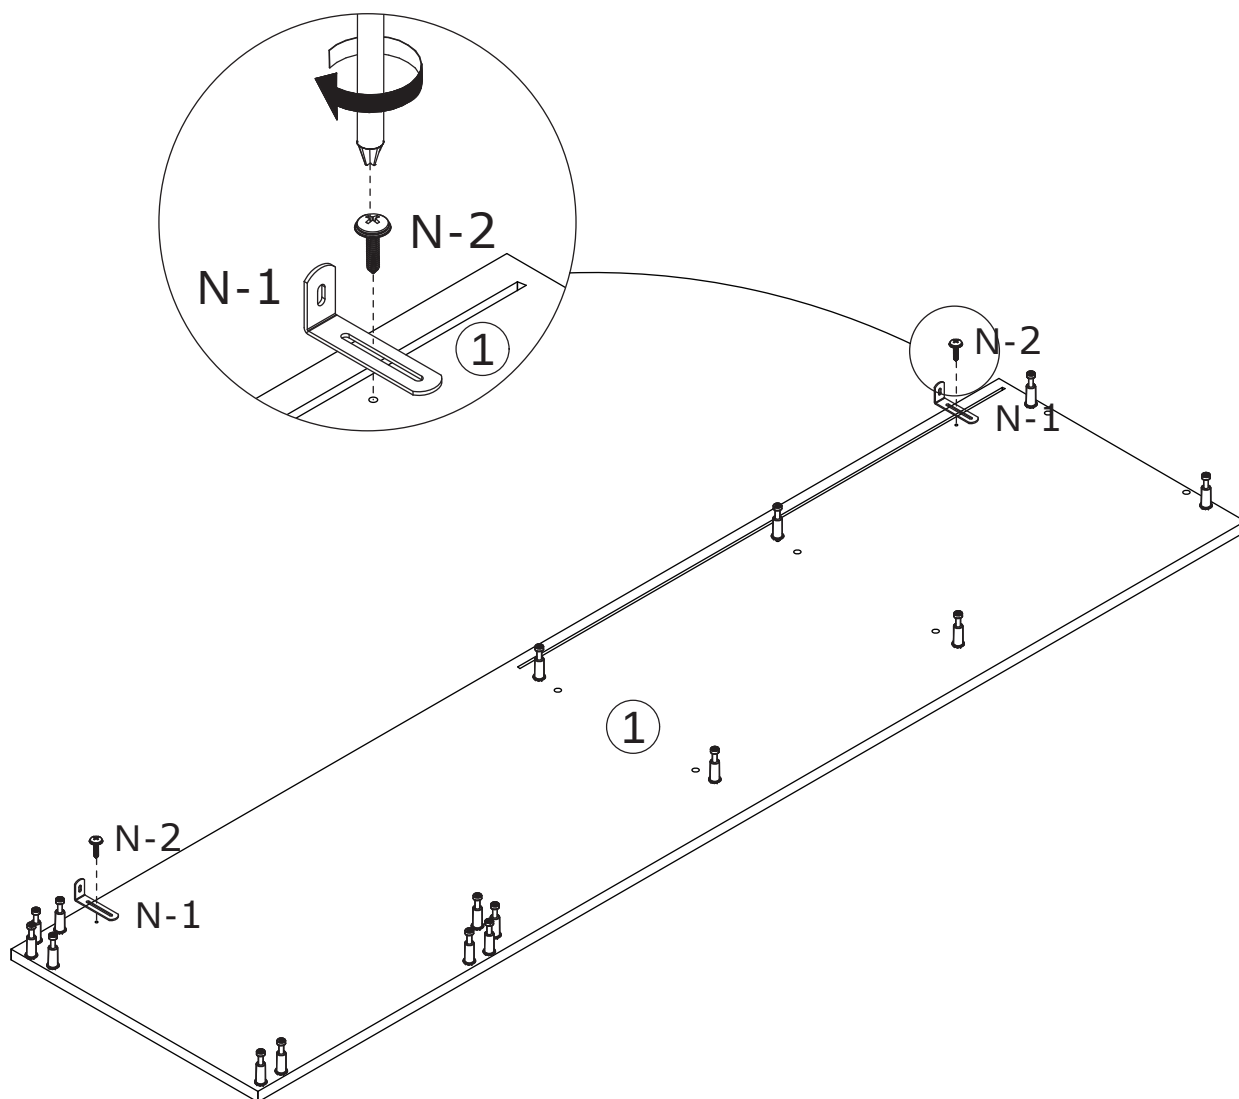


26

B x 16







Ø 15 x 11 mm

 C x 6



Ø 8 x 30 mm

    

B

 
 


Ø 15 x 11 mm


K






Ø 15 x 9.5 mm



 
Connect part 1 to the left top of the unit using wooden dowel (C), then tighten by turning cam lock (B) clockwise as shown.

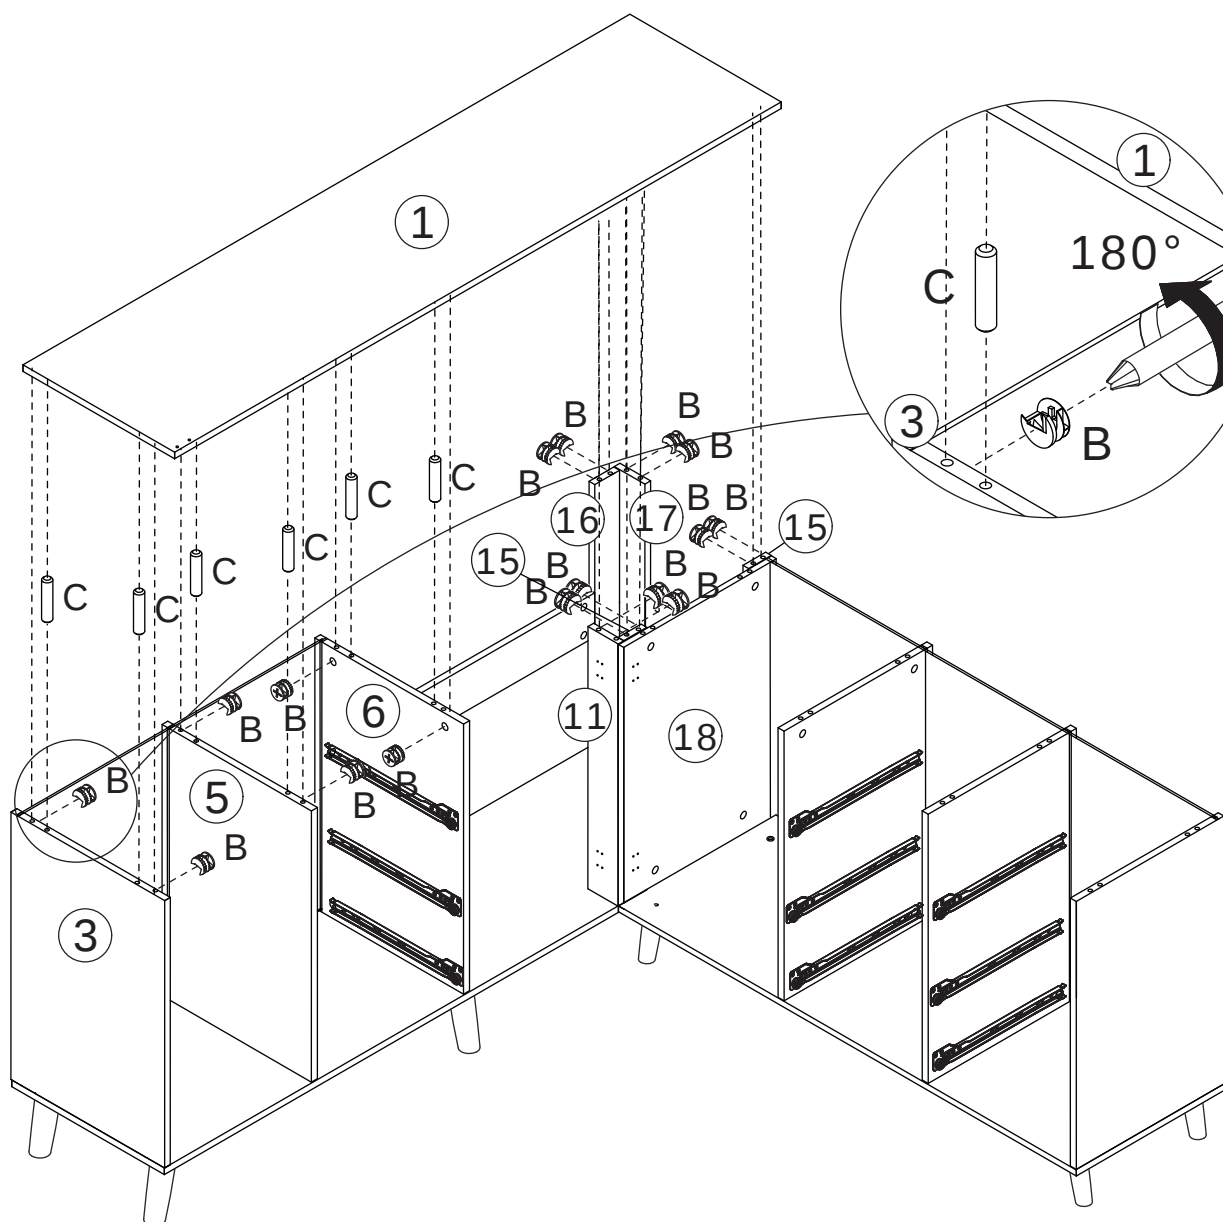



27

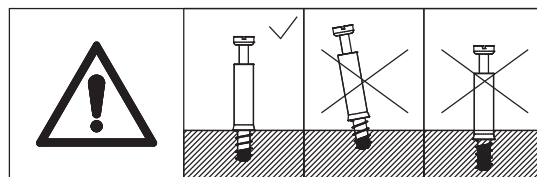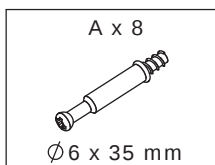   

 
Screw eccentric rod (A) onto part 7, as shown.

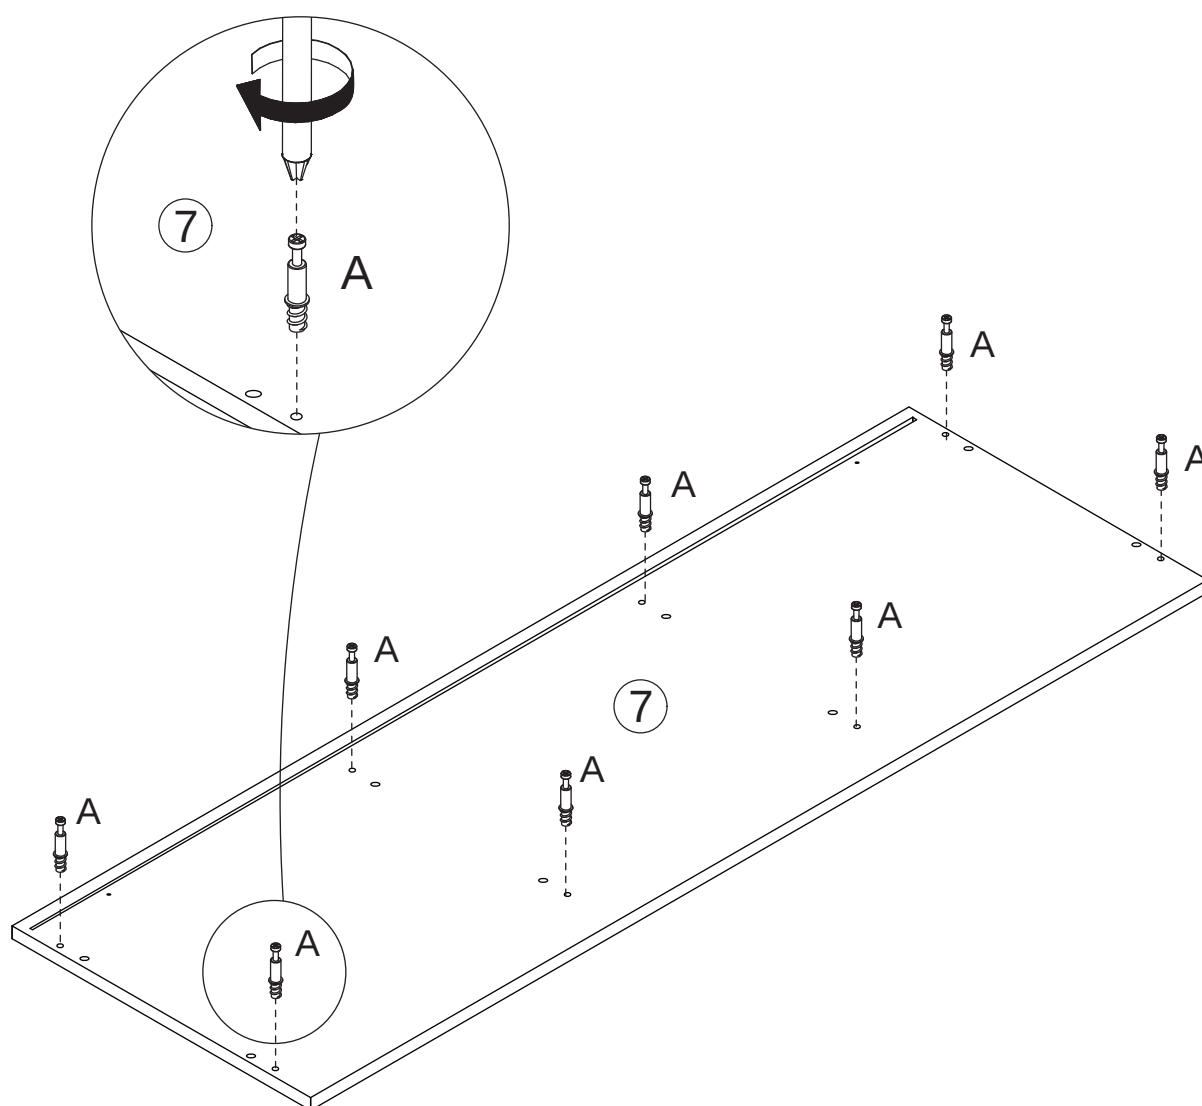

28

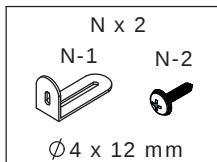  



 
Secure bracket (N-1) to part 7,
as shown.

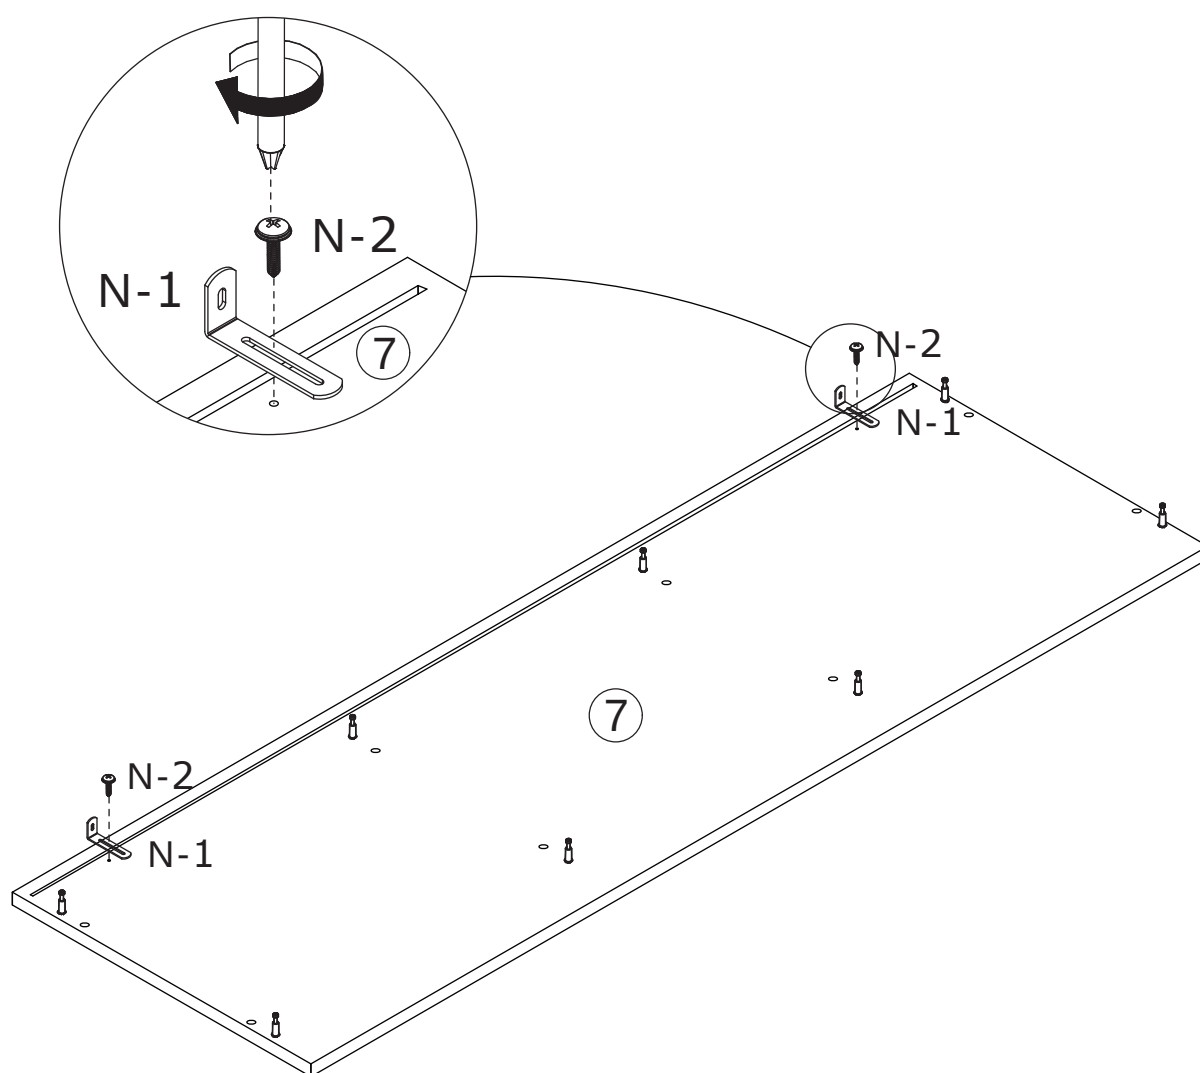



29



   
Connect part 7 to the right top of the unit using wooden dowel (C), then tighten by turning cam lock (B) clockwise as shown.

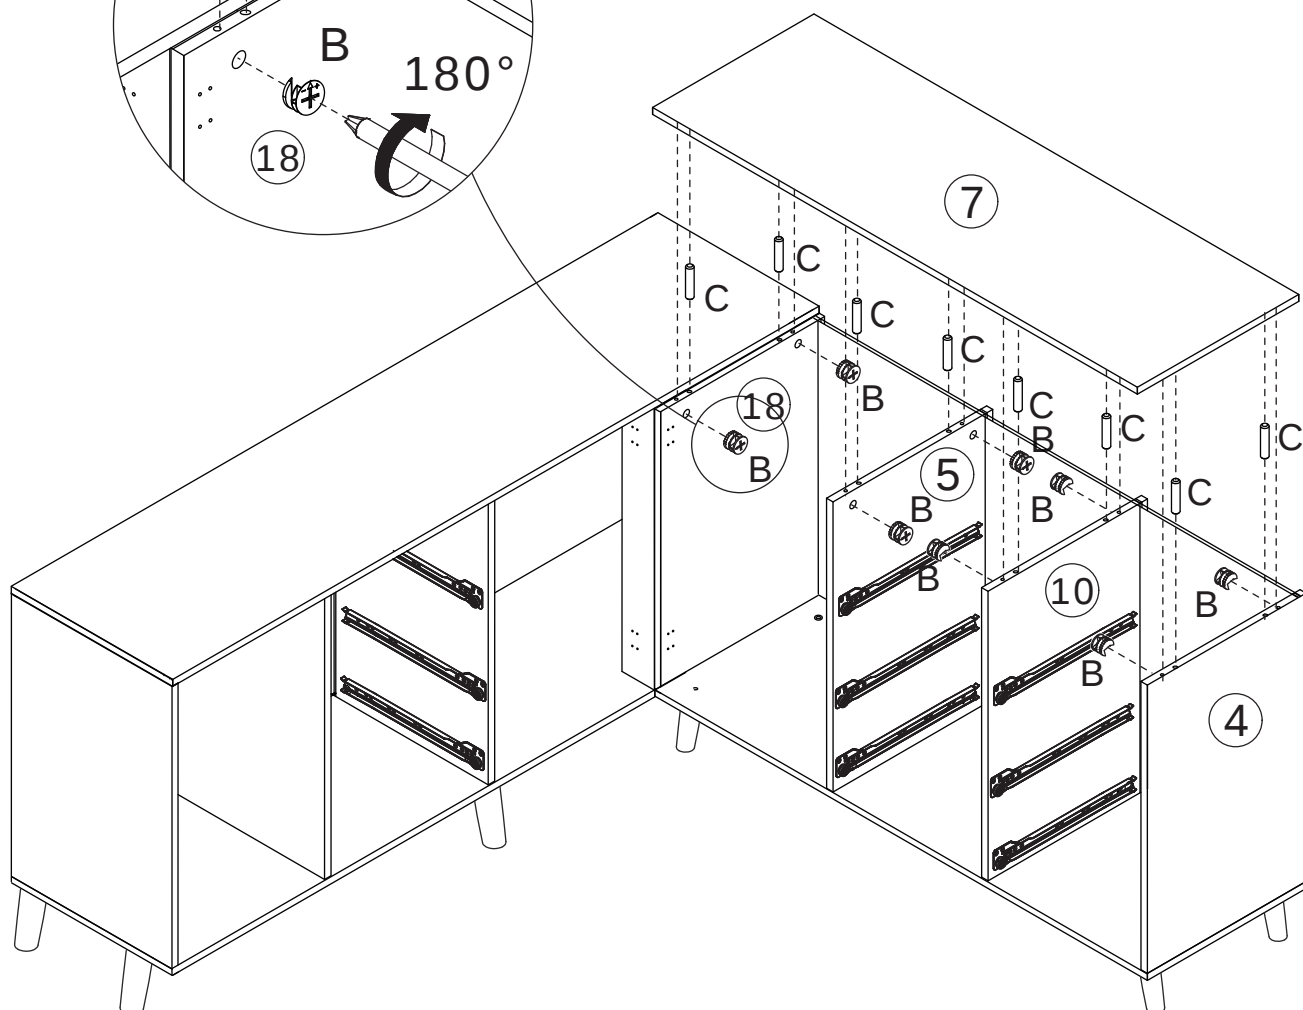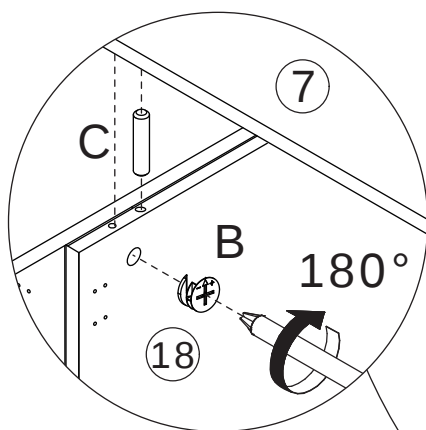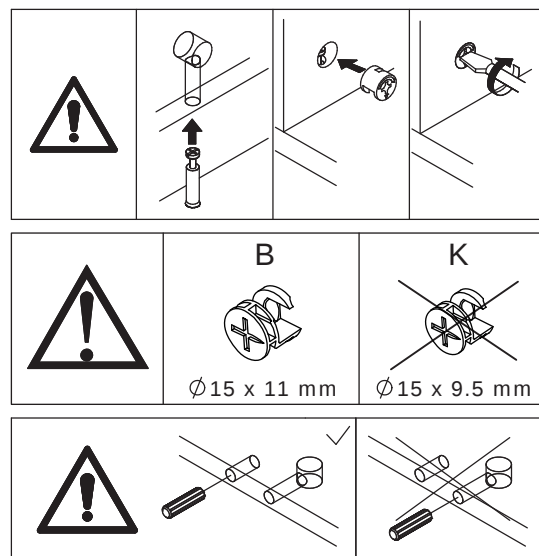

30

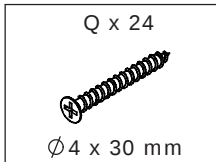  


 Secure part 21 and 20 to part 22 using screw (Q).


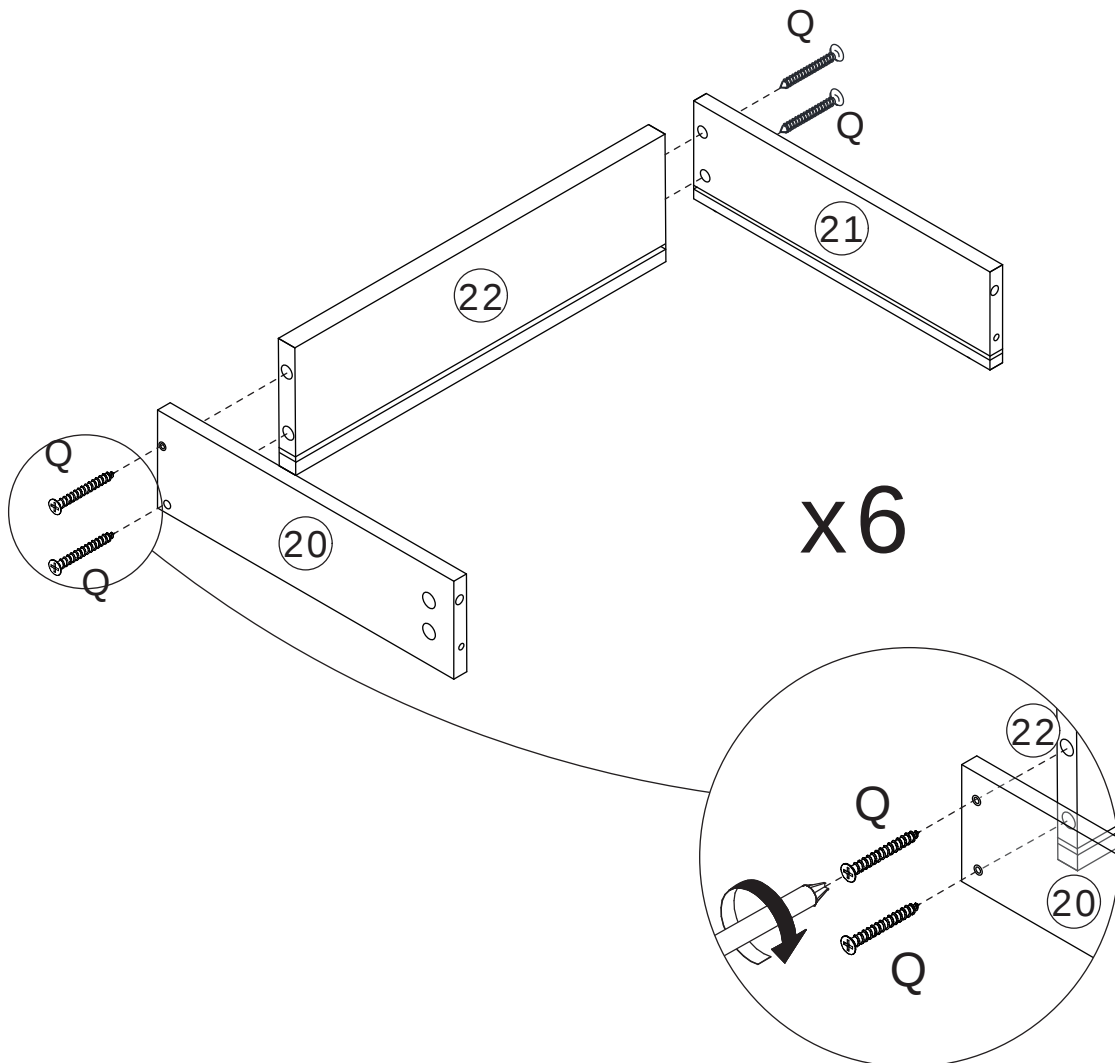


31

 
Insert part 23 along the grooves, as shown.

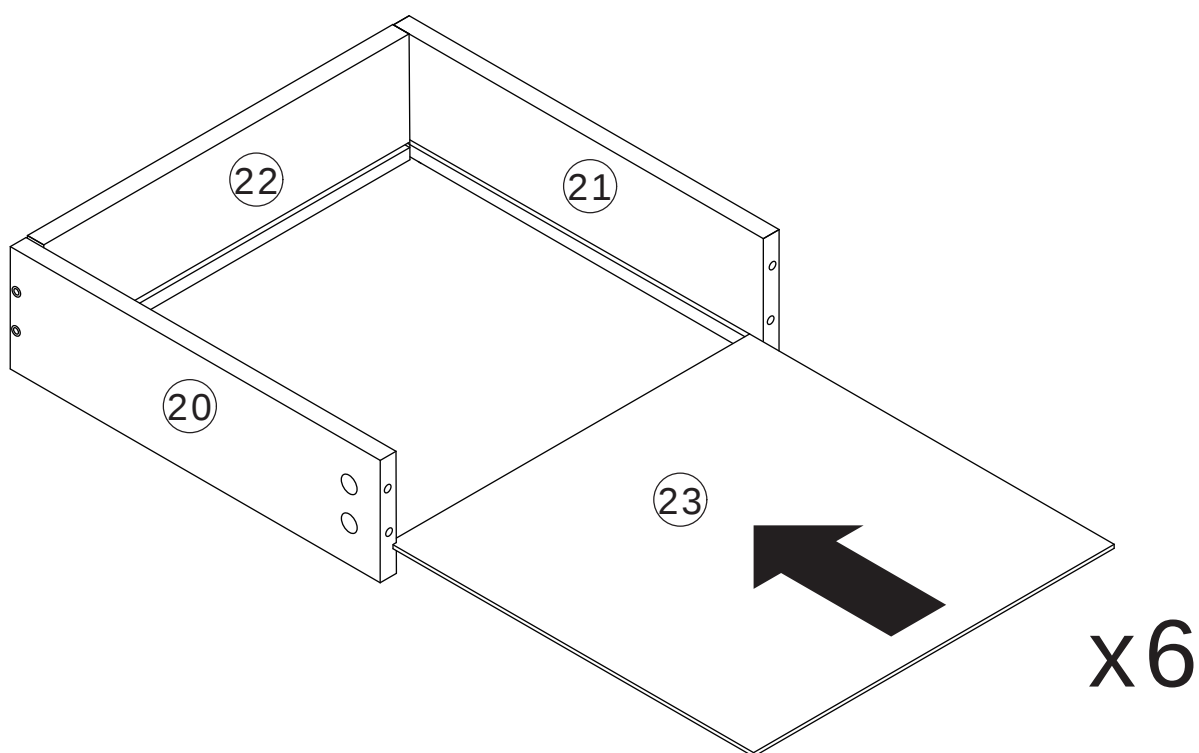

32

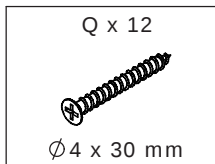  


 Secure part 21 and 20 to part 29 using screw (Q).

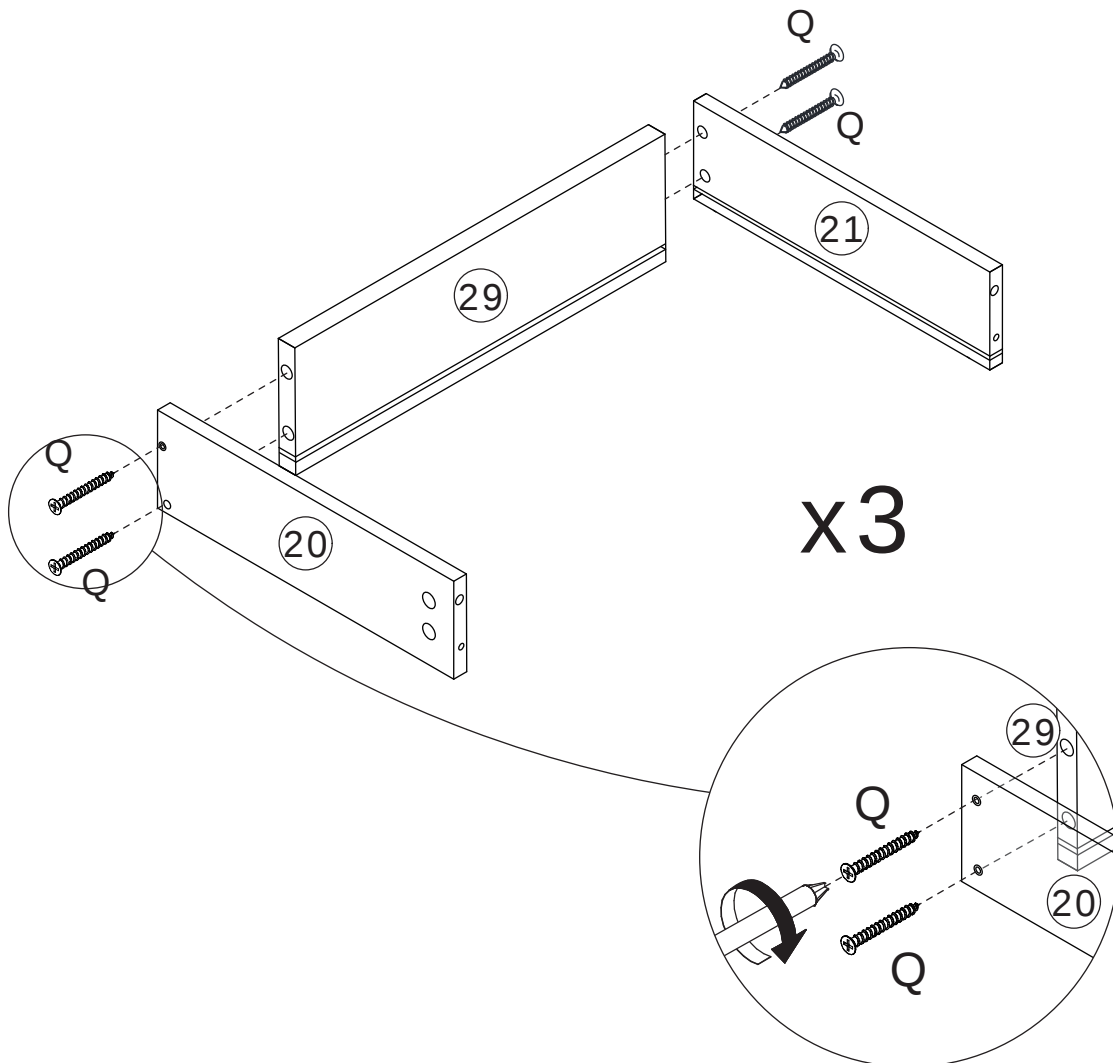


33

 
Insert part 27 along the grooves,
as shown.

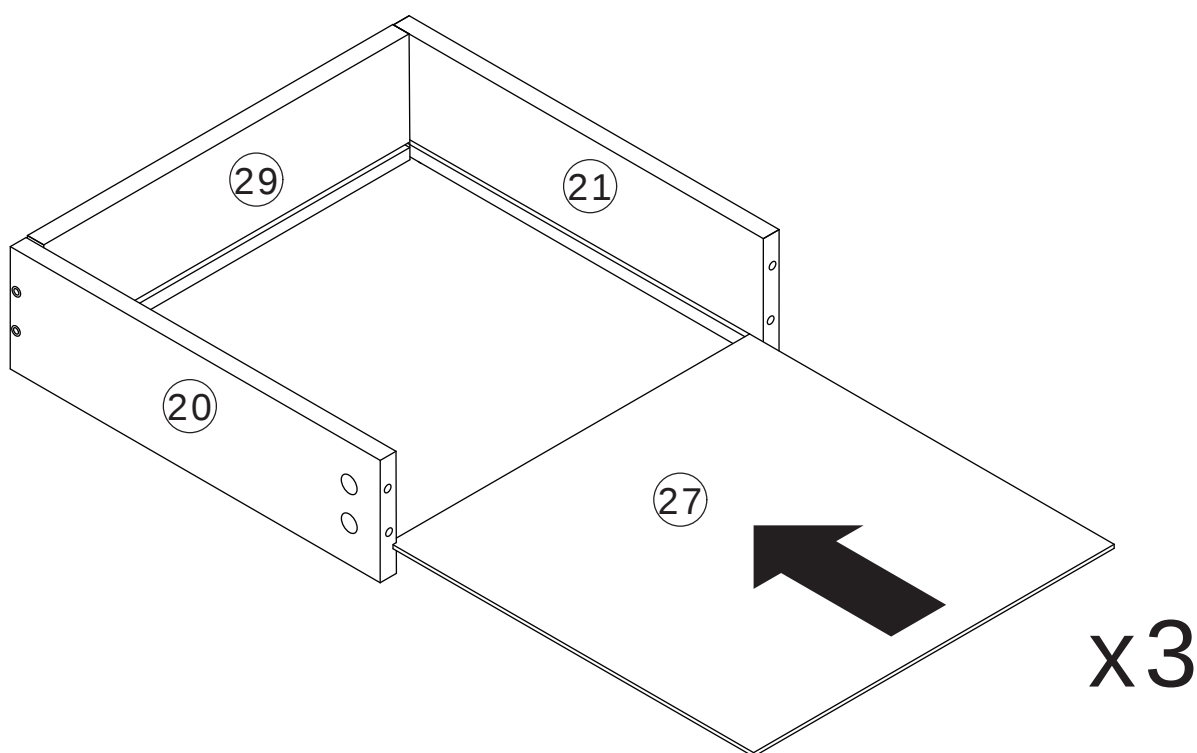

34

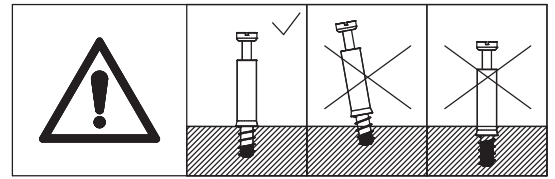 


 Screw eccentric rod (A) onto part 19,
then secure knob (H), as shown.

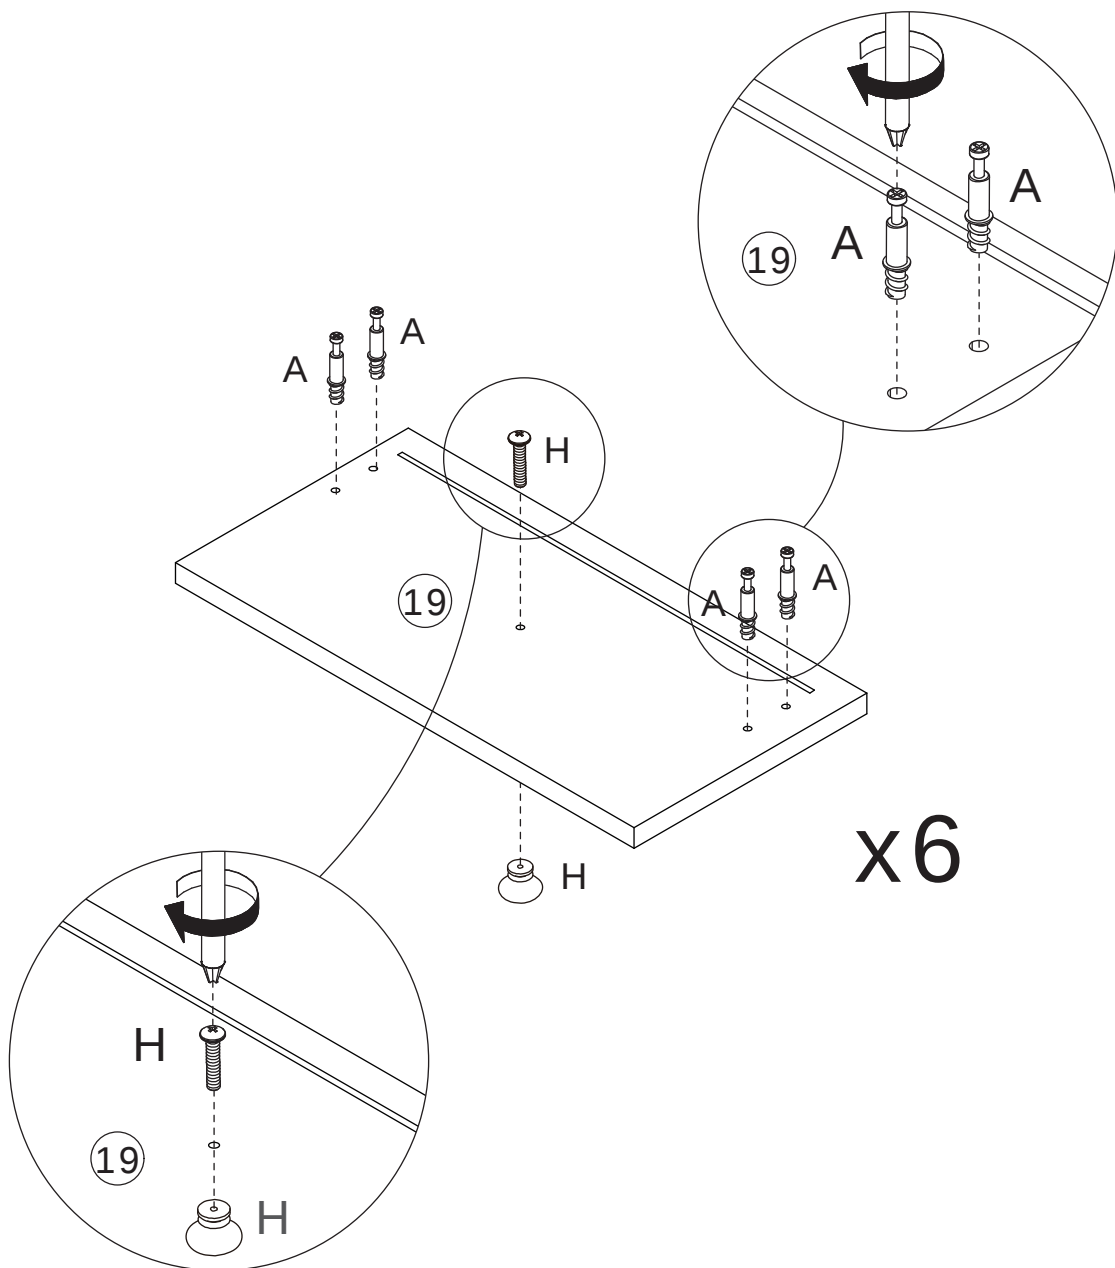


x6

 35

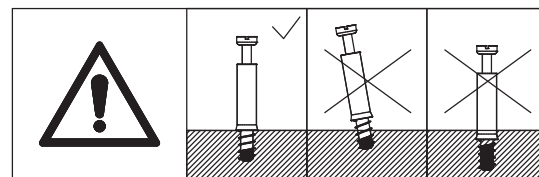

 Screw eccentric rod (A) onto part 28,
then secure knob (H), as shown.

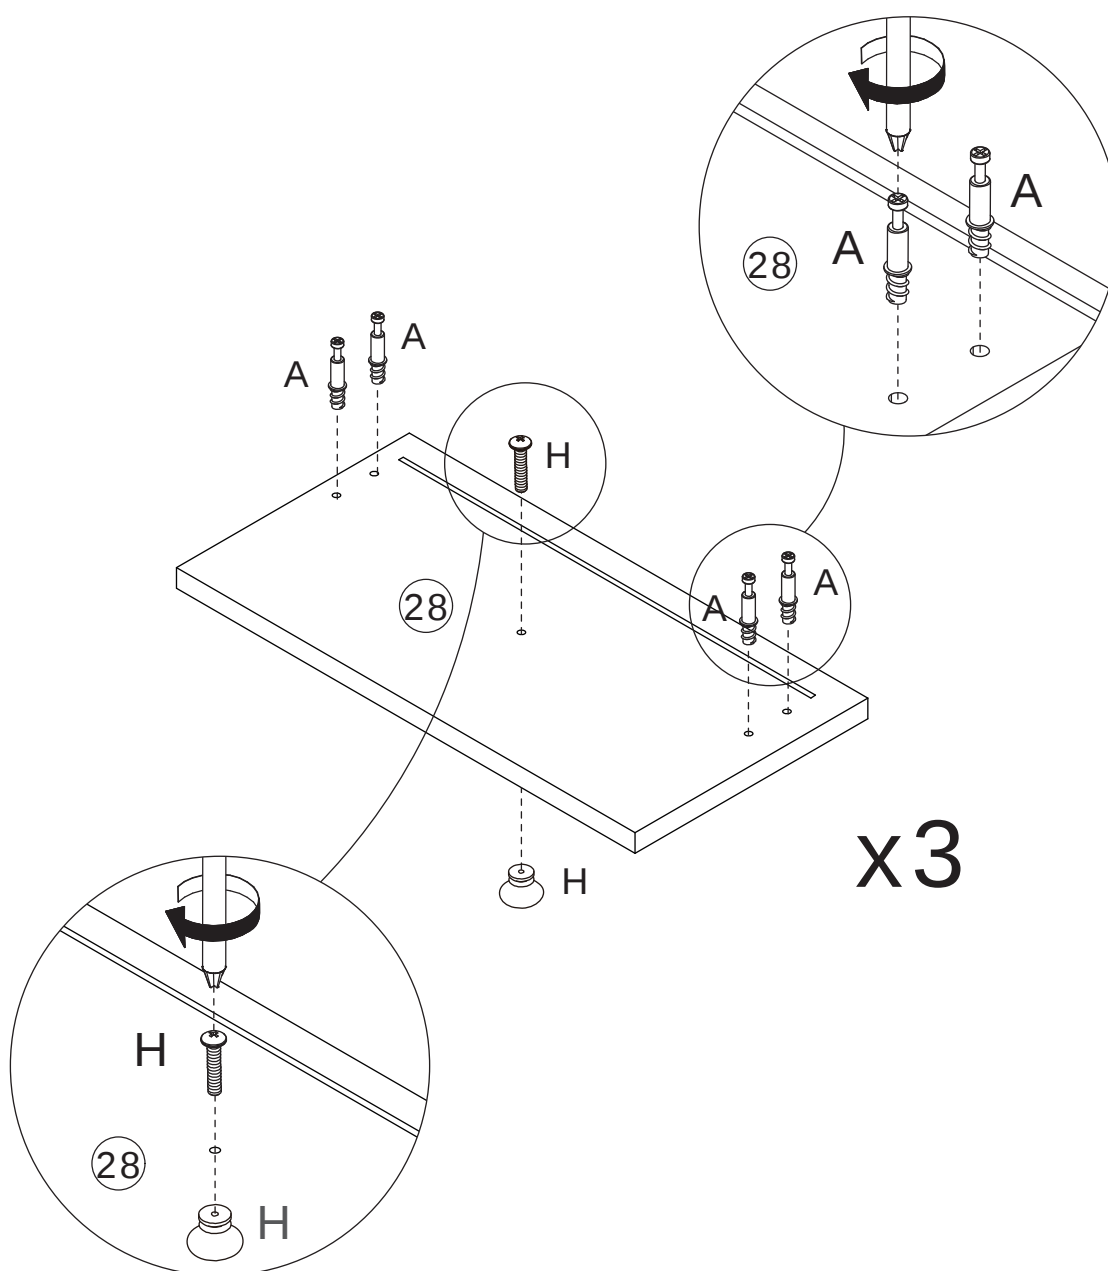



x3

36


K x 24



  Ø 15 x 11 mm

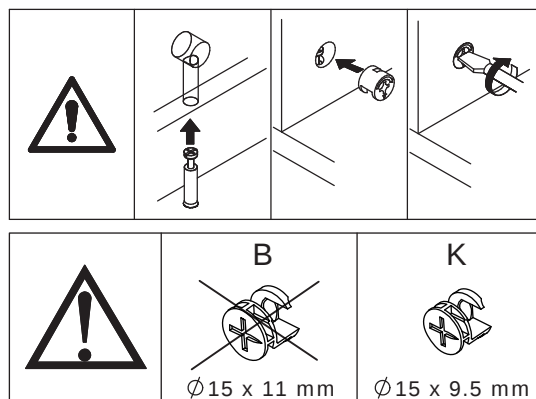

 Connect part 20 and 21 to part 19, tighten by turning cam lock (K) clockwise as shown.


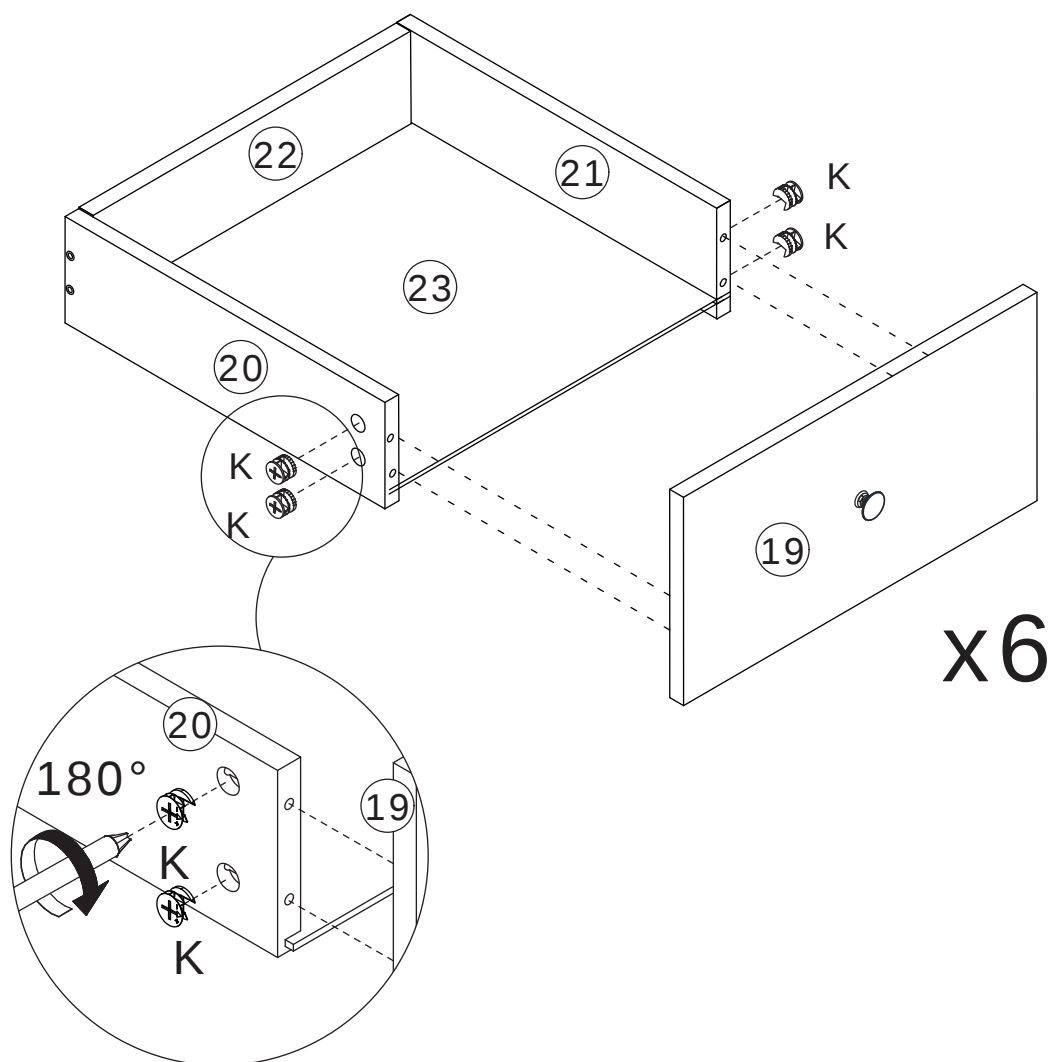


37


K x 12



  Ø 15 x 11 mm

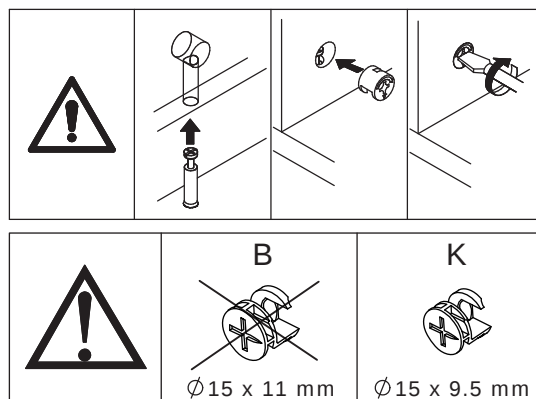

 
Connect part 20 and 21 to part 28, tighten by turning cam lock (K) clockwise as shown.

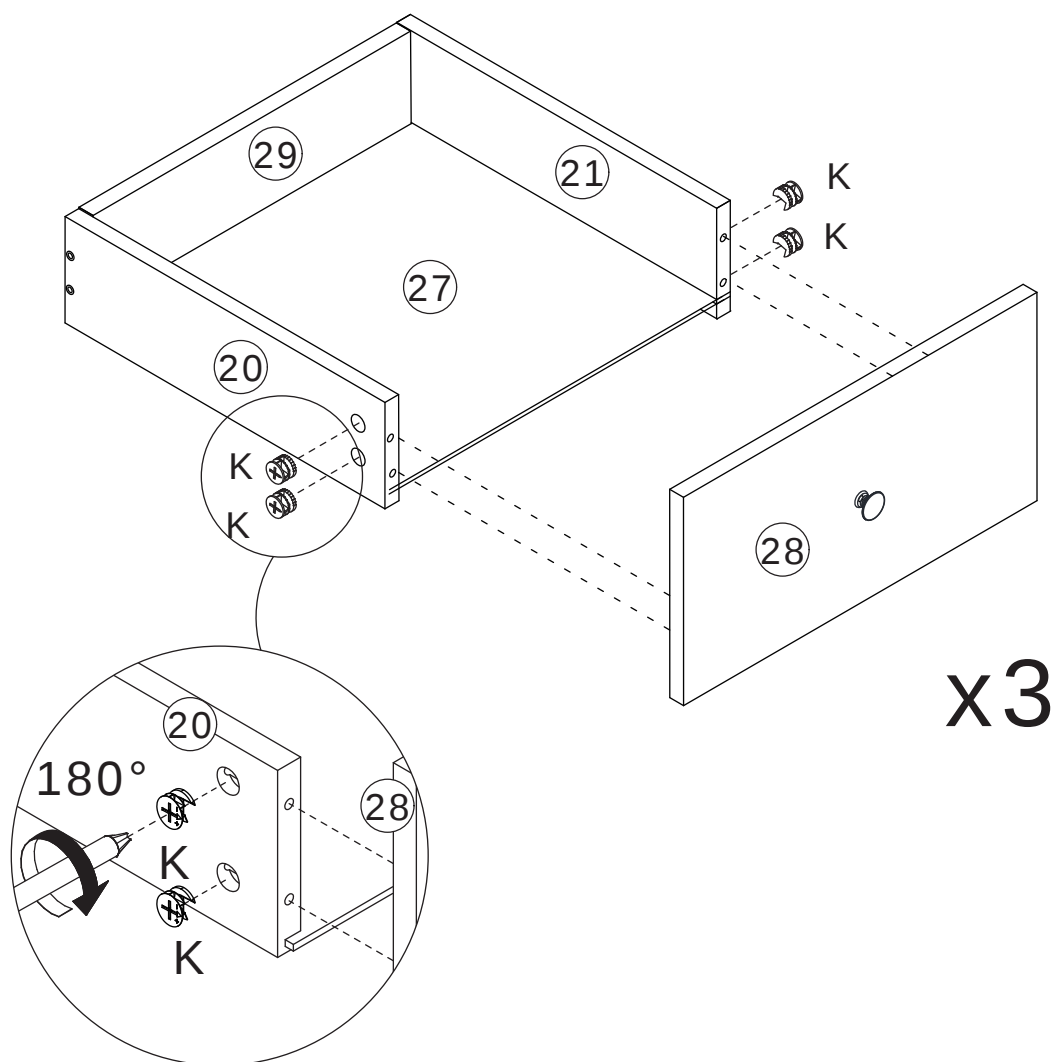

38

D x 6
DL
DR
L=350 mm



 
E x 24
Ø3 x 12 mm



E
Ø3 x 12 mm

P
Ø3.5 x 14 mm

   
Secure slide rails (D-DL) and (D-DR) to part 20 and 21 using screw (E).

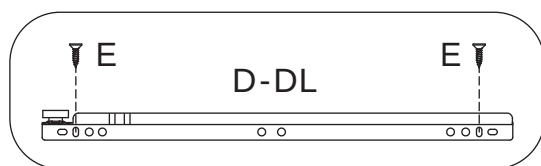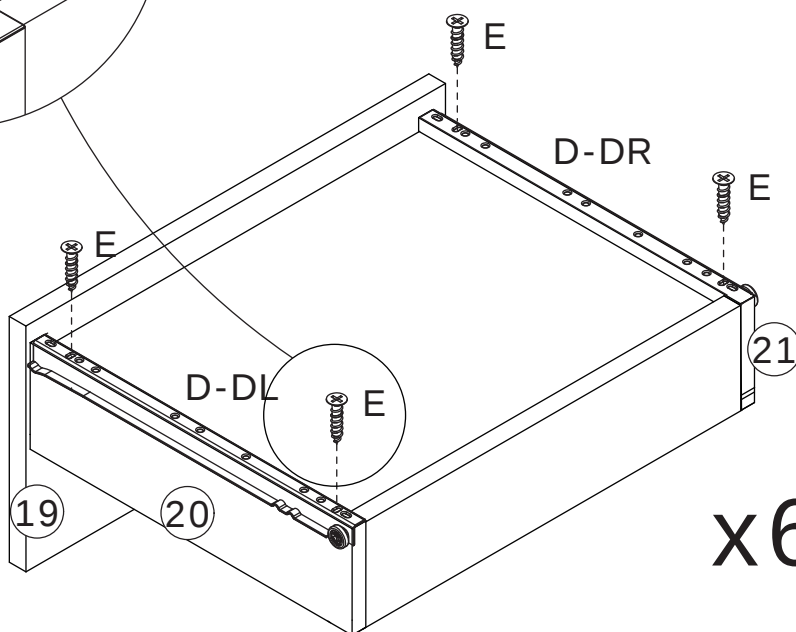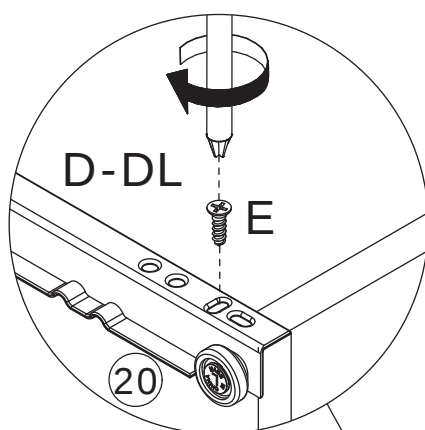

39

D x 3
DL
DR
L=350 mm



 
E x 12
Ø3 x 12 mm



E
Ø3 x 12 mm


P
Ø3.5 x 14 mm

   Secure slide rails (D-DL) and (D-DR) to part 20 and 21 using screw (E).

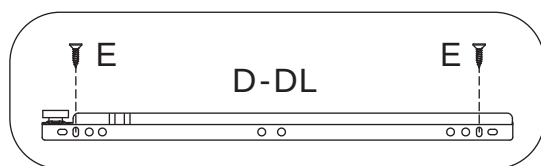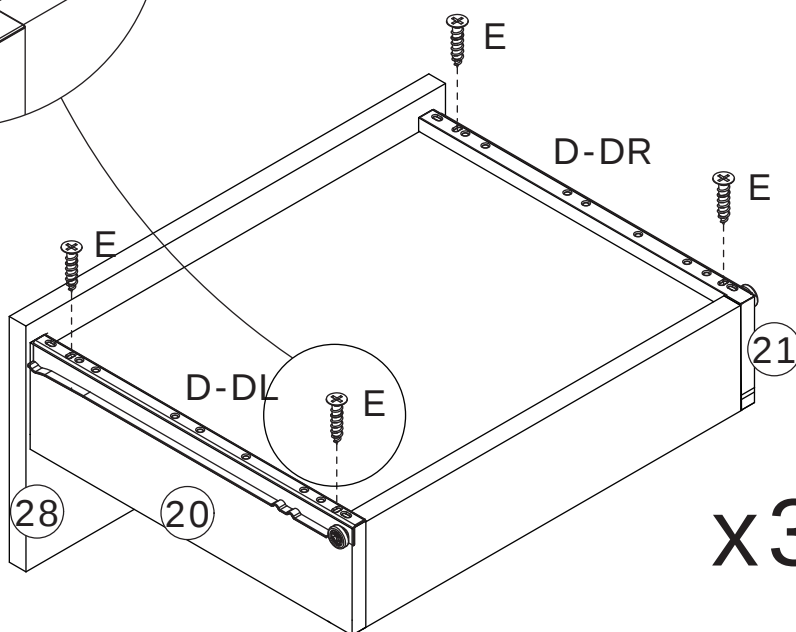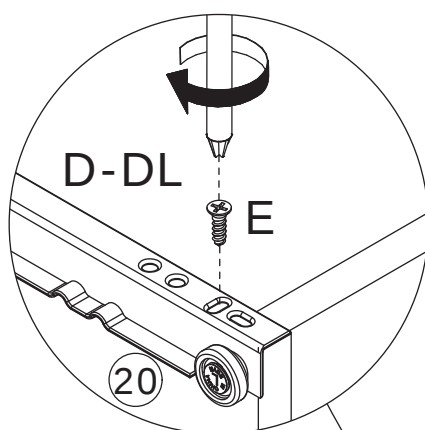

40

 Align the guides and insert all drawers.

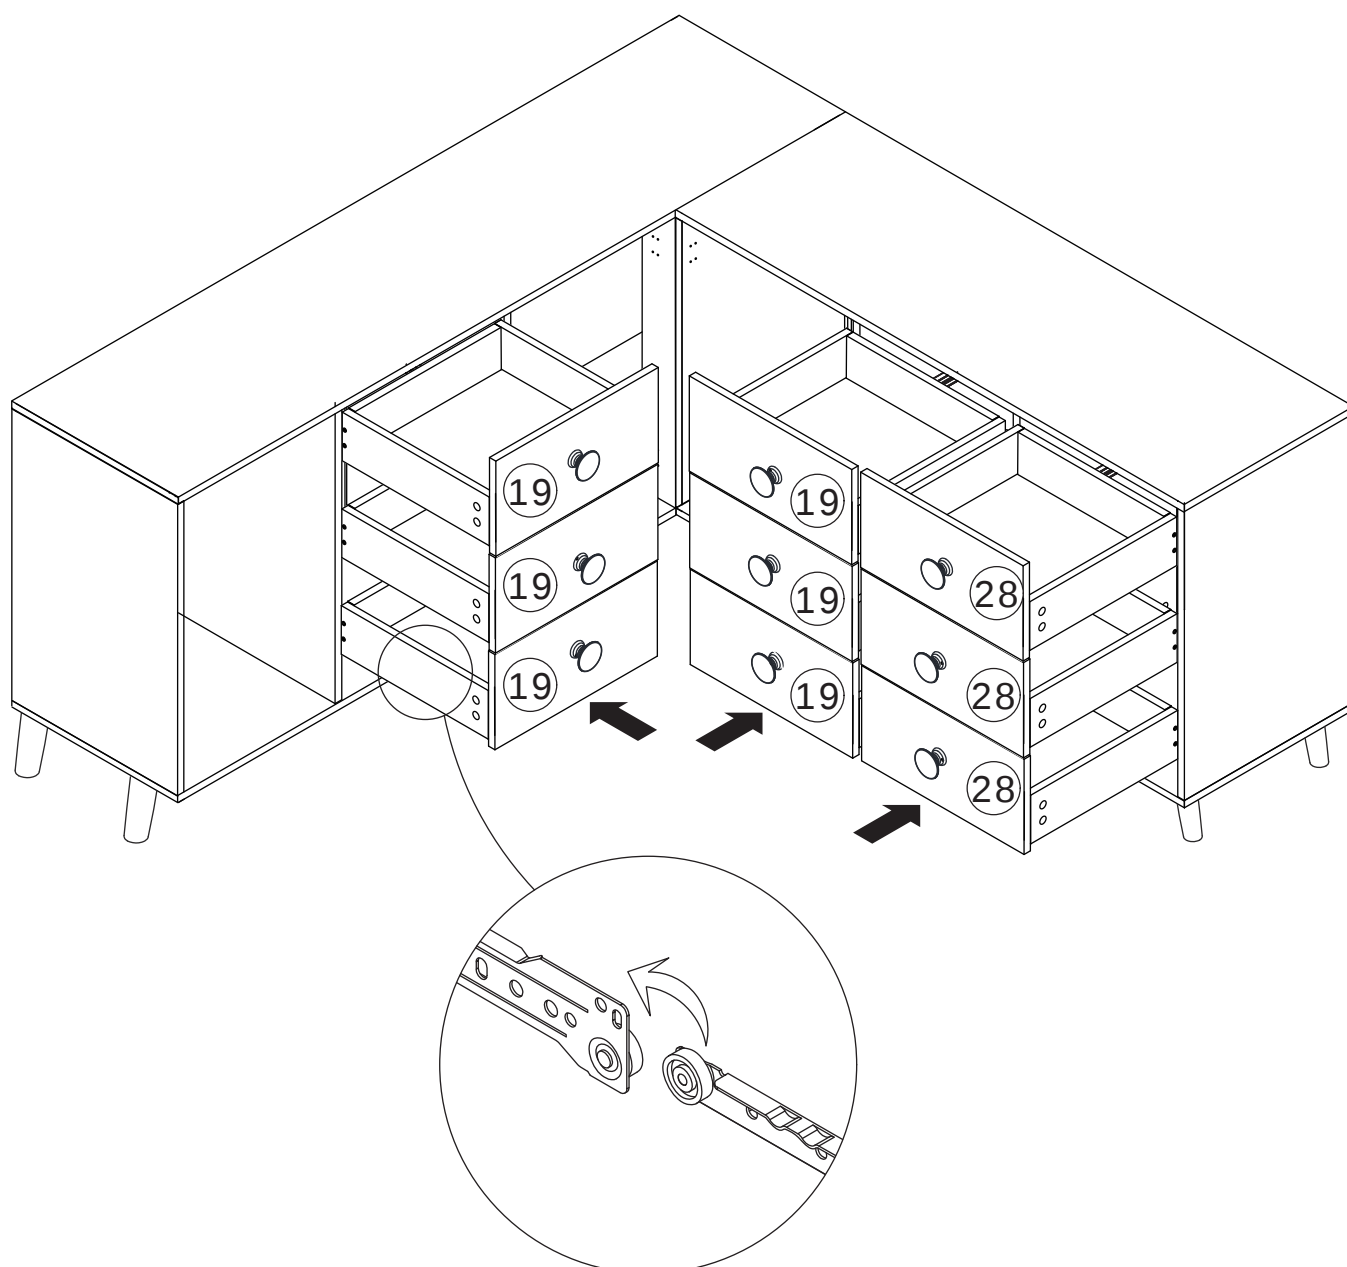


41

E x 30



Ø3 x 12 mm

 L x 30



Insert clip (L) into the slots at the back,
secure with screw (E), as shown.

 


E




Ø3 x 12 mm



P




Ø3.5 x 14 mm

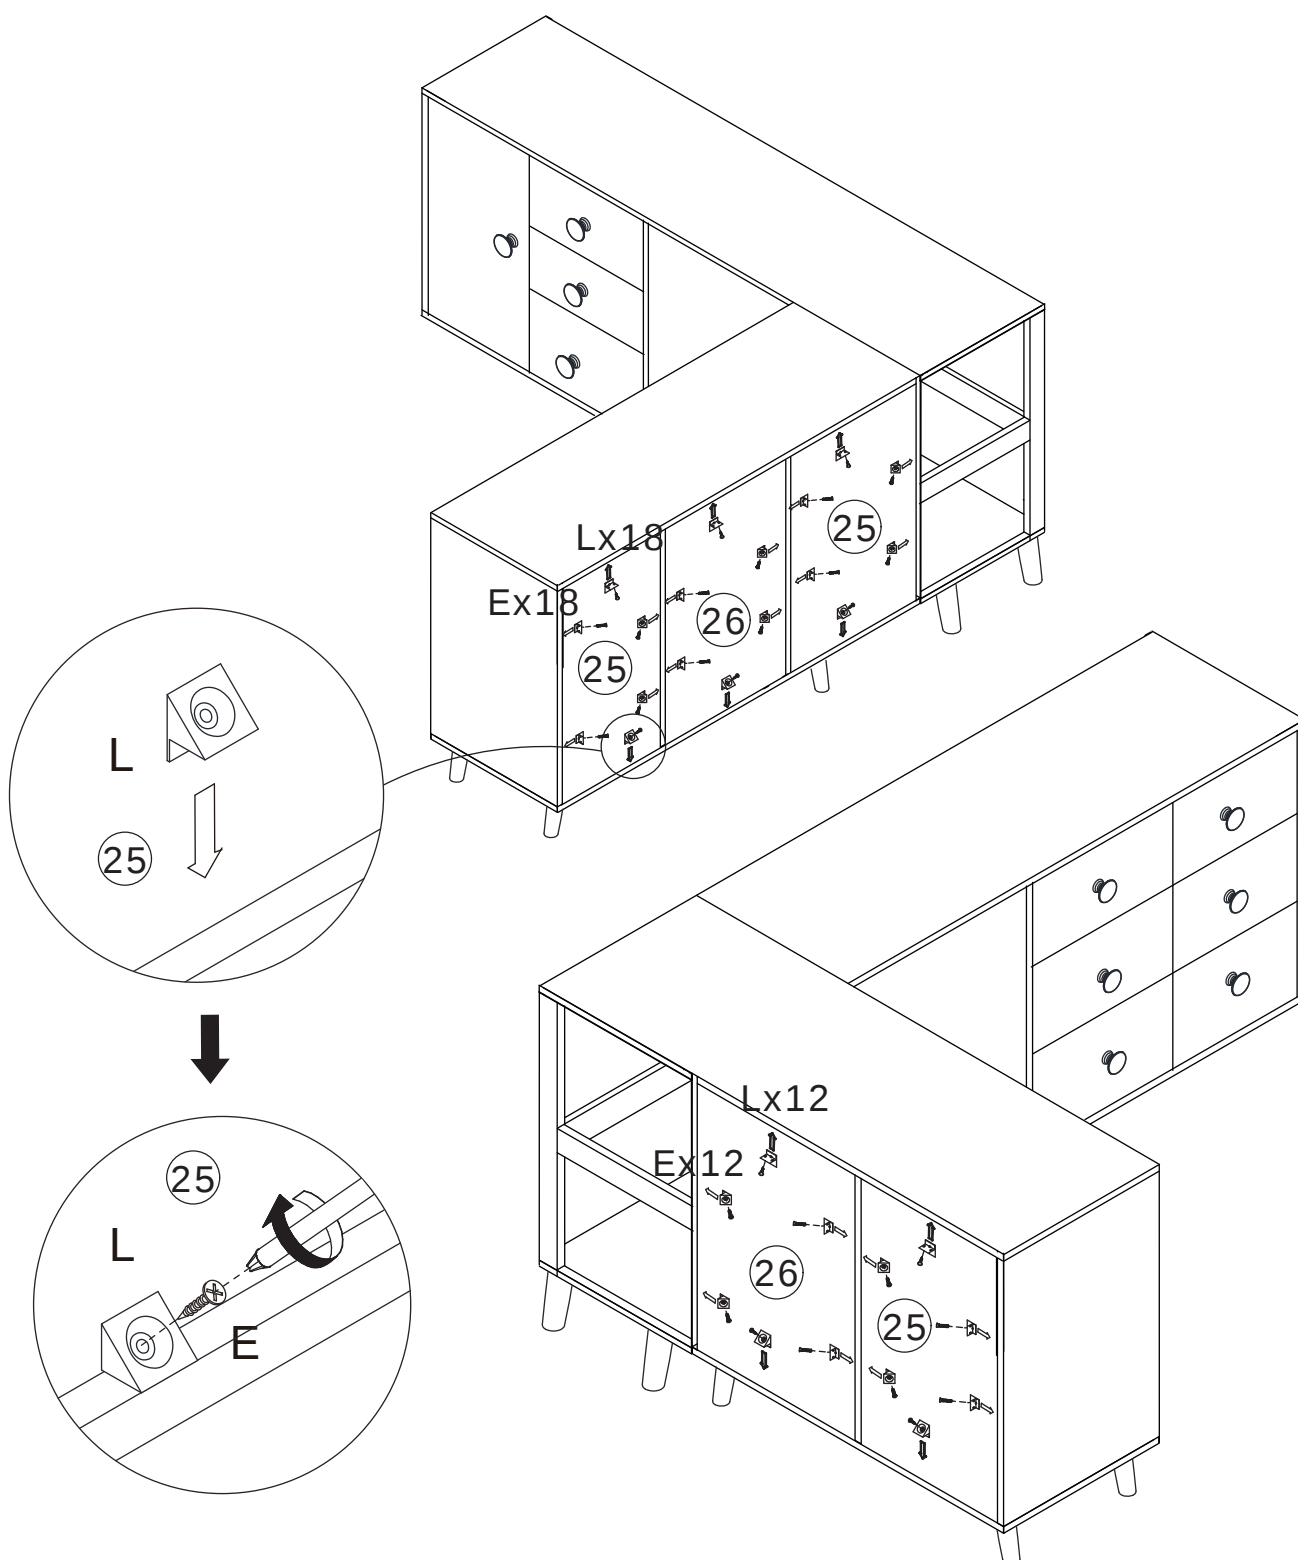 

42

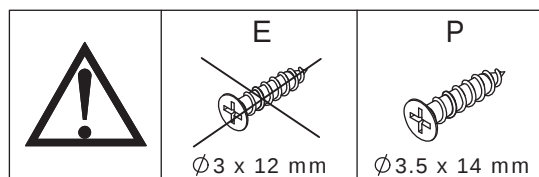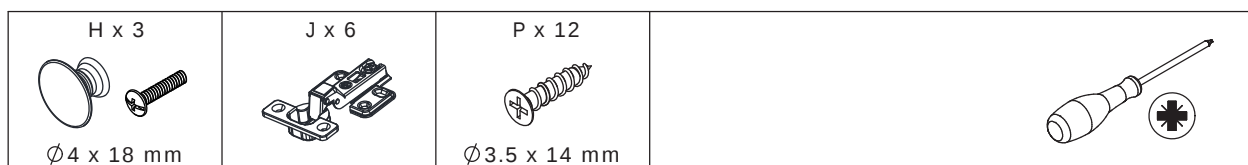  

 Secure hinge (J) to part 24 using screw (P), then secure knob (H), as shown.

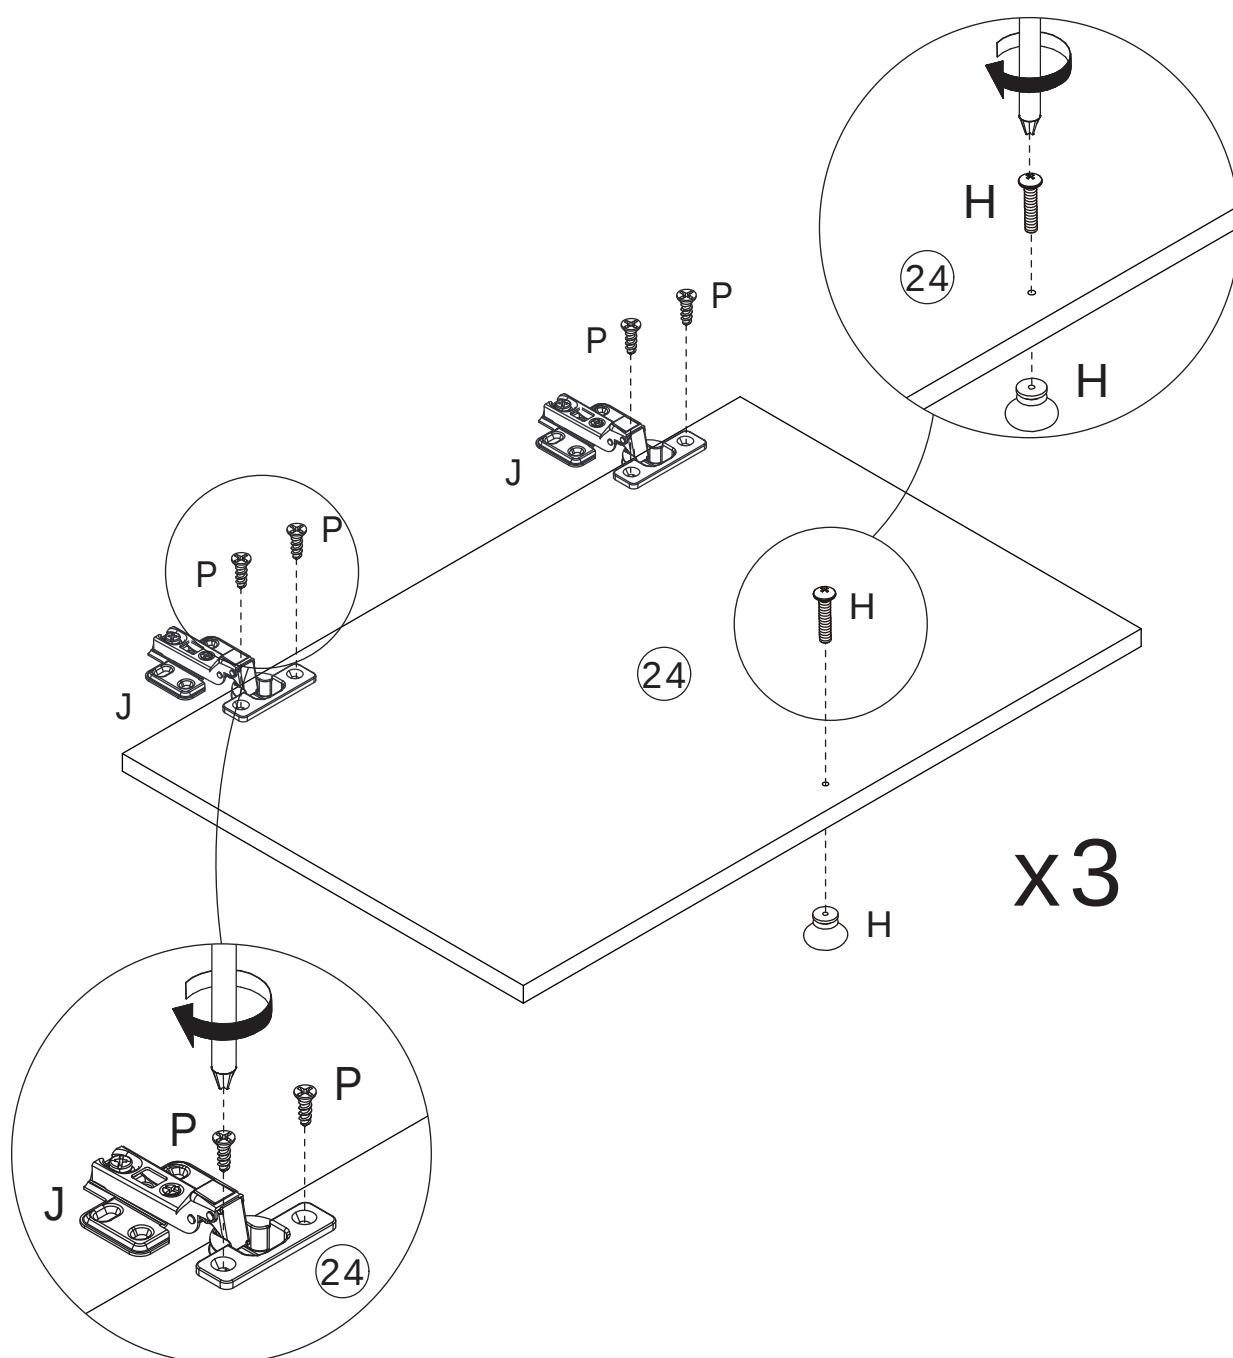


43


P x 16



 Ø 3.5 x 14 mm




E

 


Ø 3 x 12 mm

 P






Ø 3.5 x 14 mm

 
Connect part 24 to part 3 and 11 by securing hinges using screw (P).

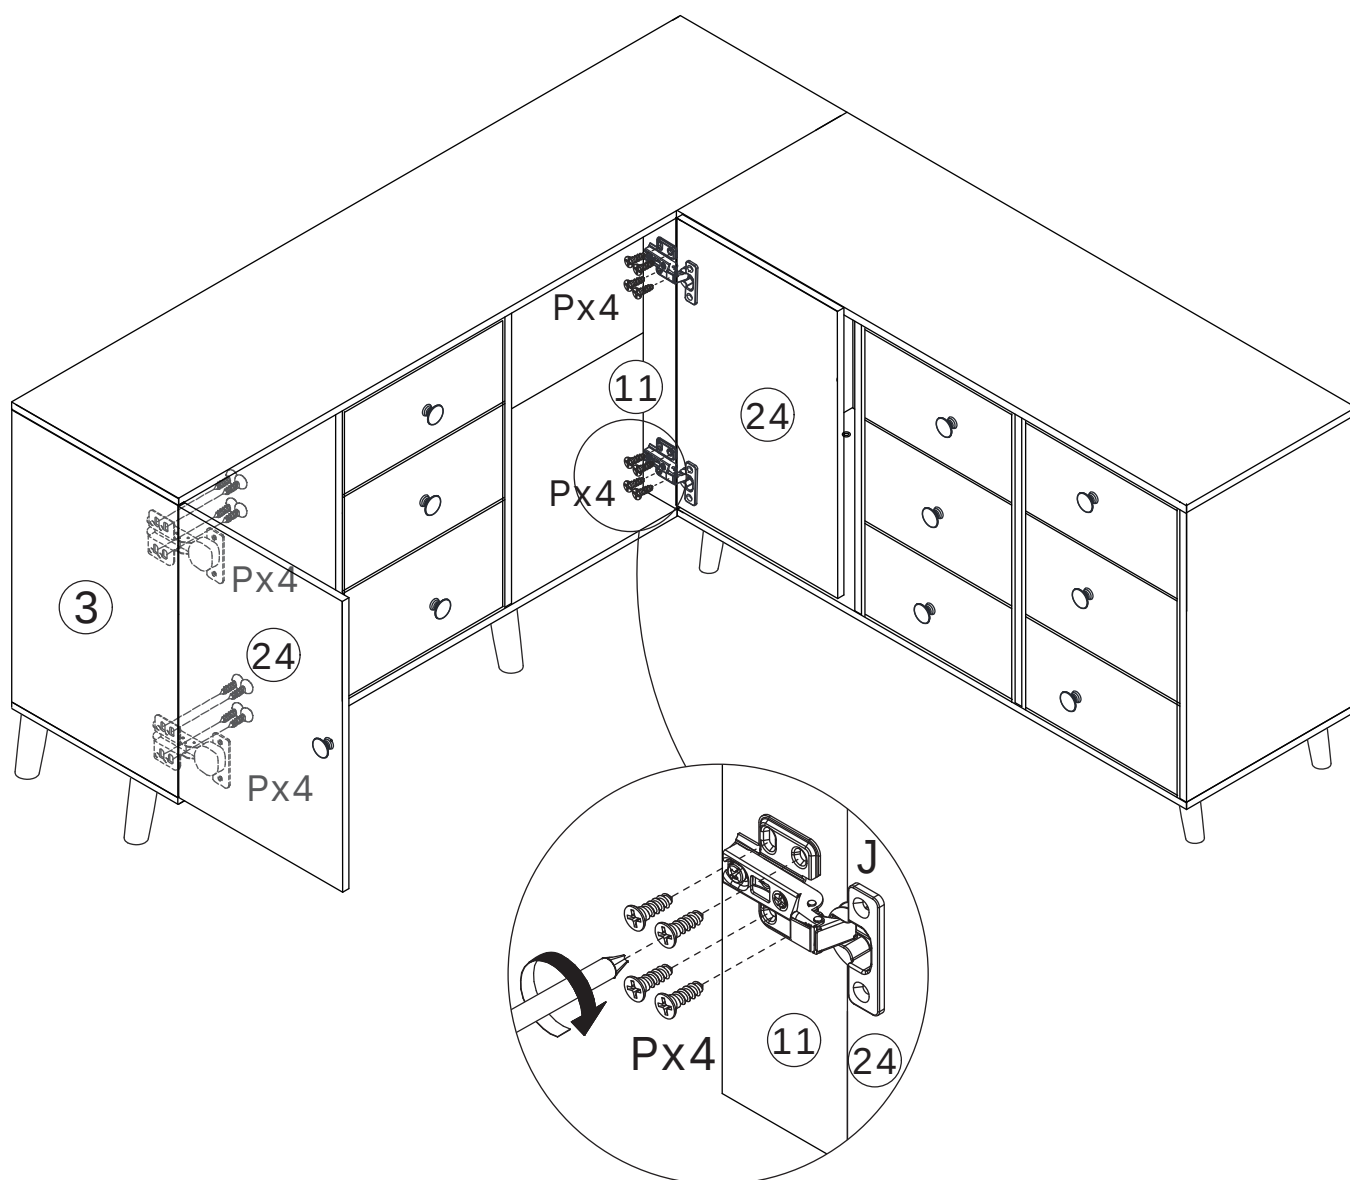

44

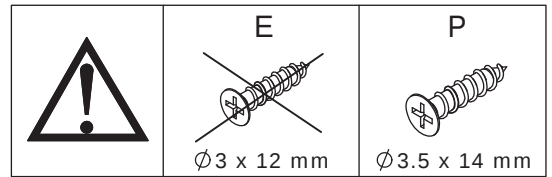  
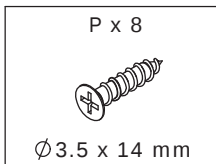 


 Connect part 24 to part 18 by securing hinges using screw (P).

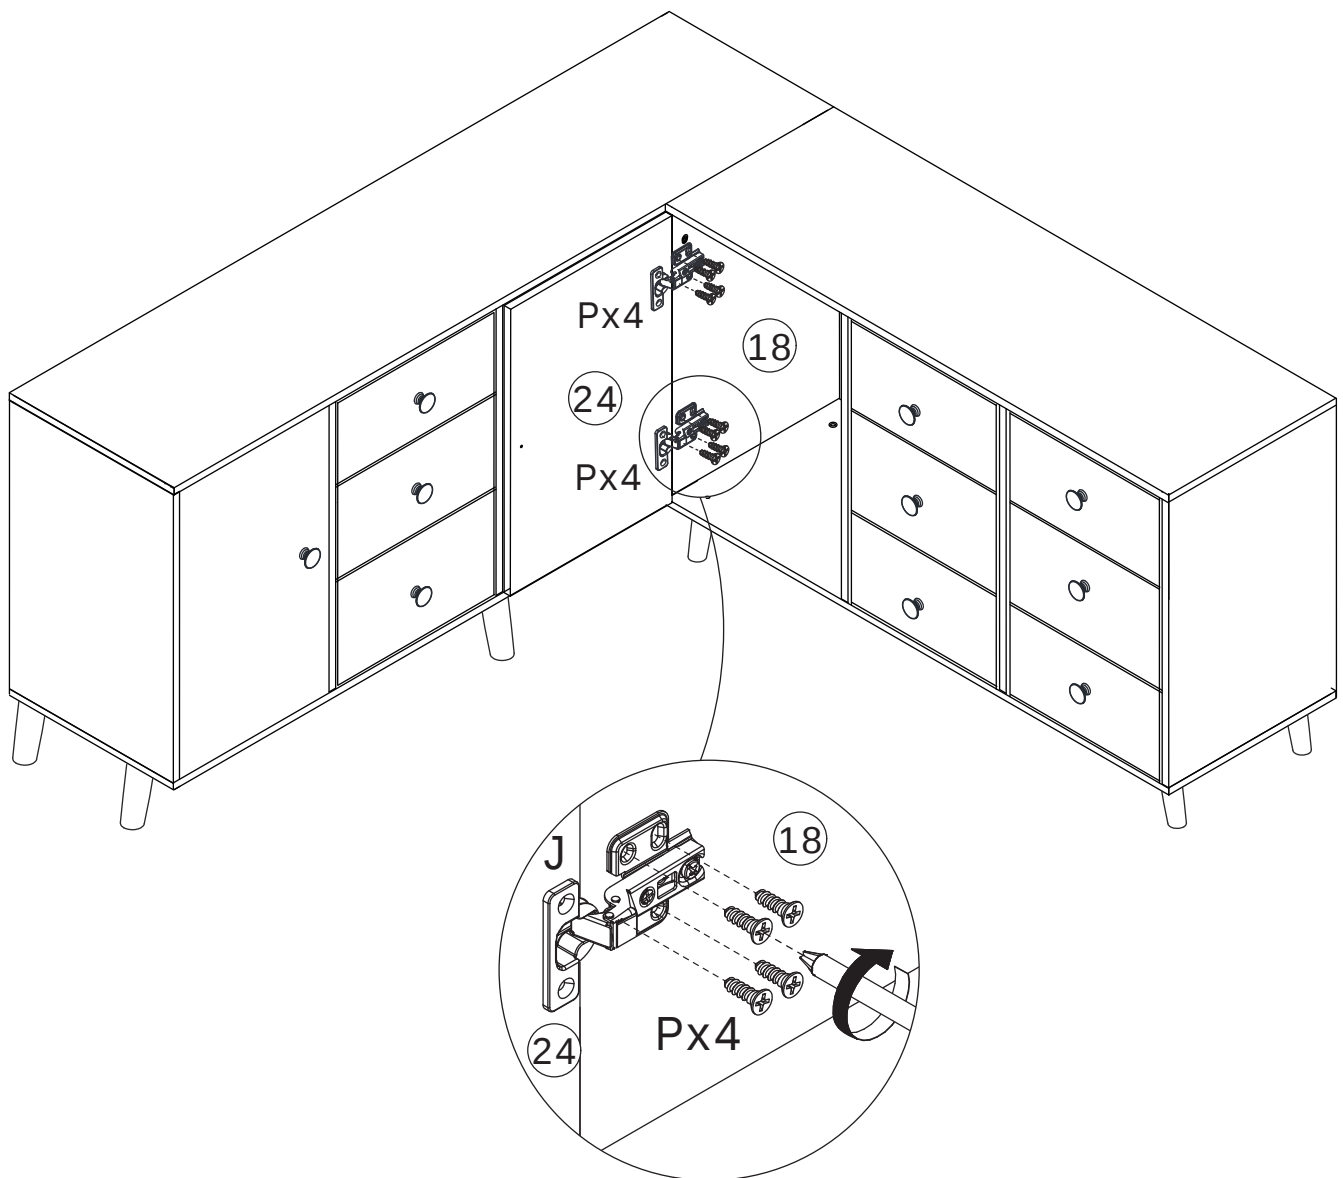


45

  N x 4
N-3 N-4
Ø4 x 30 mm




Install the anti-tip device.

 
1.

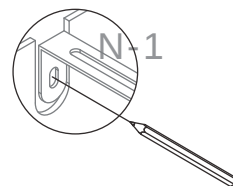

 
2.

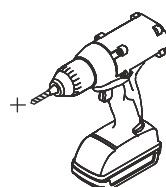


 
3.

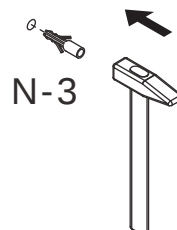

 4.

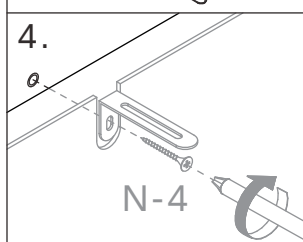

WALL

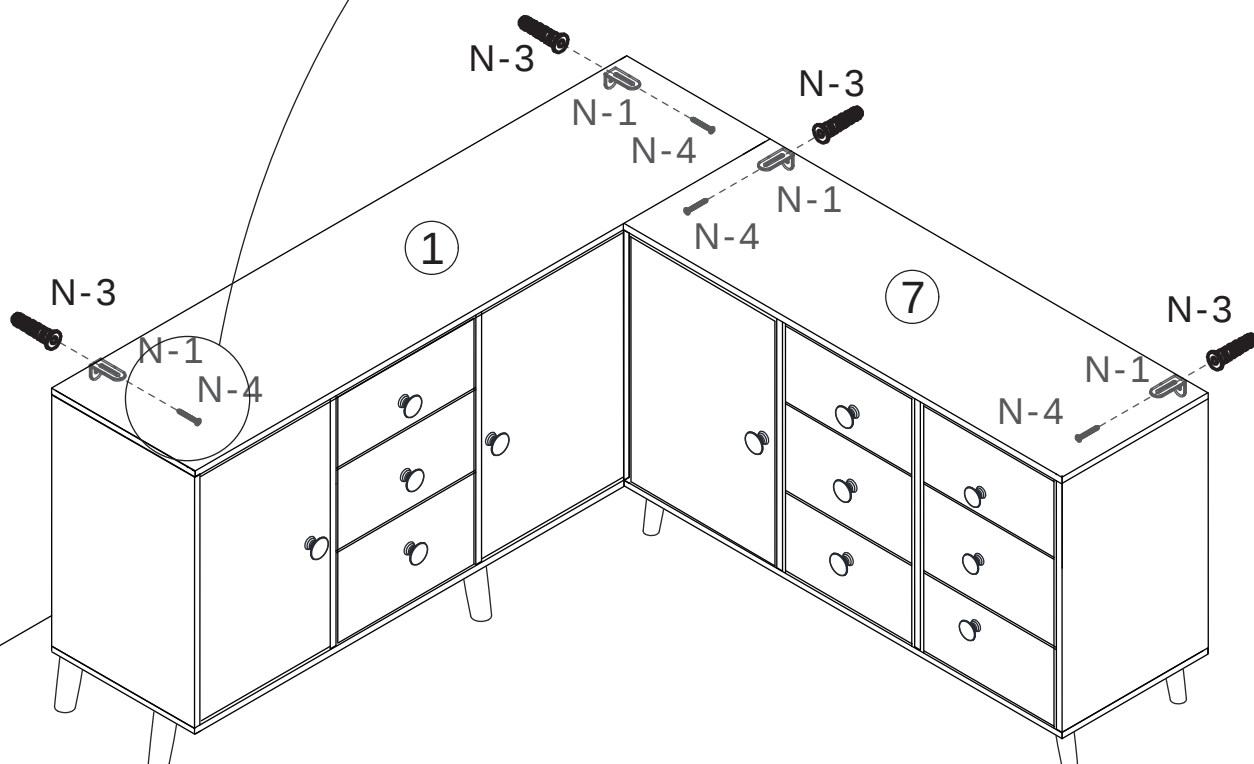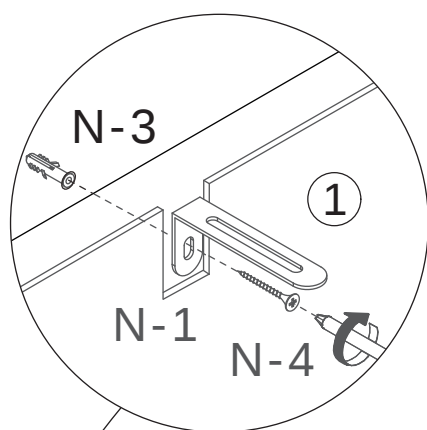  

46

 
 
 
M x 11



R x 94



Apply hole cover (R) to the cam locks, then attach non-slip pads M onto part 30, as shown.

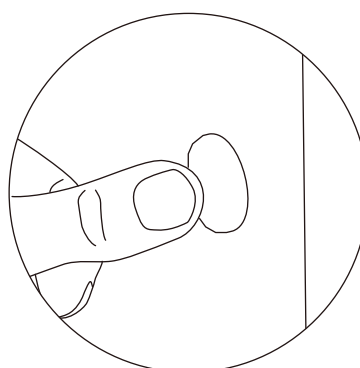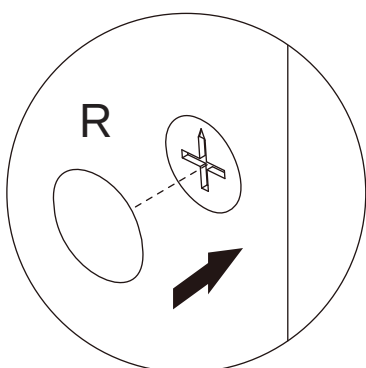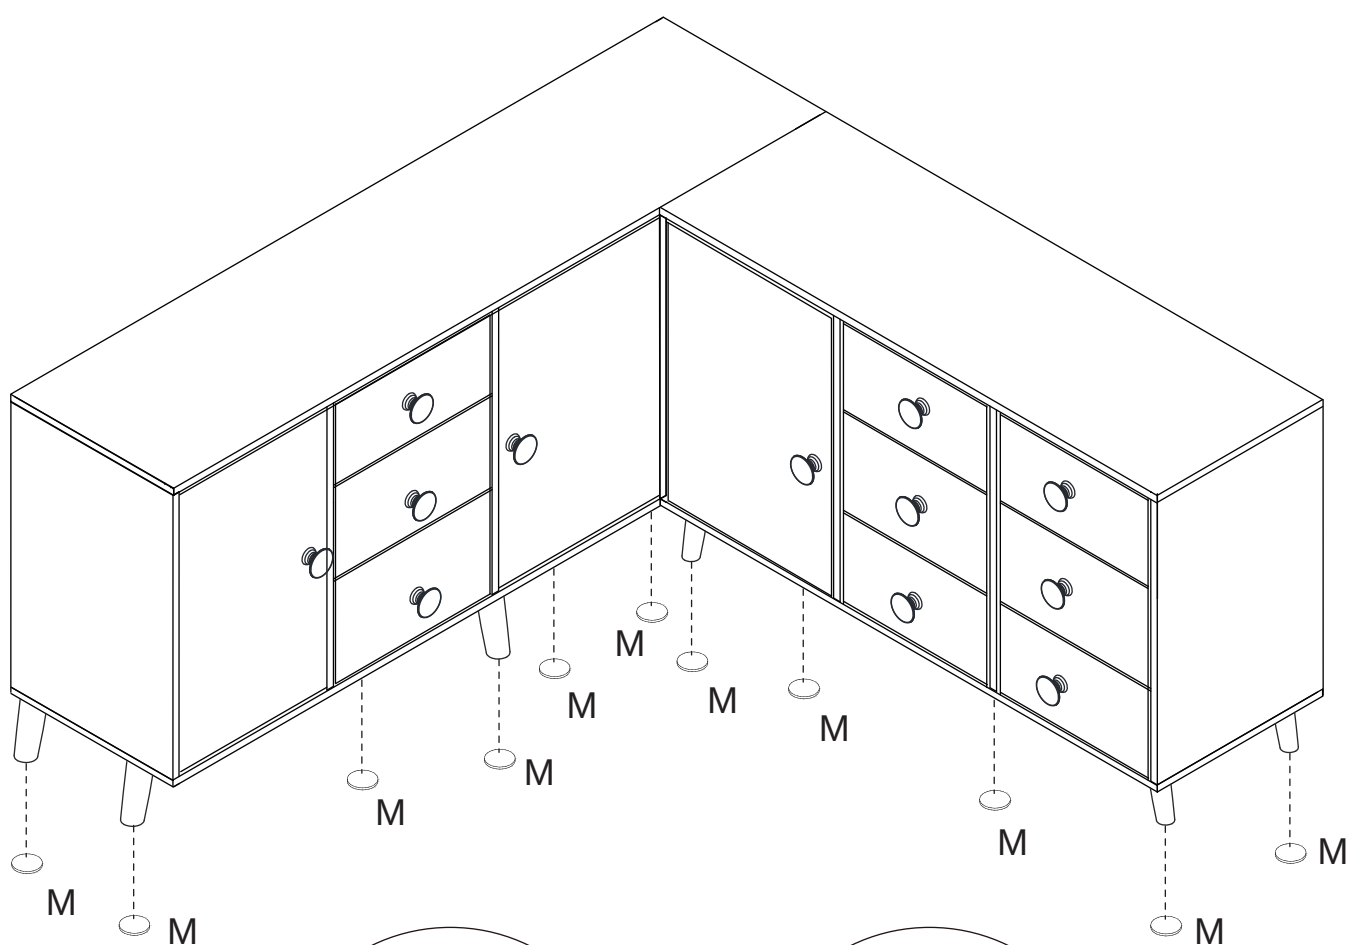

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.