 
 


72 INCH WIDE TV STAND

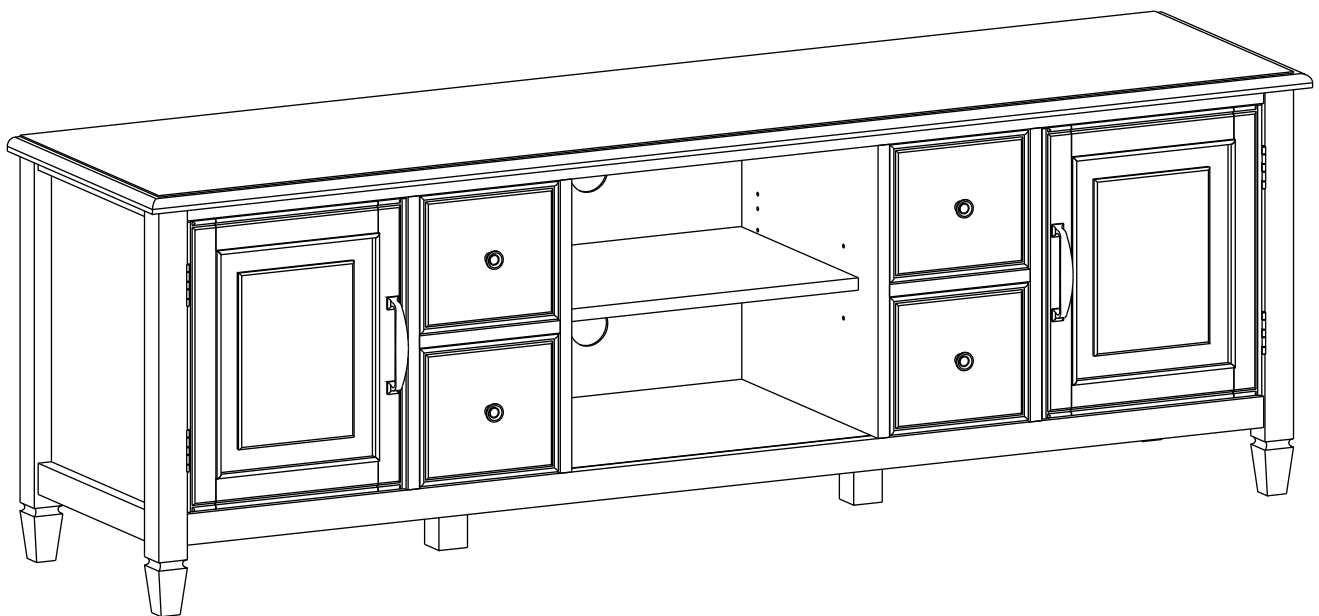

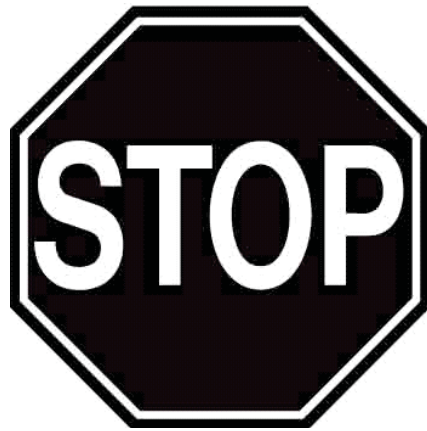

DO NOT RETURN

**FOR REPLACEMENT PARTS OR OTHER INQUIRIES
PLEASE CONTACT US**

**PLEASE ENSURE TO HAVE THE MODEL #
FROM THE PACKAGING OR
INSTRUCTION BOOKLET**

IMPORTANT : Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

SAFETY INFORMATION

Identify all the parts and hardware. Do not discard of the packaging until you have checked that you have all of the parts and hardware required. Hardware package may have spare parts.

WARNING: This item contains small parts which can be swallowed by children and pets. Keep children and pets away during assembly. To avoid danger of suffocation, always keep plastic bags away from children and pets.

We recommend that you assemble this unit on a carpeted floor to avoid scratches. We do not recommend the use of power tools for assembly as this could damage the unit. Only use manual tools.

May require 2 people for ease of assembly.

CARE and MAINTENANCE

To clean, use a soft or slightly damp cloth, then wipe with a clean, dry cloth. Dust with soft dry cloth.

Do not use ammonia-based cleaning products, as they will damage the finish.

 
Do not leave liquids or damp cloths on this furniture.

To avoid dulling of the finish, do not place furniture in direct sunlight.


Please inspect and tighten all screws or bolts on a regular basis to ensure proper performance and safety of your item.

PRE-ASSEMBLY INFORMATION


PARTS DESCRIPTION

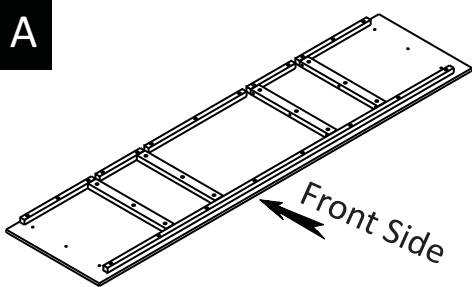


TOP
QTY 1

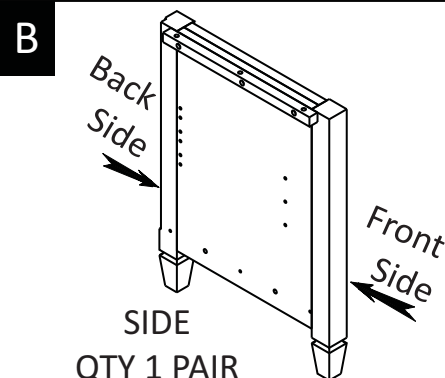 


SIDE
QTY 1 PAIR

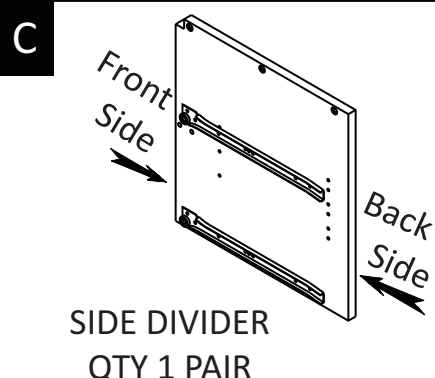 


SIDE DIVIDER
QTY 1 PAIR

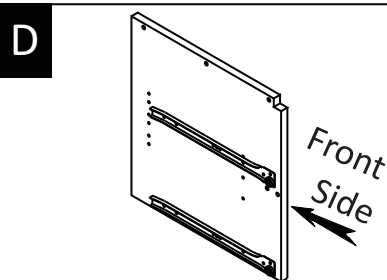 


CENTRE DIVIDER
QTY 1 PAIR

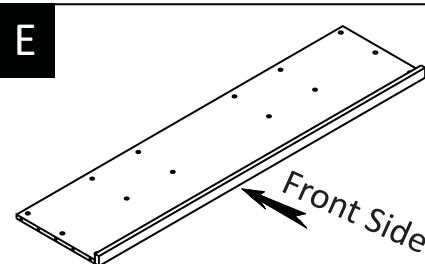 


BOTTOM SHELF
QTY 1

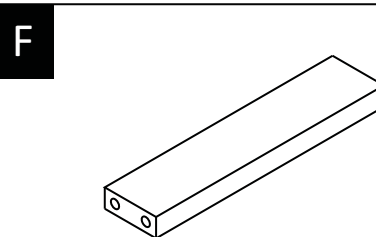 


FRONT BAR
QTY 2

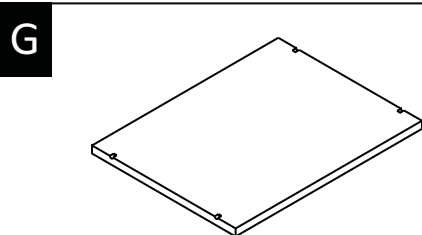 


CENTRE SHELF
QTY 1

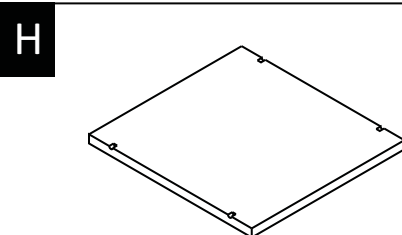 


SIDE SHELF
QTY 2

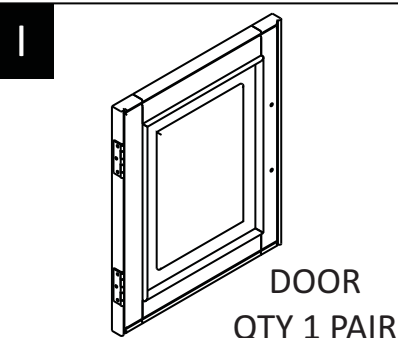 


DOOR
QTY 1 PAIR

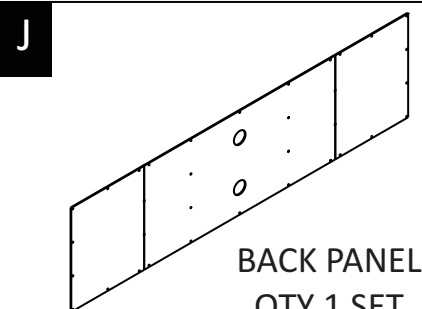 


BACK PANEL
QTY 1 SET

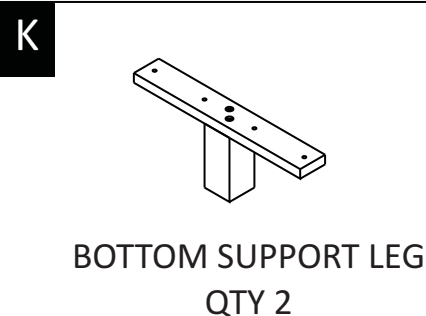 


BOTTOM SUPPORT LEG
QTY 2

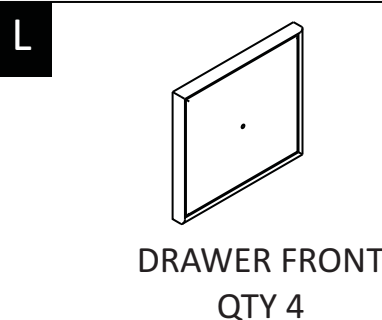 


DRAWER FRONT
QTY 4

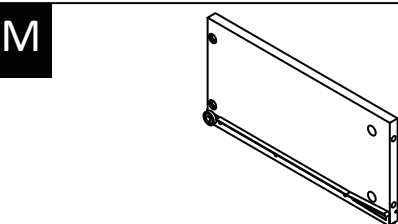 

DRAWER SIDE
QTY 4 PAIRS

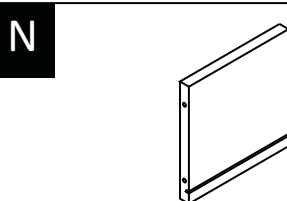 

DRAWER BACK
QTY 4

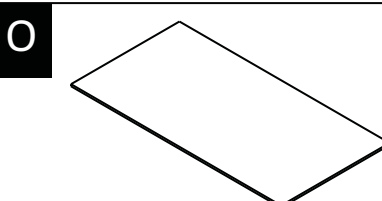 


DRAWER BOTTOM
QTY 4

NEED HELP? For help with assembly or if you are missing a part, Please call customer service

PRE-ASSEMBLY INFORMATION


HARDWARE DESCRIPTION

 1



ALLEN KEY SCREW
M6 X 30 mm
QTY 46

 2



CAM LOCK PIN
CAM LOCK
QTY 22 SETS

3



 
WOOD DOWEL
Ø8 X 30 mm
QTY 24

4




ALLEN KEY
QTY 1

5



PHILLIPS SCREW
ROUND HEAD
M4 X 15 mm
QTY 34

 6

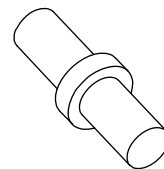


SHELF SUPPORT
QTY 18

7




PHILLIPS SCREW
M3 X 12 mm
QTY 12

 8




PHILLIPS SCREW
M3 X 15 mm
QTY 8

 9




PHILLIPS SCREW
M4 X 25 mm
QTY 8

 10

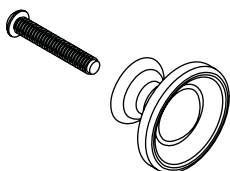


HANDLE
QTY 4 SETS

 11

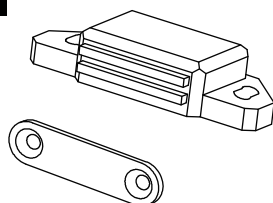


MAGNET and PLATE
QTY 2 SETS

 12

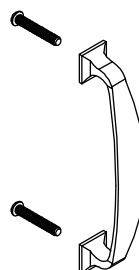


HANDLE
QTY 2 SETS

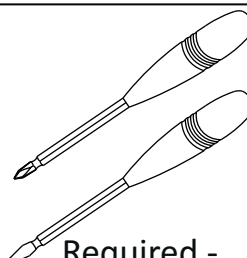 

Required -
Flathead screwdriver
Phillips screwdriver
Not Included


NEED HELP? For help with assembly or if you are missing a part,
Please call customer service

 COMPONENTS – KEY DIAGRAM

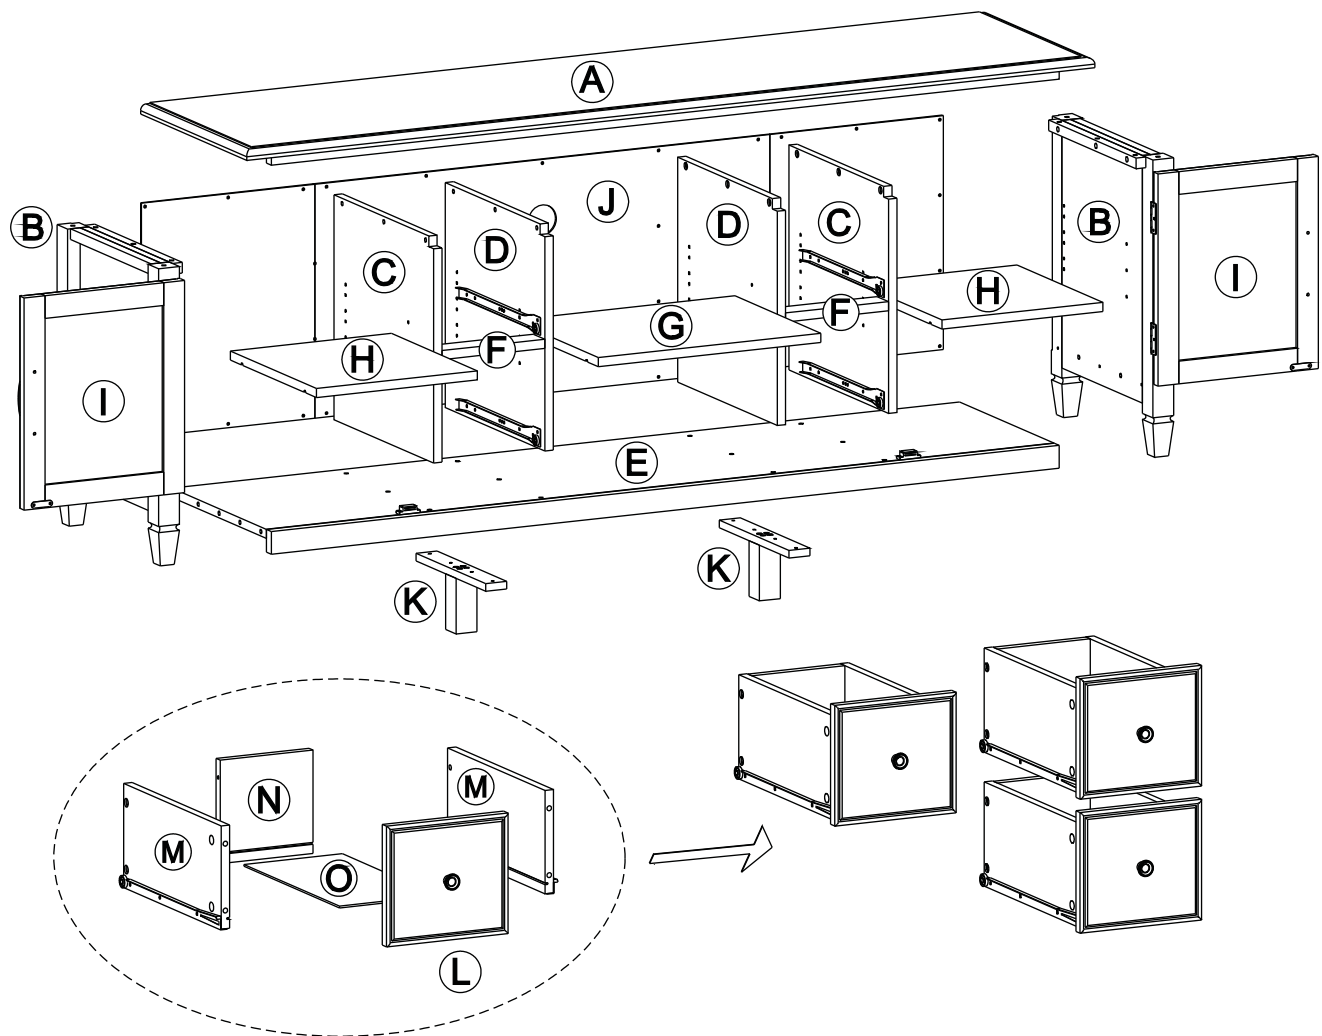


ASSEMBLY

 STEP 1

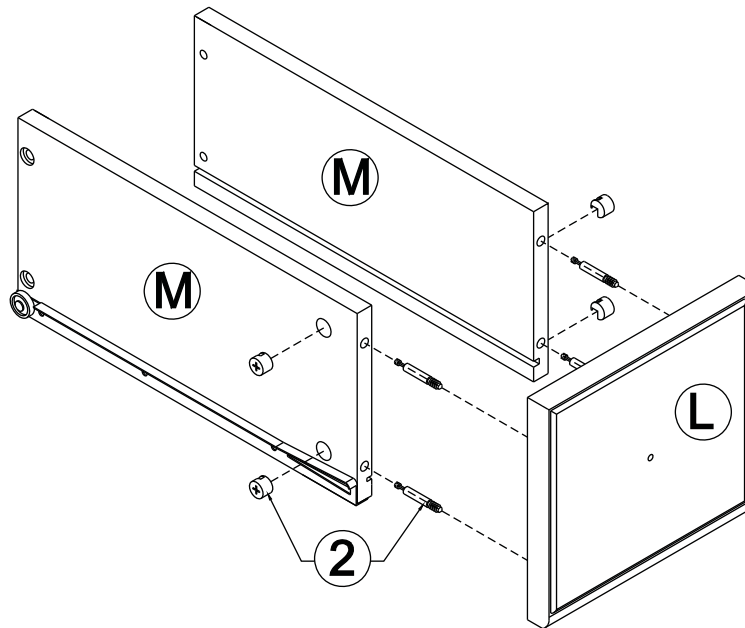

1. Attach 4 Cam Lock Pins (2) to back of Drawer Front (L).
2. Align Cam Lock Pins with pre-drilled holes and attach Drawer Sides (M).
3. Insert 2 Cam Locks (2) into pre-drilled holes on each Drawer Side (M).
4. Use flathead screwdriver secure Cam Locks.

 
STEP 2

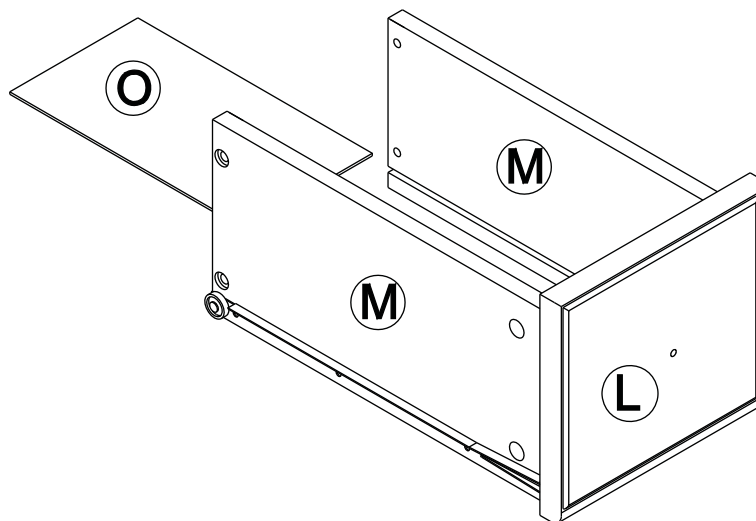

1. Slide Drawer Bottom (O) firmly into slots on Drawer Sides (M) and Drawer Front (L).



ASSEMBLY

 STEP 3

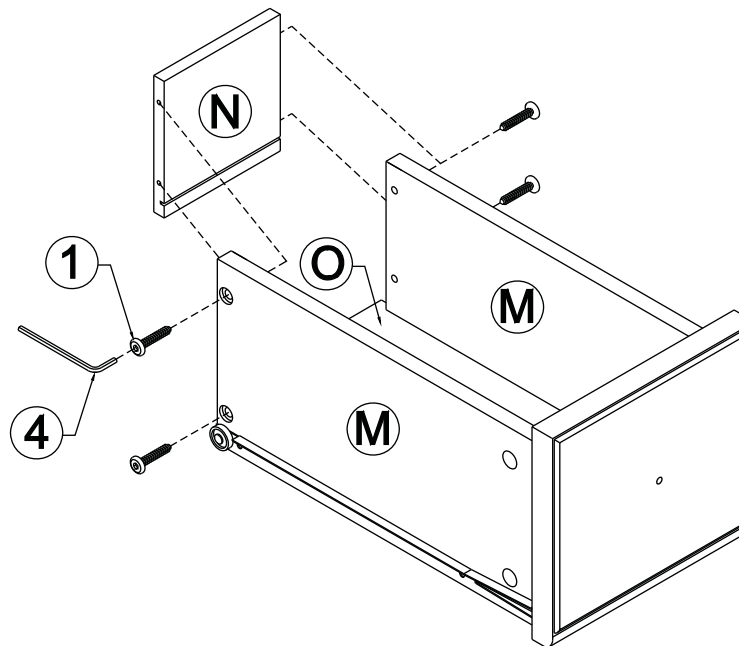

1. Align Drawer Back (N) with Drawer Bottom (O) and press firmly into slot .
2. Attach back using 2 Allen Key Screws (1) through pre-drilled holes on each Side (M).
3. Use Allen Key (4) to tighten screws. Do not over-tighten.

  
STEP 4

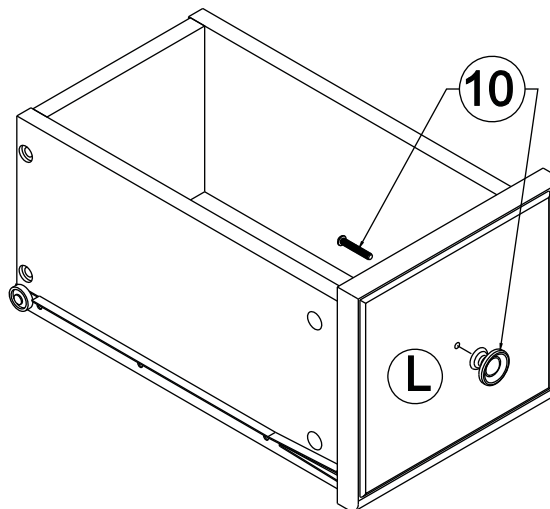

NOTE: The screwdriver is not included in the hardware pack.


1. Use Phillips Screwdriver to attach Handle (10) to Drawer Front (L).

 Repeat Step 1-4 for three other drawers.

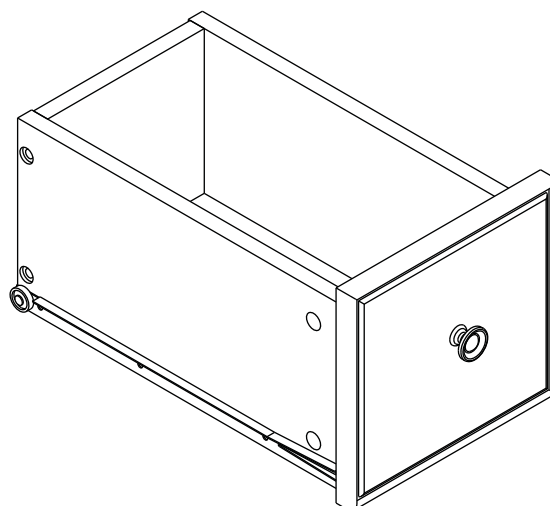


ASSEMBLY

 STEP 5

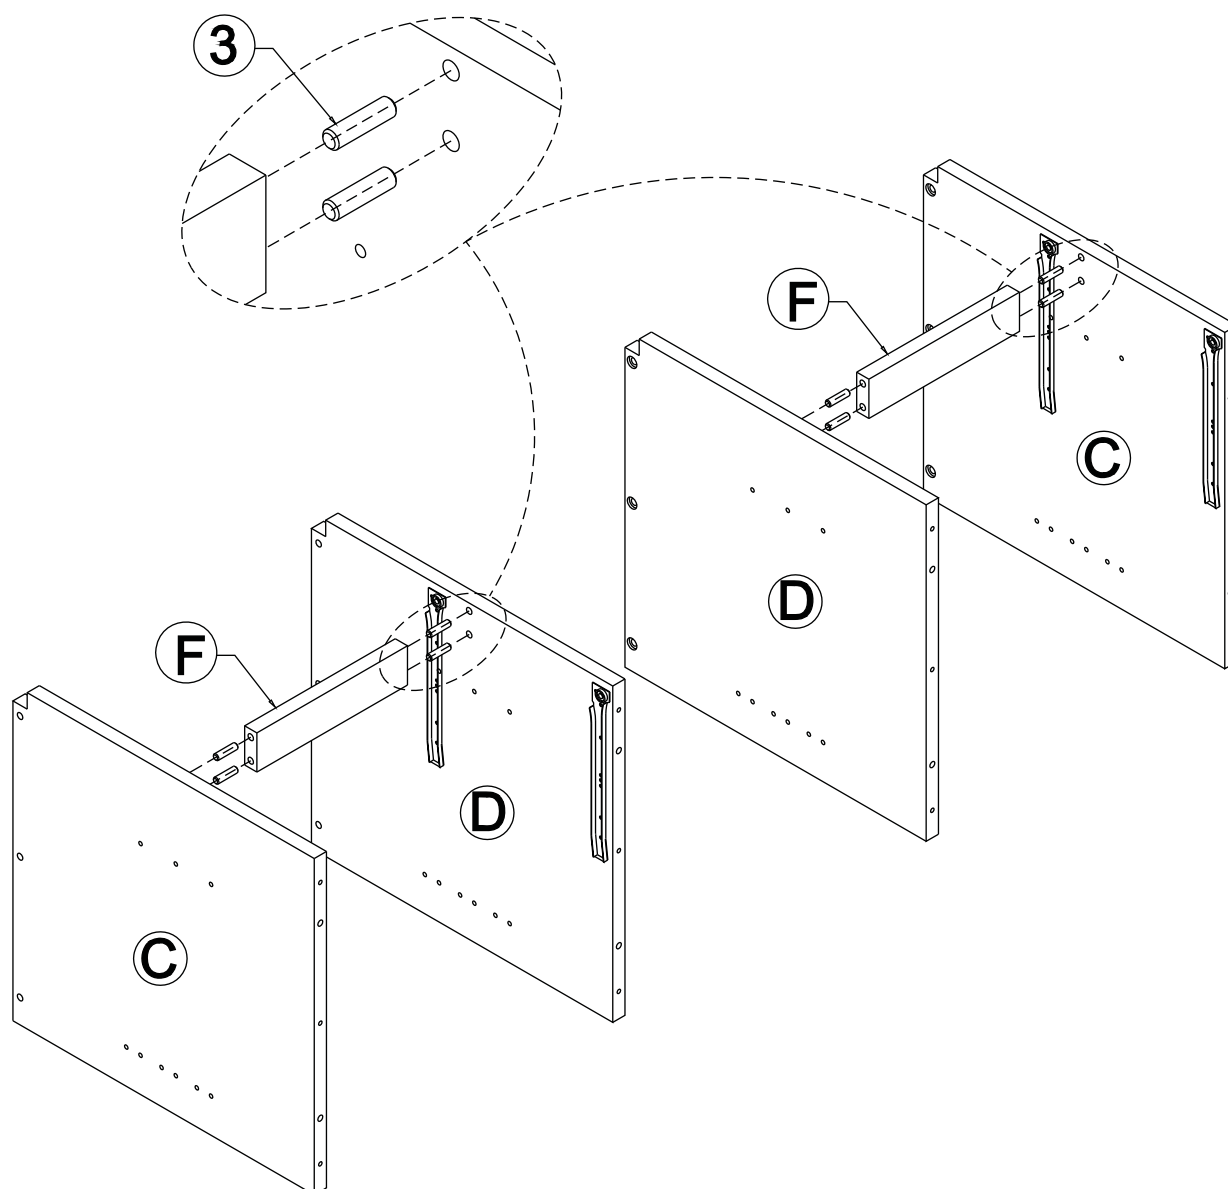


1. Insert 4 Dowels (3) into pre-drilled holes on each Front Bar (F).
2. Use rubber mallet to tap Dowels (3) into bottom of holes securely. $\frac{1}{2}$ length of Dowels should be exposed.
3. Align pre-drilled holes on Side Dividers (C) and Centre Dividers (D) with Dowels (3) in Front Bars (F).

 STEP 6

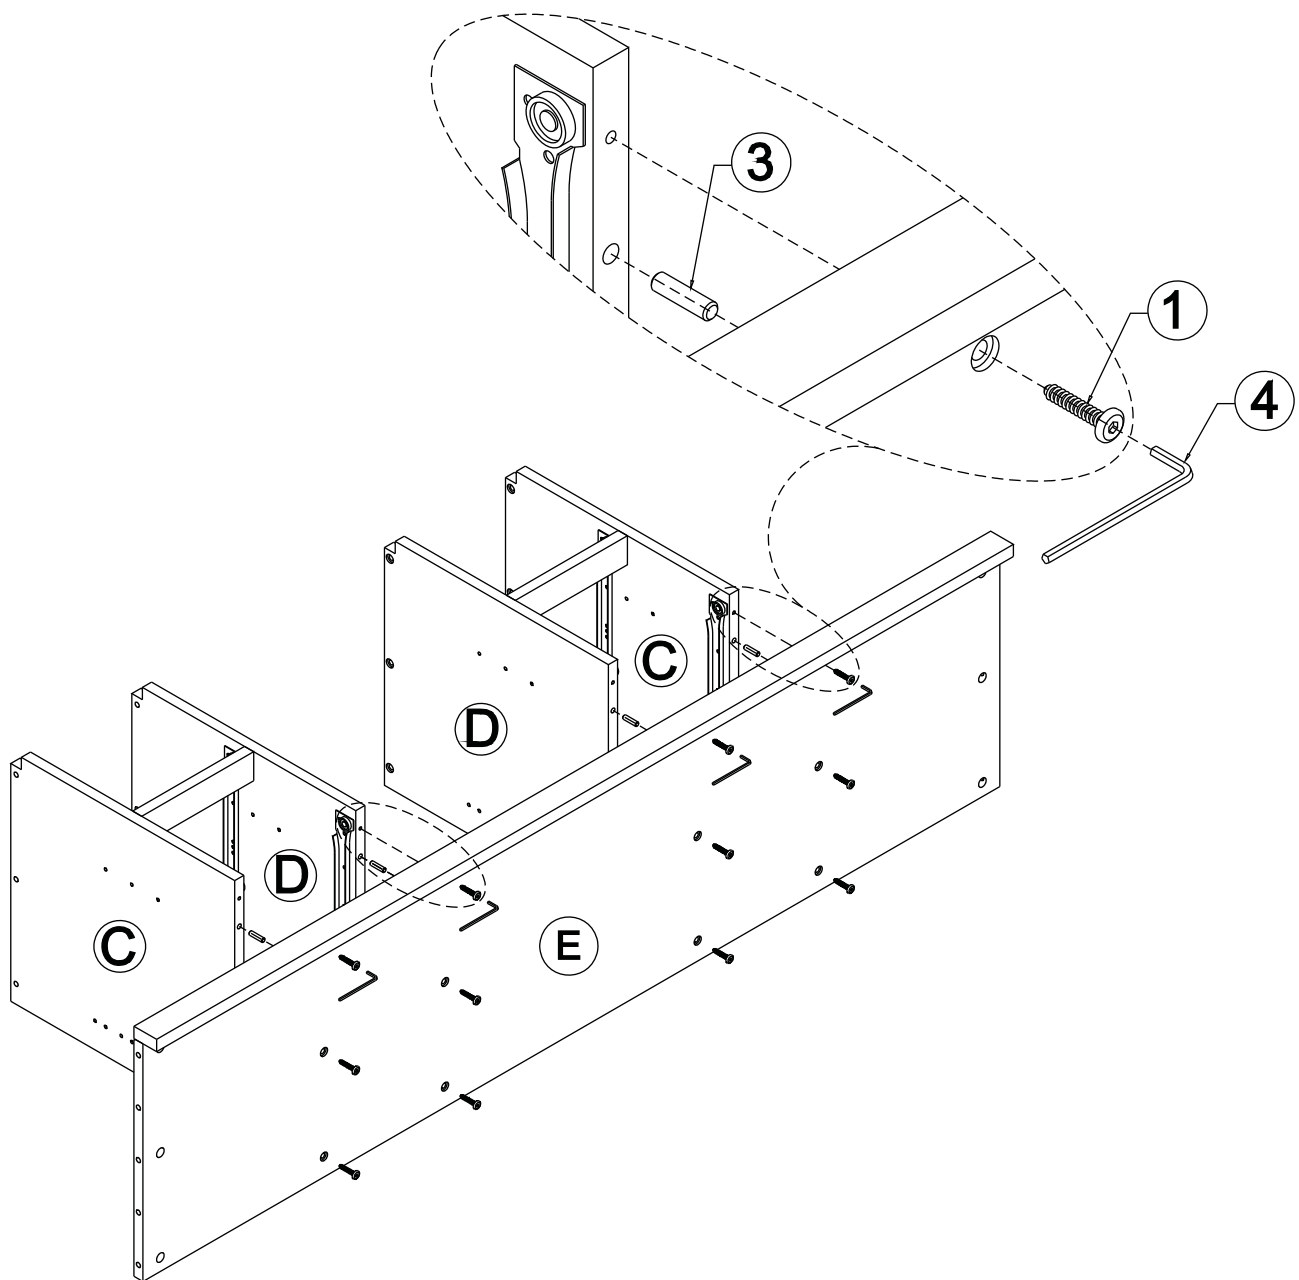



1. Insert 2 Dowels (3) into pre-drilled holes on each Side Divider (C) and Centre Divider (D).
2. Use rubber mallet to tap Dowels (3) into bottom of holes securely. ½ length of Dowels should be exposed.
3. Attach Side Dividers (C) and Centre Dividers (D) to Bottom Shelf (E) using 12 Allen Key Screws (1) through pre-drilled holes.
4. Use Allen Key (4) to tighten screws. Do not over-tighten.

 STEP 7

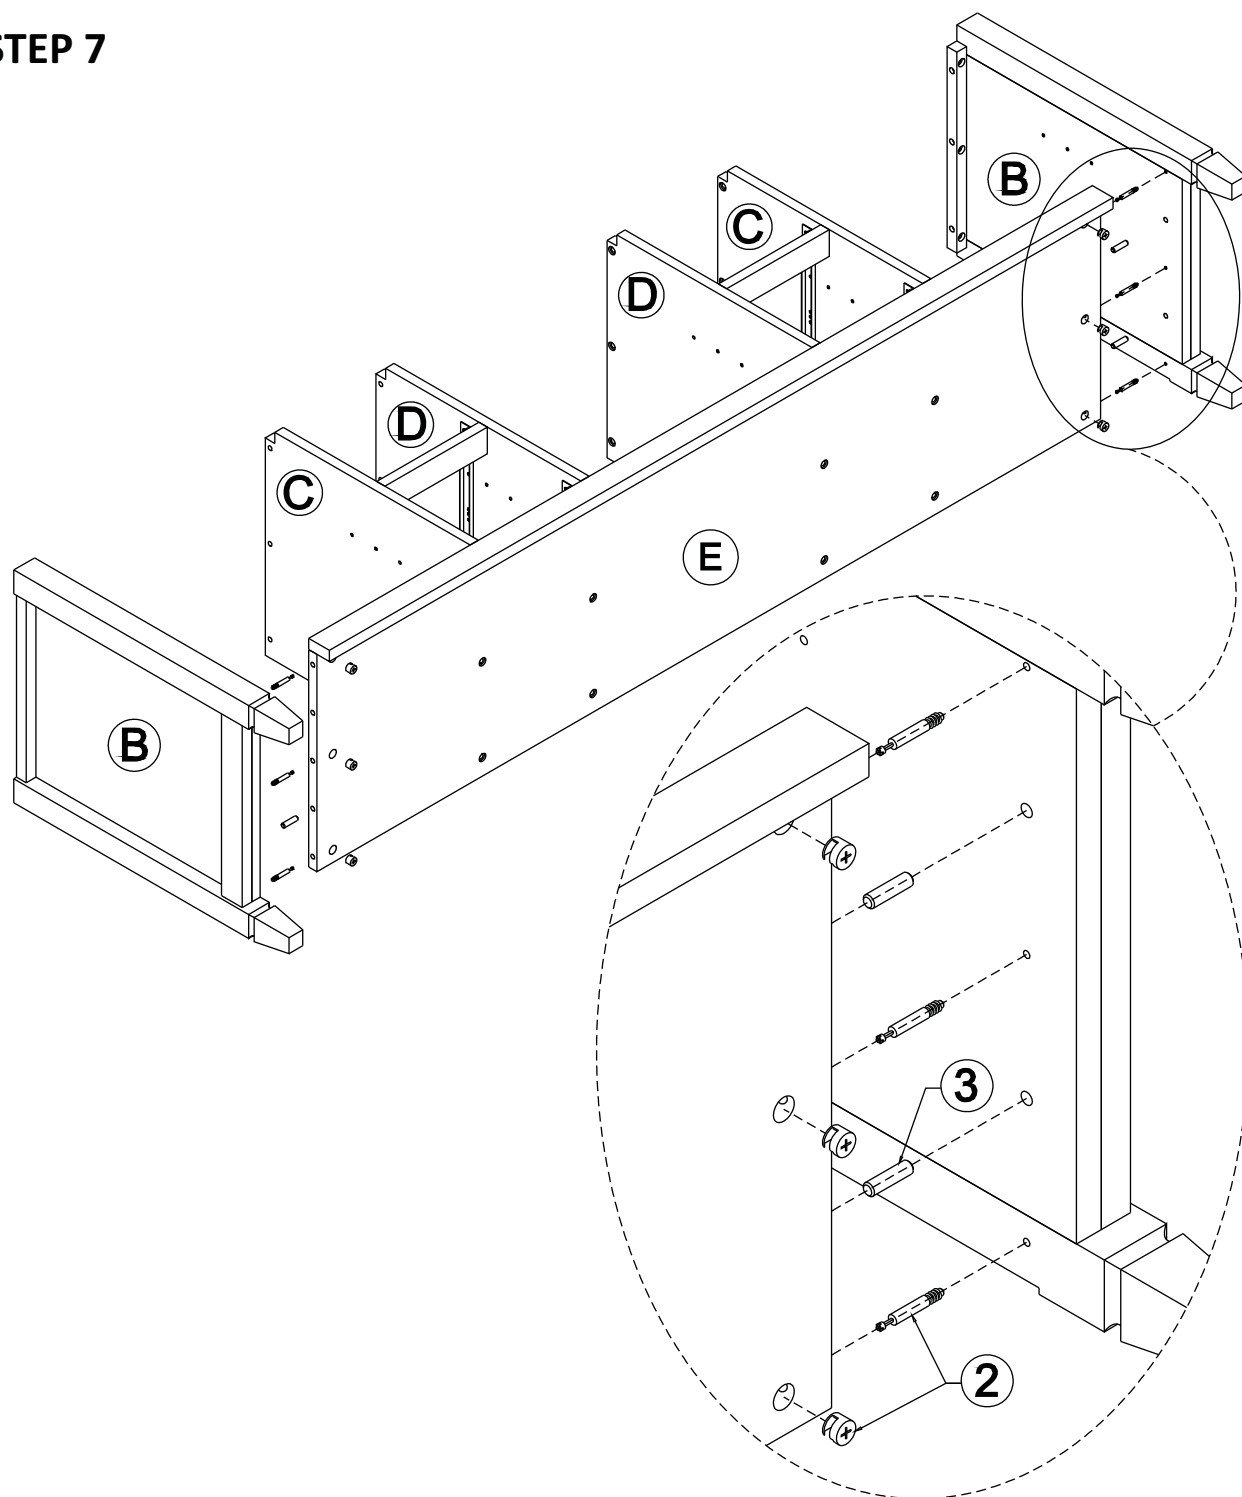

1. Insert 2 Dowels (3) into pre-drilled holes on each Side (B).
2. Use rubber mallet to tap Dowels (3) into bottom of holes securely. ½ length of Dowels should be exposed.
3. Attach 3 Cam Lock Pins (2) to each Side (B) into guide holes.
4. Align and insert Cam Lock Pins on Sides (B) into pre-drilled holes on Bottom Shelf (E).
5. Place 6 Cam Locks (2) into pre-drilled holes on Bottom Shelf (E).
6. Use a flathead screwdriver to tighten Cam Locks into Pins.

  STEP 8

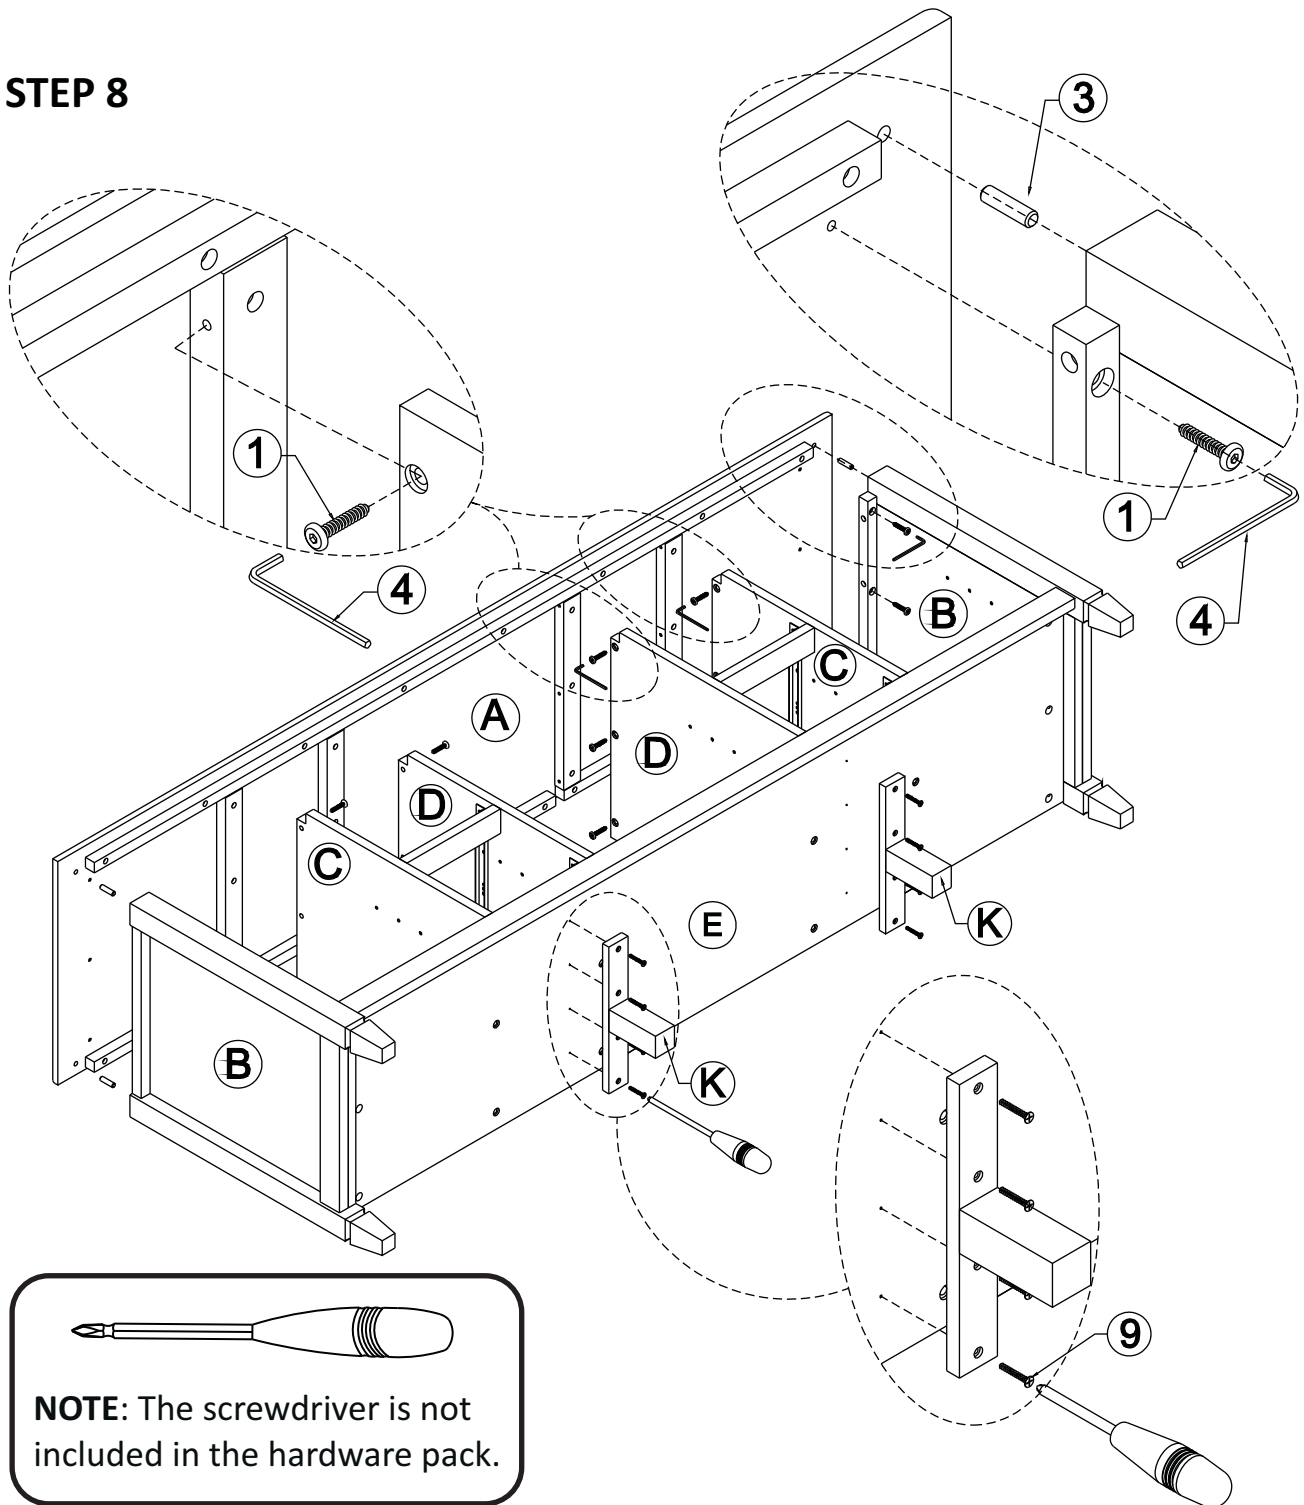


NOTE: The screwdriver is not included in the hardware pack.


1. Insert 2 Dowels (3) into top corners of each Side (B).
2. Use rubber mallet to tap Dowels (3) into bottom of holes securely. ½ length of Dowels should be exposed.
3. Align pre-drilled holes bottom corners of Top (A) with Dowels (3) in Sides (B).
4. Attach Top (A) to Sides (B) and Side Dividers (C) & Centre Dividers (D) using 18 Allen Key Screws (1) (3 Screws / each Part).
5. Use Allen Key (4) to tighten screws. Do not over-tighten.
6. Attach 2 Bottom Support Legs (K) into pre-drilled holes of Bottom Panel (E) using 8 Phillips Screws (9) (4 Screws / each Part).
7. Use Phillips screwdriver to tighten Screws. Do not over-tighten.

ASSEMBLY

 STEP 9



 
NOTE: The screwdriver is not included in the hardware pack.

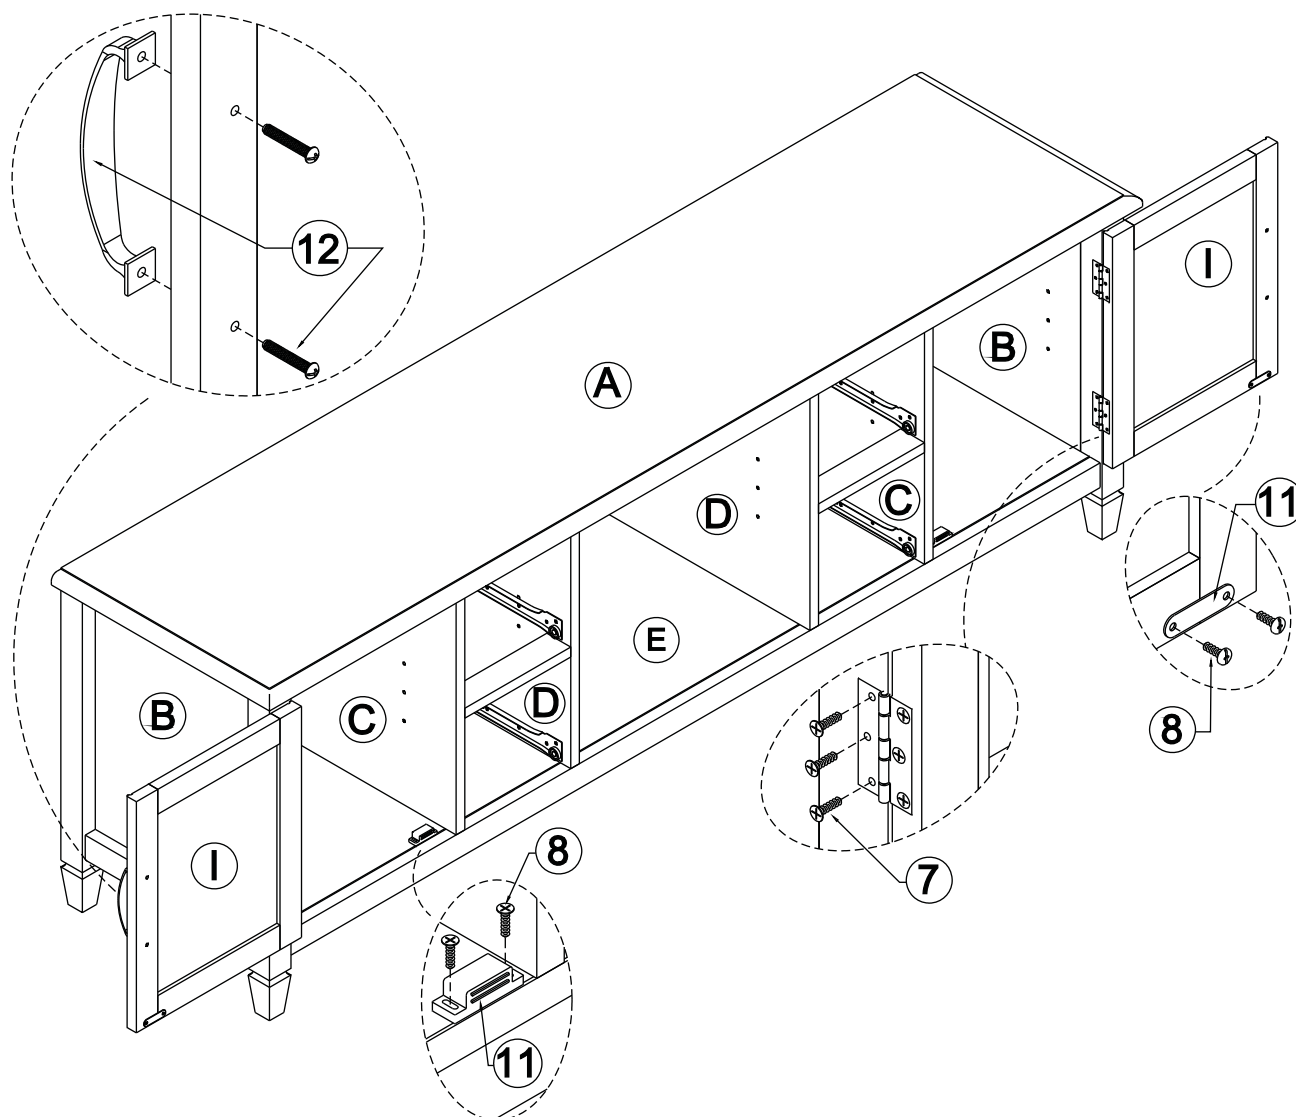


1. Attach Hinges on Doors (I) to Sides (B) using Phillips Screws (7) into pre-drilled guide holes.
2. Attach Magnet Plates (11) to bottom corner of Doors (I) using Phillips Screws (8) into guide holes on Doors (I).
3. Attach Magnet (11) to Bottom Shelf (E) using Phillips Screws (8) into guide holes on Bottom Shelf (E).
4. Use Phillips screwdriver attach Handles (12) to Doors (I).

ASSEMBLY

 STEP 10



 
NOTE: The screwdriver is not included in the hardware pack.

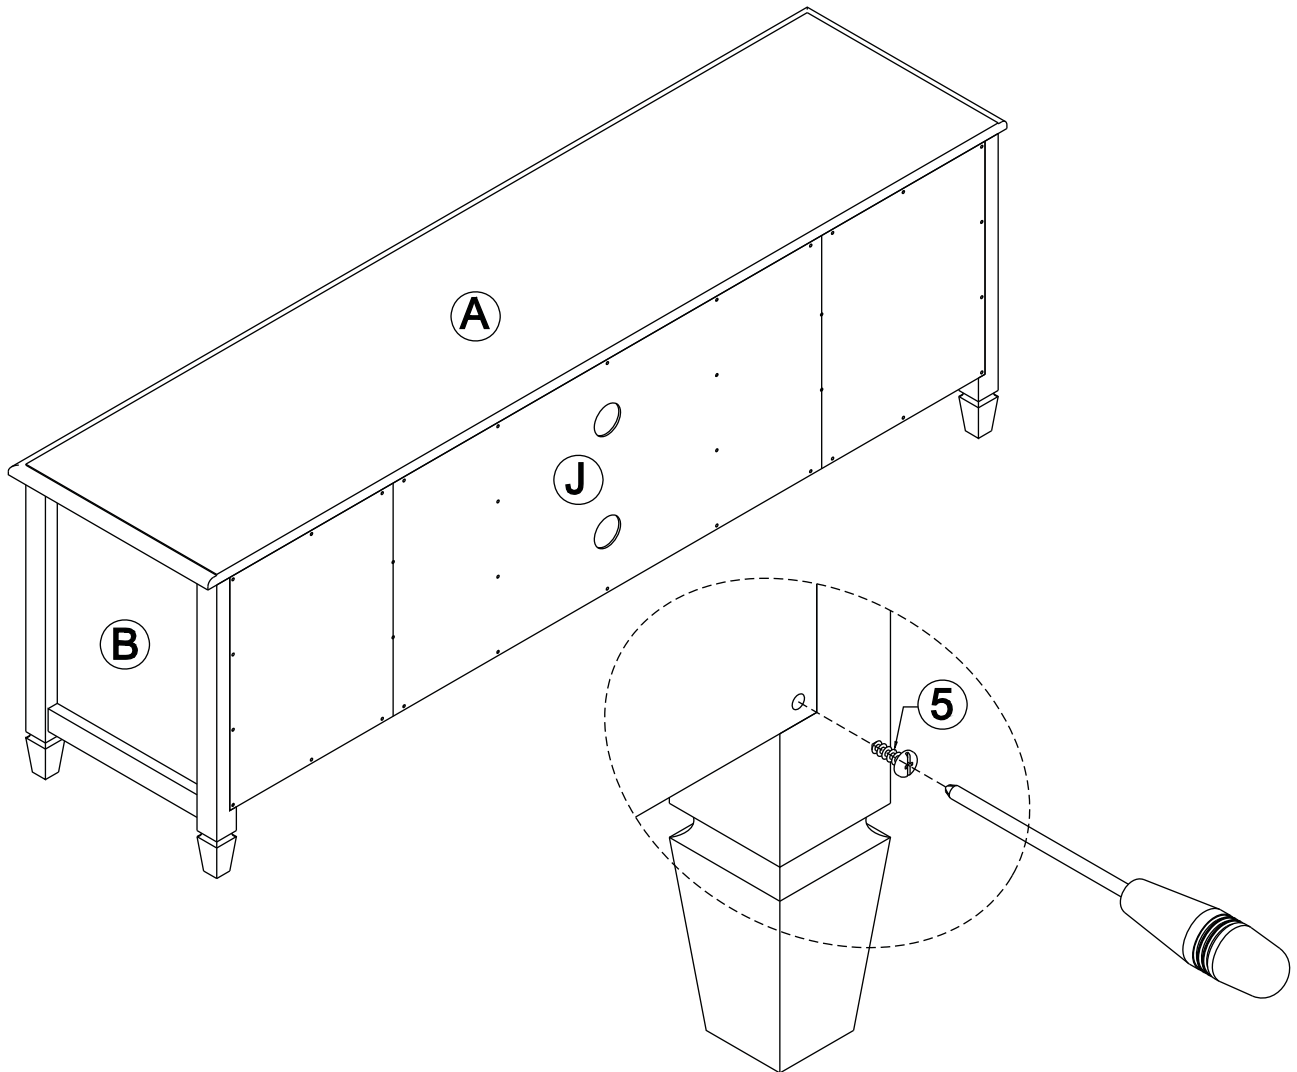

1. Attach Back Panels (J) to Back of cabinet using Phillips Screws Round Head (5) into pre-drilled guide holes.
2. Use Phillips screwdriver to tighten screws. Do not over-tighten.

ASSEMBLY

 STEP 11

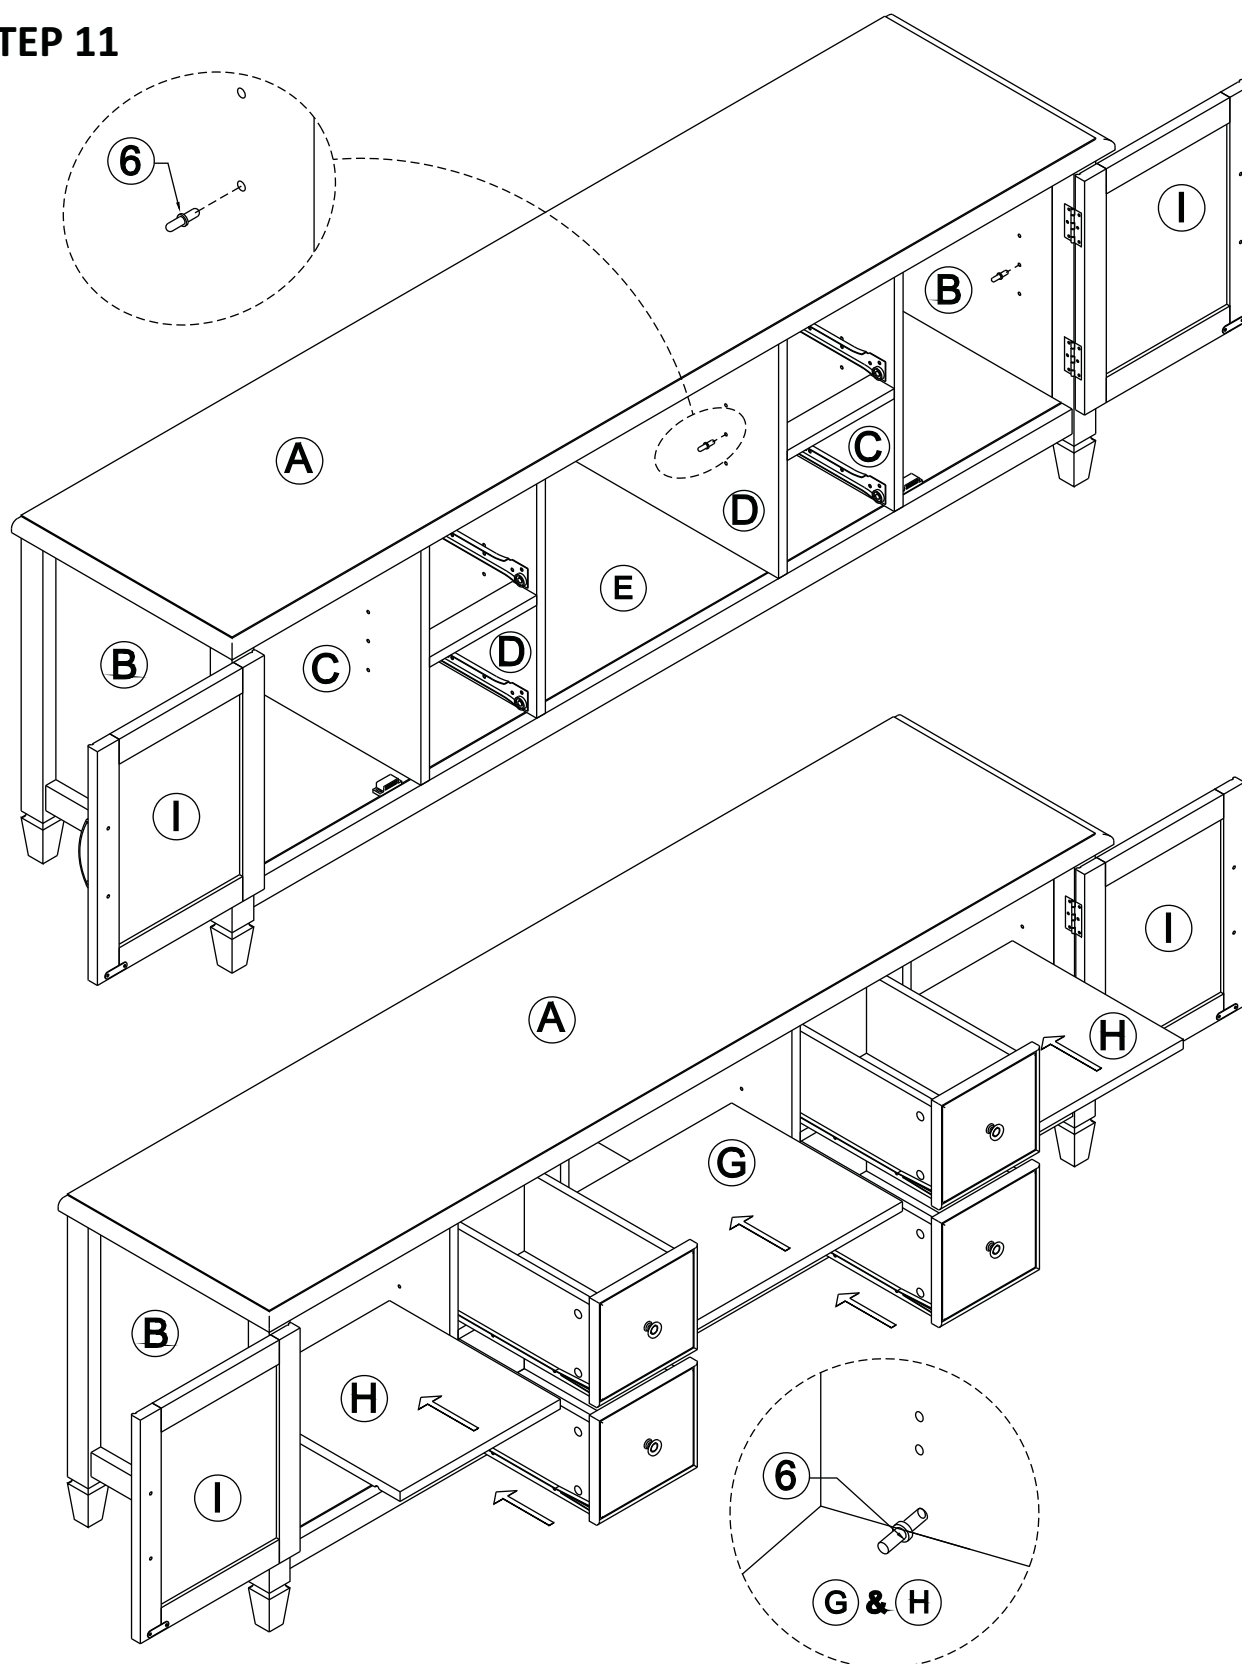

1. Use 4 Shelf Supports (6) for each Centre Shelf (G) and Side Shelf (H) in desired location.
2. 2 Shelf Supports (6) may be used on back top of each Centre Shelf (G) and Side Shelf (H) as a tipping restraint.
3. Insert assembled Drawers into drawer glides on assembled cabinet.

WARRANTY

Thank you for purchasing our product. These products have been made to demanding, high-quality standards and are guaranteed for domestic use against manufacturing faults for a period of 12 months from the date of purchase. This warranty does not affect your statutory rights.

In case of any malfunction of your product (failure, missing parts, etc.) please contact us at our toll free service line

We reserve the right to repair or replace the defective product, at its discretion.

This product is guaranteed for 12 months if used for normal purposes. Any warranty is invalid if the product has been overloaded or subject to neglect, improper use or an attempted repair by other than an authorized agent. Heavy-duty or daily professional/commercial usage are not guaranteed.

Due to continuous product improvement, we reserve the right to change the product specifications without prior notice.

PLEASE NOTE: This item is hand-crafted and hand-finished with utmost care. As such, variations and imperfections should be expected and should be welcomed as the natural beauty of the wood.