

 If you're unable to set up your Cricut Maker 5, please ensure you have the most up-to-date version of Design Space application installed.

How to set up Cricut StickerPix Print

Follow these steps to unpack your Cricut StickerPix Print machine, install the ink cartridge and materials, and power it on.

1. Install Cricut Design Space

Cricut StickerPix Print is used with the Cricut Design Space application, which requires a compatible Bluetooth-enabled device and high-speed internet connection. For details about system requirements, visit [cricut.com/systemrequirements](https://help.cricut.com/hc/en-us/articles/360009556033)

(<https://help.cricut.com/hc/en-us/articles/360009556033>).

1. Go to [cricut.com/setup](https://design.cricut.com/setup) (<https://design.cricut.com/setup>). If using a mobile device, you can also scan the QR code in the box.
2. Select your machine – Cricut StickerPix Print – and follow the prompts to install Cricut Design Space on your compatible computer or mobile device.
3. Some devices require permission for Design Space to use Bluetooth and the local network, or to find nearby devices. If prompted for these permissions, select **Allow** or the equivalent option on your device.

2. Remove the packaging

1. Remove the plastic from the machine.
2. Remove the blue tape from the ink cartridge door (Door B).

3. Install the ink cartridge

1. Open the ink cartridge door.
2. Position the ink cartridge with the label side facing up. Avoid touching the film on the ink cartridge; handle it by the hard plastic only.
3. Insert the ink cartridge until it locks into place.
4. Close the ink cartridge door.

Important: Load ink cartridge only while the printer is sitting idle.

4. Place and power on the machine.

1. Place the machine on a stable, flat surface.
2. Leave at least 4 in (10 cm) of clear space in front of and behind the machine to give materials room to feed in and out of the machine while printing.
3. Connect the included power adapter to the power port on the machine.
4. Plug the power adapter into a wall outlet.
5. Hold down the power button for three (3) seconds or until the Power Indicator light turns on.

5. Connect the machine to Design Space

During the new product setup process in Design Space, after you turn on the machine, Design Space will begin connecting to it automatically. If you are prompted for nearby device permission, make sure to allow this to connect to your machine.

It may take a minute or two for your Cricut StickerPix Print machine to appear. Keep the app open and ensure the device remains within 15 feet (4.5m) of your machine.

1. When your machine appears on the screen, select it and wait for it to connect.
2. **Allow Design Space to find local networks** - Access to local networks is required to connect to Wi-Fi. Choose **Continue**.
3. **Allow Design Space to use your location** - Access to your location helps to ensure you are only connecting to local, secure networks. Choose **Continue**.
4. If your device prompts you for location or network permission separately from Design Space, make sure to allow these permissions.
5. Select a secure, private 2.4 GHz Wi-Fi network, enter the Wi-Fi password, then tap **Connect**.
6. Once connection has been established, the Wi-Fi light will turn solid. Then select **Activate**.
7. Design Space will automatically perform any firmware updates that are available for your machine. Keep the machine powered on and remain in the app until the update is complete.
8. When Design Space shows that the firmware update is complete, select **Continue**.


You're ready to make your first project!

6. Load material into the Material Tray


When you're ready to print a project, load up to 10 sheets of Photo Paper or a single Sticker Sheet into the Material Tray. Based on your project, Design Space will prompt you for which material you should load.

Recommended: Open the material packaging by cutting the very top of the plastic bag open with scissors. This way, it's easy to store materials back in the bag.

1. Lift Material Tray off the top of the printer.
2. Slide out and flip the cap (Part A) underneath the tray until it clicks.

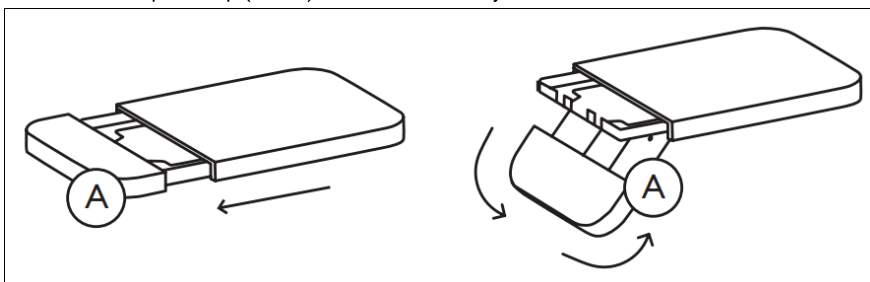


3. Lift the lid (Part B) to open, then load the material shiny side up into the Material Tray.

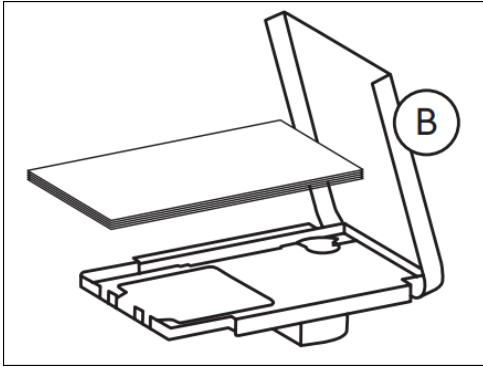

Load limit: Photo Paper, up to ten (10) sheets. For sticker sheets, load one (1) Sticker Sheet at a time.

4. Close the lid and lower the kickstand beneath the Material Tray. Make sure both are securely in place before proceeding.

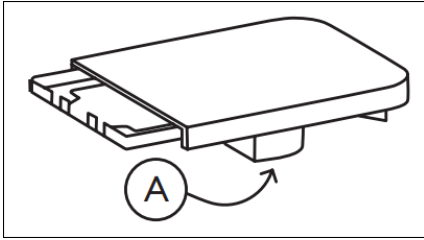

Important: Do not touch the printable side of the material. Fingerprints, dust, or oils may affect print quality.

7. Insert the Material Tray

1. Open Machine Door (Door A) and insert the loaded Material Tray into the Material Tray Slot.
2. Push the tray into the slot until it clicks into place.
3. Select the option to Make your project in Design Space.

Note: Cricut StickerPix Print is designed for indoor use only. It should never be left or stored outside in unheated or unairconditioned spaces, or in environments where the machine may come in contact with water. The optimal working temperature for Cricut StickerPix Print is 50-95°F (10-35°C), and the relative humidity is 40-60%. Print quality may be affected if environmental temperature and humidity are not appropriate.

⚠ If you're unable to set up your Cricut Maker 5, please ensure you have the most up-to-date version of Design Space application installed.

Understanding Design Space features for Cricut StickerPix Print


Design Space includes a variety of tools to help make your stickers, labels, photo prints, and cards & invitations your own.

How it works


The tools you see depend on what elements you have selected on the Canvas, so you'll always have immediate access to options for editing your design. Available tools change depending on what is selected on the Canvas, and what tools can be used with those elements.

Note: "Selected" means that you have clicked or tapped an object or group of objects, or you have clicked/tapped and dragged to select multiple objects, and there is a selection box around those items. Many tools will only be available when multiple objects are selected.


On a computer, primary editing tools appear in the main tool bar at the top of the screen. Some tools open a panel on the left side of the screen where you can access more options.

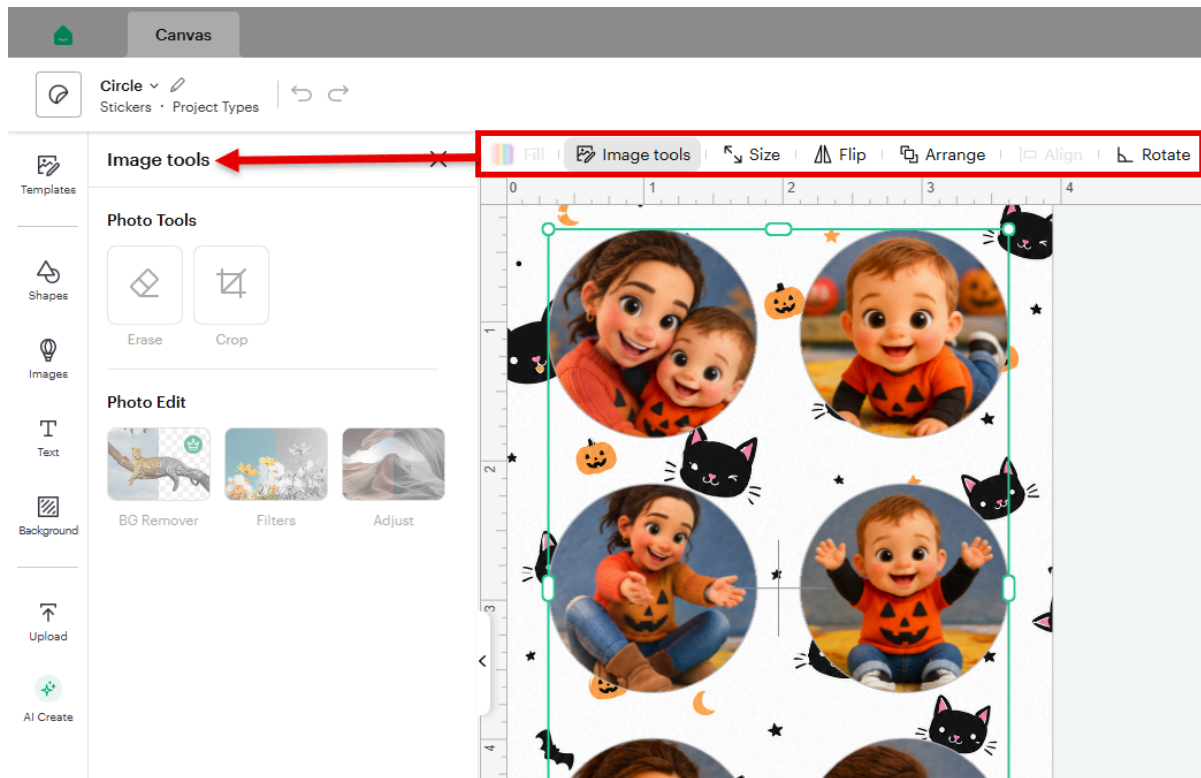

On a mobile device, primary editing tools appear in the bottom toolbar. When Tools with additional options are selected, a drawer opens on the screen to show you those options.

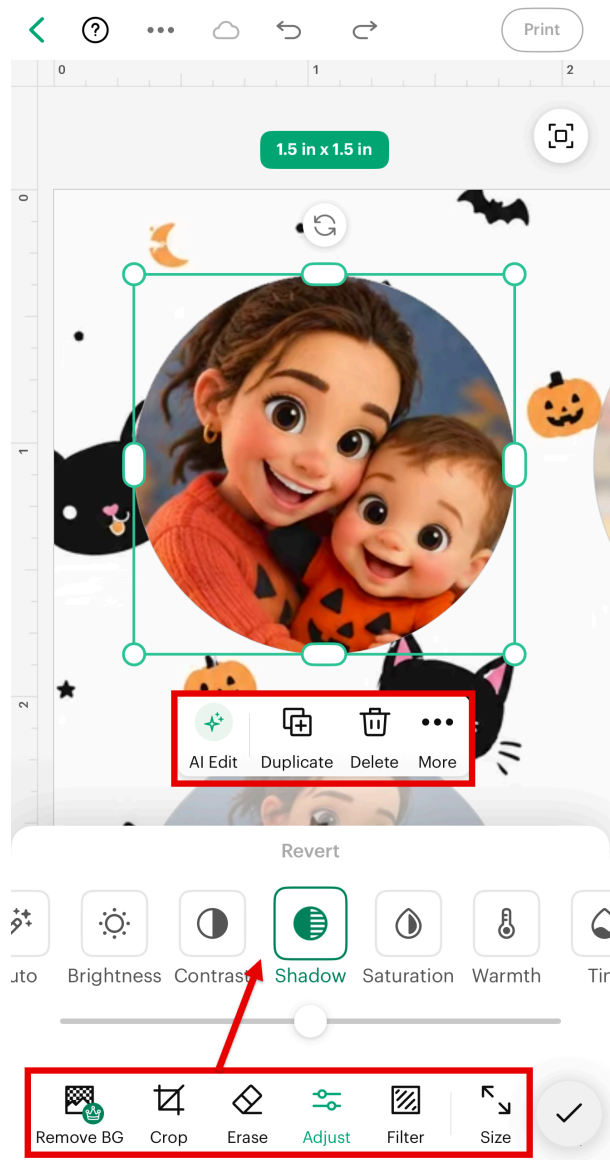

On computer and mobile devices, a small tool bar appears directly underneath the selection box so the tools you're most likely to use appear first. As with other toolbars, the options you see here vary depending on the object(s) that are selected.

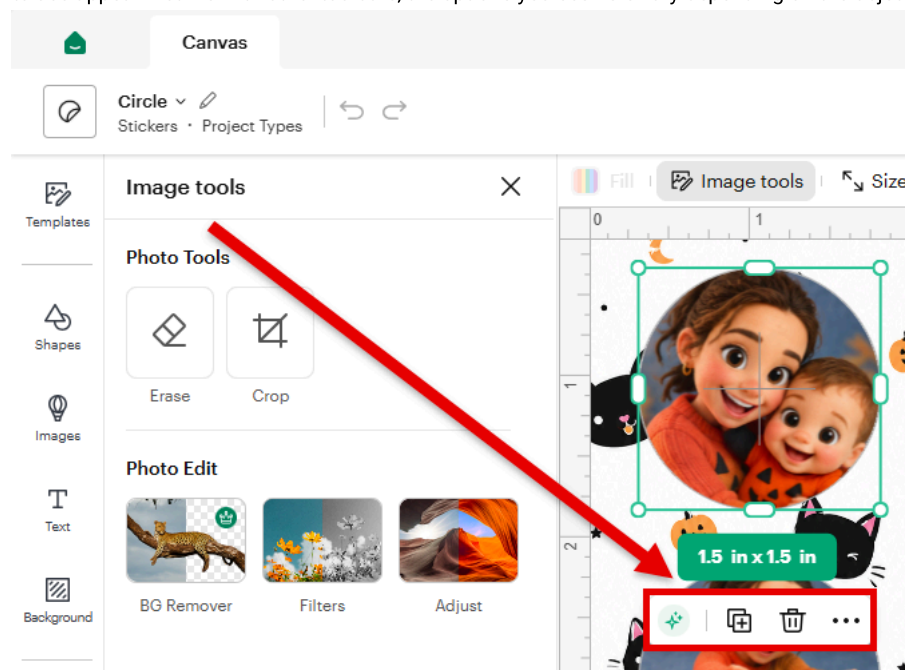

Tools

Name	Icon	Description
Background		To edit the background, click or tap the Background icon below the Canvas or select Background from the Add menu. Select from solid colors, patterns, uploaded photos, or previously generated AI creations.
Layout		Let Design Space automatically Fill blank space on your Sticker or Label sheet using designs already present to make the most of your material.
Delete		The Delete icon to delete or remove the element from your canvas.
Duplicate		The Duplicate icon will add an exact copy of the selected element(s) to your canvas.
Group/Ungroup		This allows you to group elements together, which enables you to resize and position them together without combining them into a single element. This option will only appear when two or more elements are selected. You may need to right click or select More to see these options.
AI Style		This tool gives you access to our Sticker and Photo transformation tool including previously generated AI generations.
Fill		Add or change the fill of a Shape or Design Space image by selecting Fill or by double clicking/tapping the element. Select a color, pattern, uploaded photo, or previously generated photo transformation. This will be added inside the selected element and automatically positioned to fit.
Edit Fill		When a photo, pattern, or AI Generated image was used as a fill, you can select the image, select Fill, then select Edit Fill (or triple-click on mobile) to make desired adjustments using the following tools: Remove BG, Adjust, Filter, Crop, Erase.
Remove BG		Remove the Background of uploaded images directly on the canvas.
Adjust		This tool allows you to adjust the Brightness, Contrast, Shadow, Saturation, Warmth, Tint, and Sharpness of an uploaded image. You can use the 'Automatic' feature or use the slider to manually adjust the following individual image components.
Filters		Apply one of the following filters to your image: Original, B & W (Black and White, Silvertone, Grayscale, Sepia, Vivid, Vivid Warm, Vivid Cool, Dramatic, Dramatic Warm, and Dramatic Cool. This can be reversed by selecting Reset above the Filter options.
Crop		Use the markers on the corners and edges of the image to adjust the cropping of the image.
Erase		Use the slider or enter manually to adjust the brush size. Then use the brush to erase unwanted parts of the image.

Size		Use the handles on the corners and edge of the image selection box or use the slider or manual entry to adjust the size.  Lock Aspect Ratio. When entering the size manually, click or tap the padlock icon to lock and unlock the aspect ratio.
Arrange		Change the arrangement of an element by bringing it all the way to the Front or Back, or by moving it forward or behind one layer at a time.
Align		Select multiple items on your canvas to Align them with each other. You can align Left, Right, Top, Bottom, Center, horizontally, or vertically, or you can Distribute vertically or horizontally.
Flip		Allows you to flip an element Horizontally or Vertically.
Rotate		Tap and hold the 'rotate' icon above the image or use the slider or manual entry to adjust the rotation of the image.
Position		Tap, hold, and drag, or manually enter position coordinates to adjust the position.
Edit Text		Select Edit Text to make changes to the text in a text box using the following tools: Font Size, Text Style, Alignment, Format, Curve, Arrange, Flip, Rotate, Position.