



# OPERATING INSTRUCTION

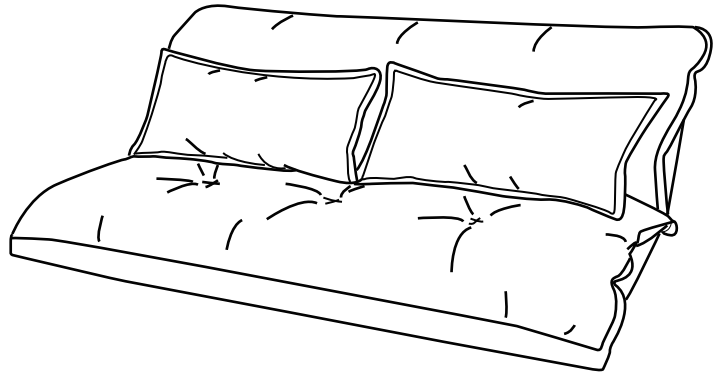

If the seat gears is raised once, the gears in this part will be locked and cannot be bent again.

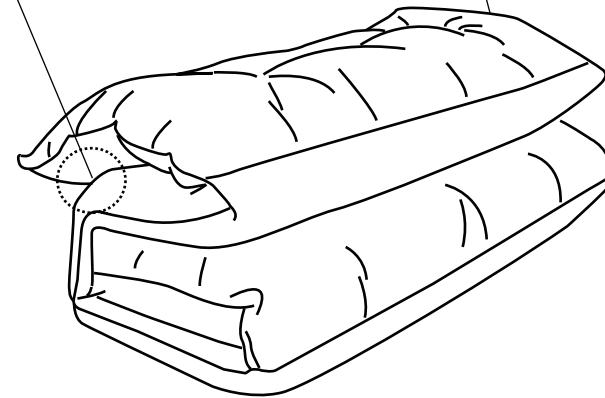

If you have adjusted the backrest to the 14th gear position, how to return to the 1st gear position? (How to adjust the backrest from high gear position to low gear position?)

1. Move the backrest(the armrest)to a position about or less than 75 degrees from the seat cushion.
2. Return the backrest to the 1st gear position (the backrest and seat cushion are 180 degrees horizontal), make sure the angle adjustment has jingled.

## Attention in use

- Avoid direct sunlight or high temperature, humidity and dry areas.
- Please do not use this product other than application.
- Please do not climb above the seat. Cause of fall.
- Please be careful not to put the hands and feet on the movable part.
- If you remove any dirt, please use diluted neutral detergent.
- It can't weigh three people at the same time, otherwise it may be damaged

\* Please note that there is a danger that it may lead to a large accident if you do not use it according to the above.

The backrest position can be adjusted in five levels

