

1. The confirmation button (E Wave button) is to check whether the confirmation light is on or not.



2. This button is a confirmation light, which is to shield the electromagnetic wave of the power supply.



Instruction: When you touch the E Wave button with your hand, the confirmation light will turn on, and the confirmation light will turn off when you remove it.

3. This is the thermostat. When the gear is set to a certain number, the number will light up.



4. Power: this is the power indicator.



Notice:

The thermostat is related to the indoor temperature. If the indoor temperature is too high, the indicator light on the thermostat will not light up and the product will stop working.

You can adjust the thermostat to a higher temperature, or turn off the product and wait for the room temperature to drop before using it.