

warmlite
heating the heart of the home

LOG EFFECT STOVE FIRE

YOUR SAFETY &
INSTRUCTION MANUAL
PLEASE READ CAREFULLY

MODEL **WL46017**



www.warmlite.co

TECHNICAL DATA

Description:	Log Effect Stove Fire
Model:	WL46017
Rated Voltage:	220-240V~
Frequency:	50Hz
Power Consumption:	1800W

DOCUMENTATION

We declare that this product conforms to the following product legislation in accordance with the following directive(s):

2014/30/EU	Electromagnetic Compatibility Directive.
2014/35/EU	Low Voltage Directive.
2011/65/EU	Restriction of Hazardous Substances Directive.
2009/125/EC	Eco-Design of Energy Related Products.

RK Wholesale LTD Quality Assurance, United Kingdom

WARRANTY


This product is guaranteed for 12 months from the date of original purchase. If any defect arises due to faulty materials of workmanship, the faulty products must be returned to the place of purchase. Refund or replacement is at the discretion of the retailer.

The following conditions apply:

- The product must be returned to the retailer with proof of purchase.
- The product must be installed and used in accordance with the instructions contained in this instruction guide.
- It must be used only for domestic purposes.
- It does not cover wear and tear, damage, misuse or consumable parts.
- RK Wholesale LTD has limited liability for incidental or consequential loss or damage.
- This guarantee is only Valid in the UK and Eire Only.

**An extended warranty is available for this appliance.
See back page for details.**


WIRING SAFETY FOR UK USE ONLY

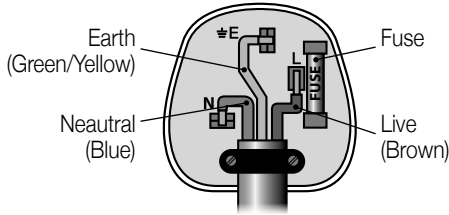

IMPORTANT

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are labelled in accordance with the following code:

**Blue neutral [N] Brown live [L]
Green/Yellow [EARTH] **

Plug Fitting Details (Where Applicable). The wire labelled blue is the neutral and must be connected to the terminal marked [N].

The wire labelled brown is the live wire and must be connected to the terminal marked [L].

The wire labelled green/yellow must be connected to the terminal marked with the letter [E].

On no account must either the brown or the blue wire be connected to the [EARTH] terminal.

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

Non-Rewireable Mains Plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - disconnect it from the mains - then cut it off of the mains lead and immediately dispose of it in a safe manner. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

WARNING:
This Appliance **MUST** be Earthed

PRODUCT SAFETY

When using **any** electrical appliance, basic safety precautions should always be followed including the following:

- Check that the voltage of the main circuit corresponds with the rating of the appliance before operating.
- Please ensure that the appliance is used on a stable, level, and heat resistant surface.
- **DO NOT** immerse cords, plugs or any part of the appliance in water or any other liquid.
- **DO NOT** leave the appliance unattended while it is operating.
- Close supervision is necessary when any appliance is used by or near children or pets.
- This appliance can be used by children above 8 years old and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Children should not maintain or clean the appliance unless supervised.
- Switch off at the wall socket then remove the plug from the socket when not in use or before cleaning.
- If the supply cord or appliance is damaged, stop using the appliance immediately and seek advice from the manufacturer or its service agent or a similarly qualified person.
- **DO NOT** let the cord hang over the edge of a table or counter or let it come into contact with any hot surfaces.
- The use of accessory attachments is not recommended by the appliance manufacturer apart from those supplied with this product. **DO NOT** use extension cords with the appliance.
- **DO NOT** pull the plug out by the cord as this may damage the plug and/or the cable.
- **DO NOT** use this product for anything other than its intended use.
- This appliance is for household use only.

- **DO NOT** carry the appliance by the power cord.
- **DO NOT** use the appliance outdoors.
- Always ensure that the heater is placed on a firm level surface. Ensure that the heater is not positioned close to curtains, furniture or any combustible materials as this could create a fire hazard.
- The heater must not be located immediately below a mains socket outlet.
- **DO NOT** cover the heater as this may lead to a fire risk.
- **DO NOT** obstruct any of the openings of the heater especially the heat outlet at the bottom of the heater.
- **DO NOT** insert any object through any openings on the heater.
- **DO NOT** use the heater in areas where flammable liquids are stored or where flammable fumes may be present.
- **DO NOT** operate the heater on a timer or leave on overnight.
- When not being used, please unplug the heater from the mains socket.
- Keep the mains lead away from the hot body of the heater and ensure that it is not pulled tight between the socket and the heater.
- **DO NOT** use the heater in the immediate surroundings of a bath, a shower, a swimming pool or similar indoor locations.
- **DO NOT** use this appliance if it is dropped or damaged in any way.
- **WARNING!** This appliance should only be repaired by the manufacturer or a qualified service repair person.
- **WARNING! DO NOT** use the appliance if water damage has occurred, if the appliance body has been damaged, the power cord has been damaged or broken, if the power cord is hot to the touch, if the unit smokes or smells like smoke.

- Note: When the heat function is used for the first time, a slight odour may be present. This is normal and may occur again if the appliance is not used for a long period of time.
- Always unplug the heater and allow it to cool before moving it from one location to another.
- **DO NOT** attempt to dismantle or repair any part of the heater. This should only be done by a qualified service agent.
- In the unlikely event the appliance develops a fault, stop using it immediately and seek advice from the Customer Support Team.



WHAT'S IN THE BOX

Instruction Manual

Log Effect Stove Fire

4 X Legs

16 X Screws

1. Door handle
2. Controls (behind door)
3. Leg
4. Vent
5. On/Off switch
6. Temperature control
7. Flame adjustment




BEFORE YOUR FIRST USE:

1. Remove your appliance from the packaging.
2. Attach the legs as per the instructions opposite.
3. Keep the front of the appliance, through which the heat is radiated, at least one metre away from furniture, curtains and other flammable objects at all times.
4. Ensure there is a grounded socket nearby (back of the appliance).
5. Never use an extension lead. The main cable must remain at the back of the appliance and must not be in contact with any hot elements.
6. Your appliance is now ready for normal use.

Dispose of the packaging in a responsible manner.

ATTACHING THE LEGS TO THE MAIN UNIT

1. To begin attaching the legs, first turn the fire on its side.
2. Place a leg on each corner and use 4 screws for each leg.
3. Tighten the screws clockwise until tight on each leg.
4. Pull the unit back up to a standing position, making sure it is stable.
5. Place the unit in the required location and plug it into a power socket.
6. The appliance is now ready for use.

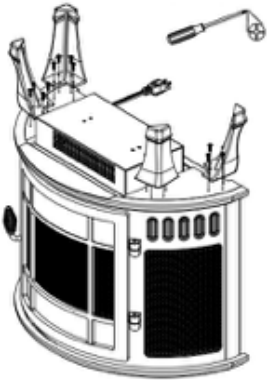

1. ON/OFF – Turns the appliance and the fame effect on and off.
2. Flame Adjustment – Controls the brightness of the flame effect.
3. Temperature Control – Controls the unit's heating temperature.

NOTE: The flame effect can be operated independently from the heating element. To turn down the temperature without turning off the flame effect, rotate the temperature control dial to the left, but leave the flame adjustment dial turned to the right. This will allow the flame effect to continue working while stopping the heat output from the unit.

USING YOUR APPLIANCE

1. Plug the heater into the mains and switch it on. Press the ON/OFF switch to turn it on.
2. Use the flame adjustment dial to select the brightness of the flame.
3. Use the temperature control dial to select your desired temperature.
4. When you have finished using the heater, turn the temperature control dial to the lowest setting to power down the unit.
5. Turn the appliance off by pressing the ON/OFF button. The light on the button will turn off to indicate the heater is powered down.
6. Unplug the heater at the mains and switch off the socket.

AUTO SAFETY CUT-OFF

This appliance automatically regulates its own temperature so that it does not overheat.

The heater will automatically turn off when it reaches an unsafe temperature. If this occurs, switch the heater off, unplug it at the mains and allow it to cool. The appliance will be safe to use once it reaches a safe temperature again.

- For safety reasons, the fire will NOT automatically reset when the auto safety cut-off is enabled.
- To reset the appliance, disconnect the appliance from the mains supply for at least 15 minutes. Once sufficient time has elapsed, reconnect the supply to the mains and turn the appliance back on.

CLEANING AND CARE

- Before cleaning, always switch off the fire and remove the plug from the electrical socket.
- Ensure that the unit is cool enough to work on.
- To remove dust, wipe the appliance with a dry cloth.
- To keep the heater clean, the outer shell may be cleaned with a soft, damp cloth. You may use a mild detergent if necessary. After cleaning, dry the unit with a soft cloth.
- **CAUTION!** DO NOT allow liquids to enter any part of the appliance, as this may cause damage or deterioration to the heater's surface.
- **WARNING!** DO NOT immerse the heater in water or any other liquid.
- Never use abrasive powders or solvents.
- If the heater shows any signs of wear or damage disconnect immediately from the mains supply and have it checked by a suitably qualified person. DO NOT use the heater when it is damaged or malfunctioning.

WARNING:

DO NOT IMMERSE ANY ELECTRICAL PART OF THE APPLIANCE IN WATER SUCH AS MOTOR UNITS OR PLUGS.

PLEASE SEE CLEANING SECTION FOR FURTHER INSTRUCTIONS.

TROUBLE SHOOTING

Problem	Solution
The heater will not turn on.	<p>Make sure the appliance is plugged into the mains and that it is switched on. If plugged in, make sure the ON/OFF button is in the On position and that the button's LED light is on.</p> <p>The auto safety temperature cut-out may be enabled. Switch off the heater and unplug it from the mains. Allow it to cool before using again. For more information, refer to the auto safety cut-out section.</p>
No fire effect light.	Have the heater checked by the manufacturer or a qualified service person.

Model Identifier(s): WL6017					
Item	Symbol	Valve	Unit	Item	Unit
Heat Output			Type of heat input for electric storage, local space heaters only (select one)		
Nominal heat output	P _{nom}	1.8	kW	Manual heat charge with integrated thermostat	N/A
Minimum heat output (indicative)	P _{min}	0.9	kW	Manual heat charge control with room and/or outdoor temperature feedback	N/A
Maximum continuous heat output	P _{max, c}	1.8	kW	Electronic heat charge control with room and/or outdoor temperature feedback	N/A
Auxiliary electricity consumption				Fan assisted heat output	N/A
At nominal heat output	e _{lmax}	1.832(EF-25) 1.657(EF-22PM)	kW	Type of heat output/room temperature control (select one)	
At minimum heat output	e _{lmin}	0.932 (EF-25) 0.851 (EF-22PM)	kW	Single stage heat output and no room temperature control	No
In standby mode	e _{lSB}	N/A	kW	Two or more manual stages, no room temperature control	No
				With mechanic thermostat room temperature control	Yes
				With electronic room temperature control	No
				Electronic room temperature control plus day timer	No
				Electronic room temperature control plus week timer	No
				Other control options (multiple selections possible)	
				Room temperature control with presence detection	No
				Room temperature control with open window detection	No
				With distance control option	No
				With adaptive start control	No
				With working time limitation	No
				With black bulb sensor	No
Contact Details:	Imported by RK Wholesale LTD., Berryhill Road, Stoke-on-Trent ST4 2NL				

We hope you enjoy your appliance for many years.

As a thank you for purchasing one of our fantastic products,
we are offering you an extra 1 year peace of mind.

*To receive your extra guarantee period, register your appliance online
within 28 days of purchase by visiting:

www.warmlite.co

Make sure to retain your original receipt.



**Should you have a problem
with your appliance or need any spare parts please call our
Customer Support Team on:**

+44 (0) 333 220 6056

Distributed throughout the UK by RK Wholesale LTD

warmlite
heating the heart of the home