


ASSEMBLY INSTRUCTION

Description: COMPUTER DESK

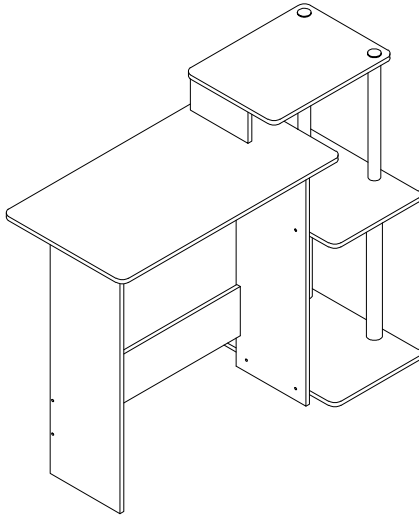


 
 



 


IMPORTANT NOTE:


- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Do not tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children.

Each Item


PARTS LIST		
NO	COMPONENT	QTY
A	TOP PANEL	1 PC
B	LEFT SIDE PANEL	1 PC
C	RIGHT SIDE PANEL	1 PC
D	SIDE TOP PANEL	1 PC
E	SHELF PANEL	2 PCS
F	BACK PANEL	1 PC
G	CENTER PANEL	1 PC
H	SKIRT PANEL	2 PCS

HARDWARE LIST		
NO	DESCRIPTION	QTY
1	SCREW 	14 PCS
2	WOODEN DOWEL 	4 PCS
3	NAIL LEG 	4 PCS
4	LONG POLE 	2 PCS
5	SHORT POLE 	2 PCS
6	LEG 	2 PCS
7	CAP 	2 PCS
8	CAM-LOCK SCREW 	6 PCS
9	CAM-LOCK NUT 	6 PCS

STEP 1

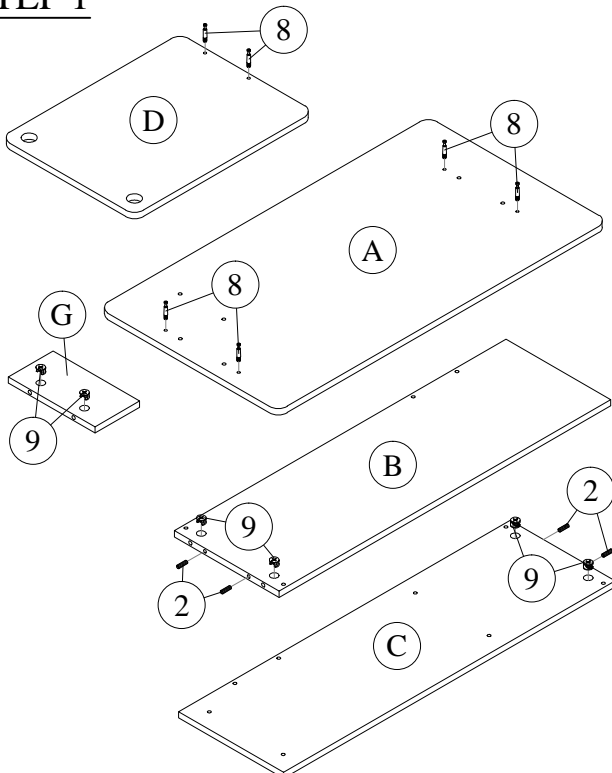


STEP 2

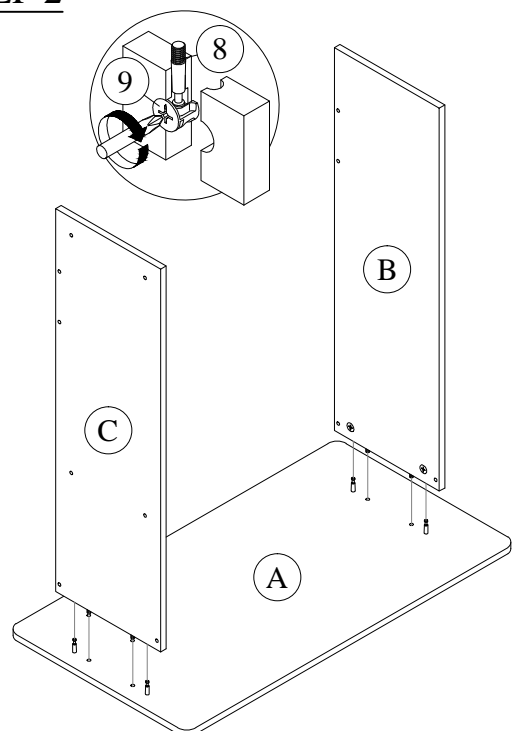


ASSEMBLY INSTRUCTION

Description: COMPUTER DESK


STEP 3

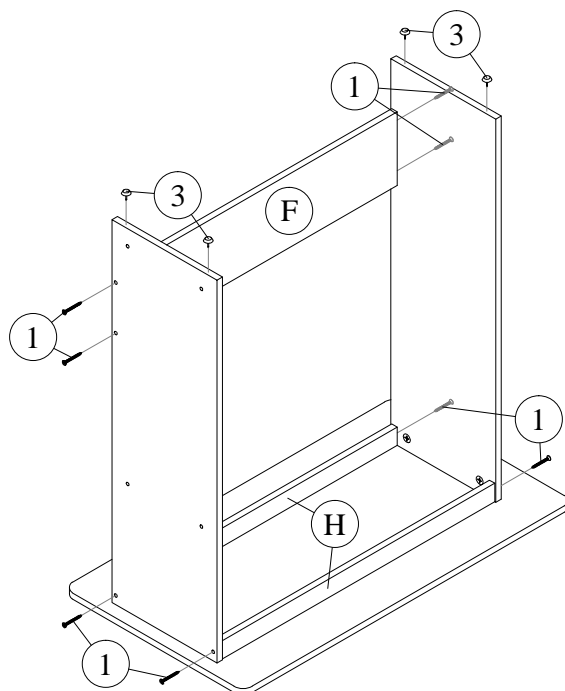

STEP 4

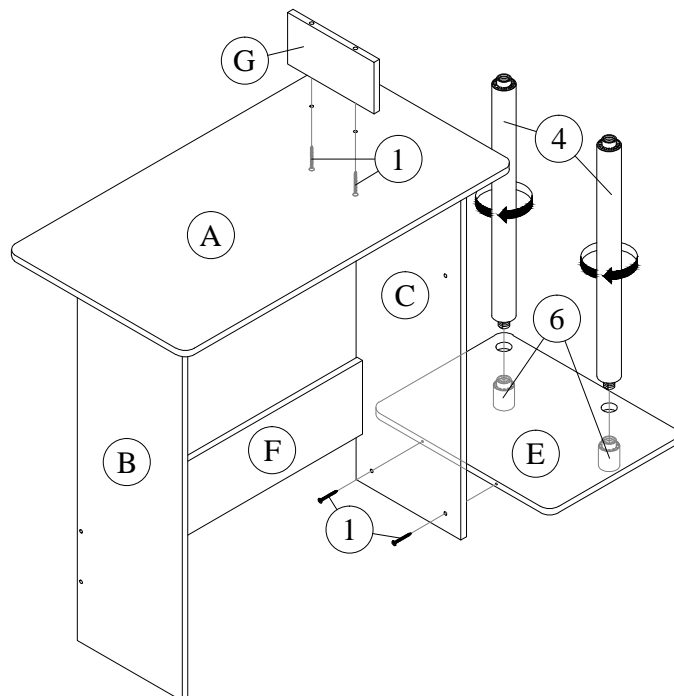

STEP 5

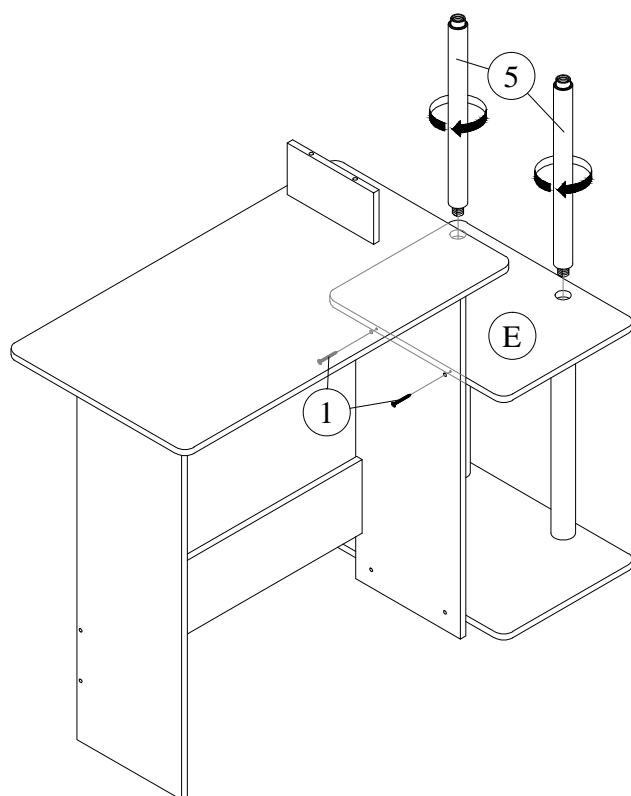

STEP 6

