







ASSEMBLY INSTRUCTION

Read this instruction carefully. Remove all wrapping material, staples and straps from the carton. See hardware and furniture part list for guidance. Be sure you have all wooden furniture parts on a clean and flat soft surface, such as a carpet or rug, to prevent from being scratched. Follow the figure to start assembling.

CAUTION :
 Do not FULLY - TIGHTEN the nut or screw until all is ready to assemble.
 Do not OVER - TIGHTEN the nut or screw to avoid causing damages to the thread.
 Keep all hardware part out reach of children.

| NO | PART LIST | QTY |
|----|-------------------|------|
| A | BACK REST | 1 PC |
| B | FRONT LEG - RIGHT | 1 PC |
| C | FRONT LEG - LEFT | 1 PC |
| D | CUSHION BOX SEAT | 1 PC |

| NO | DESCRIPTION | QTY |
|----|--|--------|
| 1 | JCBC SCREW M6 X 45MM  | 2 PCS |
| 2 | JCBC SCREW M6 X 50MM  | 4 PCS |
| 3 | JCBC SCREW M6 X 80MM  | 4 PCS |
| 4 | FLAT WASHER  | 10 PCS |
| 5 | SPRNG WASHER  | 10 PCS |
| 6 | M4 ALLEN KEY  | 1 PC |

