


# HOWARD MILLER MODEL 625632

## OPERATING INSTRUCTIONS

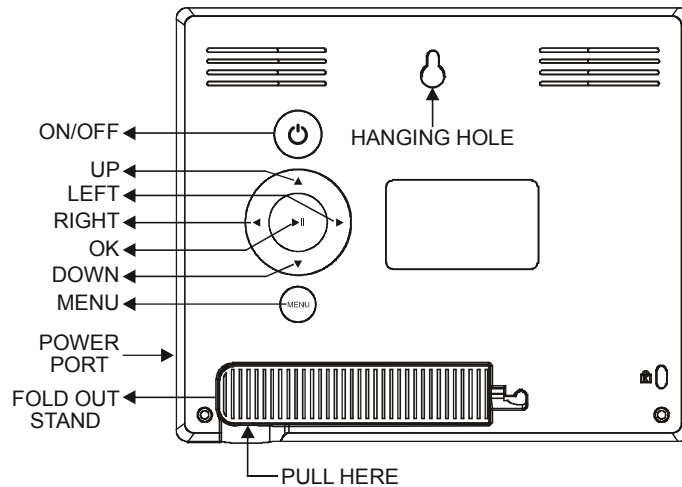

### STARTING UP

Plug the AC power adapter (included) into the Power Port (DC IN) on the side of the clock. Plug the power adapter into a standard wall outlet. The clock should power up automatically and the Howard Miller logo will appear in the welcome screen. After a few seconds the welcome screen will disappear and the day, time, and date will appear in the screen.

### ON/OFF

Press and hold the ON/OFF button to turn the display on and off.

### FOLD OUT STAND

To use the stand gently pull out the end of the stand and rotate it down and to the right.

### AUTOMATIC DIMMING

The display will automatically dim from 7:00 PM until 7:00 AM.

### CLOCK DISPLAY

Press the OK button to select the desired display format, D1 or D2.



D1



D2

## SETTING

- Press the MENU button to display the on screen setting menu.
- Use the UP and DOWN buttons to select the line item to be adjusted.
- When an item is selected the letters and numbers will change to yellow and the current setting will appear between <brackets>.
- Changes can only be made to an item when it is highlighted yellow and the current setting is between <brackets>.
- Press MENU to exit the setting menu.

Set Time < 08:22PM >

Press the LEFT or RIGHT buttons to underline the hour <08 : 22>. Use the UP and DOWN buttons to change the hour. Press the Left or Right button to underline the minutes <08 : 22>. Use the UP and DOWN buttons to change the minutes.

Set Date < 15-06-2016 >

Set the preferred Date Mode before setting the date. Press the LEFT or RIGHT buttons to underline the day <15 - 06 - 2016> or <06- 15 -2016>. Use the UP and DOWN buttons to change the day. Follow this same procedure to set the month and year.

Time Mode < 12 Hours >

Use the LEFT and RIGHT buttons to select 12 Hour or 24 Hour format for the time display.

Date Mode < Day-Mounth-Year >

Use the LEFT and RIGHT buttons to select the desired format for displaying the date: <Day -Month- Year> or <Month - Day - Year>.

Language < English >

Use the LEFT and RIGHT buttons to select the preferred language for the display.

Note: The following settings are required for display format D2:

Morning Time Set < 08 >

Use the LEFT and RIGHT buttons to set the hour (0-23) at which the clock is to start to display that it is morning.

Now it's  
Friday  
Morning

Afternoon Time Set < 12 >

Use the LEFT and RIGHT buttons to set the hour (0-23) at which the clock is to start to display that it is afternoon.

Now it's  
Friday  
Afternoon

Evening Time Set < 17 >

Use the LEFT and RIGHT buttons to set the hour (0-23) at which the clock is to start to display that it is evening.

Now it's  
Friday  
Evening

Night Time Set < 23 >

Use the LEFT and RIGHT buttons to set the hour (0-23) at which the clock is to start to display that it is night.

Now it's  
Friday  
Night



860 East Main Avenue Zeeland, Michigan 49464-1300  
www.howardmiller.com

© Howard Miller

PD13471  
9/16