





 




 
 
 





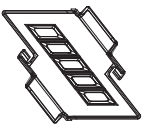

**Caution:** This instruction manual is intended for universal reference, slight variations in part dimensions are normal.



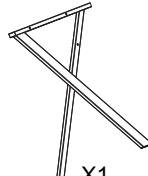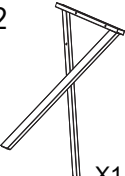

COMPONENT



①	②	③	④	⑤	⑥	⑦
						
X4	X6	X2	X8	X4	X1	X1

P1	P2	P3	P4
			
X1	X1	X1	X1


P5	P6	P7	P8
			
X1	X1	X1	X1

P9	P10	P11	P12
			
X2	X2	X1	X1


P13	P14	P15	P16
			
X2	X4	X4	X2

P17	P18
	
X1 (Mousepad)	X1 (Stickers)


1

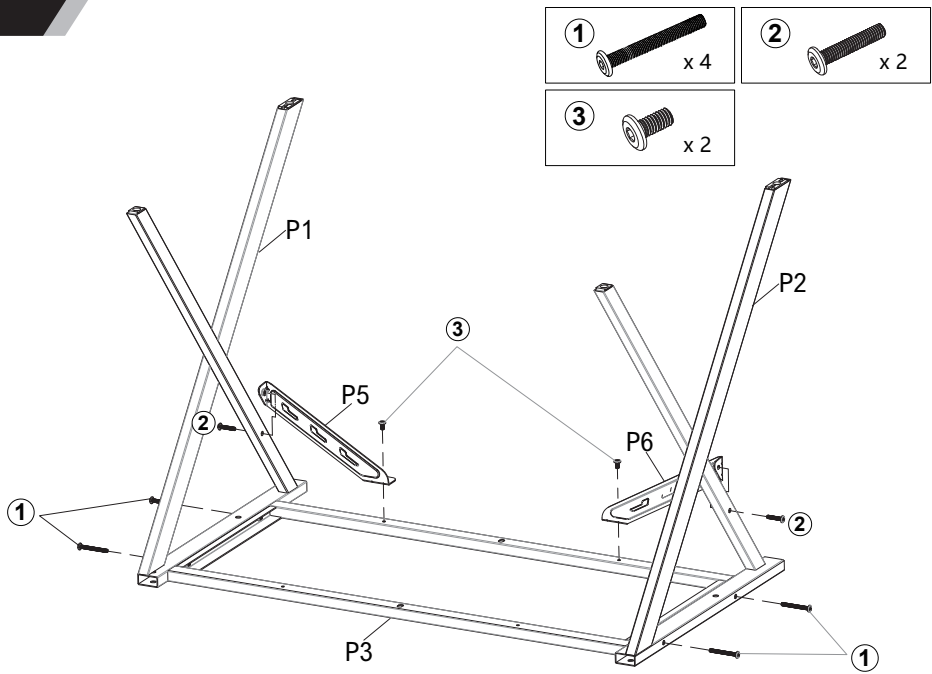


2


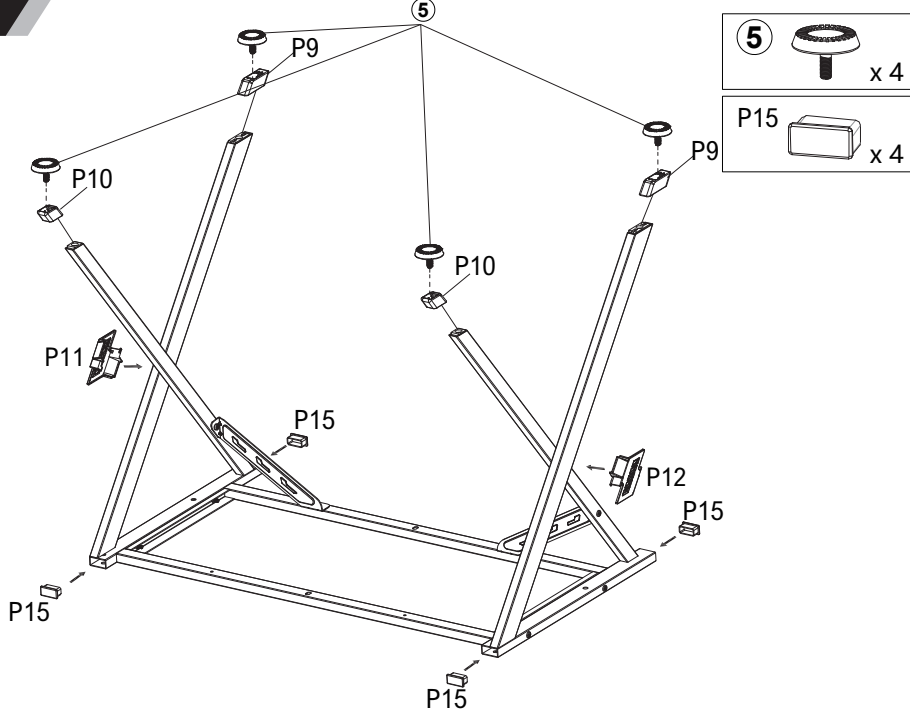


3



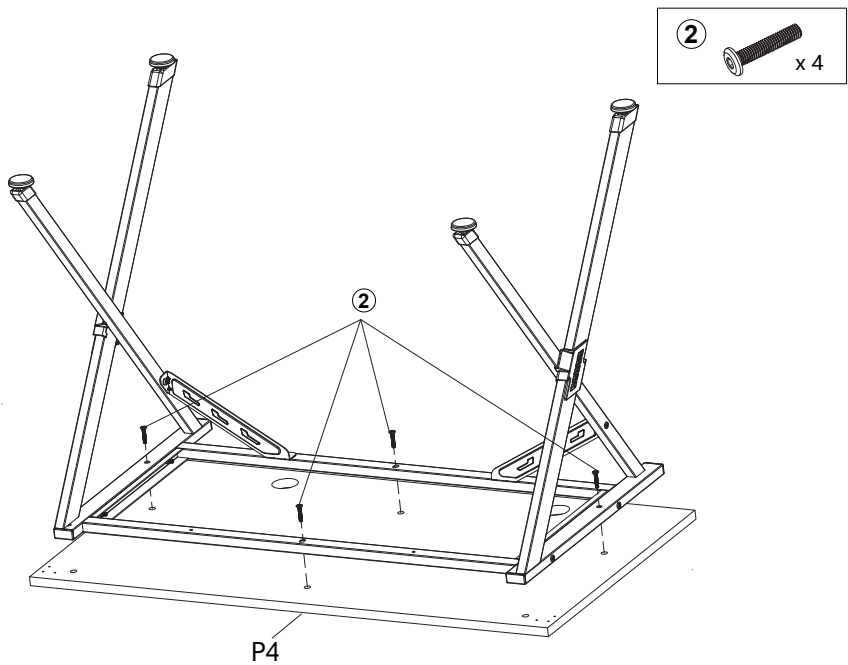


4

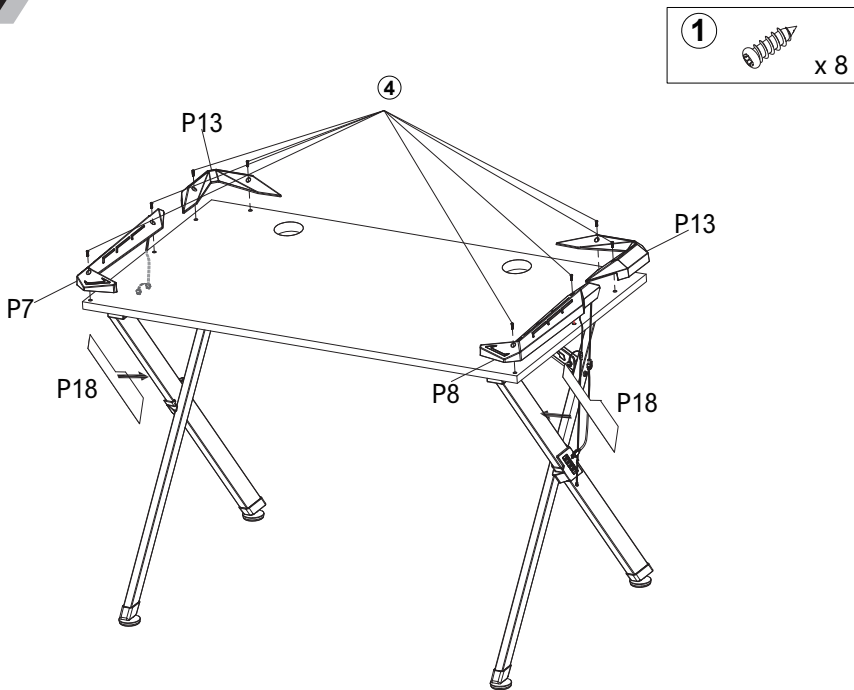

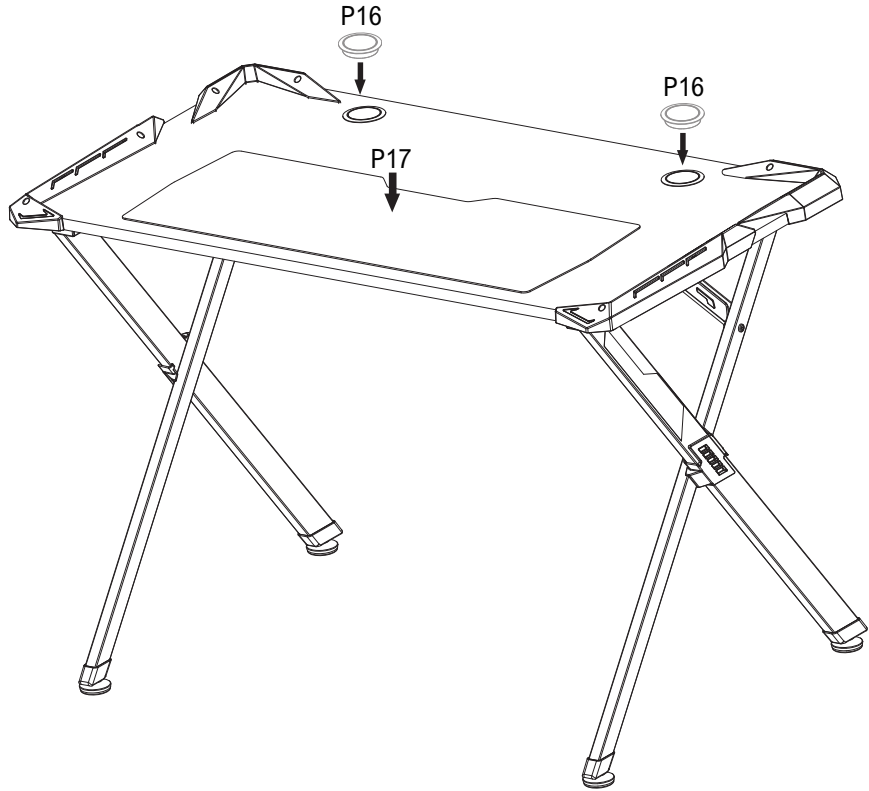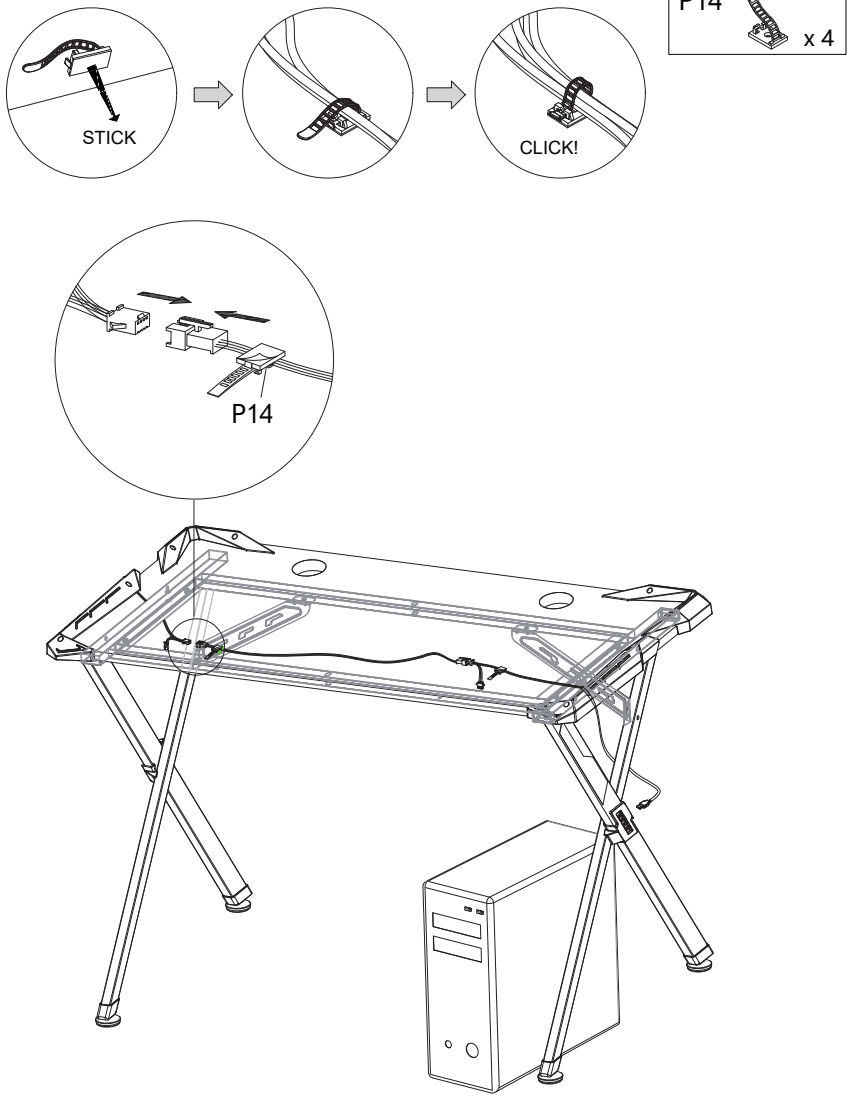

ACCESSORY

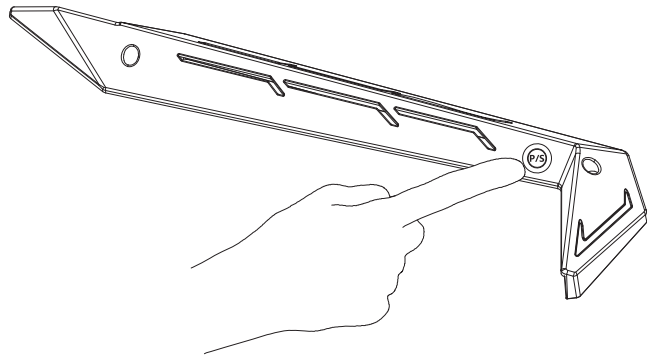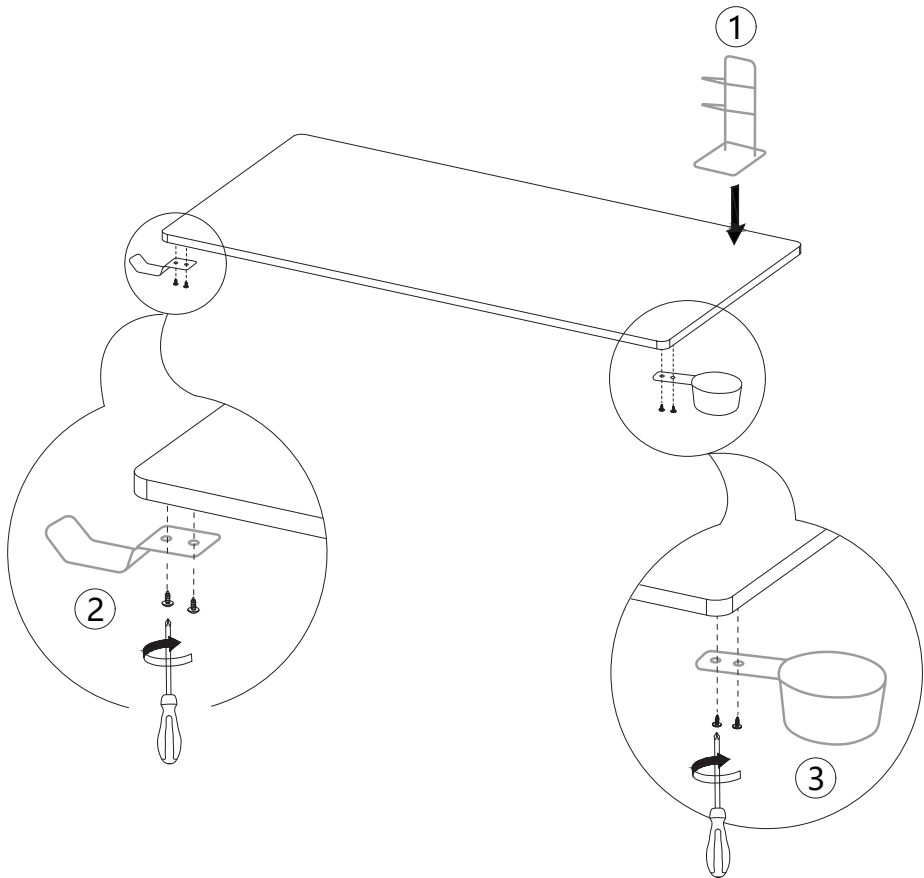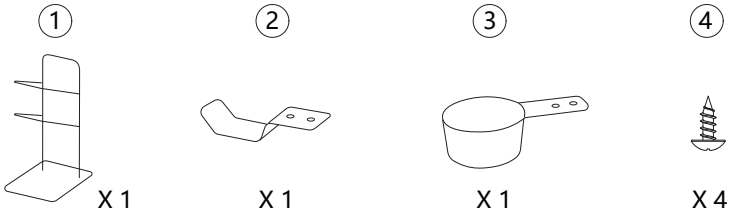

MAIN TECHNICAL PARAMETERS

Parameters	Min	Normal	Max	Test Condition	Unit
Rated voltage(DC)	4.45	5	5.20		V
Rated power		1.50			W
Maximum power		1.65			W
Maximum current		330			mA
Environment temperature	-20		60		°C

FUNCTION

- Changing Lighting Modes: Make sure the desk light is on, then press the right button "P16" to change modes. There are total 8 lighting modes.
- Switching On/Off Lights: Press the button "P16" for 3 seconds then the light will be off. If want to switch on the light, just repeat the operation.

TROUBLE SHOOTING

- When the light flashes unexpectedly, please try to reboot it (turn it off and then on). If a reboot doesn't work, please check if the adapter work normally.
- If the light isn't on, please check if the power is on, or all the cables are connected correctly and tightly.

主要技术参数

参数	最小	典型	最大	测试条件	单位
额定电压DC	4.45	5	5.20		V
额定功率		1.50			W
最大功率		1.65			W
最大电流		330			mA
环境温度	-20		60		°C

功 能

- 按键切换模式功能：桌子通电后，按控制盒“P16”按键进行模式切换，每按一次灯带会进入一次不同的灯光模式，共8种模式。
- 关闭灯光功能：开机后，长按控制盒“P16”大概3秒，可以把灯光关闭。灯光关闭后，再次长按控制盒“P16”大概3秒可以打开灯光。

故障及排除

- 灯光异常闪烁，重启之后仍然存在，请检查适配器是否正常；
- 通电正常开机后，灯光不亮，请检查灯条线是否有插，或者有漏插等。