 


Installation & Assembly

Thank you for choosing us.

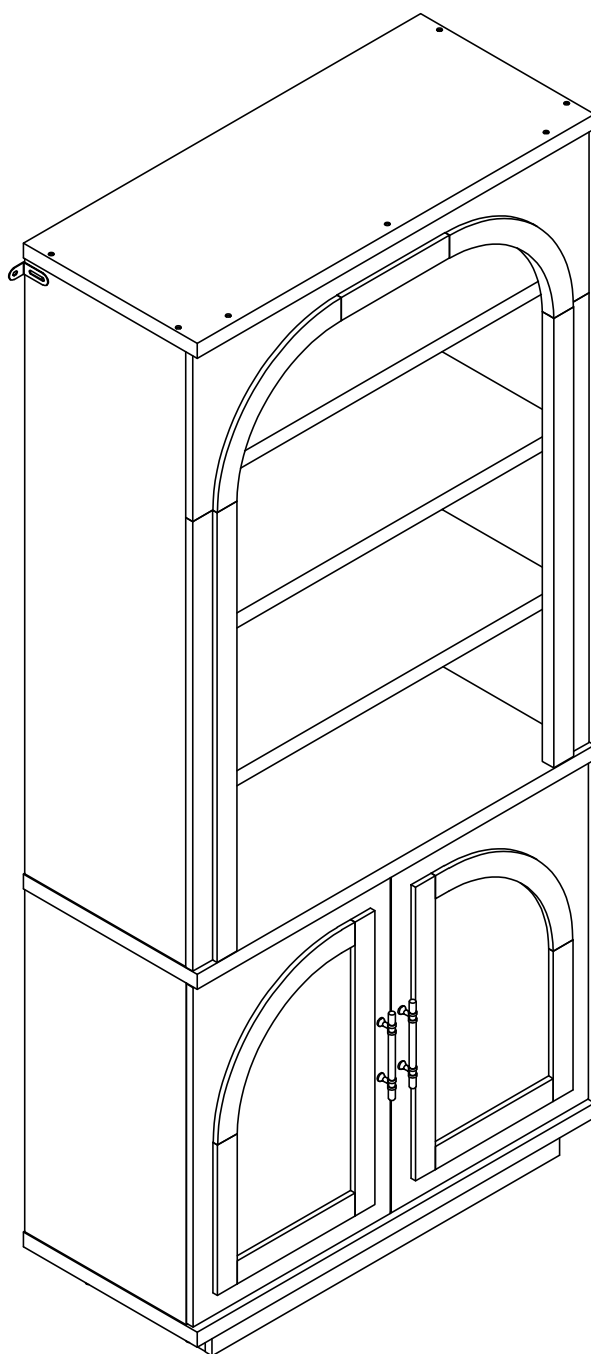

General Guidelines

- Please read the following instruction carefully and use the product accordingly.
- Please keep this manual and hand it over when you transfer the product.
- This summary may not include every detail of all variations and considered steps.
- Please contact us when further information and help are needed.

Notes

- The product is intended for indoor use only. The product must be assembled and used in accordance with the provisions of the manual. Personal injury and/or damage to product may occur if products are used outside of their intended purposes and/or if products have been changed/modified from their original design. The seller does not assume any responsibility or liability with respect to any injury/damage caused by incorrect assembly or improper use.
- Avoid long-term exposure to humid environments to prevent mildew.
- Keep the product away from fire sources and high temperatures. Do not expose the product to direct sunlight.
- Do not place any hot objects on the surface of the product.
- If there are any defective or missing parts after unpacking, please cease assembly immediately and contact us.
- Please assemble the item on a spacious surface and do not place the unwrapped product directly on the ground to avoid product damage.
- Please do not stand or sit on the wooden boards.
- Please wear gloves during the assembly and/or disassembly process to avoid scratches from any sharp edges.
- Please match the corresponding part and fitting based on the part number in the manual.
- If the part does not match with the fitting, please check the piece as specified in this manual.
- During assembly, first loosely align all screws with the corresponding pre-drilled holes and then tighten the screws one by one.
- Periodically inspect screw tightness while the product is in use. If necessary, retighten to ensure structural integrity.
- If you accidentally spill water or another liquid on the surface, immediately wipe clean with a dry towel.
- Please keep the product away from sharp, pointed objects and corrosive substances to prevent product damage.
- Please place this item on level, solid ground during use.

 
Warnings

- Children are not allowed to assemble the product. During assembly, keep all small parts out of the reach of children as they may be fatal if swallowed or inhaled.
- Children are forbidden to climb or play on the product to avoid serious bodily injury caused by the toppling.
- Keep plastic packing bags out of reach of children to avoid any potential danger, such as suffocation.
- We have equipped some high-sized products with anti-dumping accessories. Please fix the product to the wall to prevent personal injury caused by accidental dumping.

Tips-contact us

- If there is any damage after unpacking or you have any questions during assembly, please feel free to contact us at your earliest convenience. Our customer care team provides professional returns or exchanges as well as assembly guidance.

Required




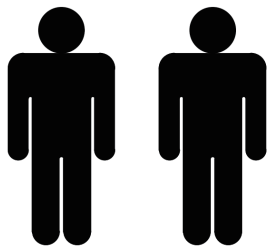


2PERS




Cam Lock Fastening System

    Insert the cam bolt into the hole first, then insert the cam lock and lock it.

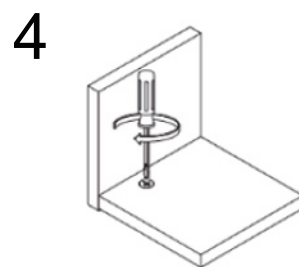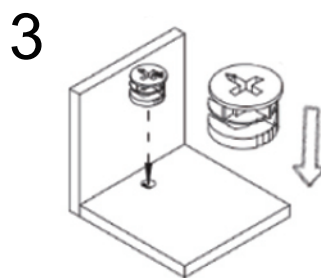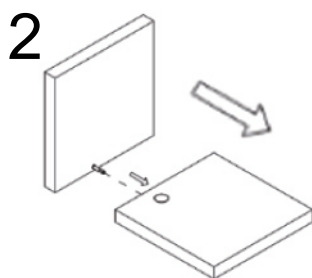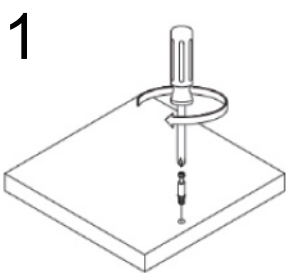


Disassembly Diagram

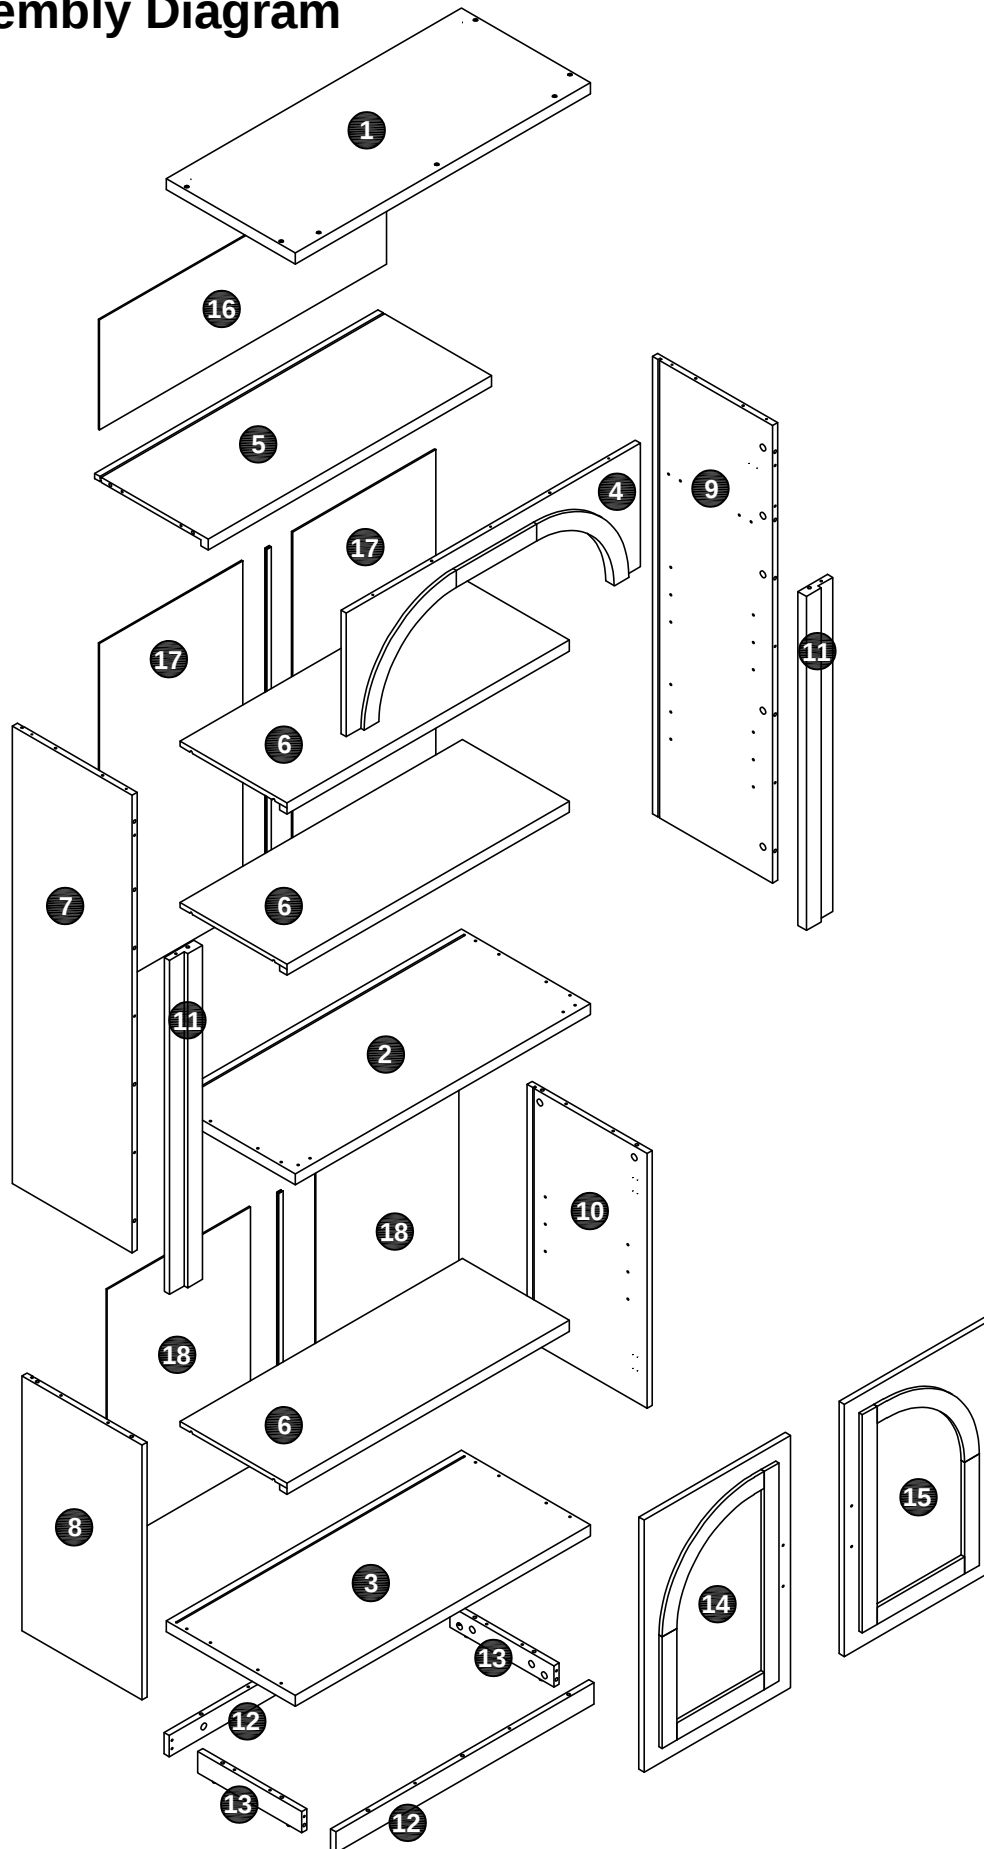 


Parts List

 1

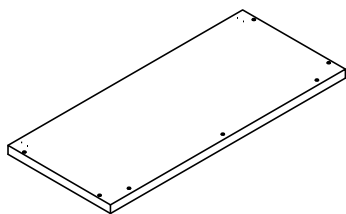


X1

 2

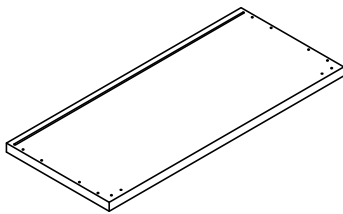


X1

 3

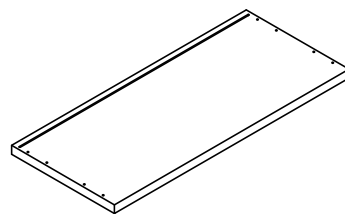


X1

 4

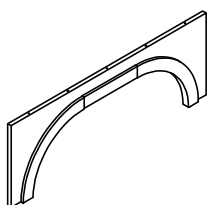


X1

 5

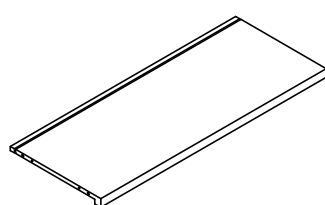


X1

 6

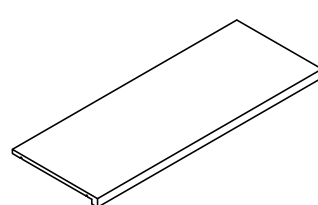


X3

 7

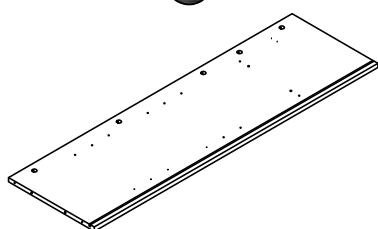


X1

 8

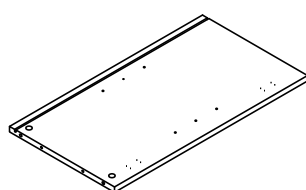


X1

 9

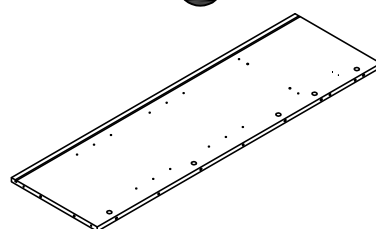


X1

 10

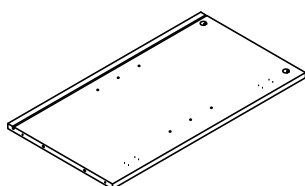


X1

 11

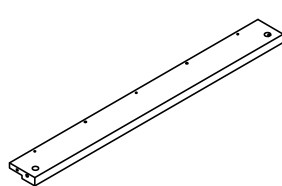


X2

 12

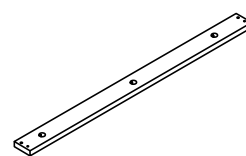


X2

 13

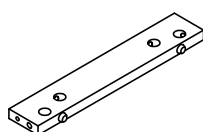


X2

 14

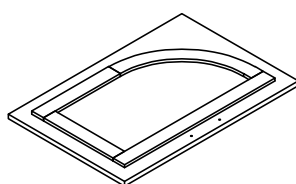

X1

 
15

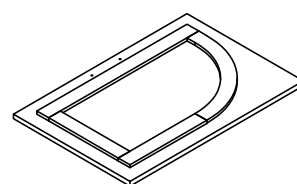

X1


Parts List

 16

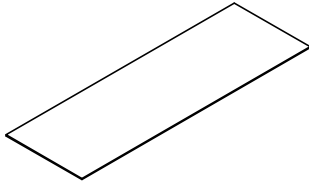


X1

 17

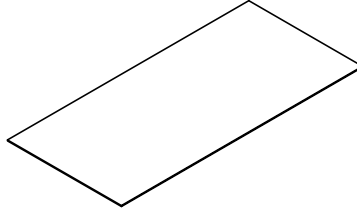

X2

 
18

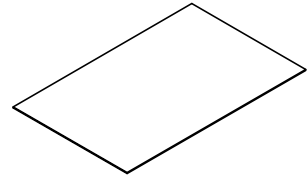

X2

Components Sheet

 
A



Ø6x35MM

X36(+2)

 B

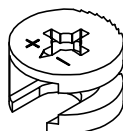

Ø15x10MM

X36(+2)

C



Ø6x30MM

X46(+2)

D



Ø3.5x12MM

X31(+2)

 
E



Ø3.5x15MM

X20(+2)

F

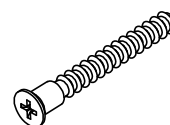

Ø5x40MM

X15(+1)

 
G



Ø5*/32"*18MM

X4


H



15x14x10MM

X20

 
I

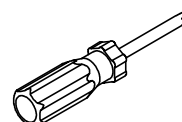

X1


Components Sheet

 J

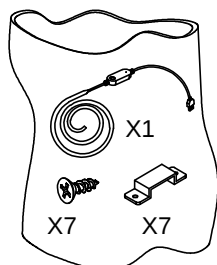


X1

 K

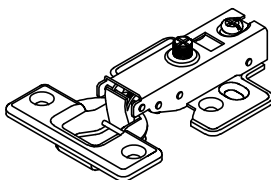

X4

 L

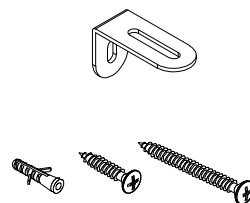


X2

M



X12

 N

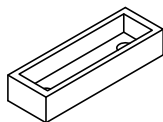


X2

O




X3

 P

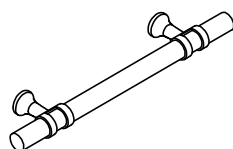

X2

 
Q

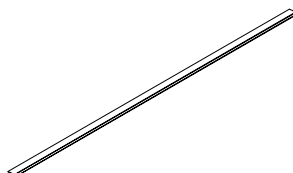

L=811MM

X1

 R

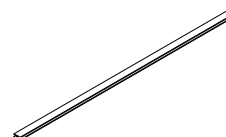

L=596MM

 
X1

1

A



x14

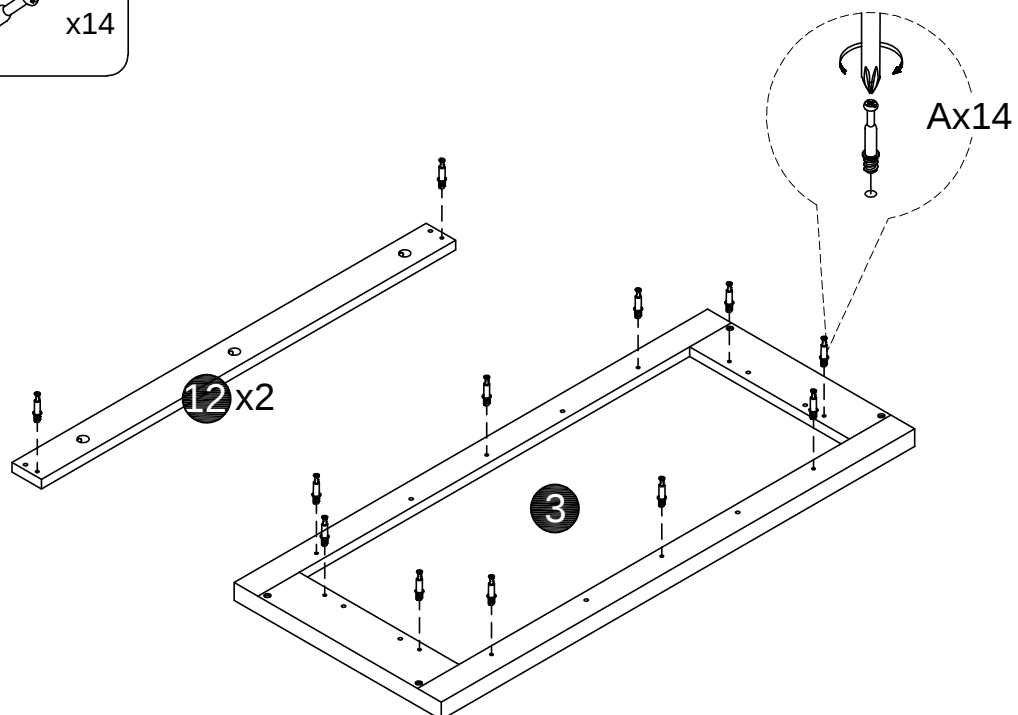

2

B

 


x4

C




x4

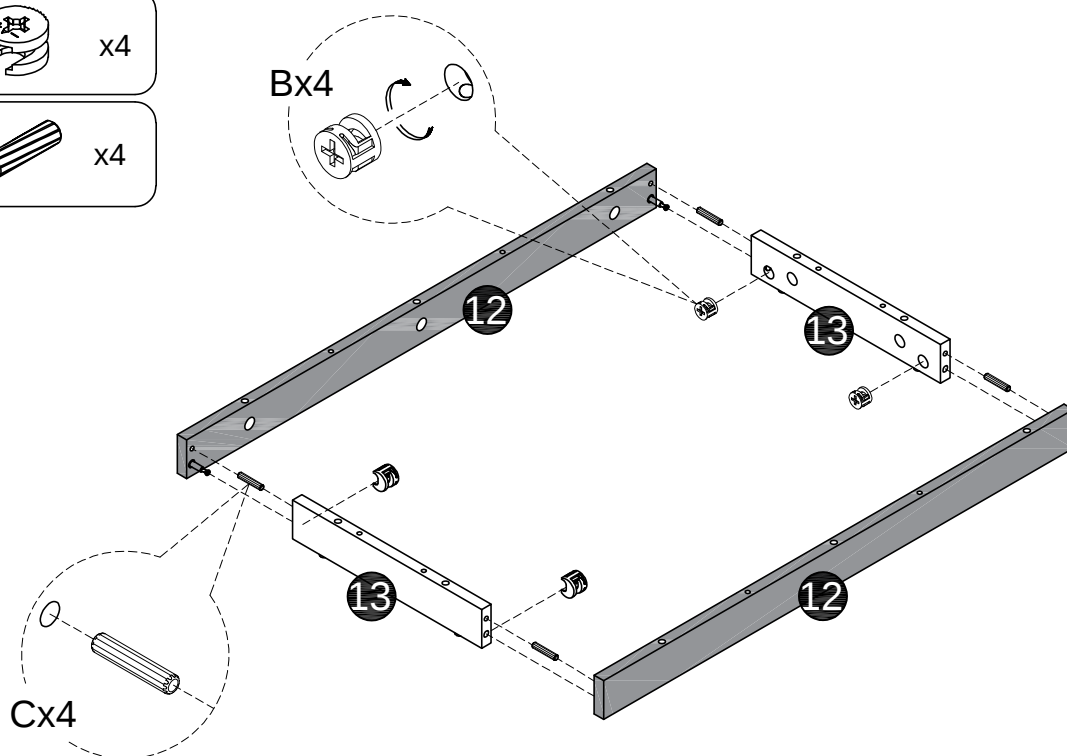

3

F  x4

 
C  x4

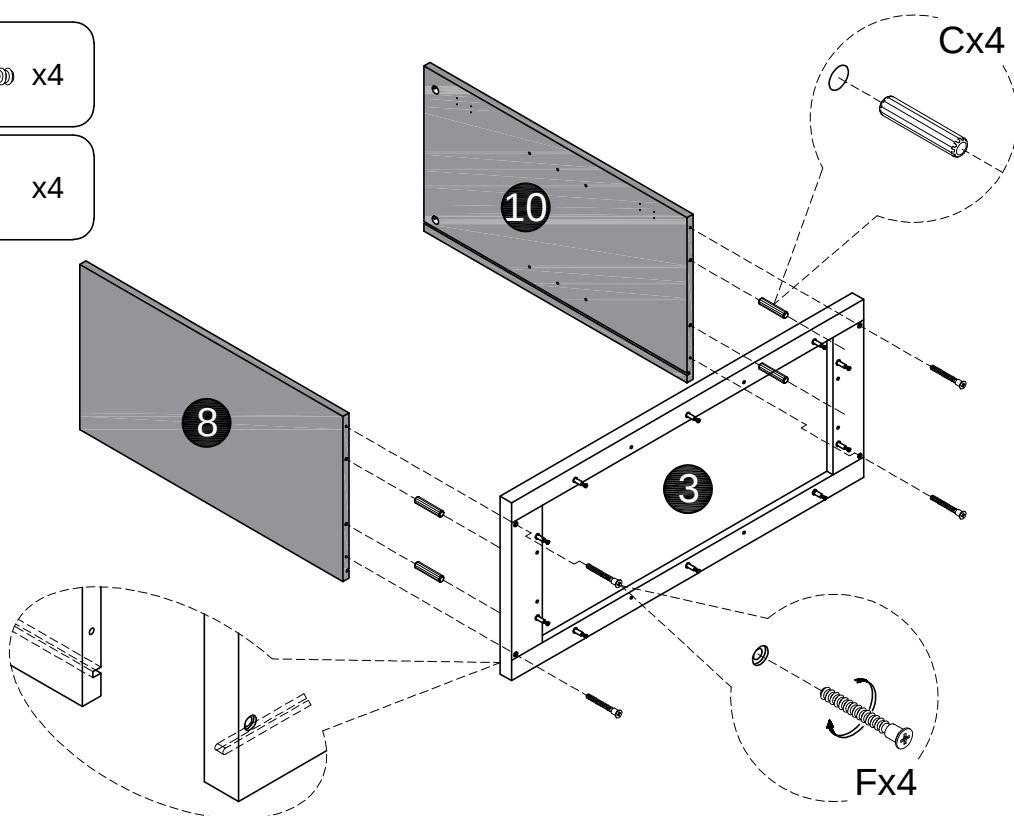


4

B  x10

 C  x8

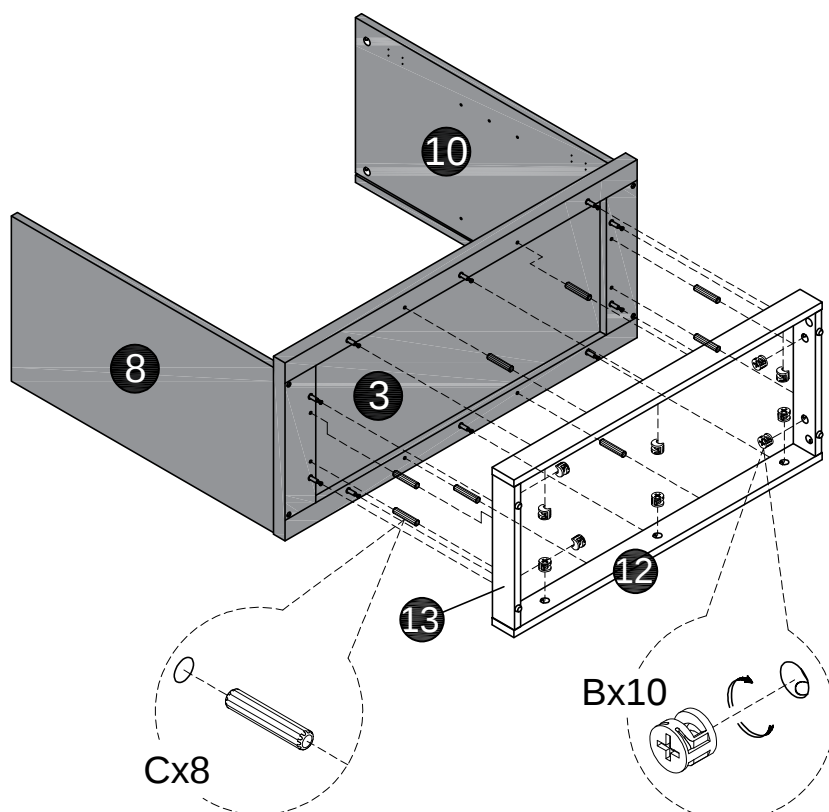

5

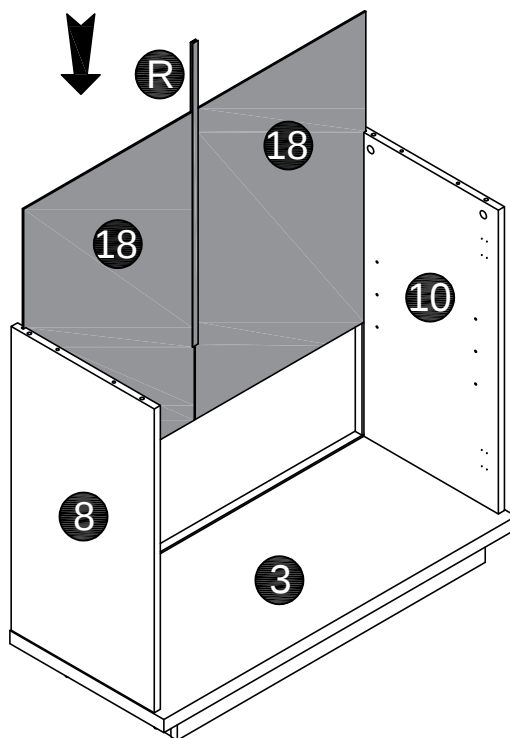 

6

A



x4

Ax4

7

B

 


x4

C



x4

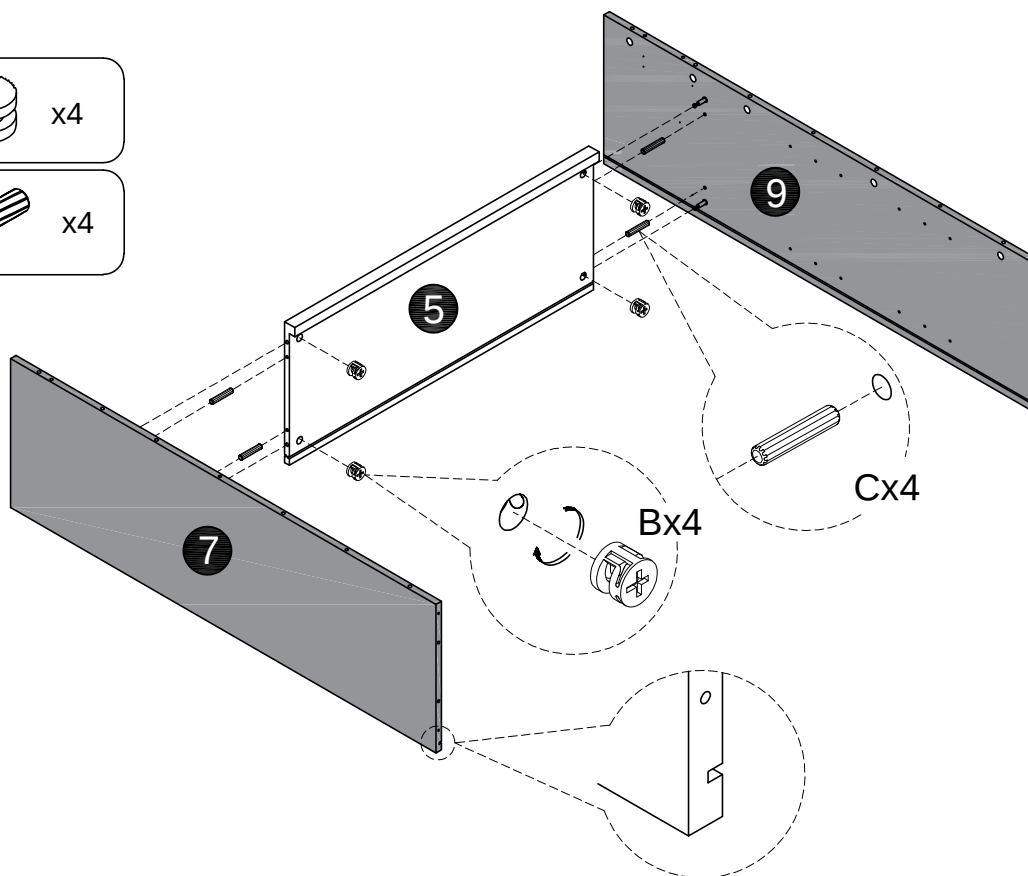


8

A



 x12

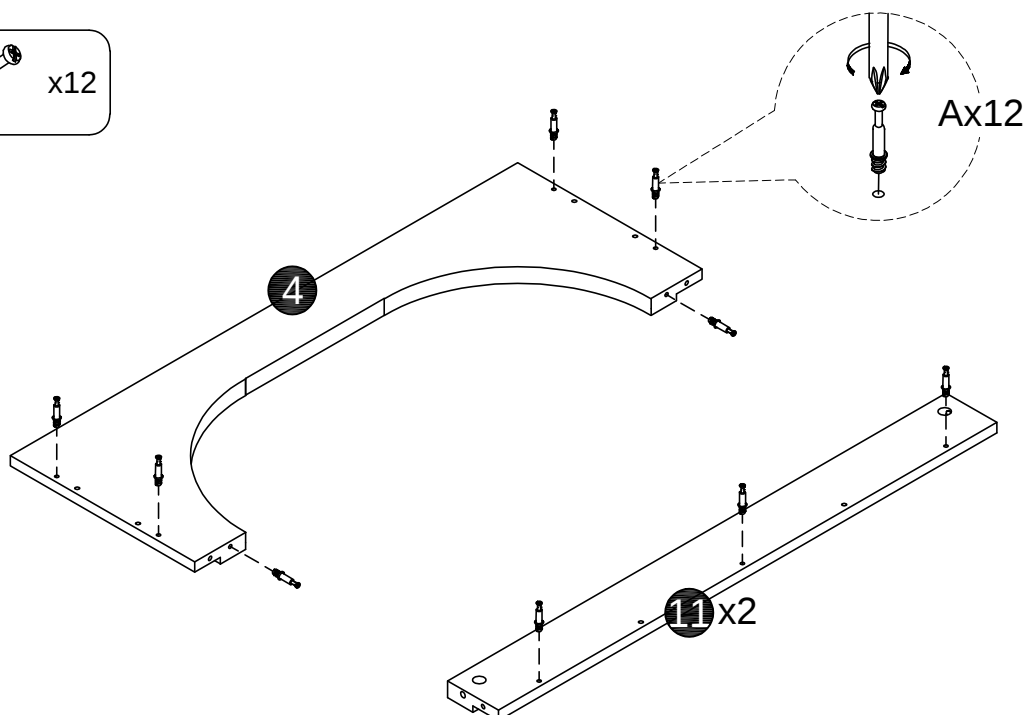

9

B

 


x2

C



x2

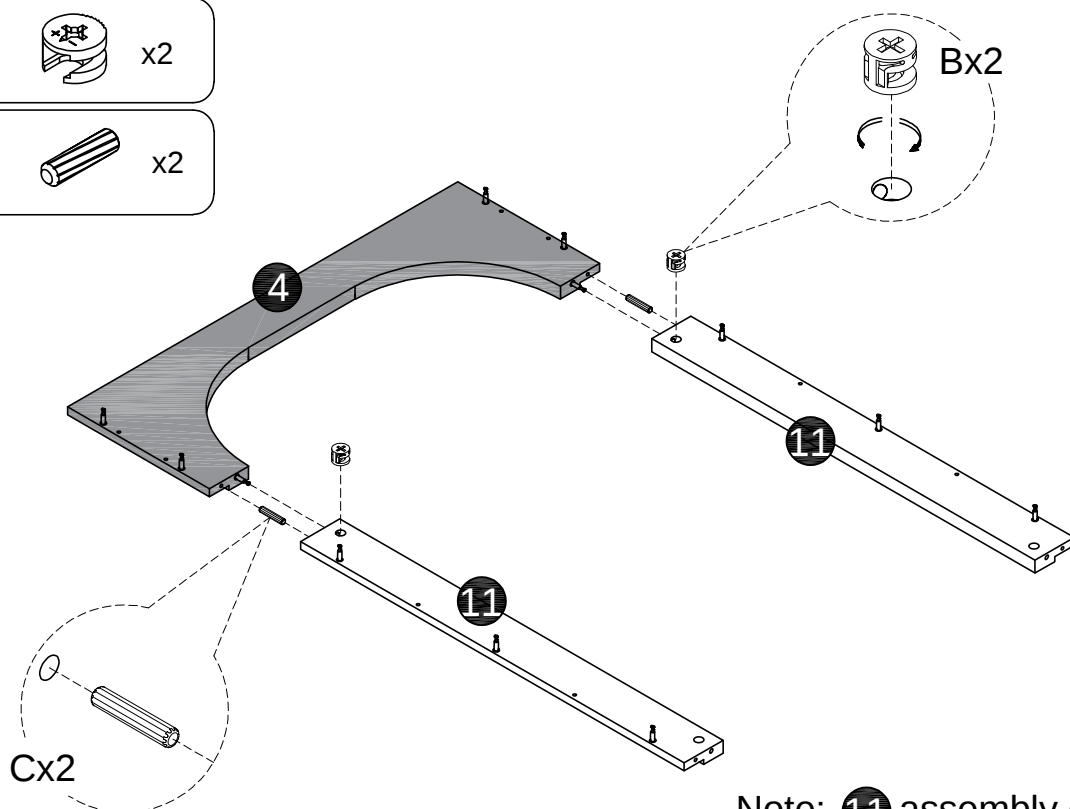

Note: 11 assembly direction

10

B

 
 


x10

C




x8

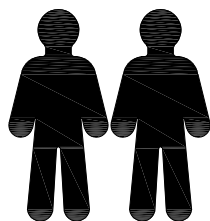
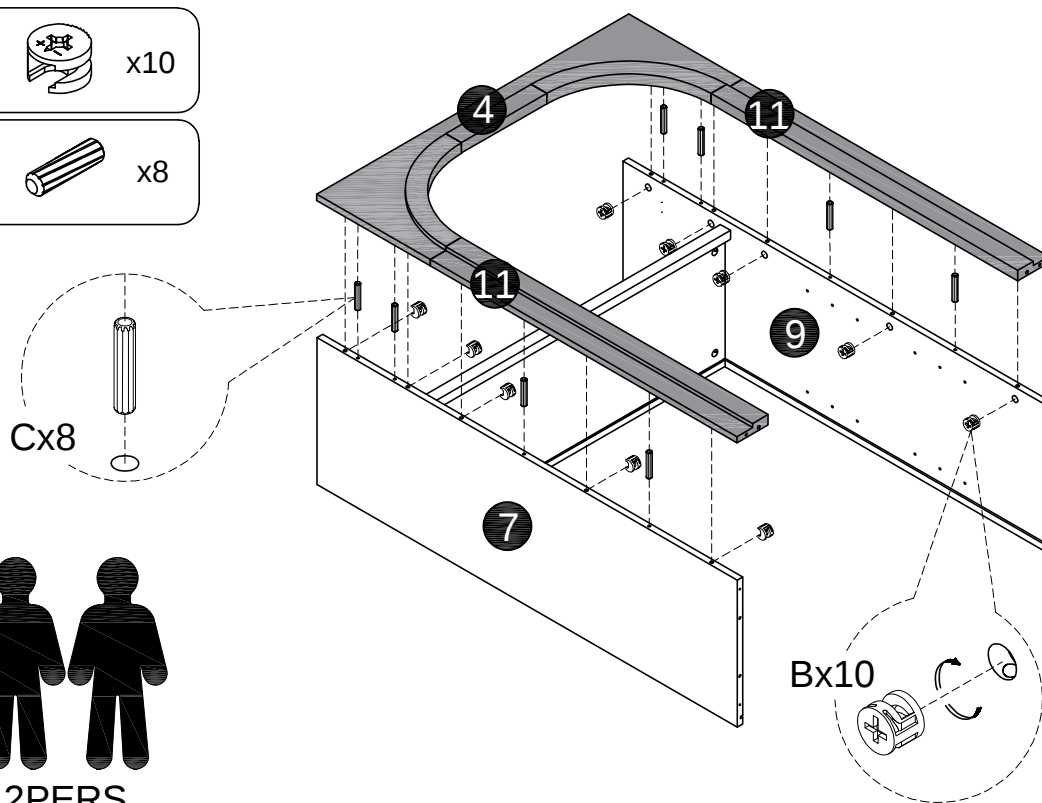


2PERS

 11

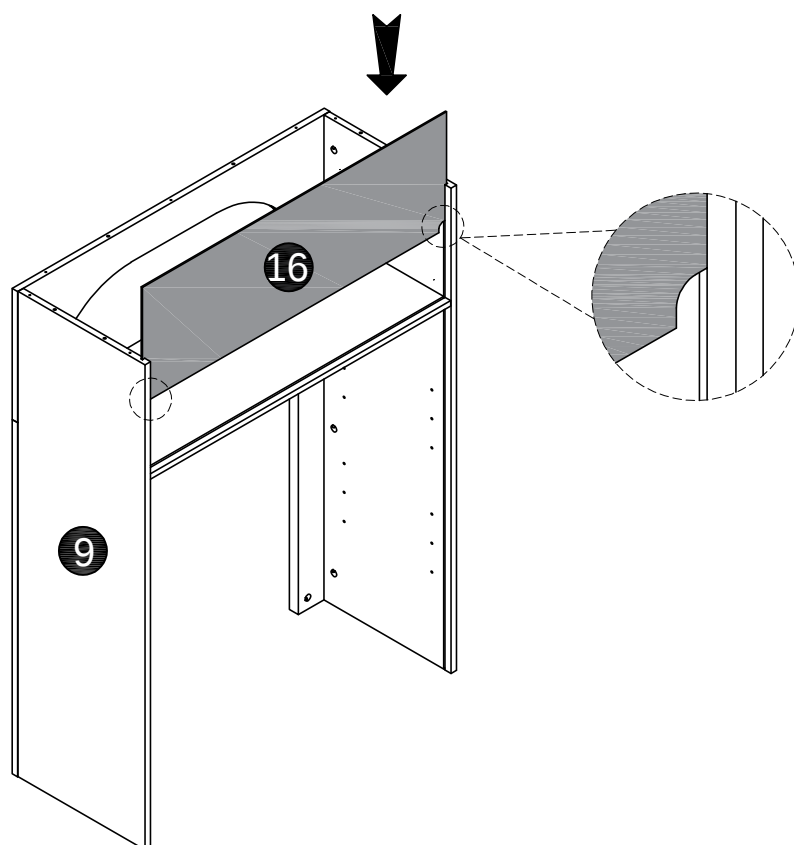

12

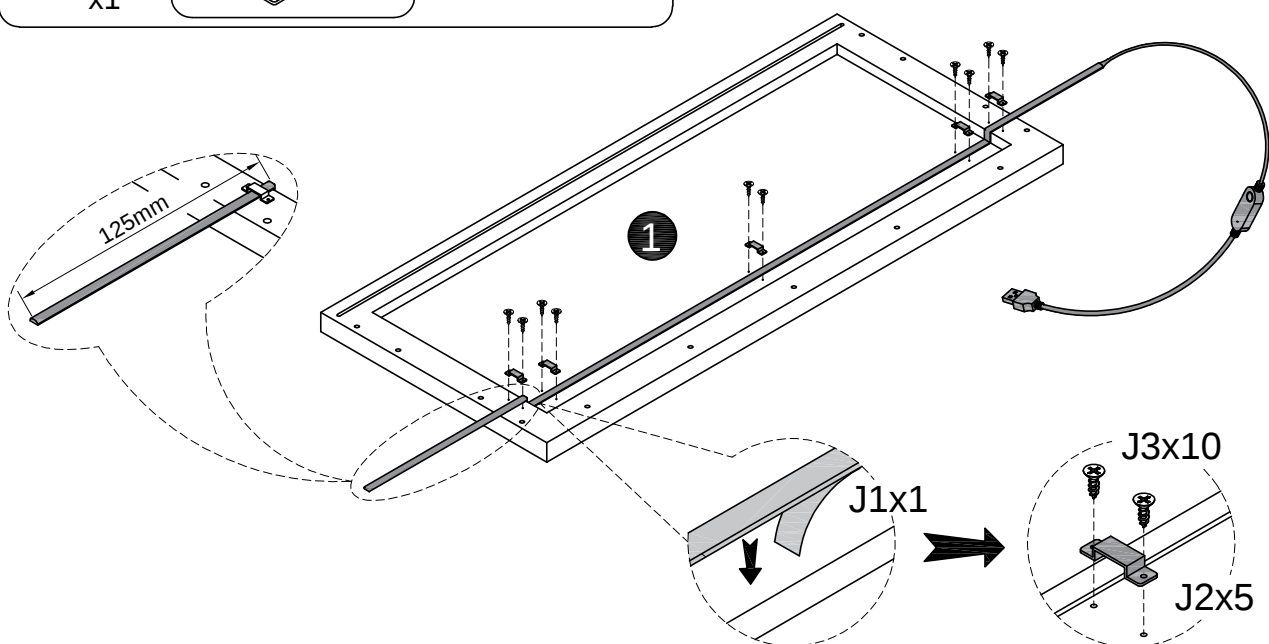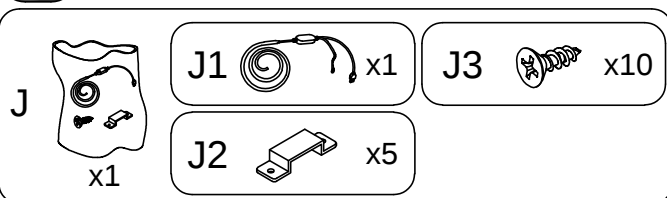  


13

13

F  x7

 C  x6

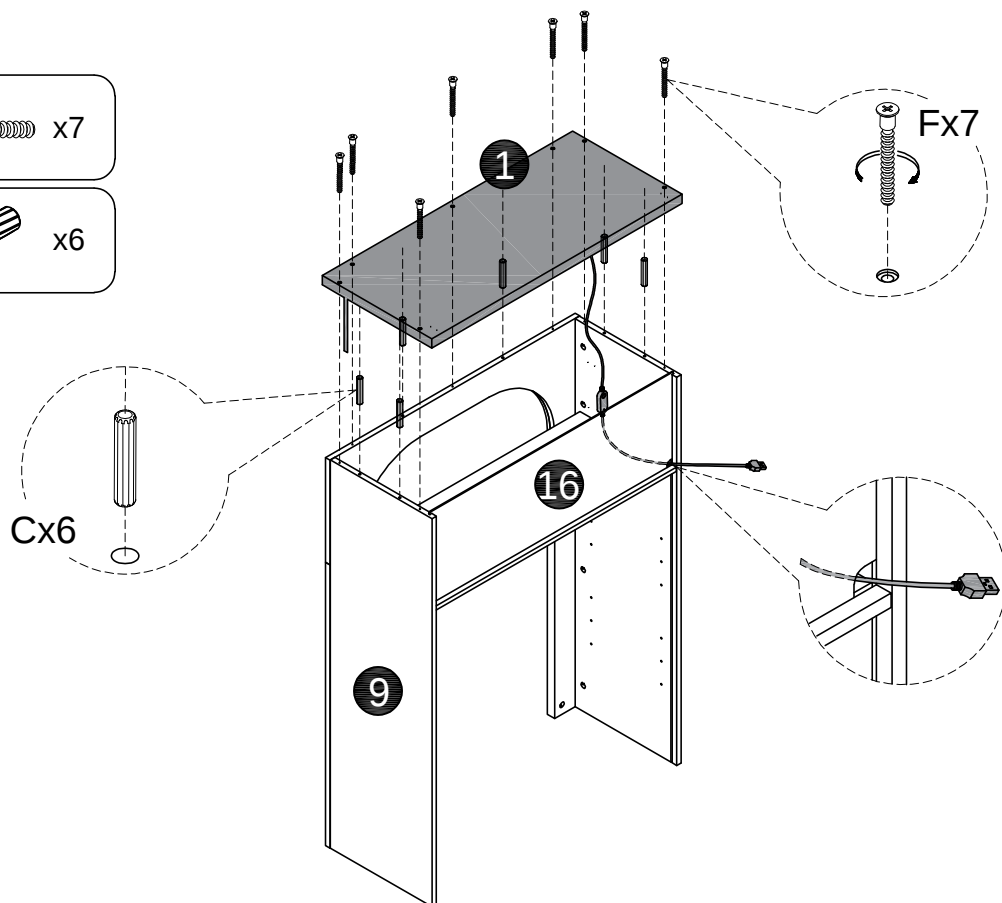

14

 
J



x1

J2  x2

J3  x4

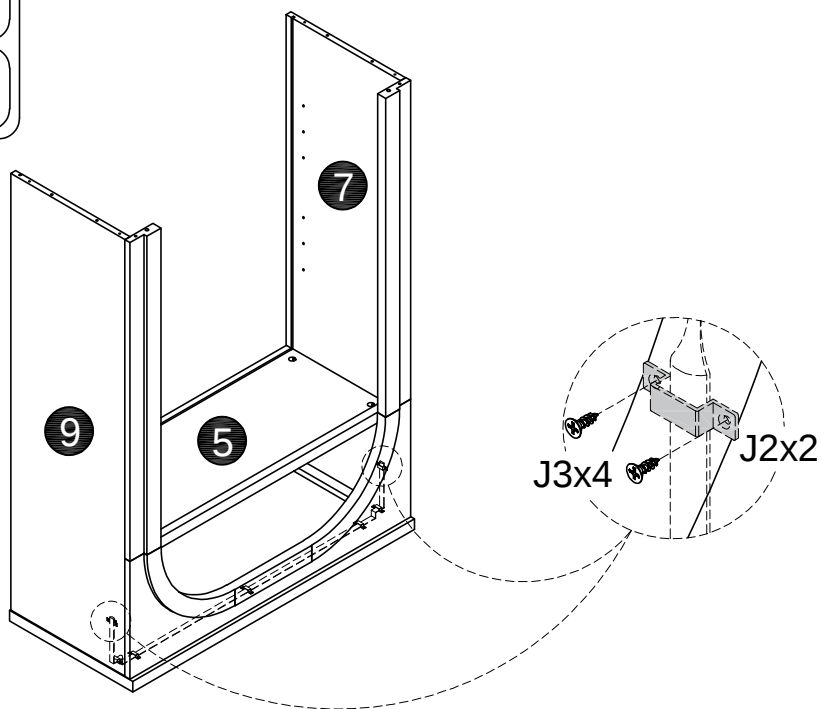

15

A



x6

N

 


x2


D




x4

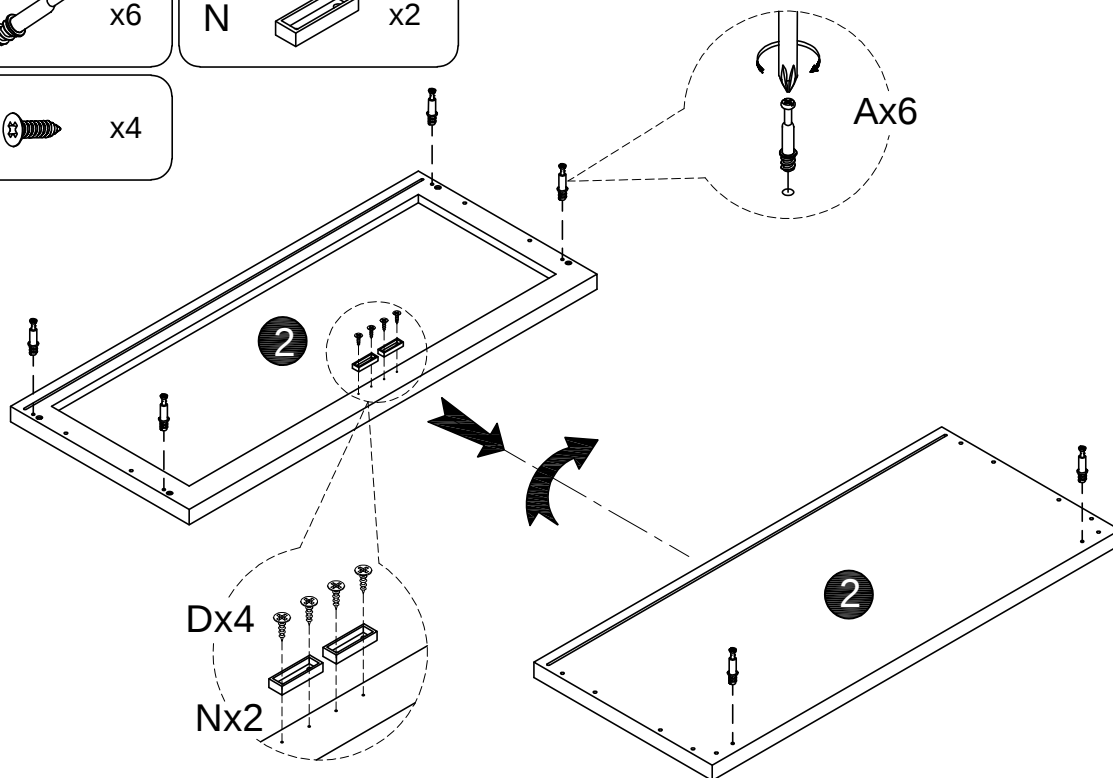

16

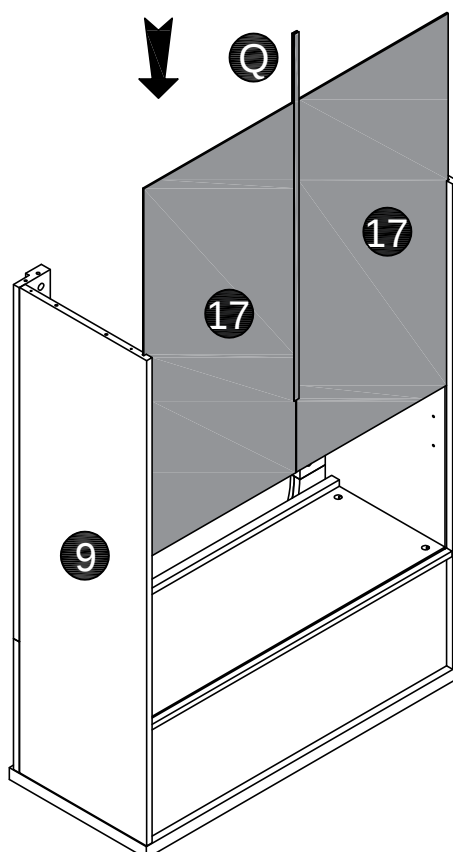 


17

 F  x4

C  x6

 
B  x2

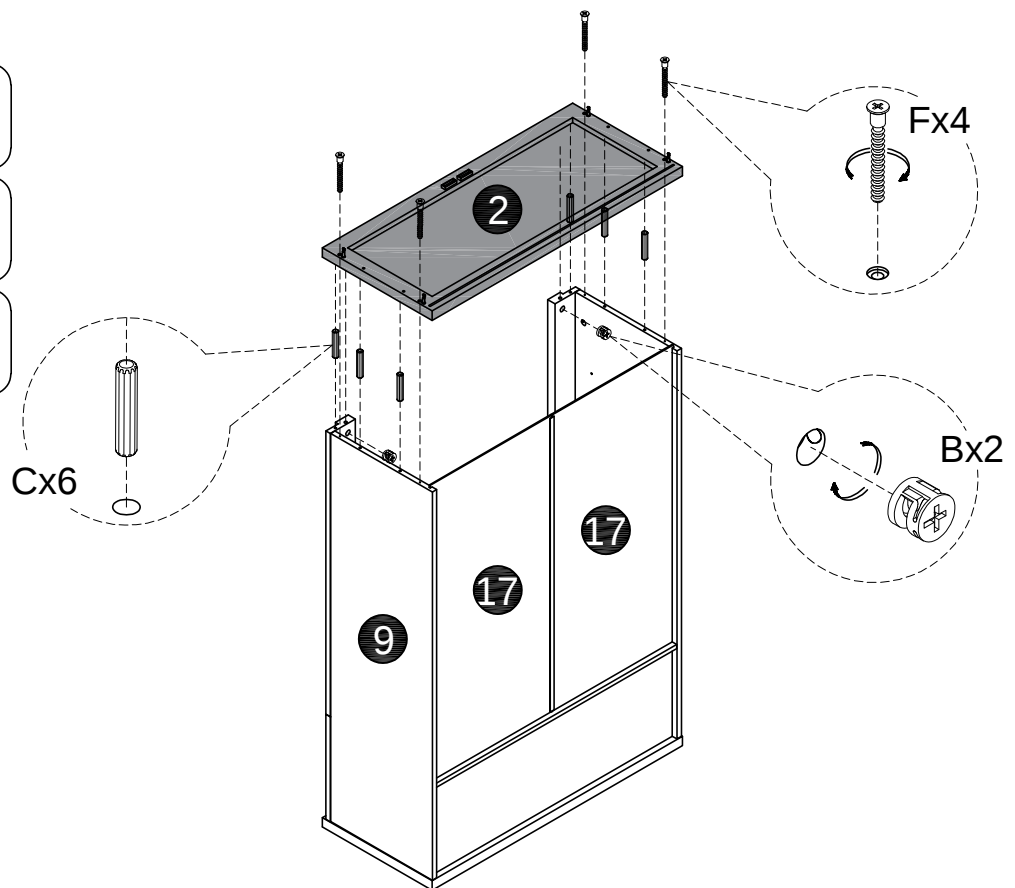

18

D  x3

 O  x3

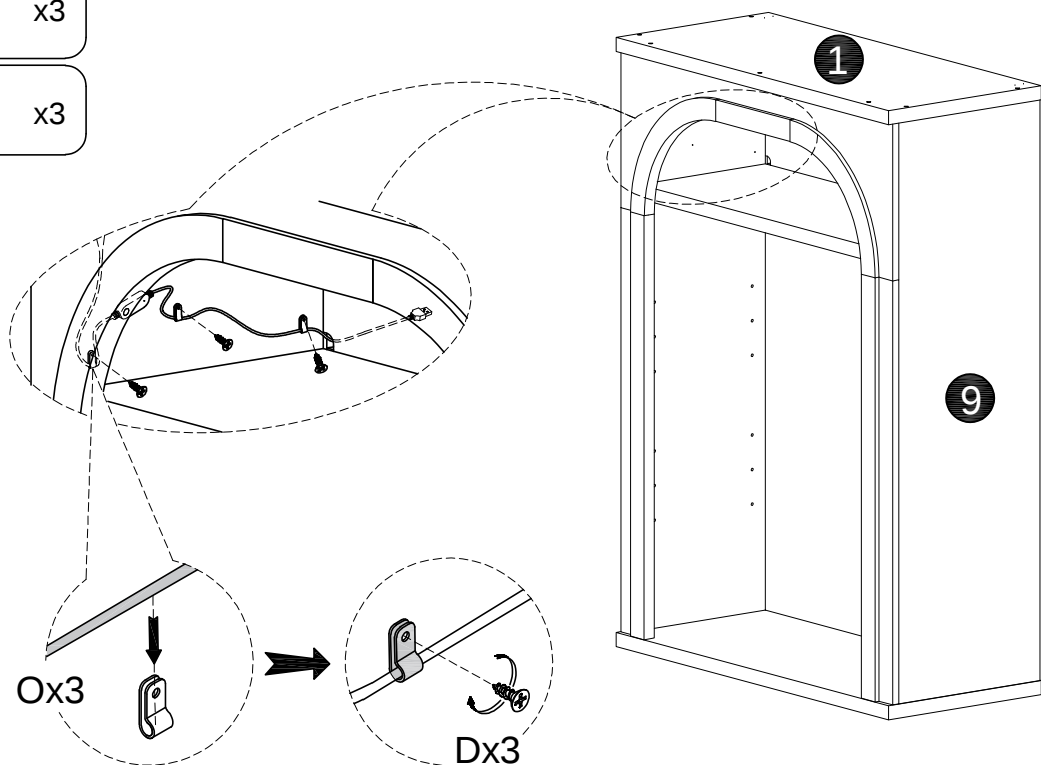

19

C

 


x4

B




x4

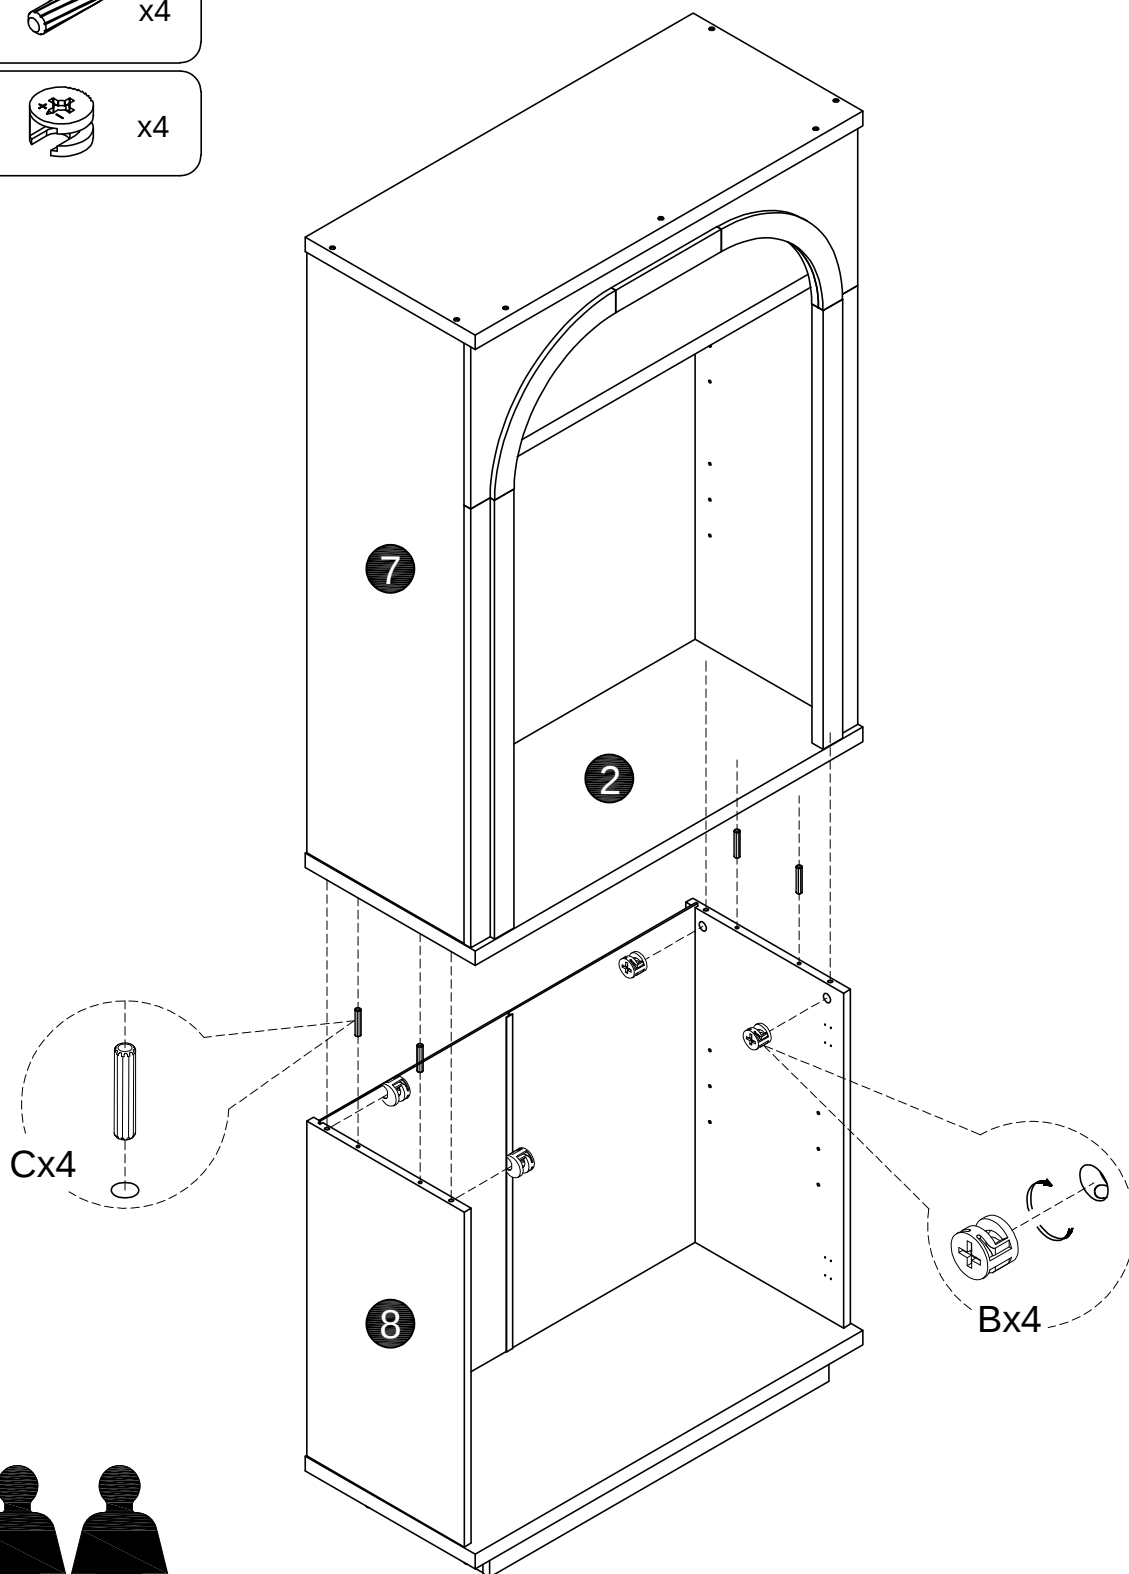

Cx4

 Bx4

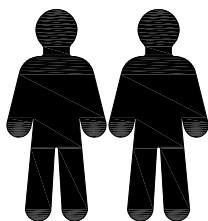


2PERS

20



M



 x12

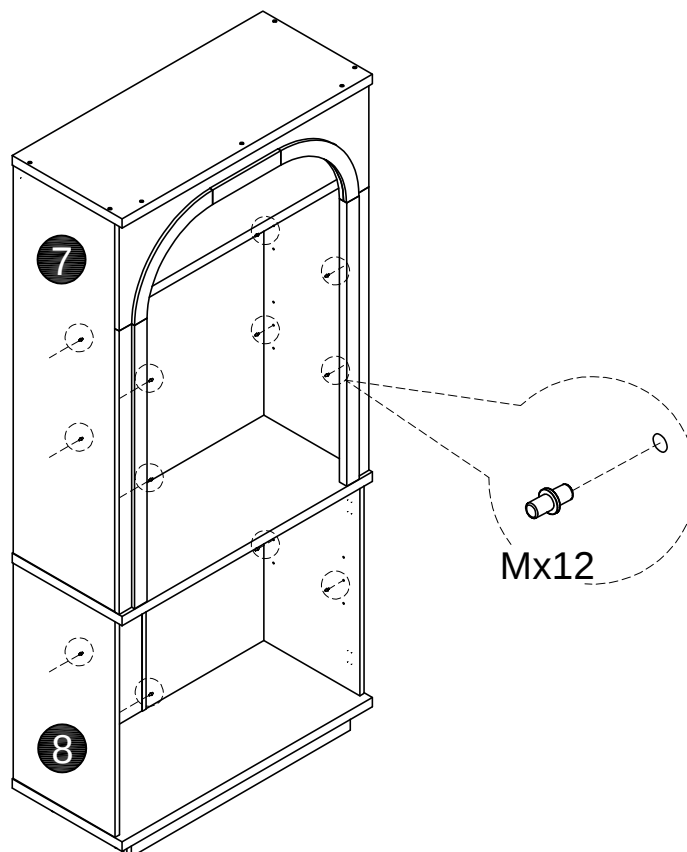

21

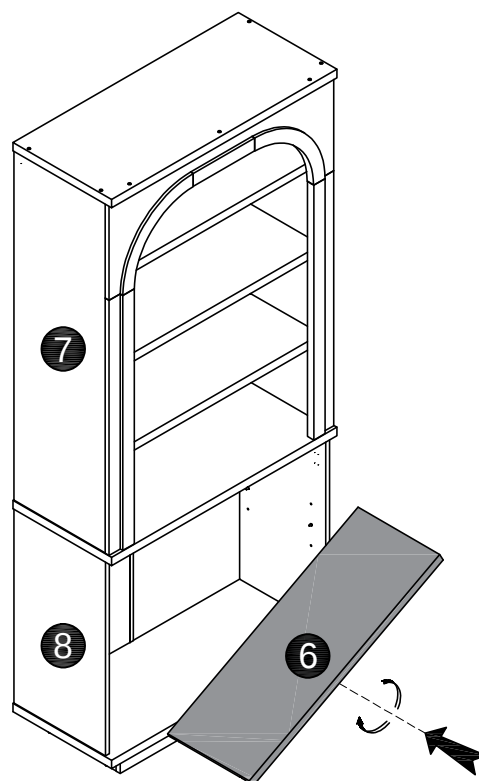 
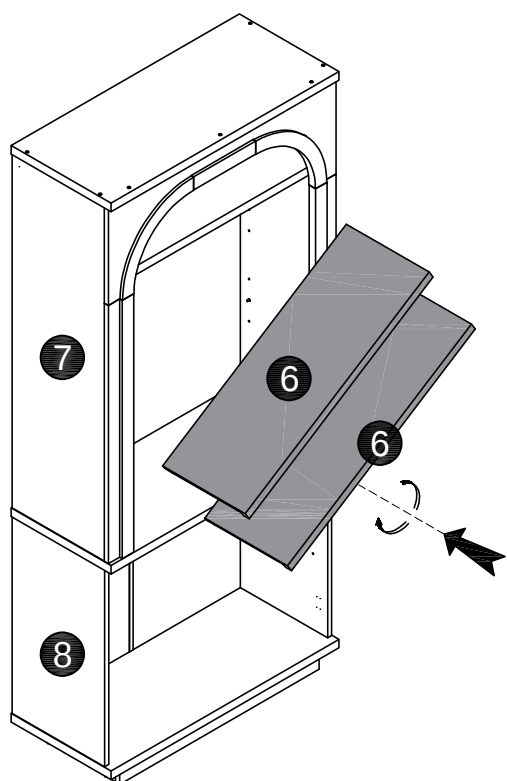 


22

D  x8

K  x4

  Dx8
Kx4


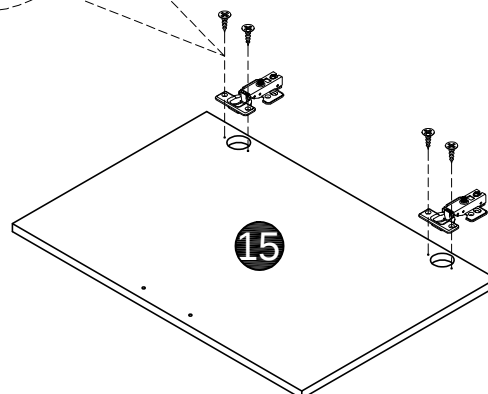
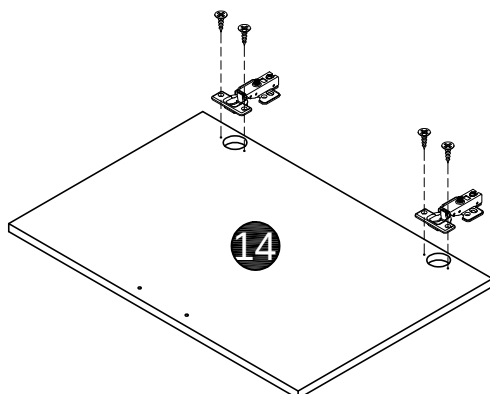


23

D  x8


P  x1

   G  x2

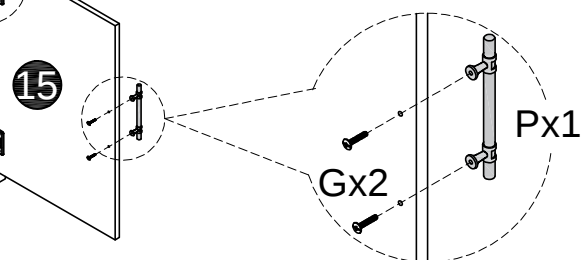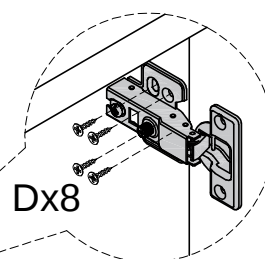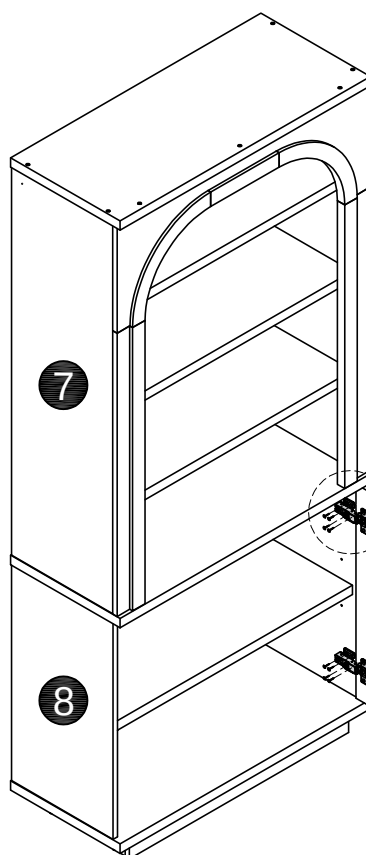


24

 D  x8

P  x1

 
G  x2

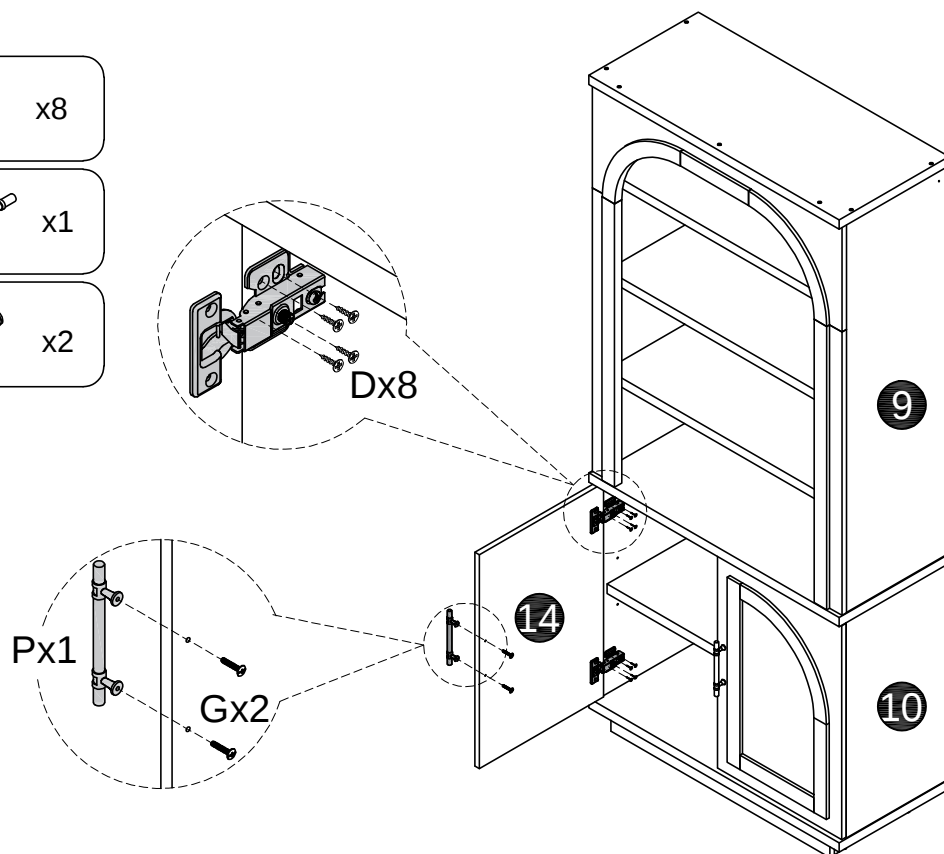


25

E  x20

 
H  x20

L  x2

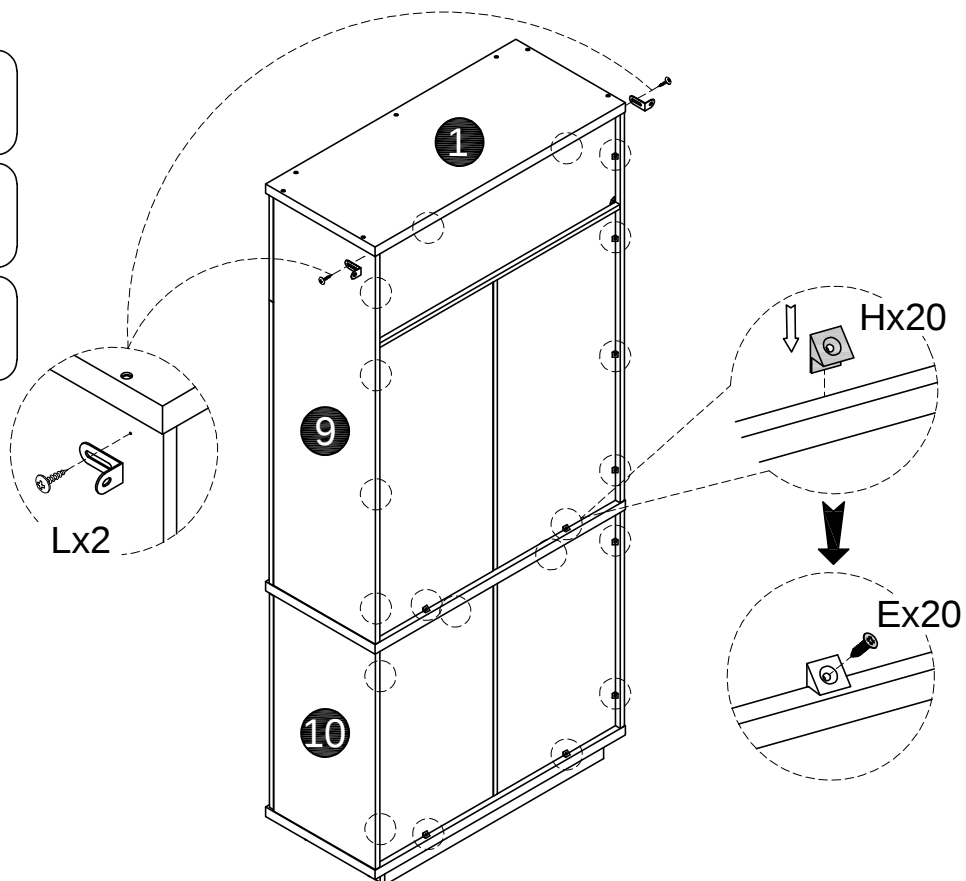 


The ways to adjust the door

 
- Before adjusting the hinge, please check whether the cabinet is skewed.
- If the skew can not be repaired, please remove the anti-tipping device first, then adjust the cabinet to vertical position.
- Please adjust the hinge with the door open.
- Please operate it with more than 2 people, one person holds the door and the other one adjusts the screw.

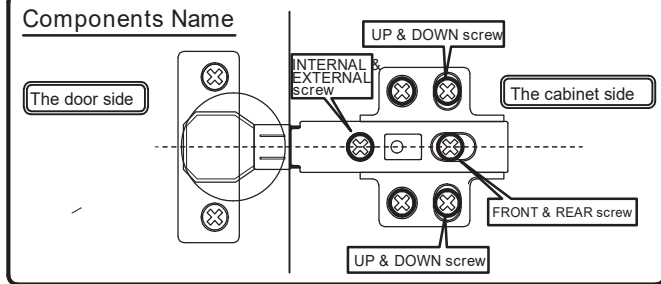

 Obvious gaps between doors or Doors don't look closed

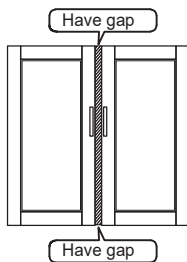


 - 1 Turn "internal & external screw" to the right can make the door approach inside. Please adjust the doors little by little.

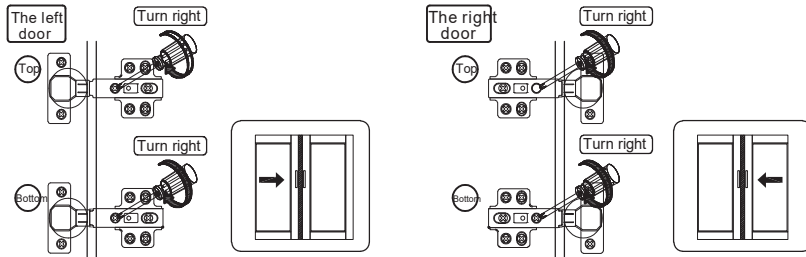


If the 2 doors are overlap, please turn the "internal & external screw" to the left.

 When door is crooked

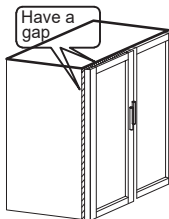


Please take the following steps to adjust first.

 - 1 Rotate the "front and rear screws" to the left

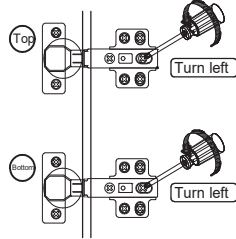


After adjusting the "front and rear screw", the door still does not change, please turn the "internal & external screw" to the right slightly.

 
- 2 Push the door to the cabinet

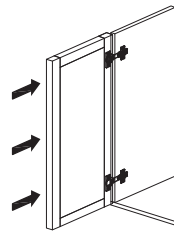

 
- 3 Rotate the "front and rear screws" to the right

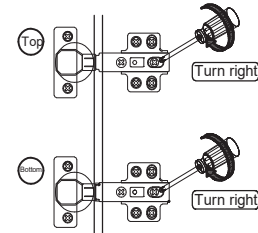


When door is leaning

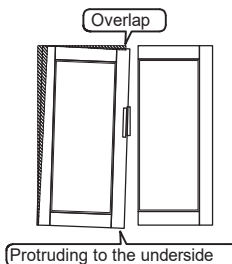 

 
- 1 Turn "internal & external screw" to the left can make the top of the door tilted outward.

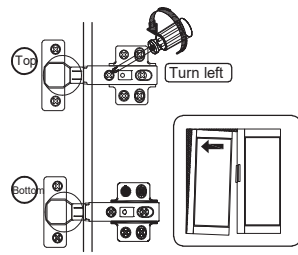


Protruding to the upside

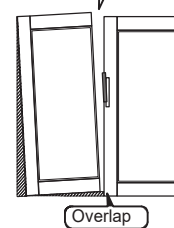 

 
- 1 Turn "internal & external screw" to the left can make the bottom of the door tilted outward.

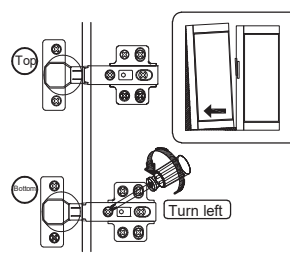


When the door is higher on top

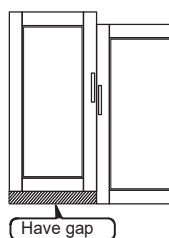 


- 1 Turn "up & down screw" to the left

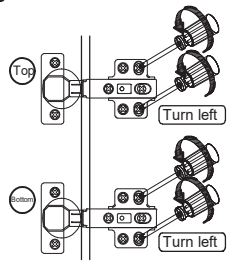 

 - 2 Lower the door's height so that 2 doors are of the same height.

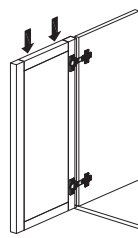

- 3 Turn "up & down screw" to the right

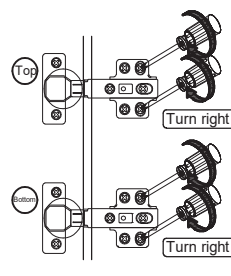 



If the door is lower on bottom, please lift up the left door slightly on step 2

27

L



  x2

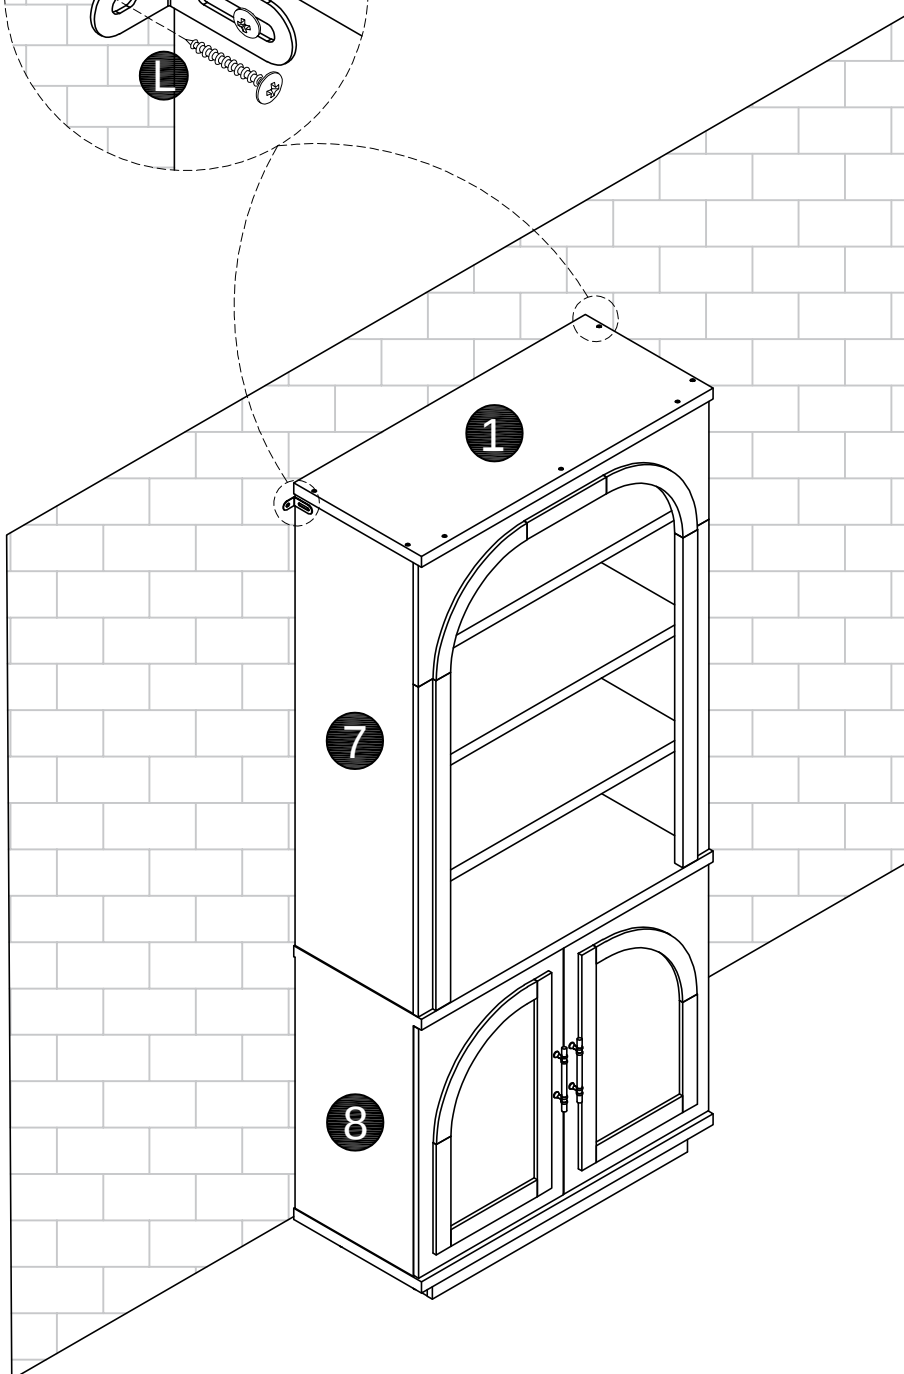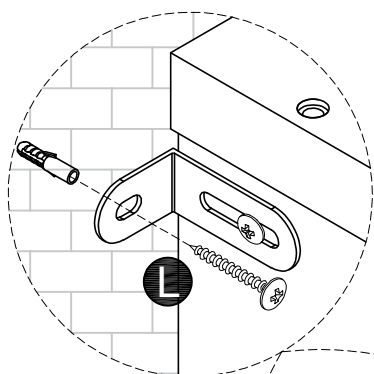

Complete!

