



ASSEMBLY INSTRUCTIONS

TV Stand

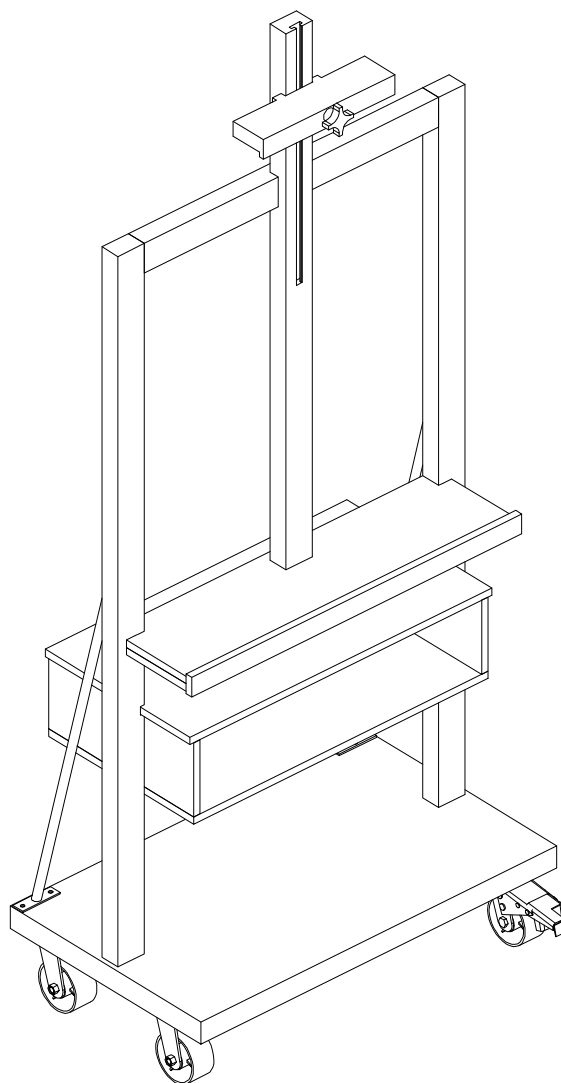

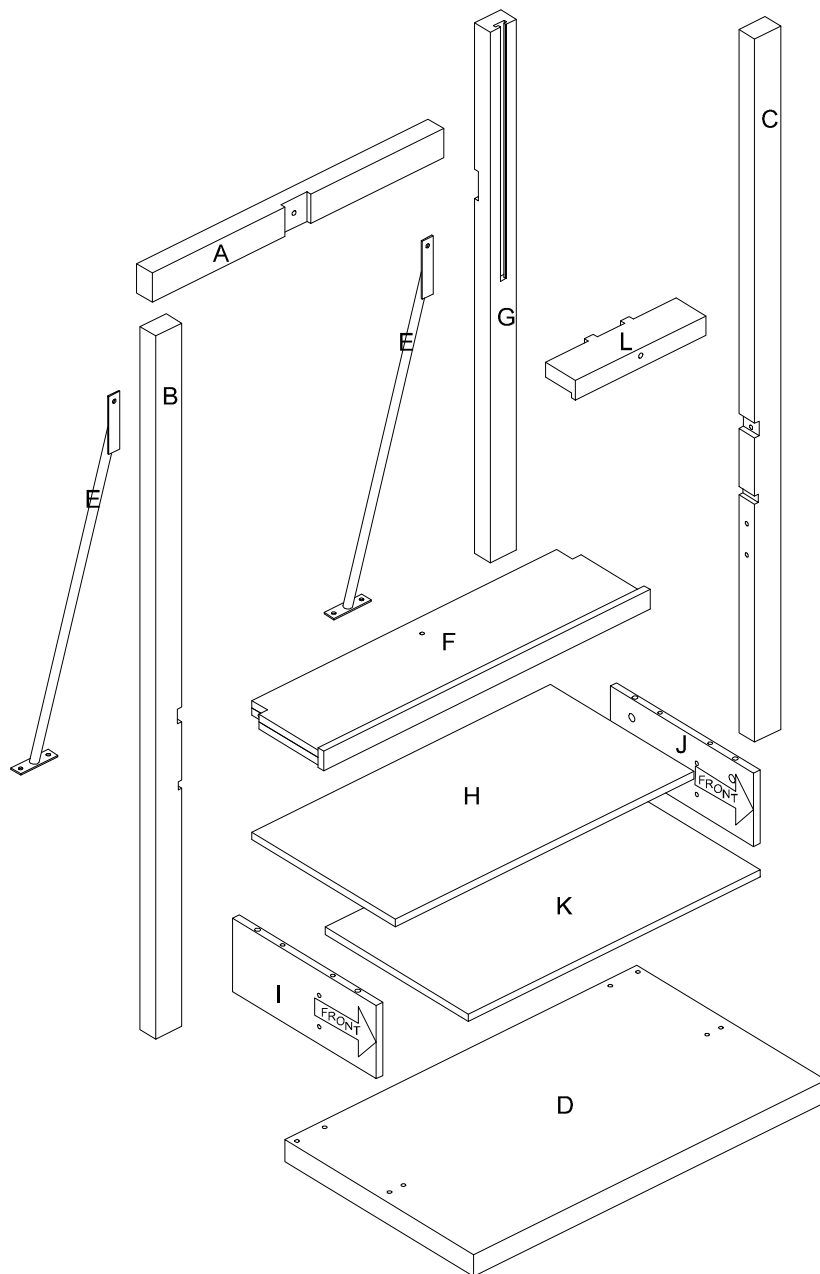

PART LIST

(A)		1pc	(D)		1pc	(G)		1pc	(J)		1pc
(B)		1pc	(E)		2pcs	(H)		1pc	(K)		1pc
(C)		1pc	(F)		1pc	(I)		1pc	(L)		1pc

Hardware List



(1)

Ø8x30mm=12



(2)

Ø6x32mm=8



(3)

Ø15x10mm=8



(4)

Ø6x75mm=4



(5)

Ø6x60mm=4



(6)

Ø6x40mm=1



(7)

Ø6x35mm=7



(8)

Ø6x20mm=22(Black)



(9)

Ø8x20mm=16(Black)



(10)

Ø6x13mm=6(Black)



(11)

Ø6x13mm=14



(12)

2pcs



(13)

2pcs



(14)

1pc



(15)


1pc



(16)


Ø4=1pc

Step 1

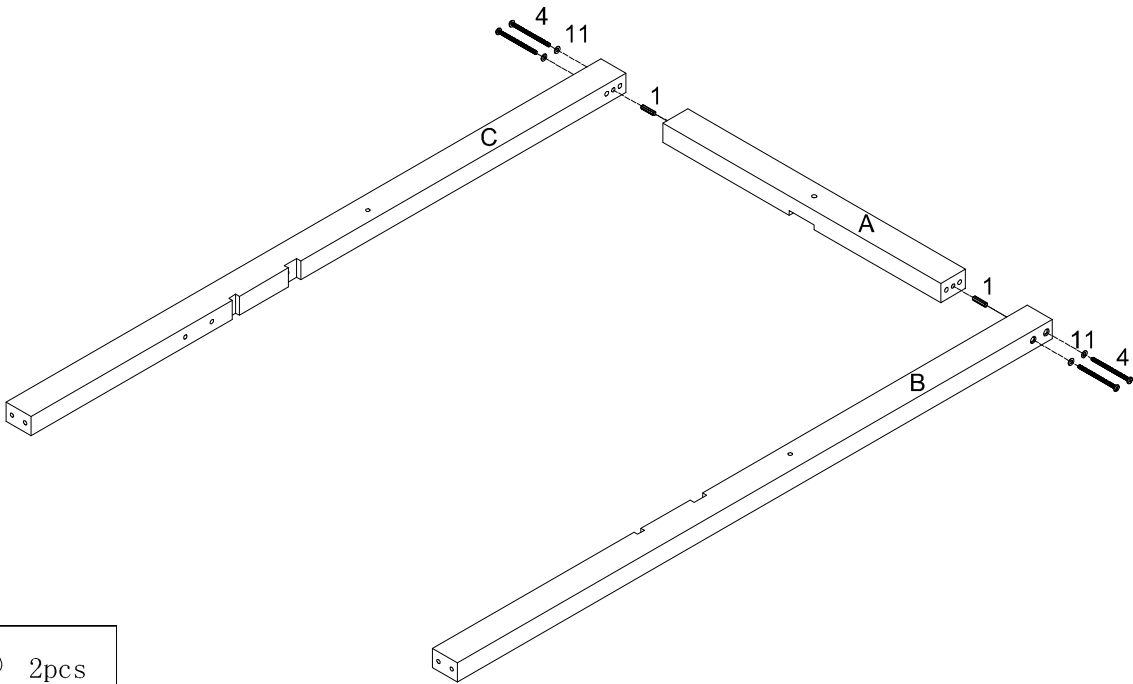


1:		2pcs
4:		4pcs
11:		4pcs

Step 2

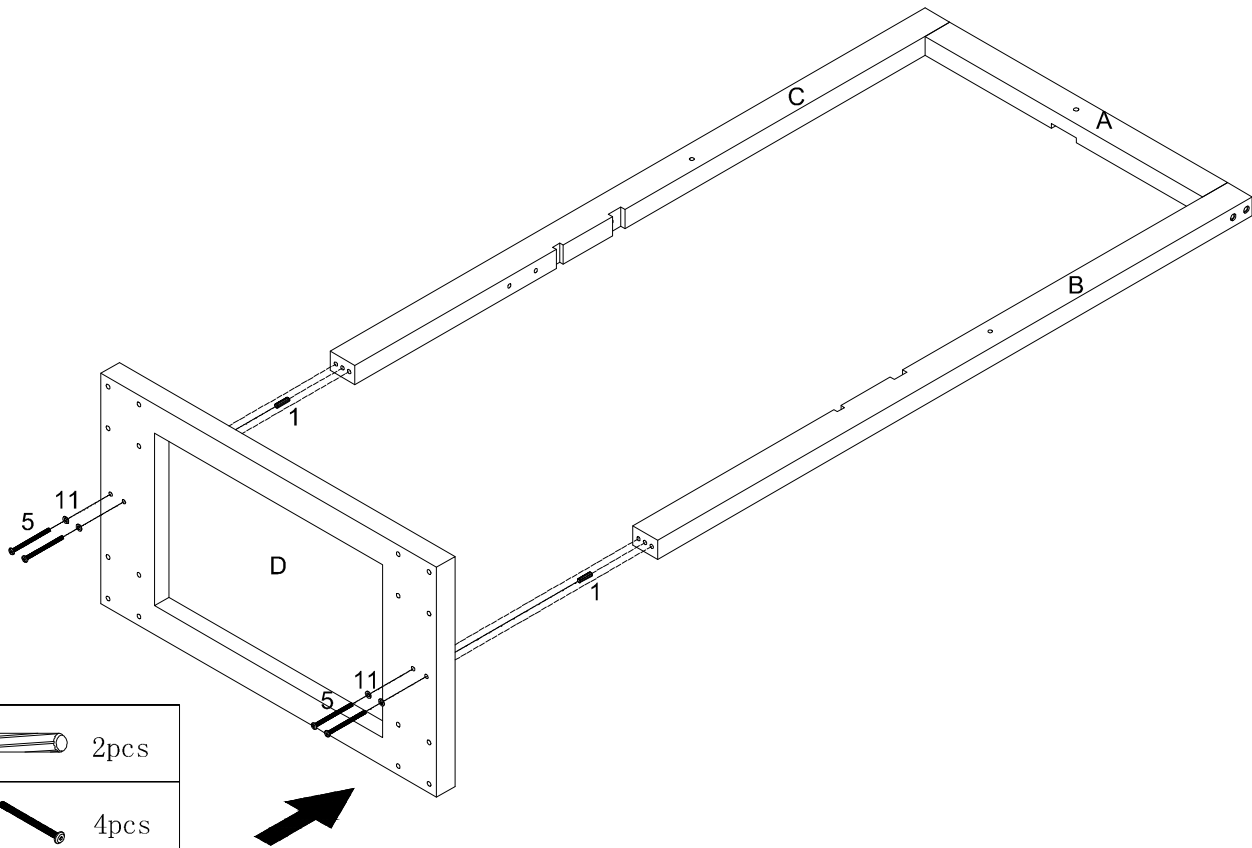


1:		2pcs
5:		4pcs
11:		4pcs

Step 3

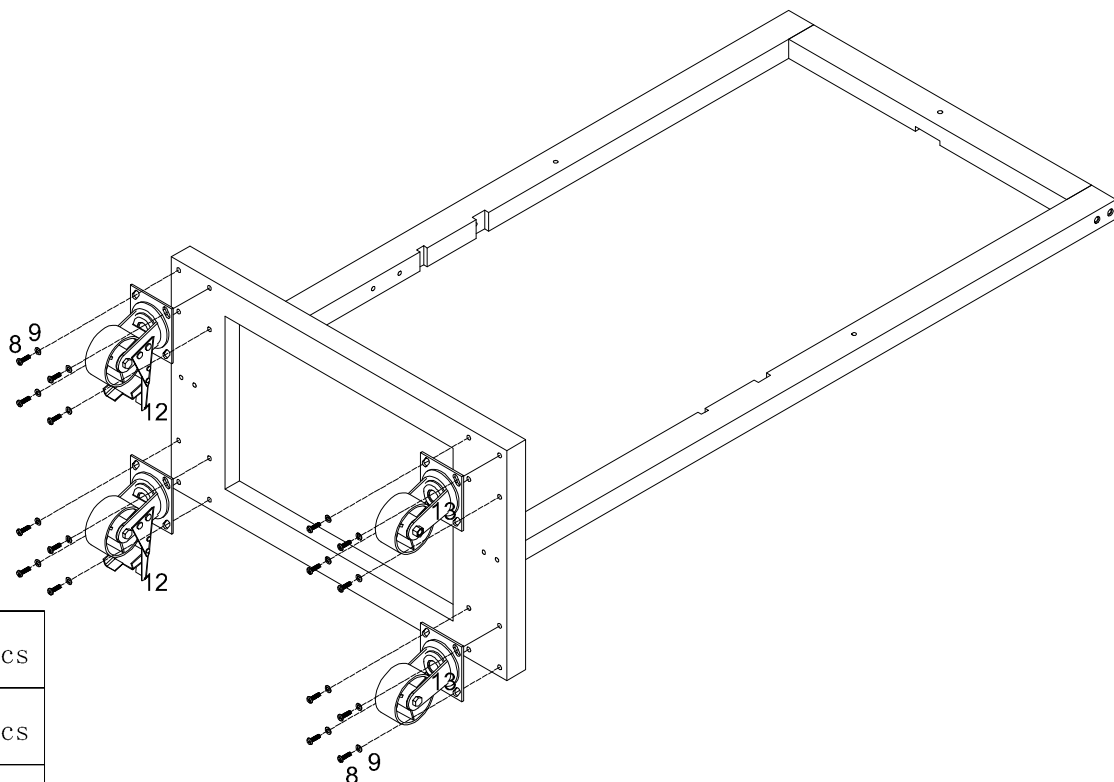


12:		2pcs
13:		2pcs
8:		16pcs
9:		16pcs

Step 4

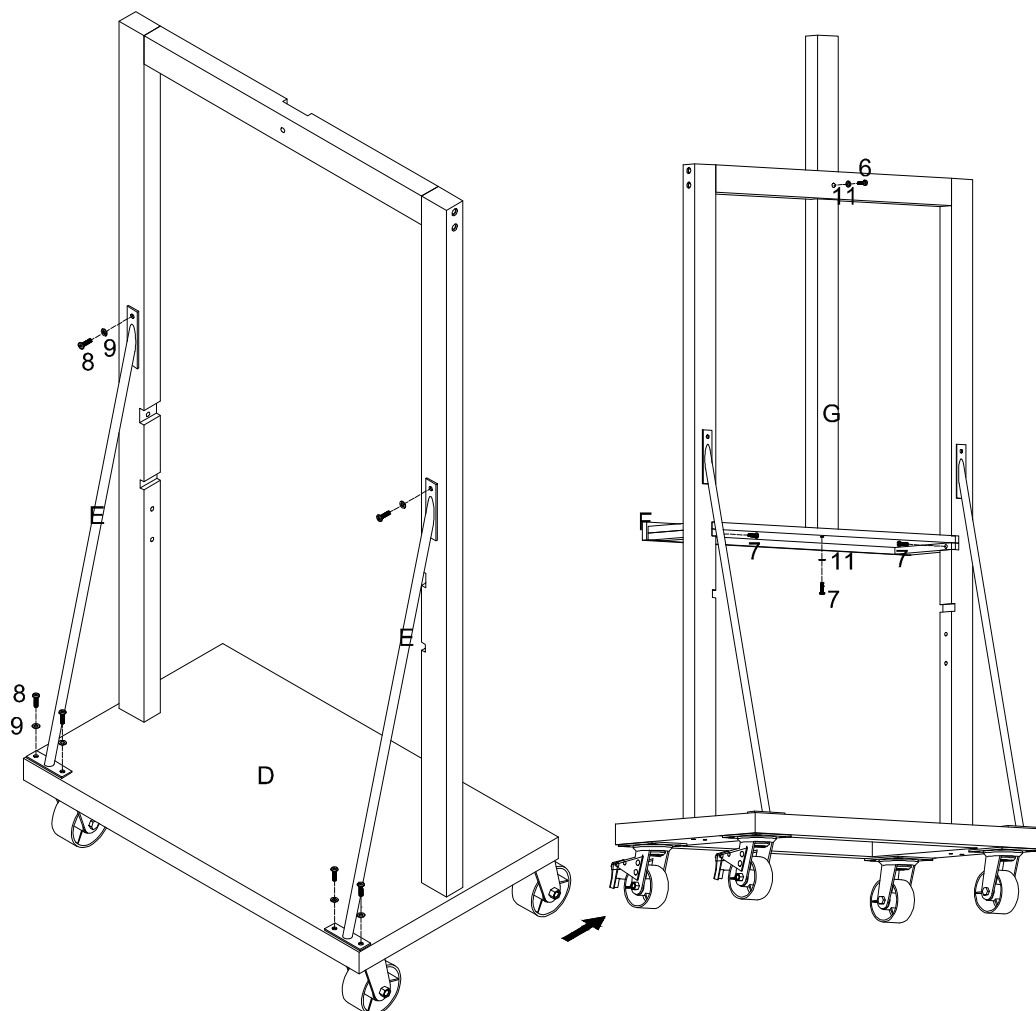

6:		1pcs
7:		3pc
8:		6pcs
9:		6pcs
11:		2pcs


Step 5

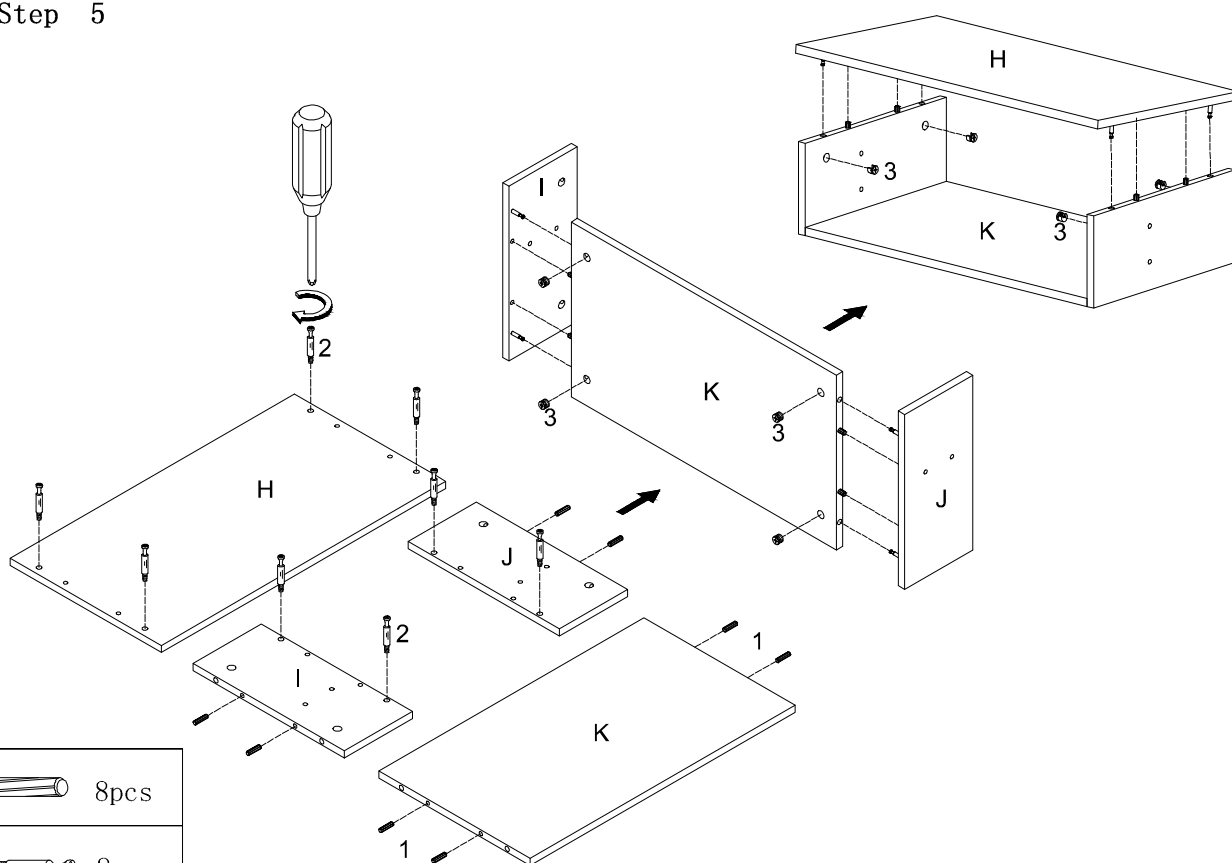


1:  8pcs

2:  8pcs

 3:  8pcs




Step 6

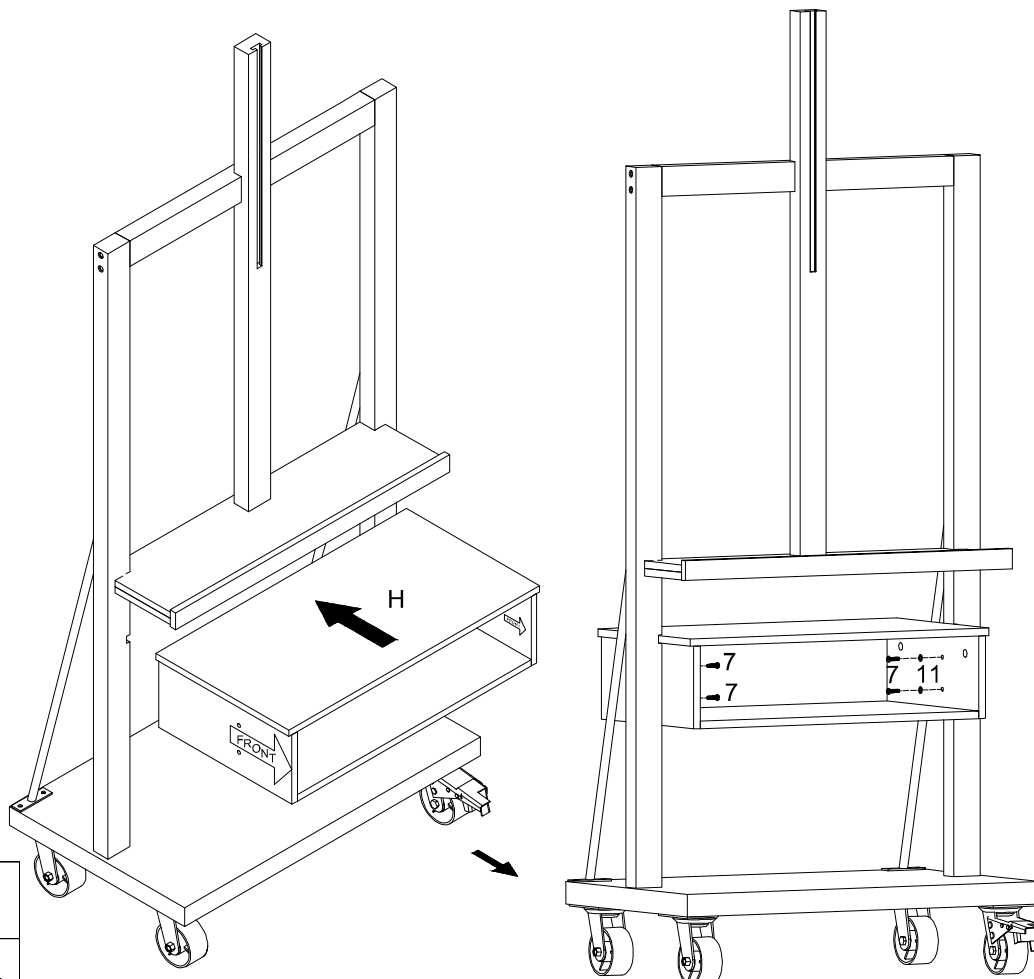

7:  4pcs

11:  4pcs

Step 7

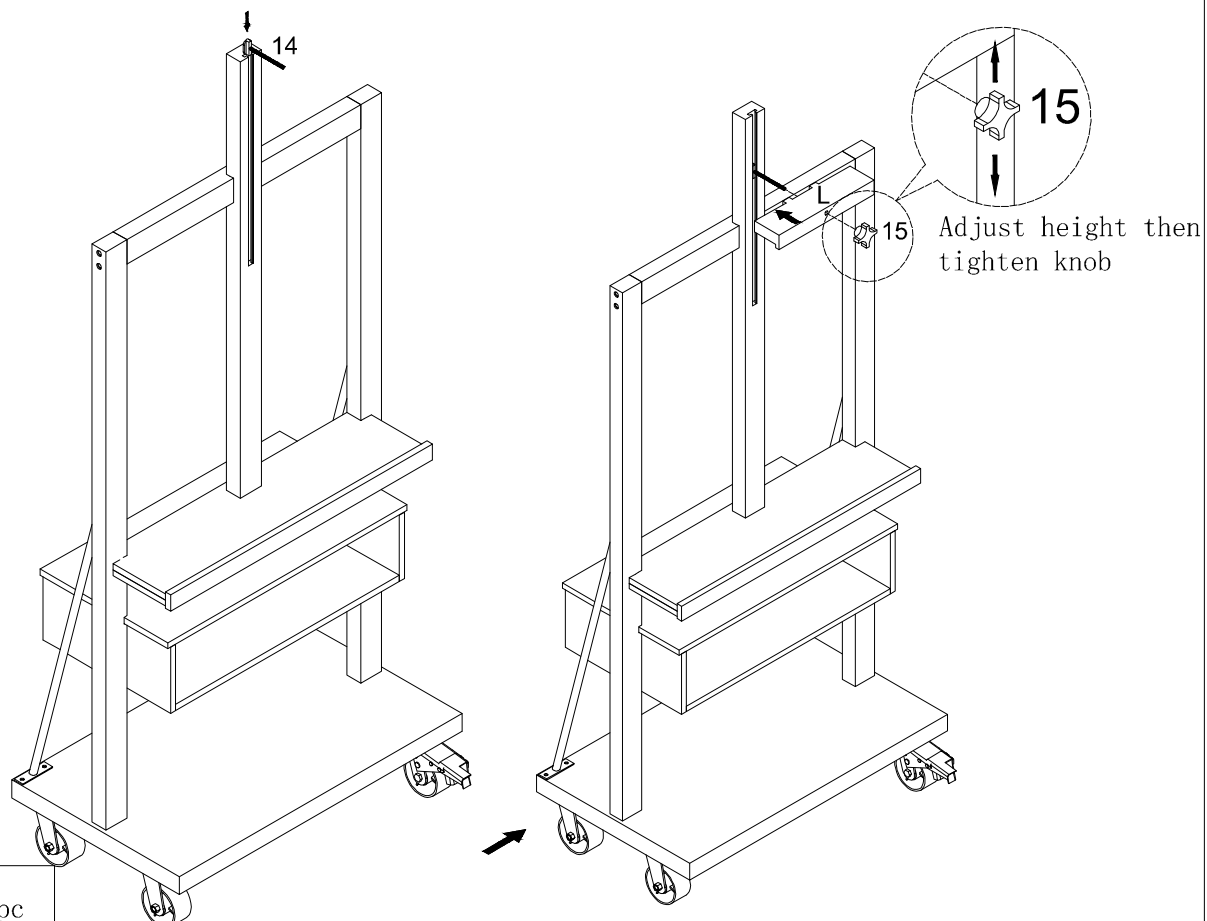

14:  1pc

15:  1pc

Finish

