





# Let's Yeego

## Who are we?

Yeego, the perfect fusion of fashion and innovation. We are a factory seller specializing in wine cooler and beverage refrigerator.

We pursue fashionable design and innovative technology to create a space full of personality and modernity for you.

Whether you are a connoisseur who loves wine tasting, or a host looking to add unique charm to family gatherings, Yeego products can meet your needs.

Choose Yeego, let us create a fashionable, innovative and wonderful life experience together.



<https://yeegolife.com/>



 
<https://www.facebook.com/yeegolife.official>



<https://www.instagram.com/yeegolife.official>


# Yeego

## PRDUT

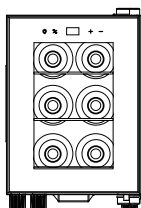


### YG-CW-20FD

 VOLTAGE:	115V
FREQUENCY:	60HZ
BOTTLE CAPACITY:	6 Bottles
STORAGE CAPACITY:	0.71 cu. ft.
TEMPERATURE RANGE:	40°F - 65°F

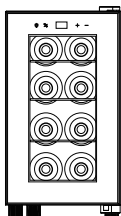

### YG-CW-25FD

 VOLTAGE:	115V
FREQUENCY:	60HZ
BOTTLE CAPACITY:	8 Bottles
STORAGE CAPACITY:	0.88 cu. ft.
TEMPERATURE RANGE:	40°F - 65°F

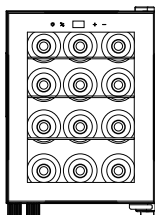

### YG-CW-33FD

VOLTAGE:	115V
FREQUENCY:	60HZ
BOTTLE CAPACITY:	12 Bottles
STORAGE CAPACITY:	1.17 cu. ft.
TEMPERATURE RANGE:	40°F - 65°F

# TABLE OF CONTENTS

Safety Information & Warnings .....	01
Parts List .....	02
Assembly & Installation .....	02
Cleaning & Maintenance .....	03
Product Size .....	04
Operating Instructions .....	05
Troubleshooting Guide .....	06
Limited Manufacturer's Warranty .....	07
Customer Service .....	08





**Yeego**



[yeegolife.com](http://yeegolife.com)

## SAFETY INFORMATION & WARNINGS



When using any electrical appliance, basic safety precautions must be followed in order to reduce the risk of fire, electrical shock and/or injury to persons or property. Be sure to read all instructions before using this appliance and observe the following safety tips:

### Attention: Child Entrapment Risk!

---

**To prevent the risk of child entrapment, do not allow children to operate, play with, or crawl inside the unit.** If the unit will not be used for an extended period of time, remove the door and leave the shelves in place so that children cannot crawl inside. Also remove the door when disposing of the unit.



### Shock Hazard –Electrical Grounding Required

---

- Never attempt to repair or perform maintenance on the unit until the electricity has been disconnected.
- Never remove the round grounding prong from the plug and never use a two-prong grounding adaptor.
- Altering or cutting of power cord, removal of power cord, removal of power plug, or direct wiring can cause serious injury, fire, loss of property and/or life, and will void the warranty.
- Never use an extension cord to connect power to the unit.
- Avoid operating this wine cooler in excessively moist or humid environment.

 


### Important Precautions:

---

- Do not lift unit by door handle.
- Never install or operate the unit behind closed doors.
- Failure to clean the condenser every six months can cause the unit to malfunction.
- Allow unit temperature to stabilize for 24 hours before use.
- Do not block any internal fans.
- Keep the wine cooler away from hazardous materials or combustible/flammable substances.
- Use only genuine supplier's replacement parts. Imitation parts can damage the unit, affect its operation or performance, and may void the warranty.

## PARTS DIAGRAM

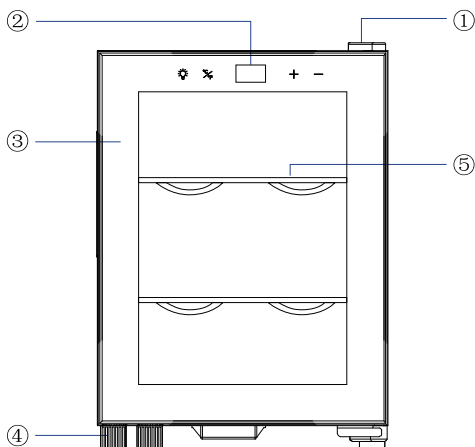

1. Door hinge

2. Digital temperature control panel

3. Glass Door

4. Wine cooler foot

5. Shelf

## ASSEMBLY & INSTALLATION



Before connecting the appliance to a power source, let it stand upright for approximately 24 hours. This will reduce the possibility of a malfunction in the cooling system from handling during transportation.

This wine cooler is a freestanding unit and should not be built in to surrounding cabinetry. Allow for proper air clearance around the cooler. The recommended clearances are as follows:

Sides:  $\frac{3}{4}$ " (19 mm) | Top: 4" (100 mm) | Back: 2" (50 mm)



## **Before operating your wine cooler for the first time, follow these steps:**

---

1. Clean the interior surface of the unit with lukewarm water and a soft cloth.
2. Place the cooler on a level surface that will be strong enough to support the unit when it is fully loaded. To level your cooler, adjust the front feet located at the bottom of the unit.
3. Install the cooler away from direct sunlight and heat sources such as stoves, heaters, or radiators. Direct sunlight may affect the unit's acrylic coating, and nearby heat sources can increase electrical consumption. Extreme cold or hot ambient temperatures may also prevent proper performance.
4. Once the cooler is plugged in, let the wine cooler run for at least 30 minutes. Do not change the temperature or adjust any settings at this time.

## **CLEANING & MAINTENANCE**

### **Cleaning Your Cooler**

---

#### **How to clean your cooler:**

- Unplug the cooler and remove anything inside.
- Wash the inside of the unit with a solution made of warm water and neutral detergent. Do not use abrasive cleaners.
- Use mild, soapy water to clean the unit's door seal.
- To ensure efficient operation, also thoroughly clean the back and bottom of the wine cooler.
- To clean the outside of the unit, use a mild detergent and warm water.

### **Moving Your Cooler**

 
---

#### **To move your cooler:**

- Remove anything stored inside.
- Securely tape down all loose parts located inside the unit.
- Turn the leveling feet up to the base in order to avoid damage.
- Tape the door shut.
- Be sure the cooler stays in an upright position during transportation.

## PRODUCT SIZE

### YEG-CW-20FD

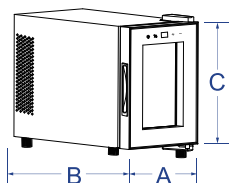


Overall Width (in.) A	10.2"
-----------------------	-------

Overall Depth (in.) B	20.1"
-----------------------	-------

Overall Height (in.) C	15.0"
------------------------	-------

### YEG-CW-25FD

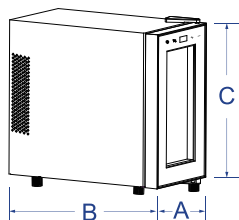 


Overall Width (in.) A	10.2"
-----------------------	-------

Overall Depth (in.) B	19.9"
-----------------------	-------

Overall Height (in.) C	18.5"
------------------------	-------

### YEG-CW-33FD

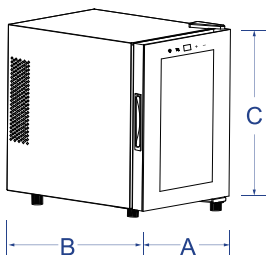 

Overall Width (in.) A	13.6"
-----------------------	-------



Overall Depth (in.) B	19.5"
-----------------------	-------

Overall Height (in.) C	18.8"
------------------------	-------

# OPERATING INSTRUCTIONS

## Control Panel



- After turning on the wine cooler, the LCD display will show the factory preset temperature first.
- Use the **[+]****[-]** buttons to adjust the temperature. The interior temperature can be adjusted in increments of 1 degree between 40 - 65°F.
- After you set the desired temperature, this set temperature will flash for 5 seconds on the display and then it will revert back to displaying the current internal temperature.
- Press the  button to turn the interior lighting on and off.
- To switch between Fahrenheit and Celsius, press the  button

### \* NOTE

- If the unit is unplugged, if the power is lost, or turned off, you must wait 3 to 5 minutes before restarting the unit. If you attempt to restart before this time delay, the wine cellar will not start.
- When you use the wine cooler for the first time or restart the wine cooler after having been shut off for a long time, there could be a few degrees variance between the temperature you select and the one indicated on the LED readout. This is normal and it is due to the length of the activation time. Once the wine cellar is running for a few hours everything will be back to normal.

## Optimizing Performance

- To ensure maximum performance and efficiency, be sure to place your wine cooler in an area where there is proper air circulation. (See installation instructions above for proper clearances).
- For proper internal air circulation, do not overfill your wine cooler. When storing wines, keep them away from the rear wall. To allow free circulation of cold air, don't pack wines too tightly on the shelves.
- Do not place the unit in direct sunlight.
- Do not place heated food in your cooler.
- Do not store perishable food in your wine cooler. The unit's interior temperature may not be low enough to prevent spoilage.
- Do not place heavy objects on top of the wine cooler.

## TROUBLESHOOTING GUIDE

Problem	Possible Causes	Solution
<b>The wine cooler does not cool.</b>	The unit may be plugged in using a different voltage.	Check if using the wrong voltage.
	The circuit breaker may be tripped or there is a blown fuse.	Reset the circuit breaker or check for a broken fuse.
<b>The wine cooler is not cold enough.</b>	The external environment may require a higher setting.	Lower the temperature of the cooler.
	The cooler may be placed too close to a heat source.	Keep the cooler away from direct sunlight or other heat sources.
	There is insufficient ventilation.	Place the wine cooler in an area with proper ventilation and clearances.
	The door is not completely closed or the door seal is not working properly.	Close the door tightly. Do not open the door frequently and do not keep the door open for extended periods of time. Replace the seal on the door if necessary.
<b>The wine cooler seems to make too much noise.</b>	The unit is not leveled.	Adjust the unit's feet and ensure the product is level.
	There is insufficient ventilation. The unit is too close to a wall or another surface.	Allow sufficient clearance around the unit.
<b>An interior red light is flashing.</b>	The set temperature is too low.	Adjust the set temperature so that it is higher than the wine cooler's interior temperature.
<b>Frost is building up in the unit.</b>	There is excess humidity or the interior temperature is too low.	Turn off the wine cooler, unplug it, and remove the frost buildup manually. Reconnect the power once the ice has thawed.

# LIMITED MANUFACTURER'S WARRANTY

## 1 Year Warranty Parts

---

For a year (12 months) from the purchase by the original owner, we would provide accessories to replace any part of the unit which proves to be defective in material or workmanship, with installation video or online guide. You could also contact us by email to get a solution.

You are responsible for the service labour and freight charges. Cost to move the wine cellar to the servicers' shop and back to the user's home, as may be required, are the user's responsibility.

During this period we will provide all parts necessary to correct such defects free of charge, so long as the unit has been installed and operated in accordance with the written instructions in this manual.

## What Is Not Covered

---

The following circumstances are not covered by the scope of the warranty, and the user shall pay the corresponding material fee and maintenance fee.

- Damage caused by the violation of the operating procedures.
- Damage caused by the use of unmatched power supply and parts.
- Damage caused by not complying with the instructions during installation and use.
- Any damage caused by man or accident.
- Damage caused by self-maintenance and modification without the approval of the Company.
- Aging or scratches on the product surface shell.
- Free warranty period of more than 1 year.

## Matters Need Attention

---

- If the user finds any quality problem of the product during the use, please contact the customer service and provide this warranty card. After the customer service checks the user information and the factory number, we will provide the warranty service to the user as soon as possible.
- After the expiration of the free warranty, the user can still get the paid maintenance service provided by the company and charge the cost of maintenance.
- Please keep the warranty card properly after purchasing the product. The warranty card must be provided, otherwise it will be invalid.

## CUSTOMER SERVICE

### Read This Guide Carefully.

Keep proof of original purchase date (such as your sales slip) with this guide to establish the warranty period.

Save time and money. Before you call for service, check the Troubleshooting Guide. It lists causes of minor operating problems that you can correct by yourself.

#### User information

#### Product information

Name : \_\_\_\_\_ Product model : \_\_\_\_\_

Tel : \_\_\_\_\_ Purchase date : \_\_\_\_\_

Address: \_\_\_\_\_

### Contact Us

We take pride in delivering excellent service and strive to ensure your satisfaction. If you have any questions or concerns, please reach out to the customer services who serviced your beverage refrigerator and explain your concerns. In many cases, they can address and resolve the issue directly.

Email Us: Please feel free to contact us via our after-sales email address  
([service@yeegolife.com](mailto:service@yeegolife.com))

Maintenance date	Fault content		Maintenance unit	Maintenance person
	Fault situation	Replace accessories		





**Let's Yeego**  
[yeegolife.com](http://yeegolife.com)

