 


INSTALLATION

 
 
Product Manual

Version: 740005US-01-26A-AA

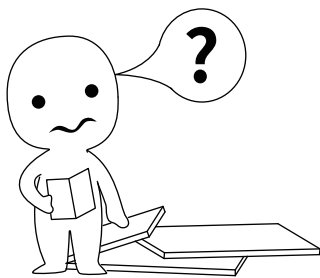



IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

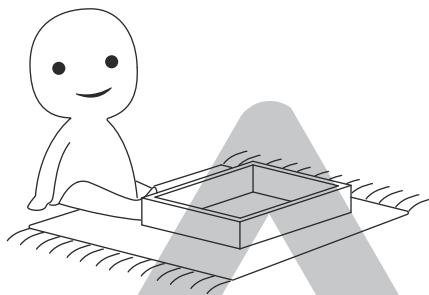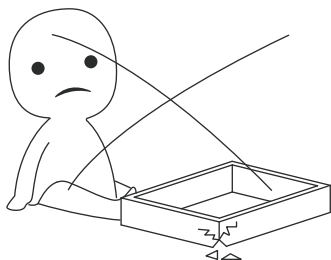





AVOID SCRATCHES!

  In order to avoid scratching this furniture should be assembled on a soft layer- could be a rug.

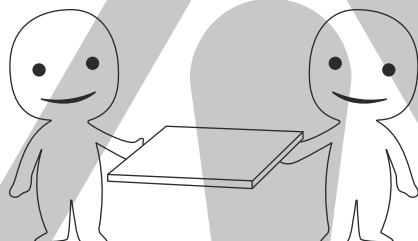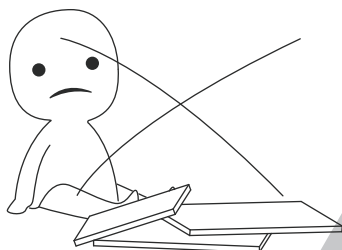

IMPROVE EFFICIENCY !

    Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

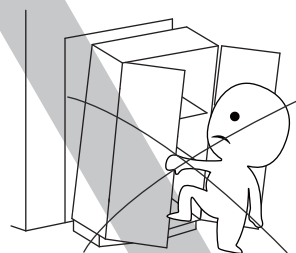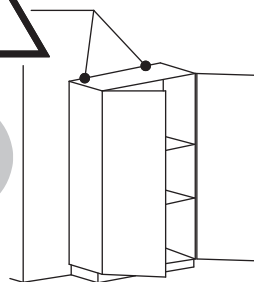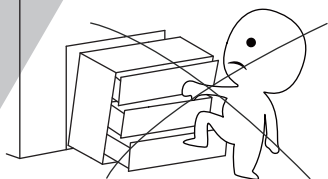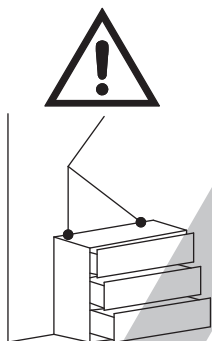

ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !






It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

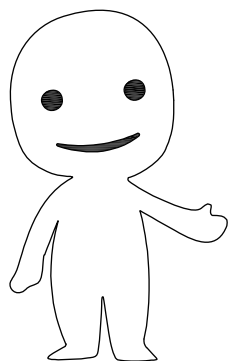

Please prepare the following tools

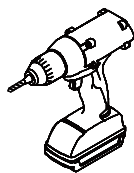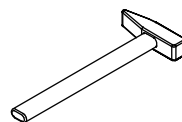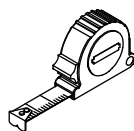     


When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

A x 100




CRB1595A

 B x 100




CRA0635B

 C x 100




D x 51

 


CRF0630A

 E x 10




CRC0540A

 F x 16



G x 4

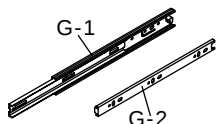 

H x 16



CRD3512A

J x 4



DGA861C

K x 36




CRD3514A

L x 7



 M x 2

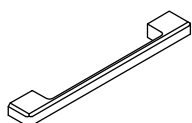


N x 2




CRE0412A

 P x 9




CRE0418A

 
Q x 1




R x 2

 

S x 2

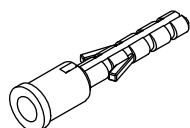 


T x 2

 

CRD3535A

 U x 37




V x 61




CRD0314A

 W x 4



CRD3525A

 
X x 4



Y x 2



 CRF0620A

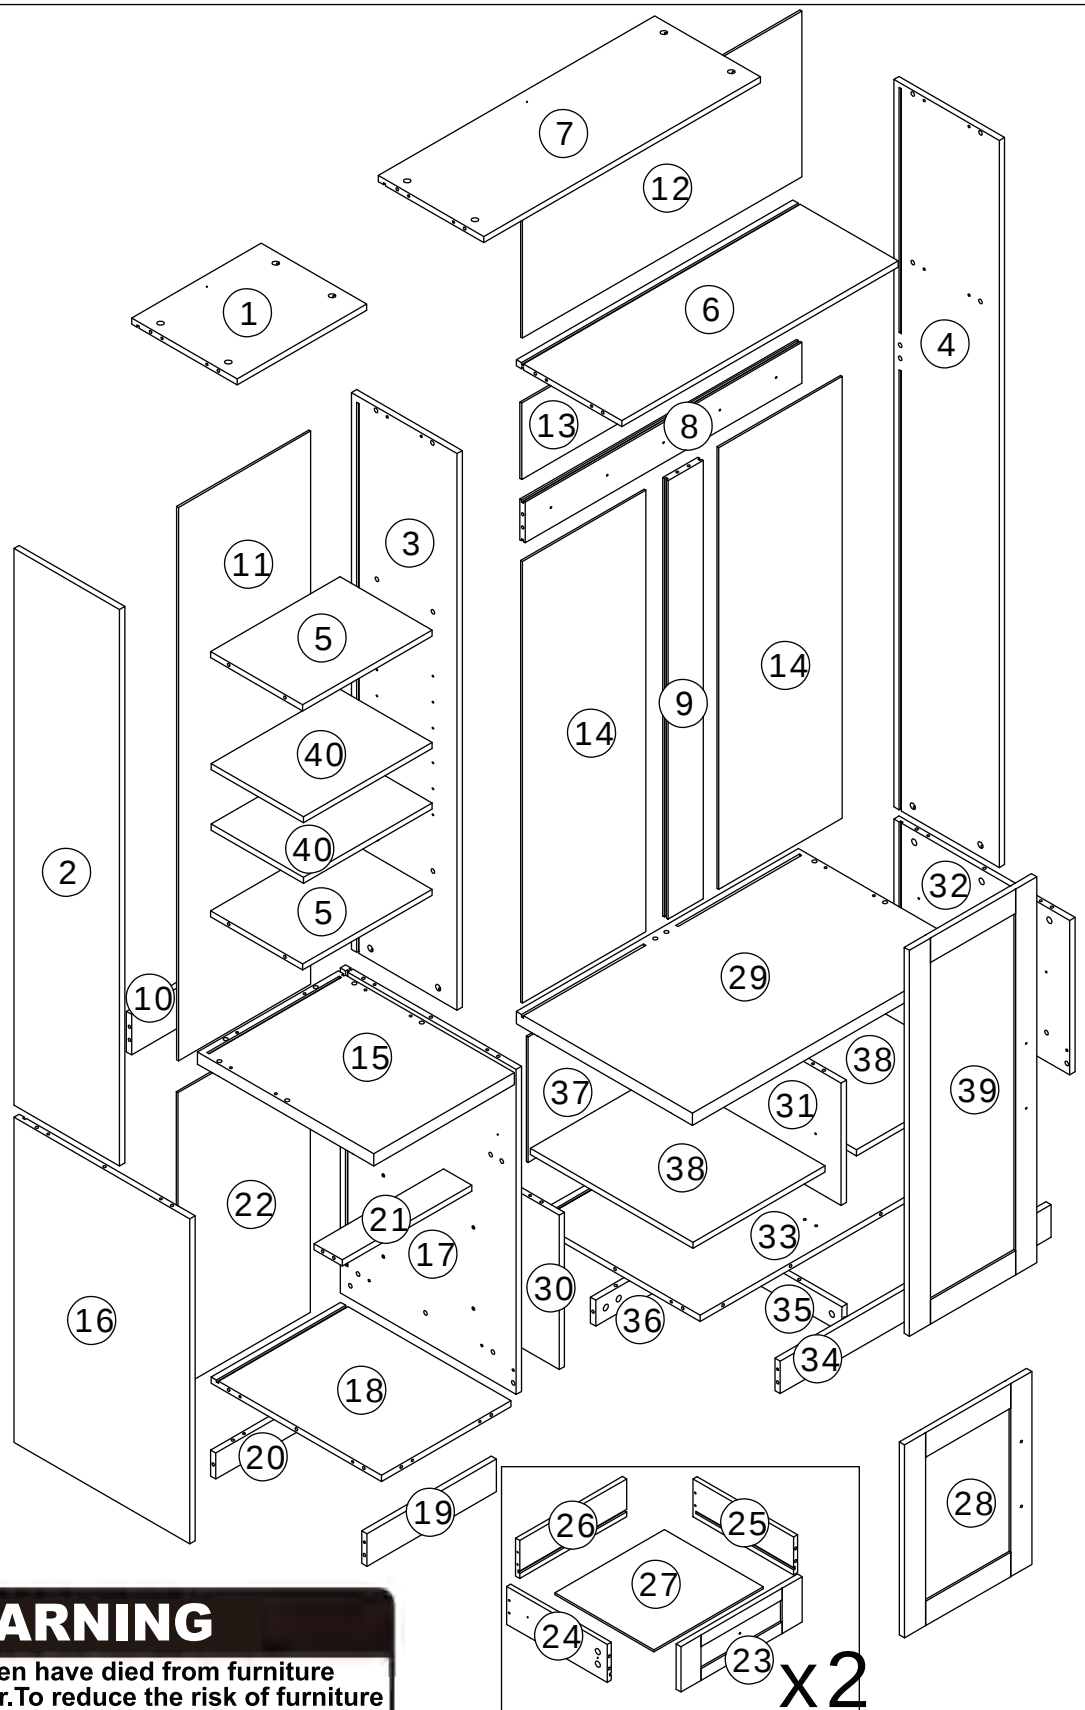


⚠ WARNING










Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

        *This is a permanent label.
Do not remove!*

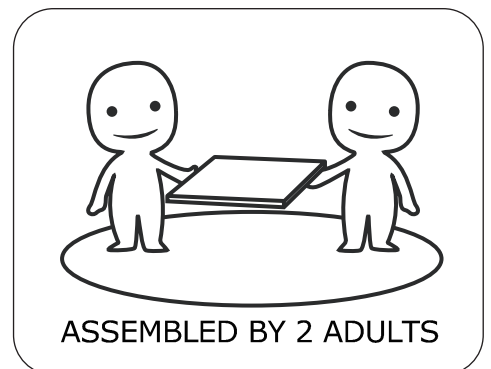


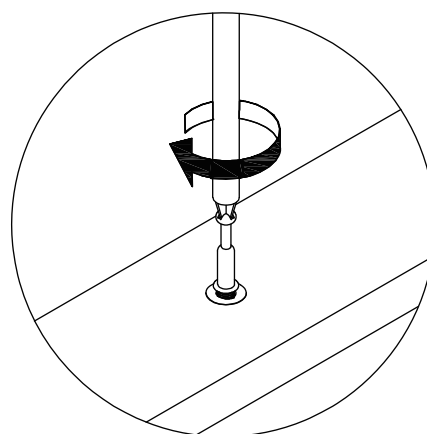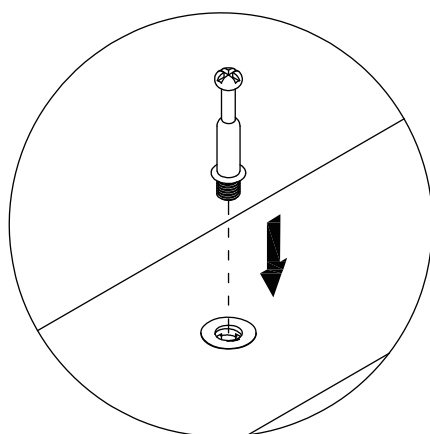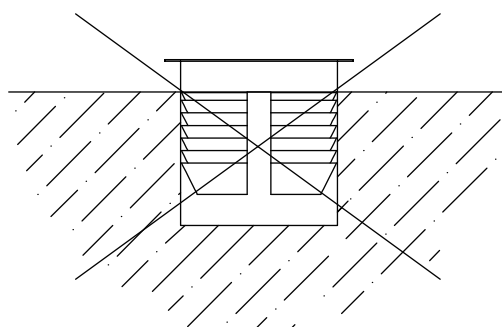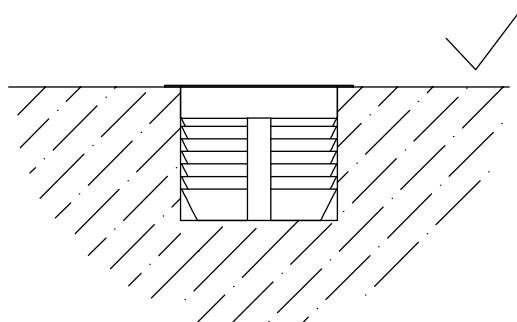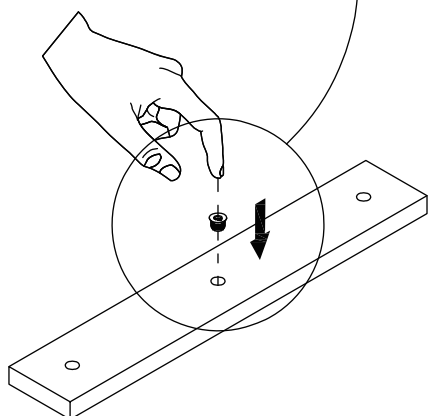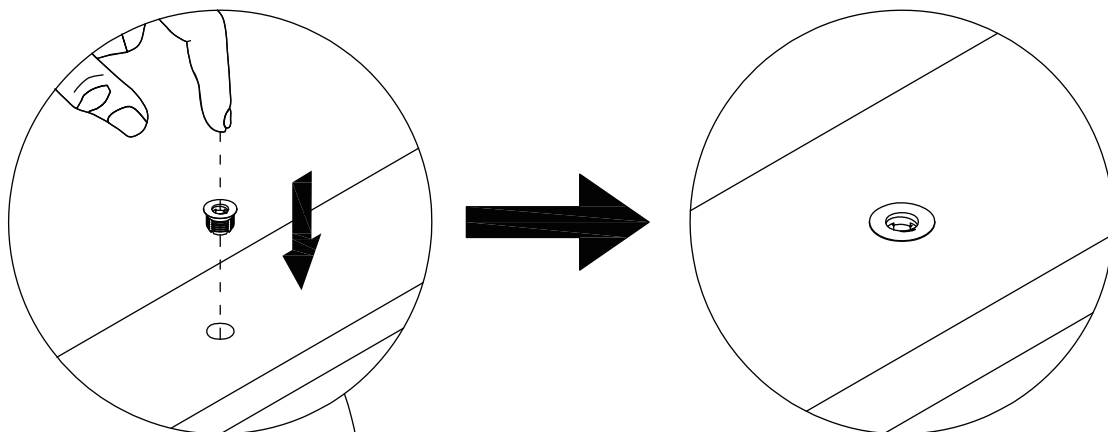


Slides Must Be Separated Before Assembly.
After Separated, Set Aside Until Needed for Assembly.

Las diapositivas deben separarse antes del montaje.
Después de la separación, déjelo a un lado hasta que sea necesario.

 
Les glissières doivent être séparées avant l'assemblage.
Après la séparation, mettez de côté jusqu'au moment de l'assemblage.

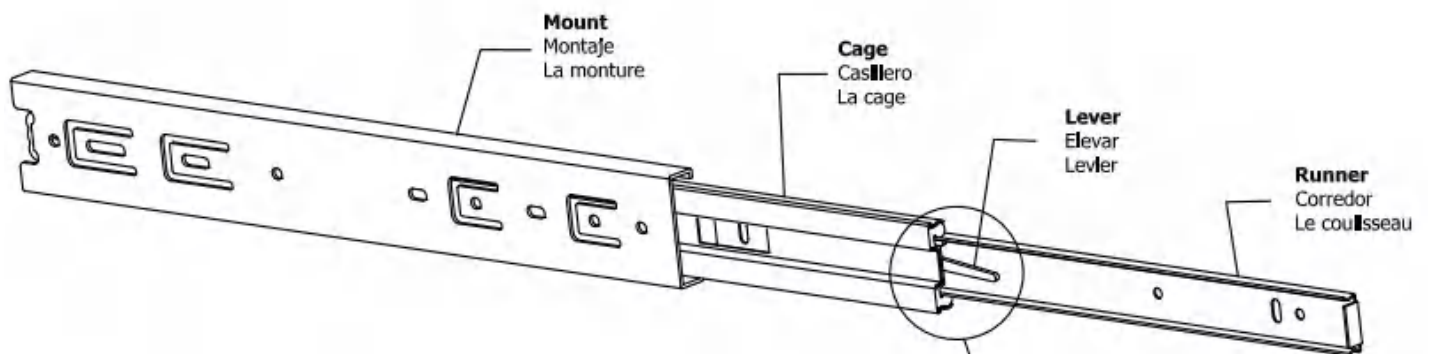

 
STEP 1: Extend Slide
Extender la diapositiva
Extendre la diapositive

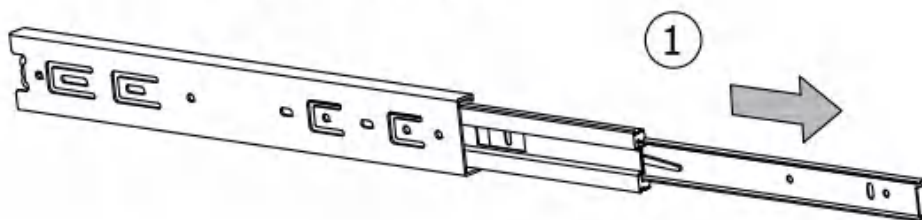

 
STEP 2: Push Lever UP
Empujar hacia arriba
Lever le levier

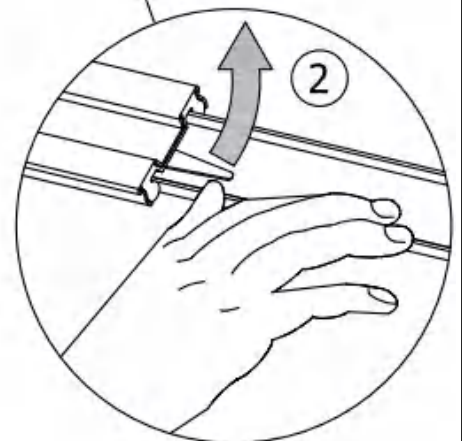

 
STEP 3: Remove Runner
Quitar el corredor
Enlever le coureur

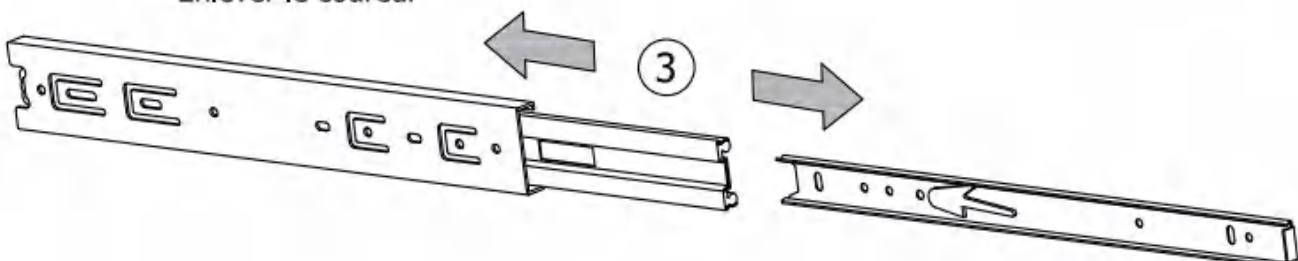



1

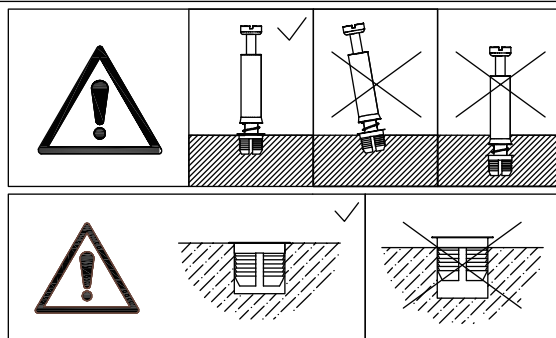 

 
First, install plug (C) onto panel 2 and 3, then screw self-tapping rod (B) into panel 2 and 3.

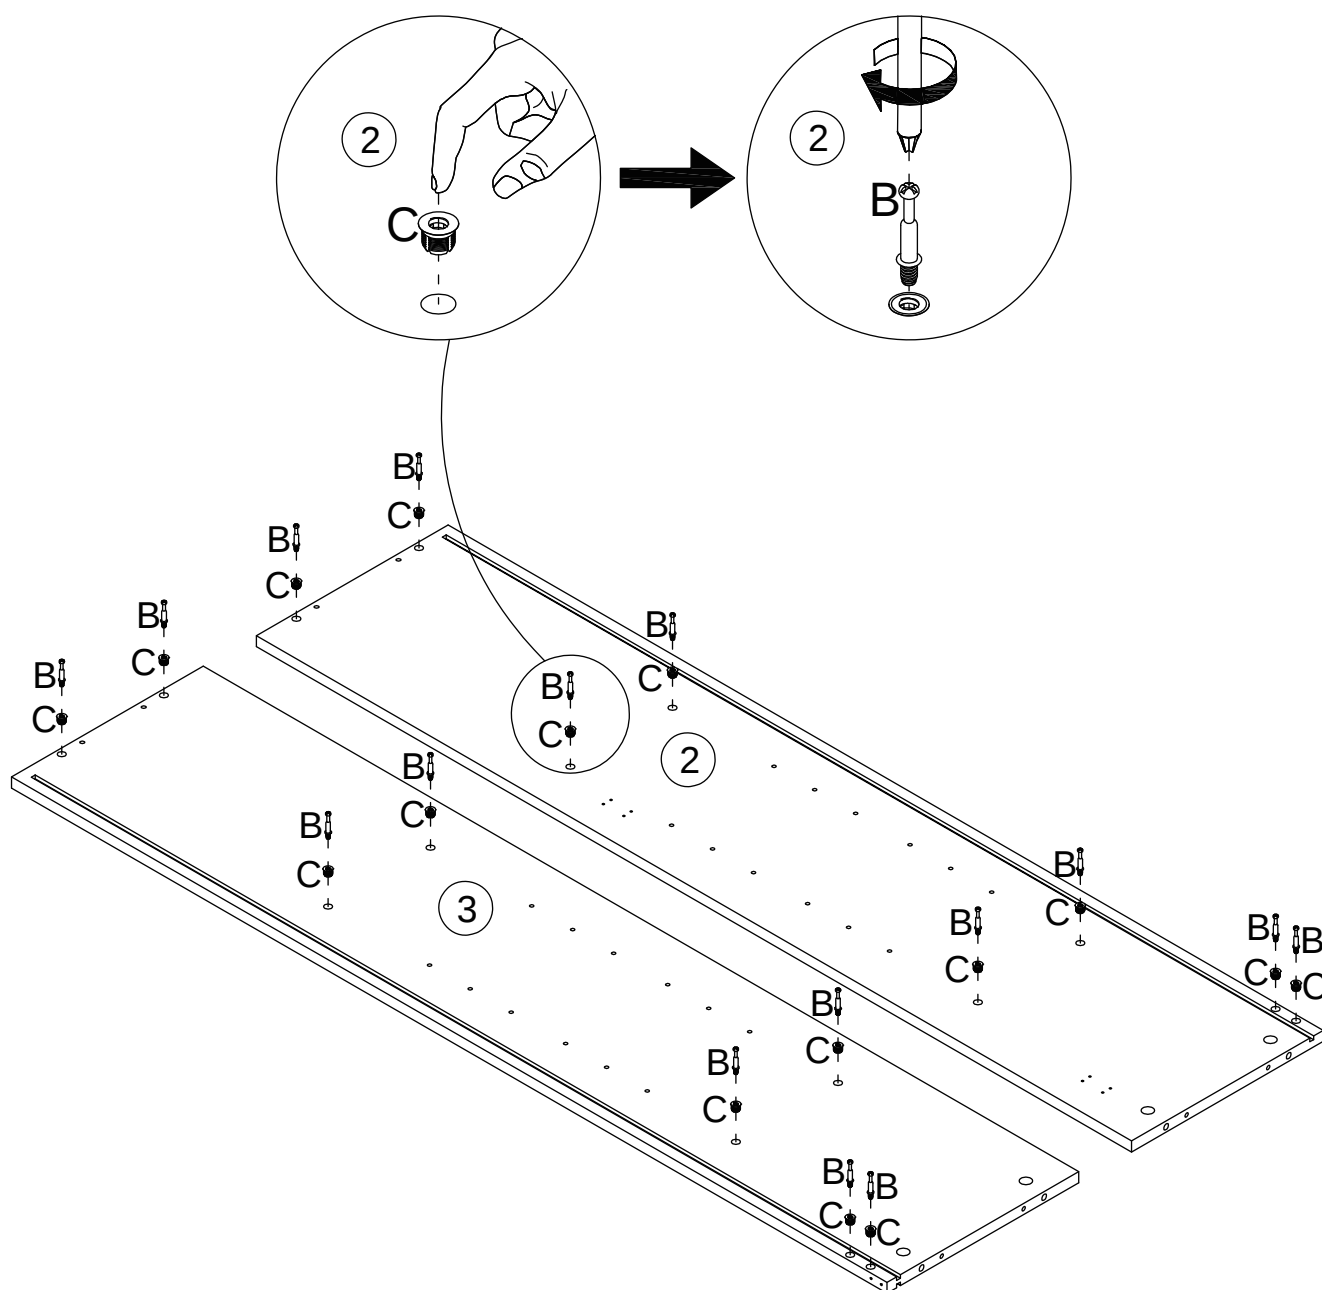



2

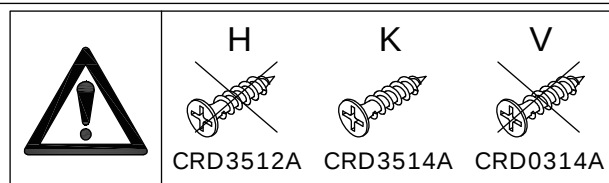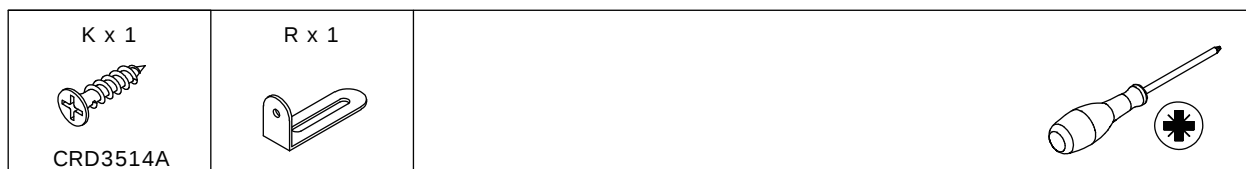  

 
Secure bracket (R) to panel 1 using screw (K).

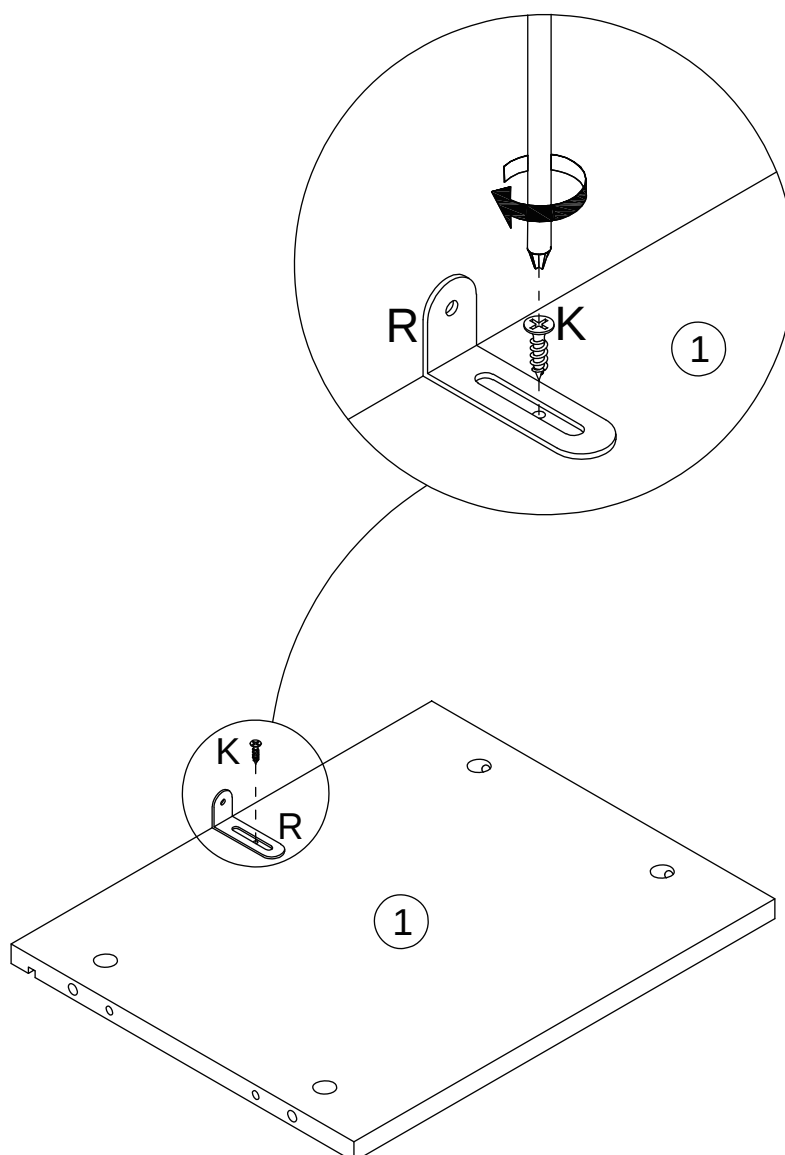

3

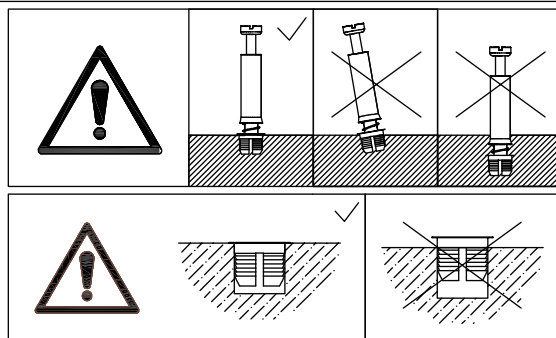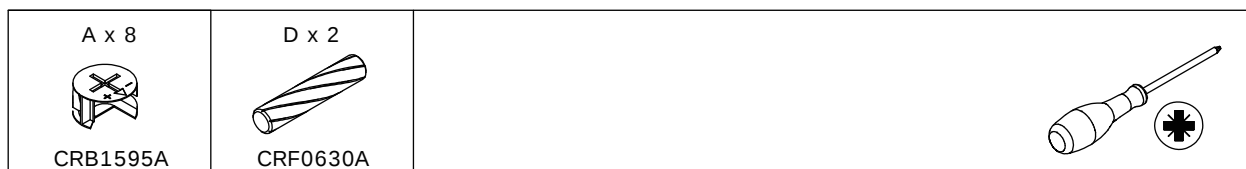  

 Insert wooden dowel (D) into panel 1.
Connect panel 1, 5, and 10 to panel 2, then tighten by turning cam lock (A) clockwise.

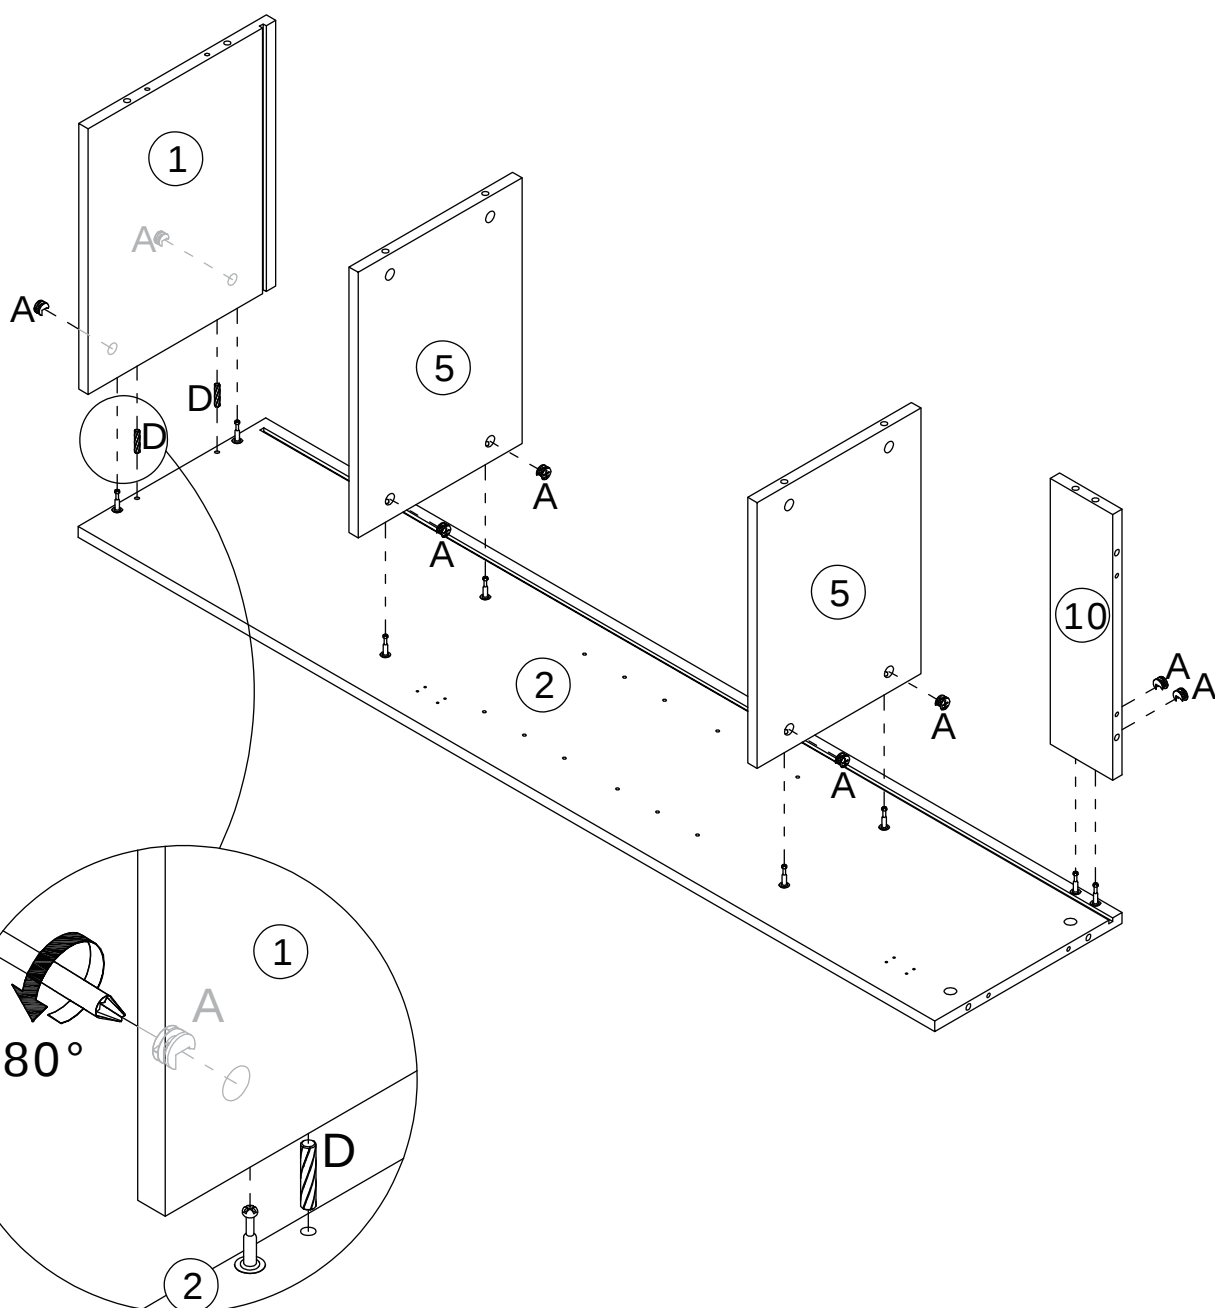

4

A x 8









CRB1595A


D x 2



      CRF0630A

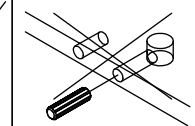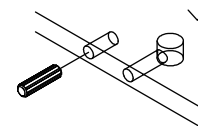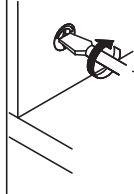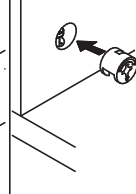


 Insert wooden dowel (D) into panel 1.
Connect panel 1, 5, and 10 to panel 3,
then tighten by turning cam lock (A)
clockwise.


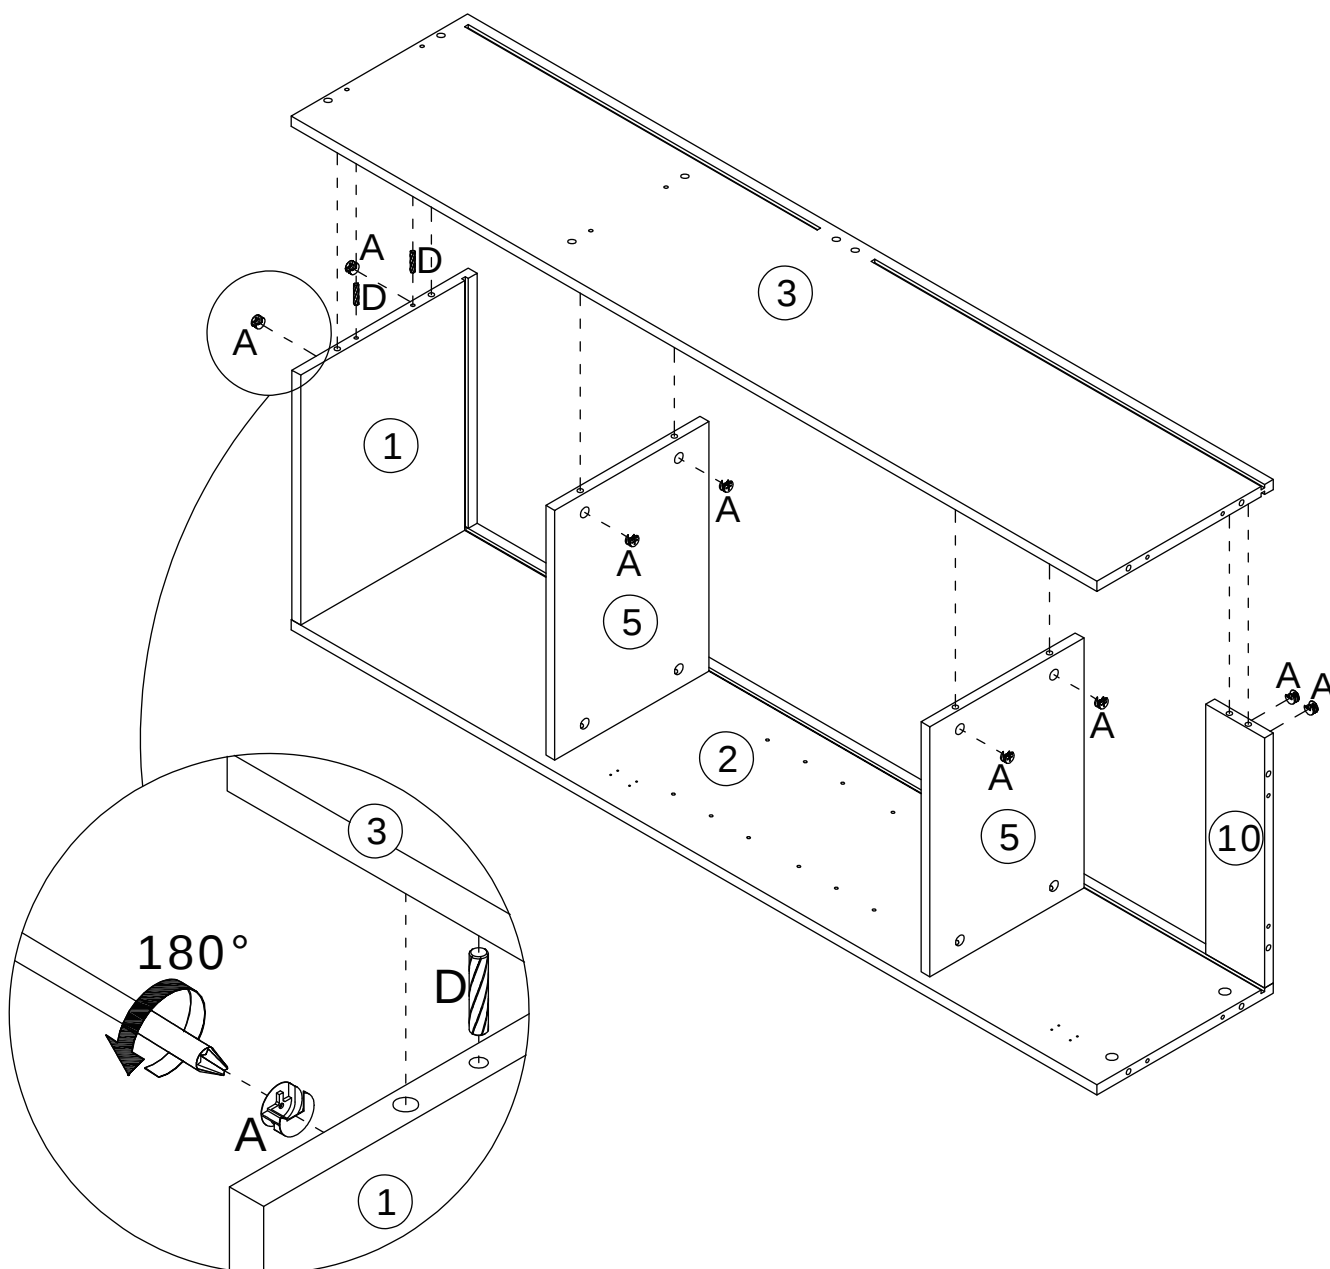


5

 
Insert panel 11 into the available slots.

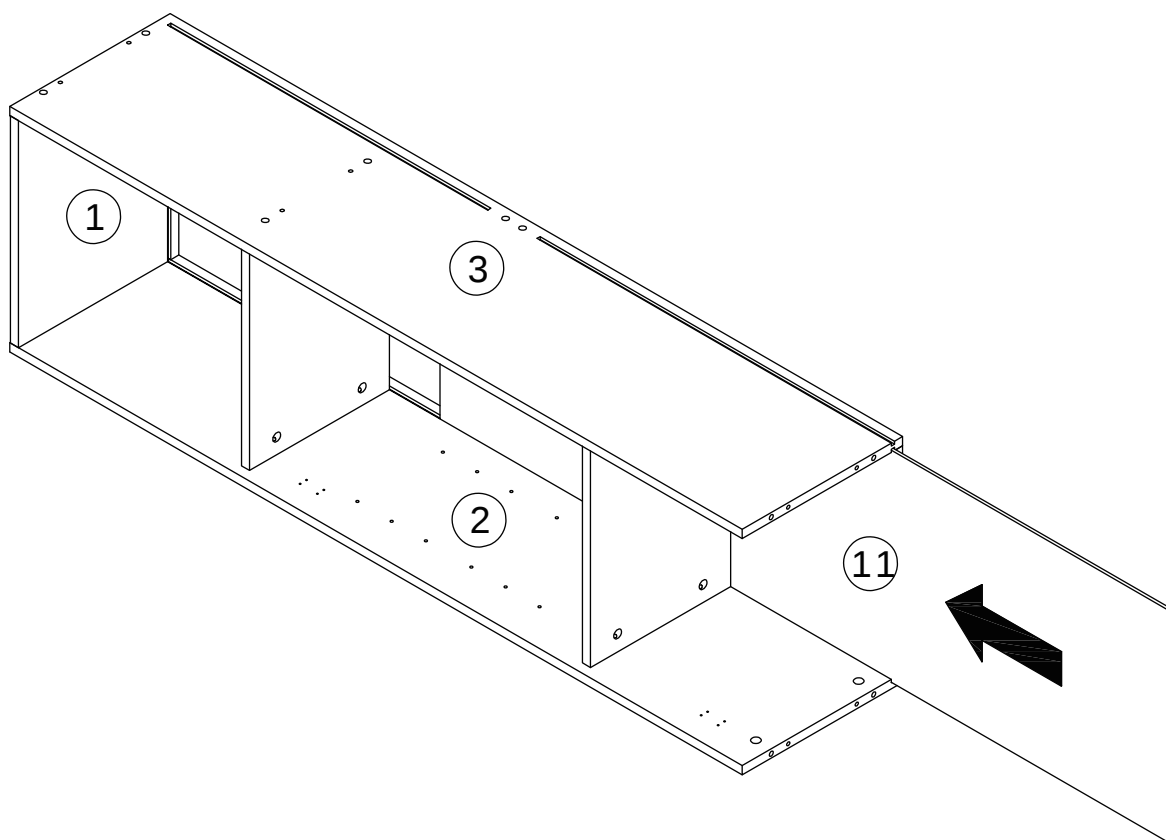



6

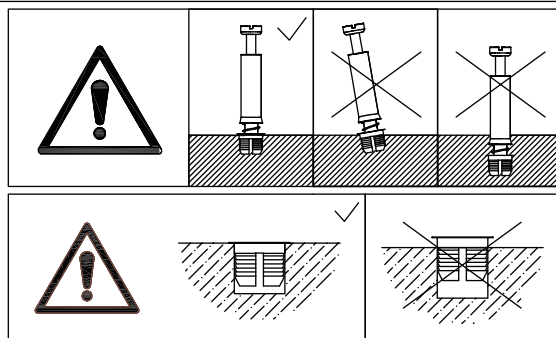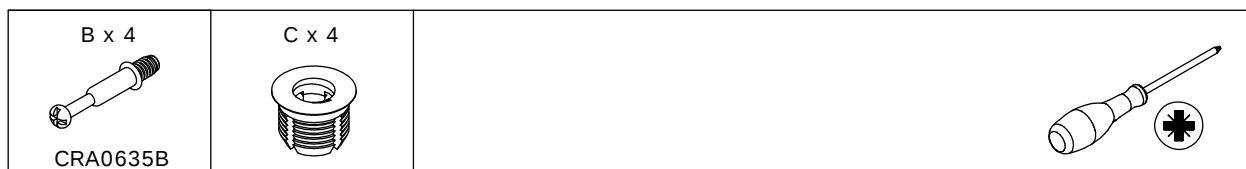  

 
First, install plug (C) onto panel 18 and 19, then screw self-tapping rod (B) into panel 18 and 19.

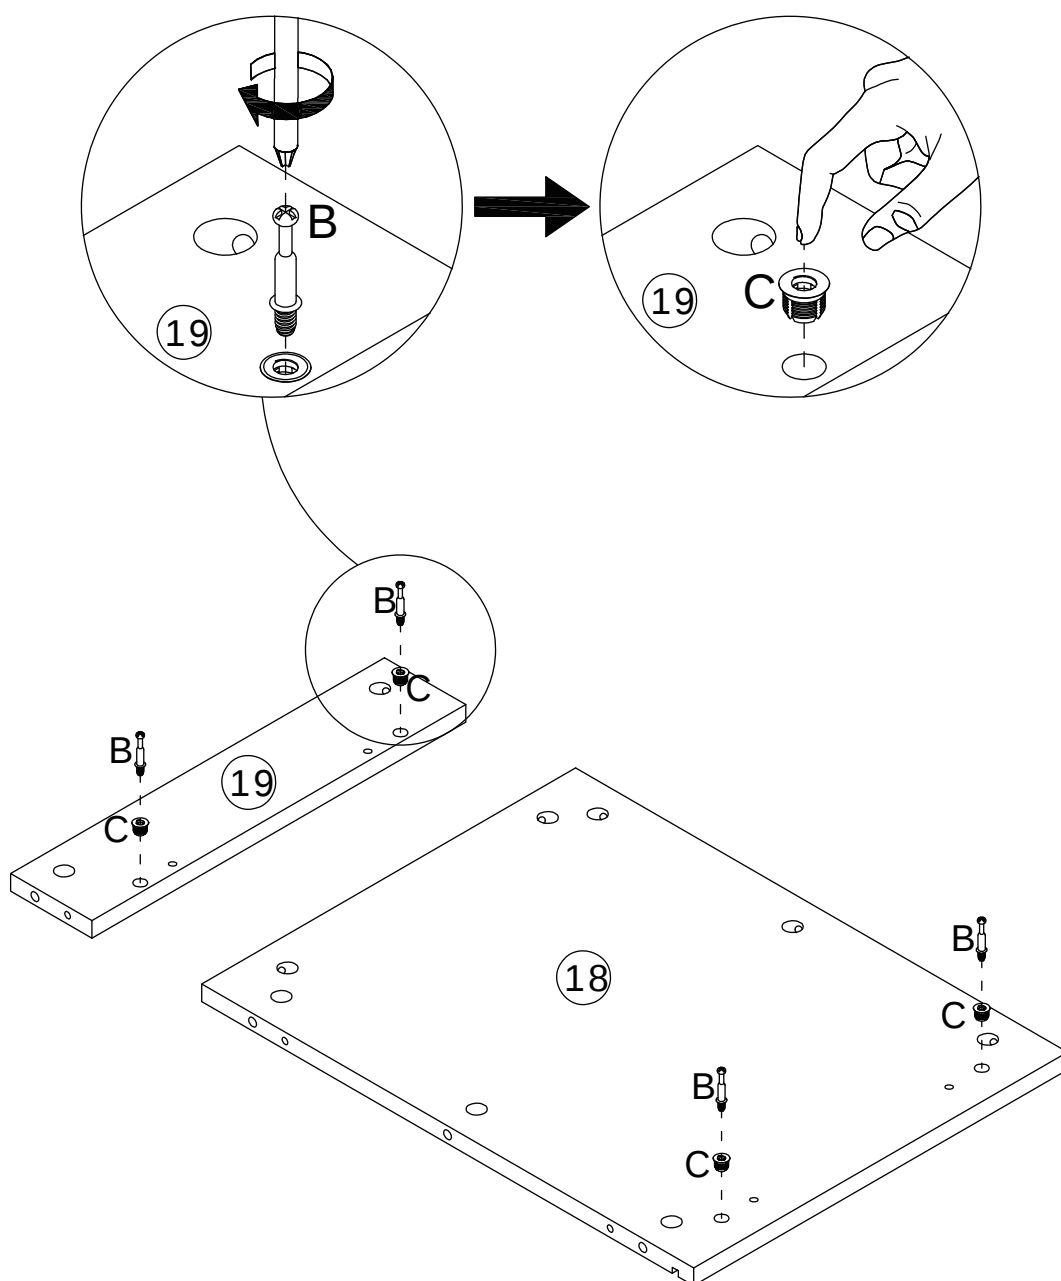




7

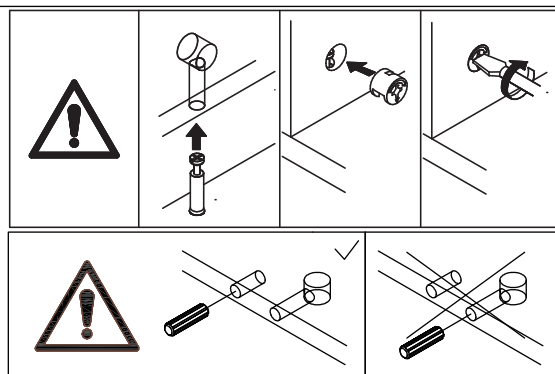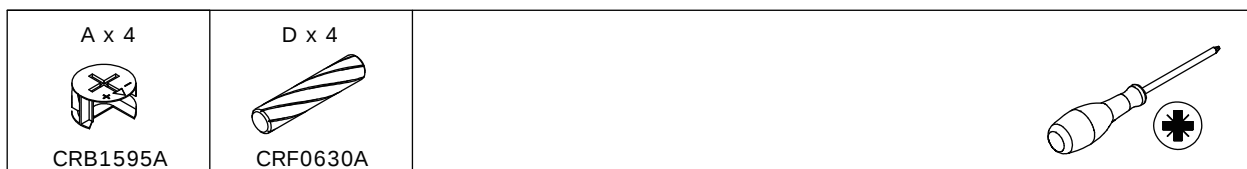  

 
Connect panel 19 and 20 to panel 18 using wooden dowel (D), then tighten by turning cam lock (A) clockwise.

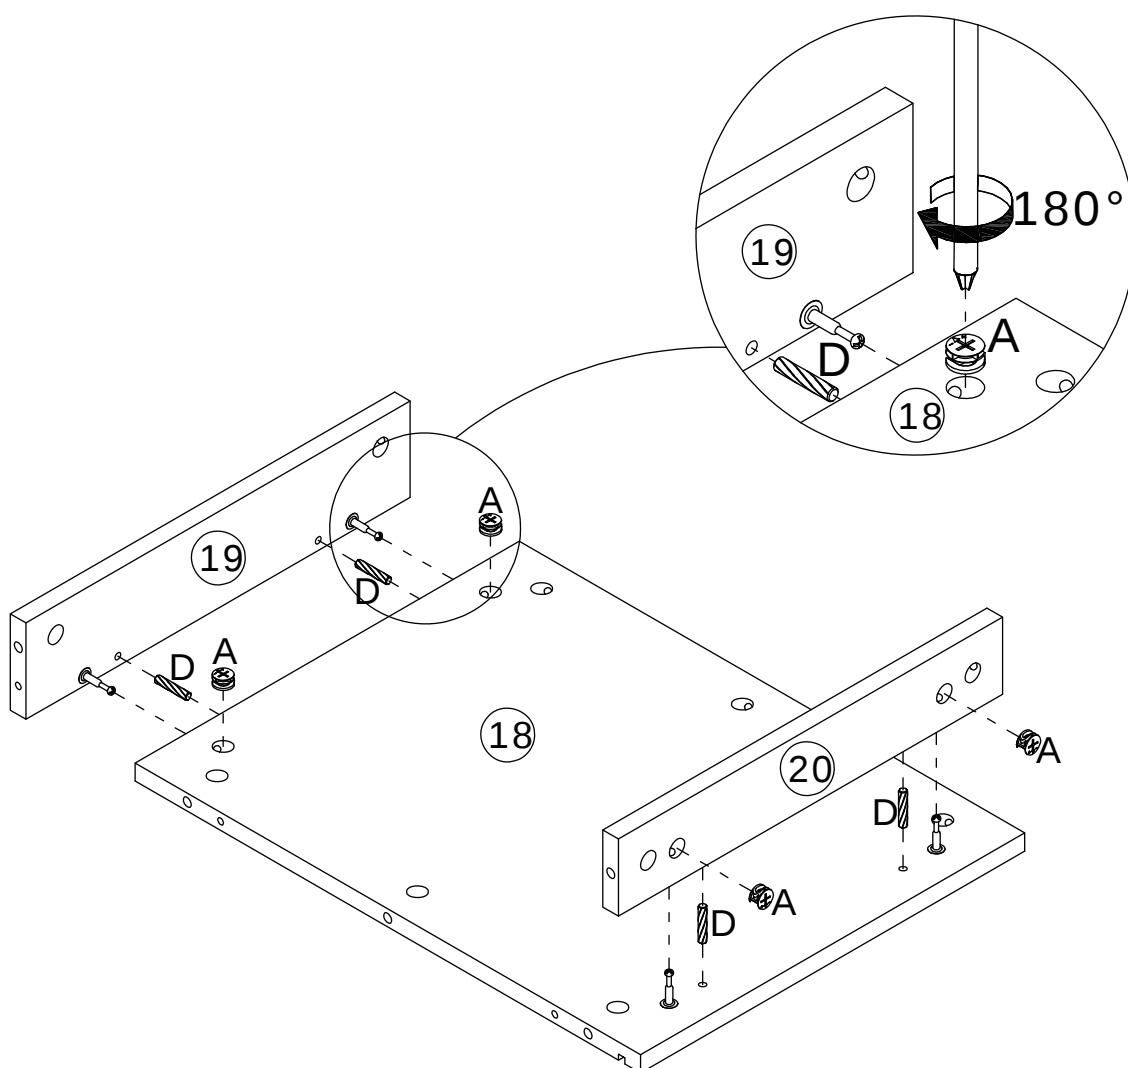

8

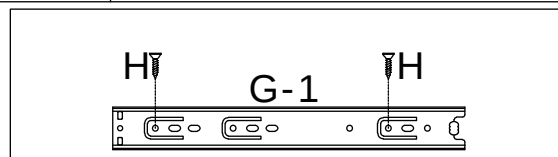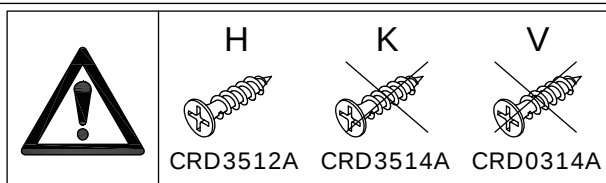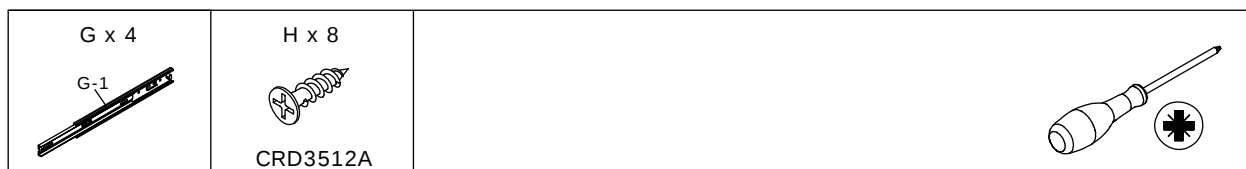   


 Secure slide rail (G-1) to panel 16 and 17 using screw (H).

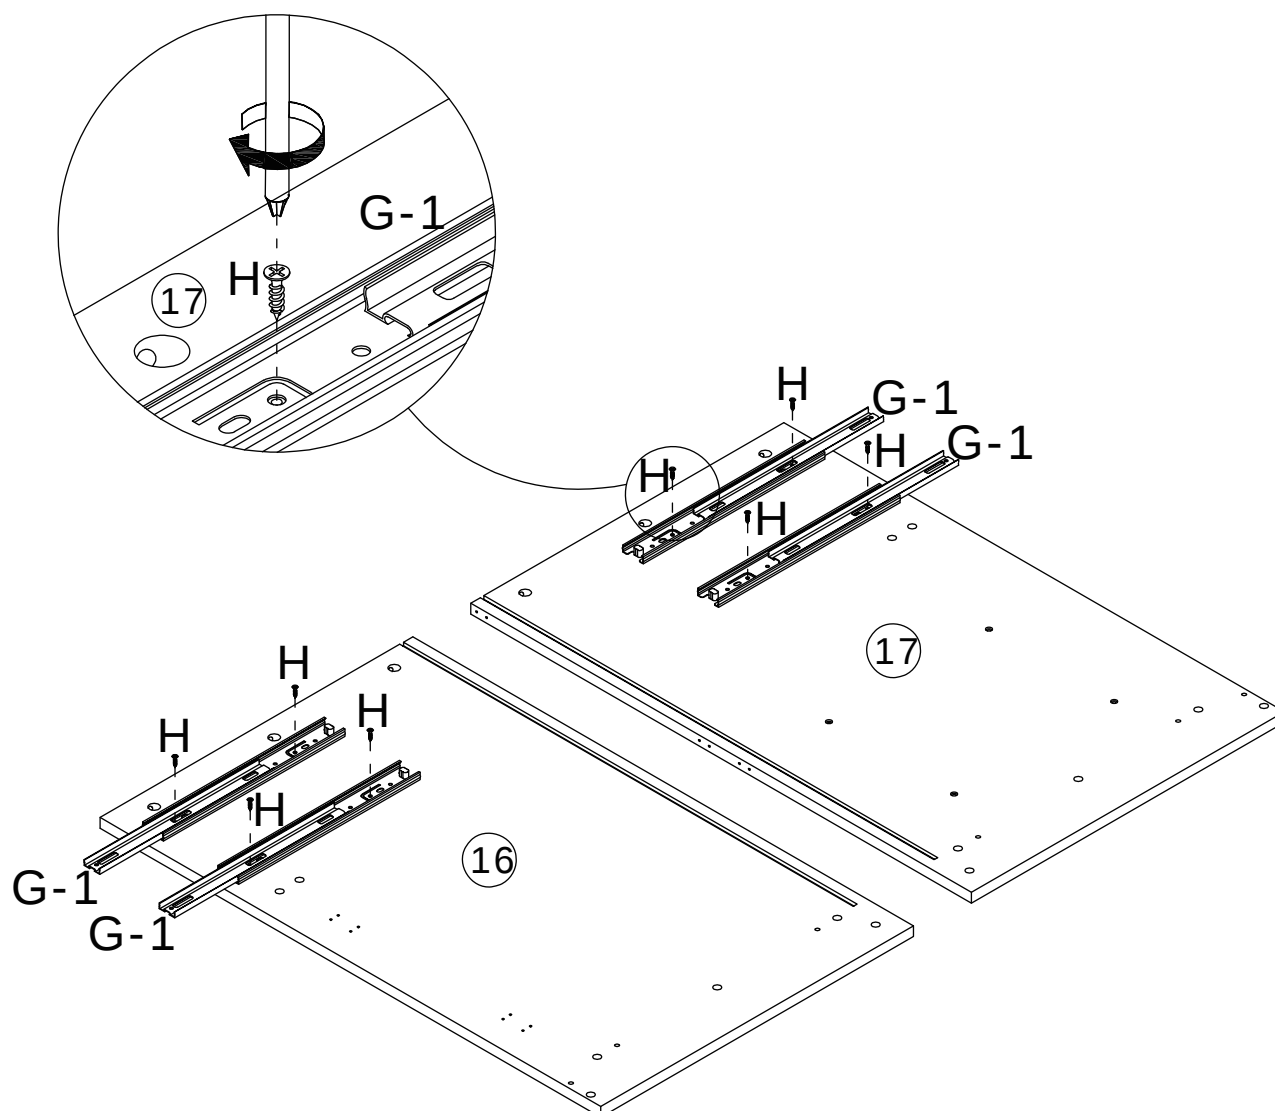




9

 B x 14







CRA0635B

  
 
C x 14

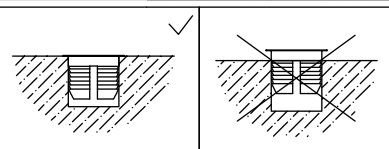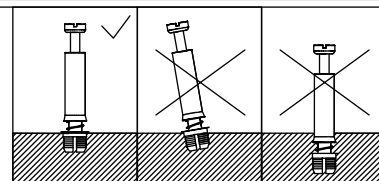

    
First, install plug (C) onto panel 16 and 17, then screw self-tapping rod (B) into panel 16 and 17.

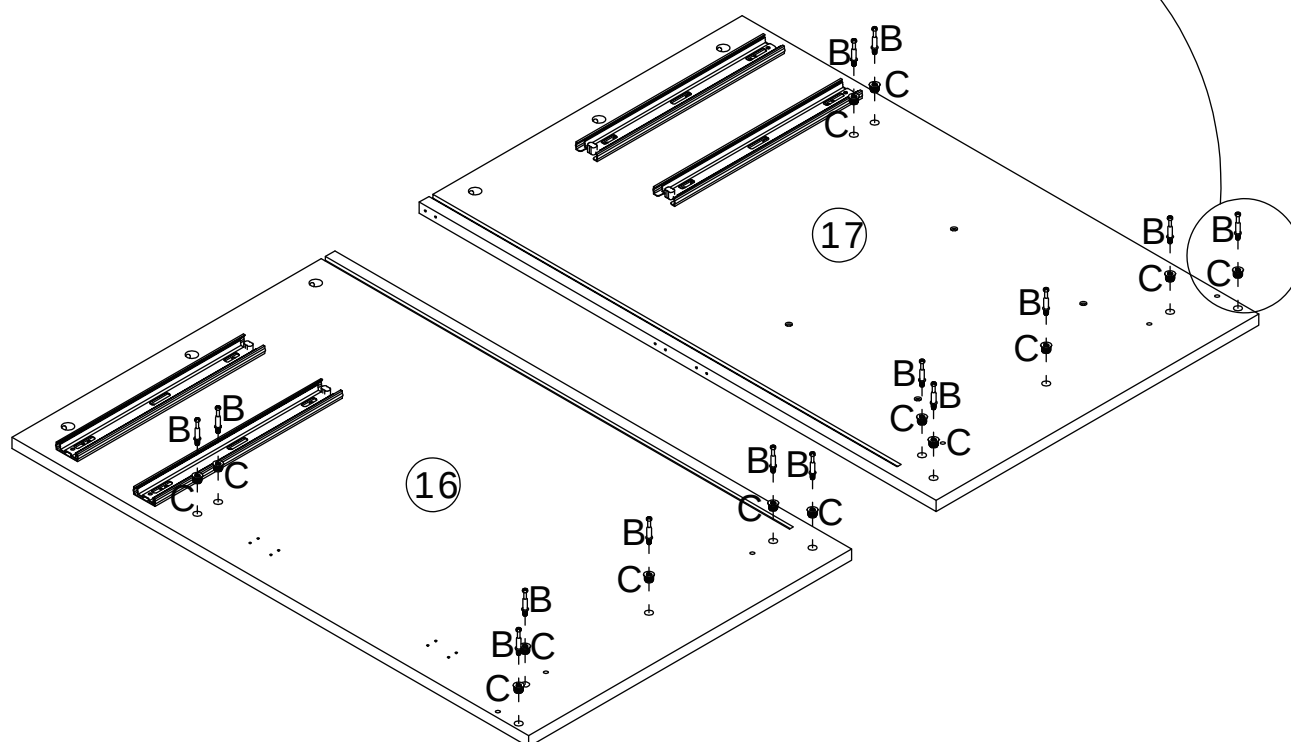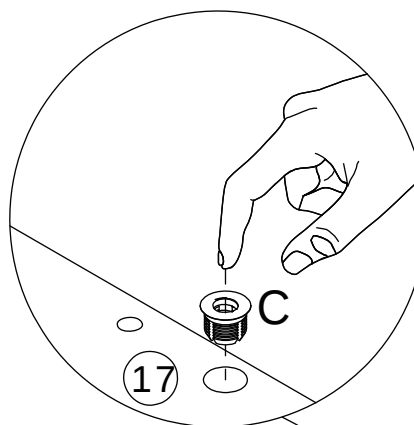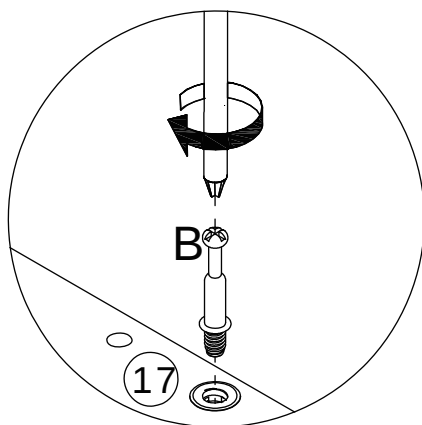


10

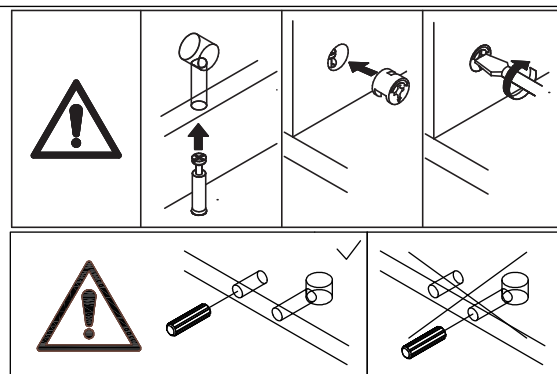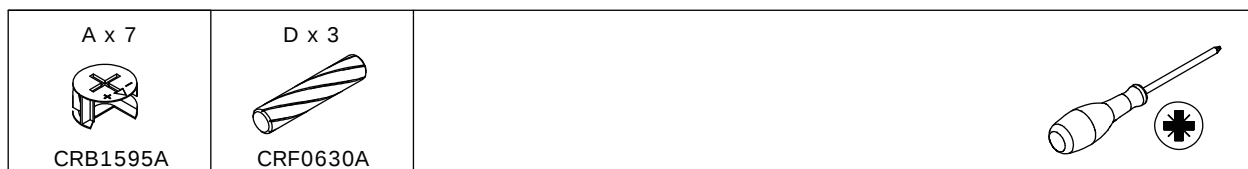  


 
Insert wooden dowel (D) into panel 18, 19 and 20.
Connect panel 18, 19, 20, and 21 to panel 16, then tighten by turning cam lock (A) clockwise.

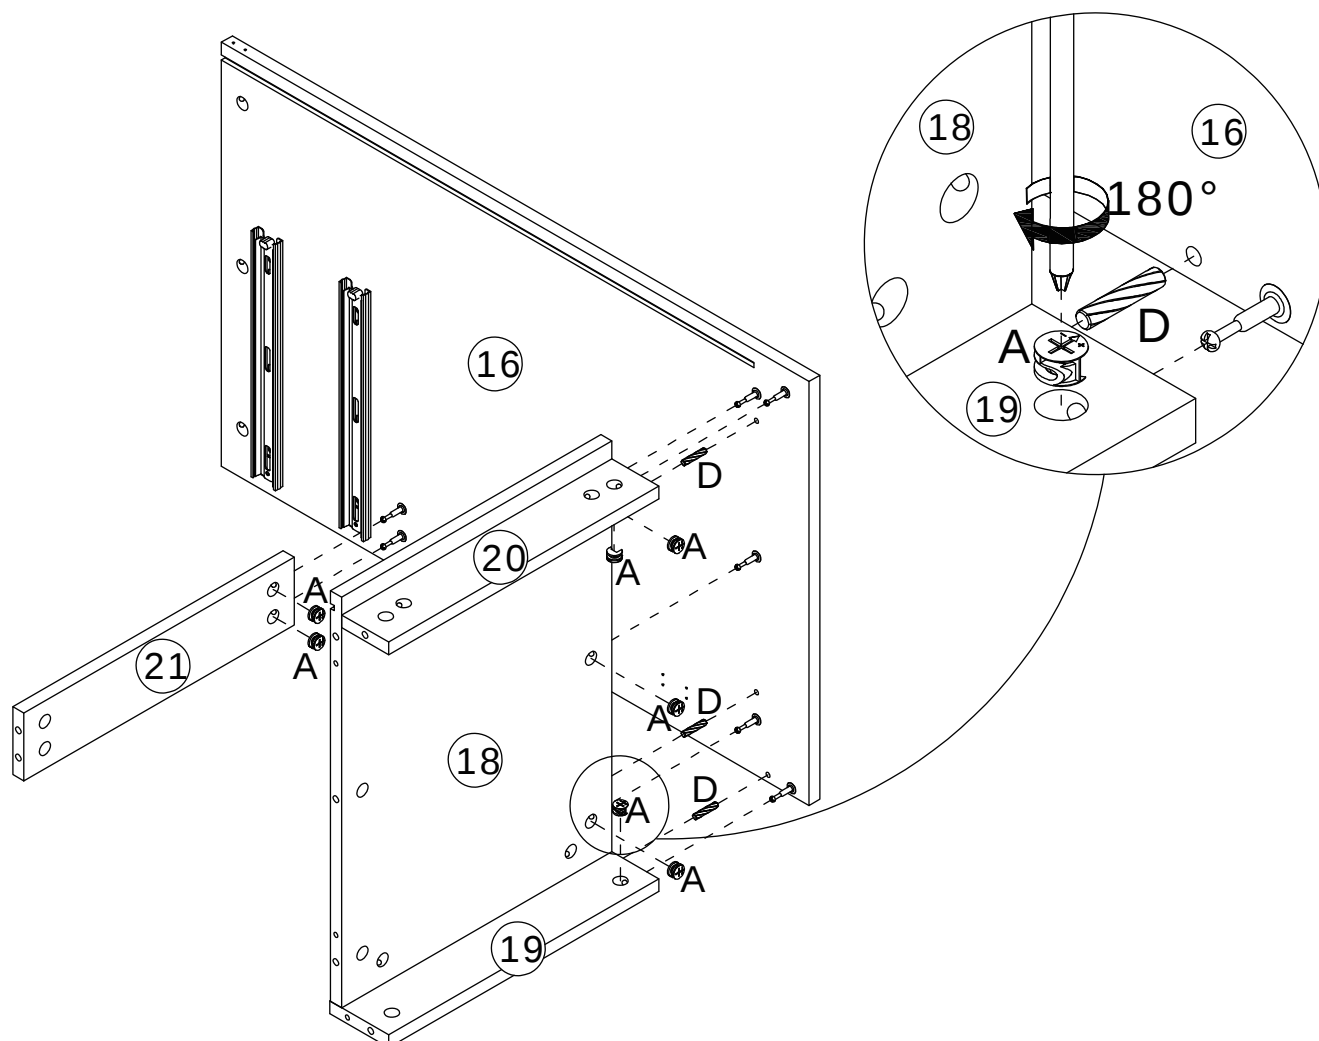

11



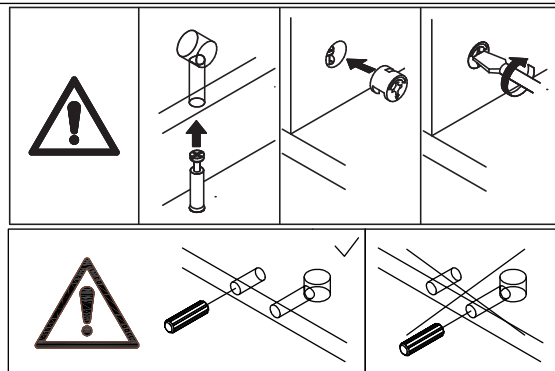 


  Insert wooden dowel (D) into panel 18, 19 and 20.
Connect panel 18, 19, 20, and 21 to panel 17, then tighten by turning cam lock (A) clockwise.

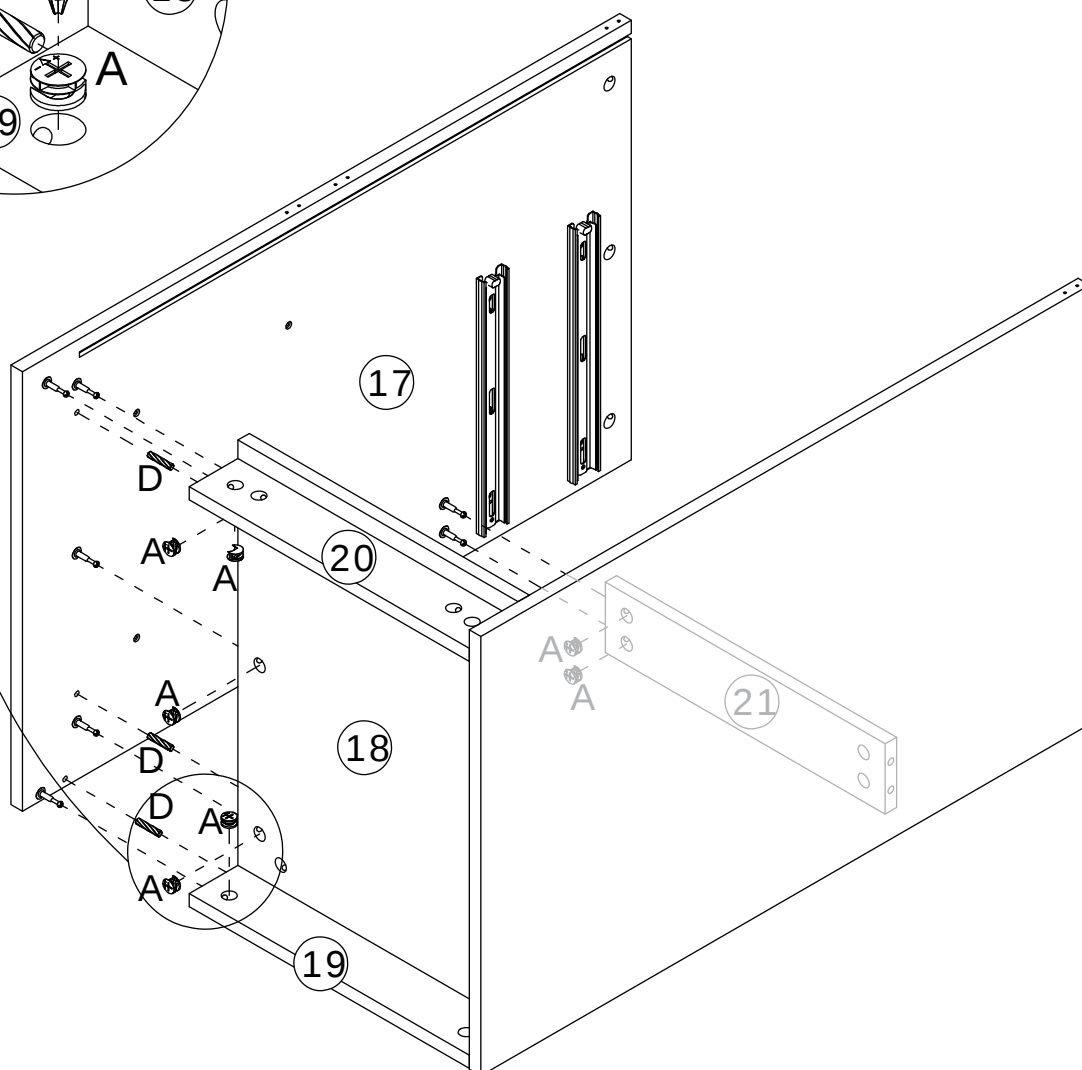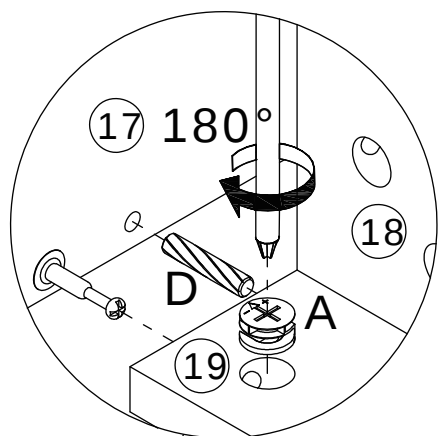


12

   
Turn the cabinet upside down and insert panel 22 into the available slots.

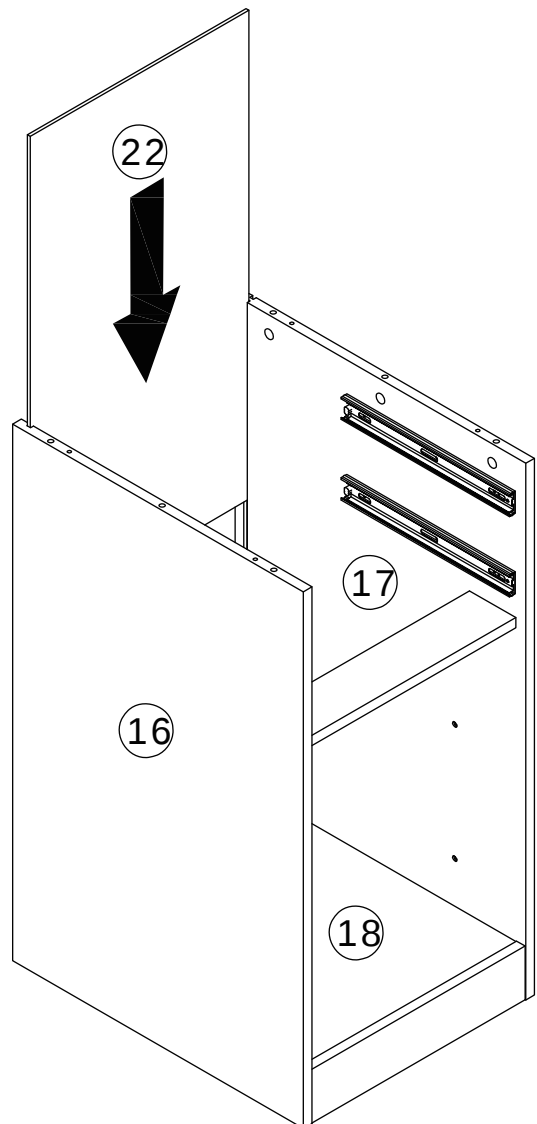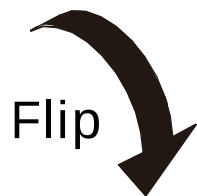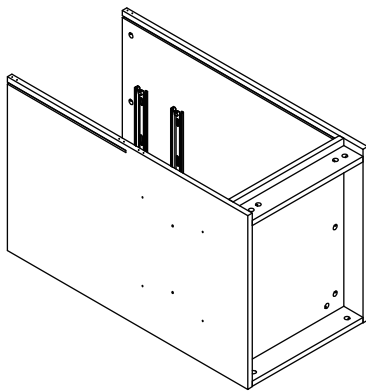





13

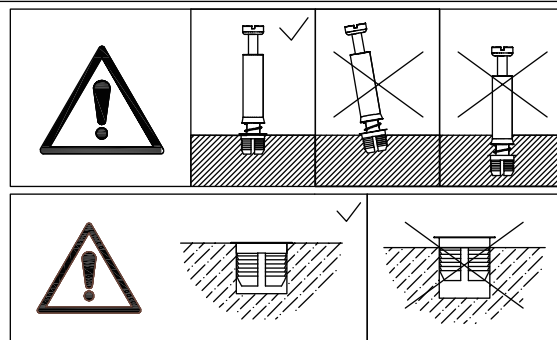 


 
First, install plug (C) onto panel 15, then screw self-tapping rod (B) into panel 15.

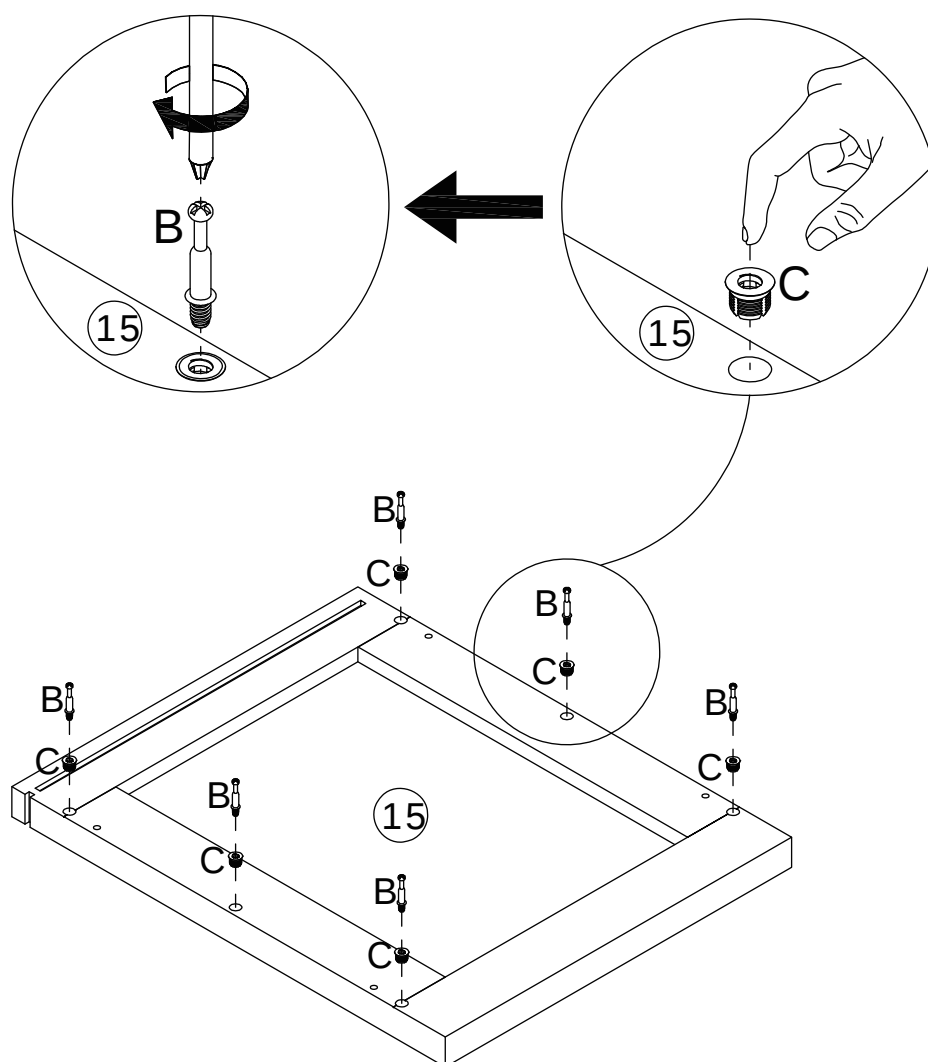


14

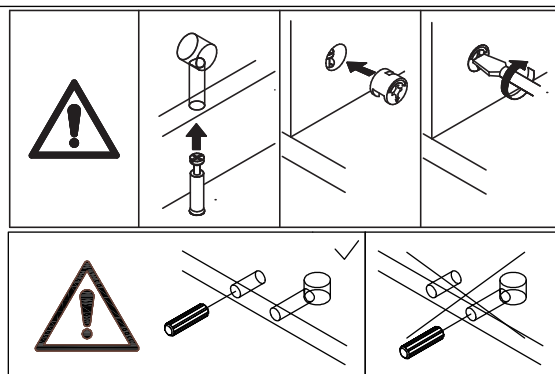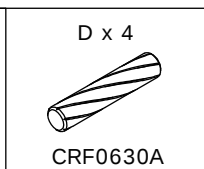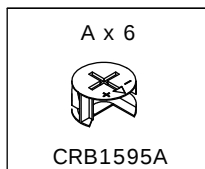    

  
Connect panel 15 to panel 16 and 17 using wooden dowel (D), then tighten by turning cam lock (A) clockwise.

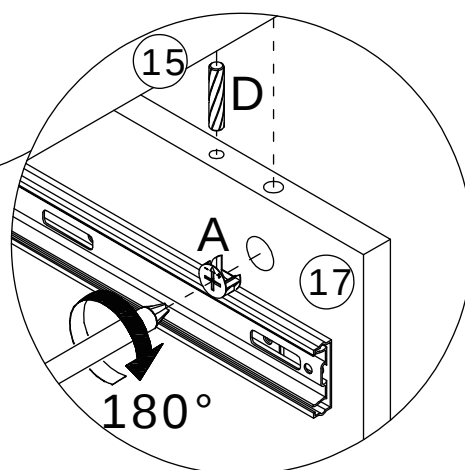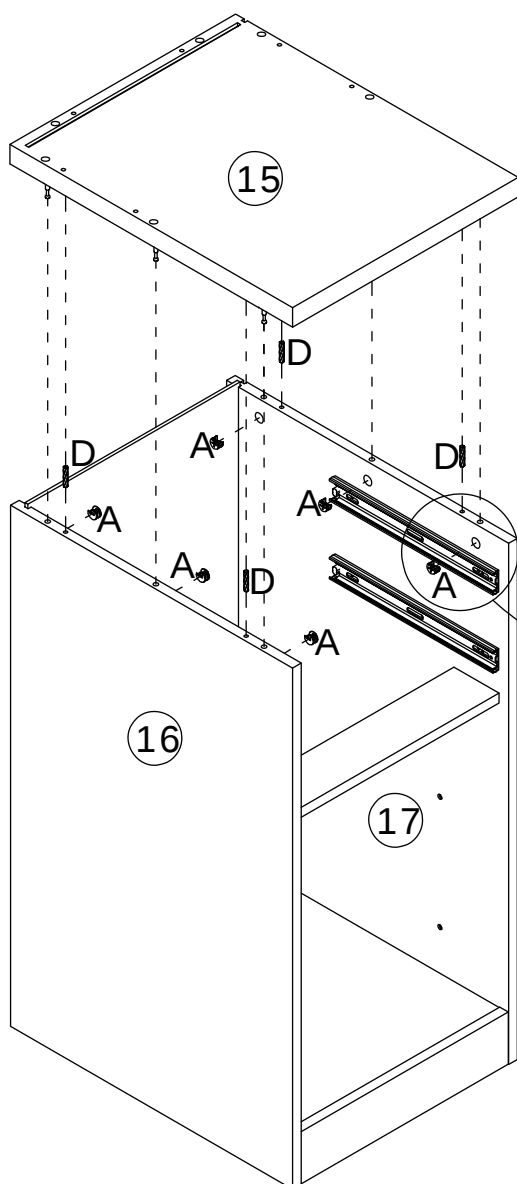


15

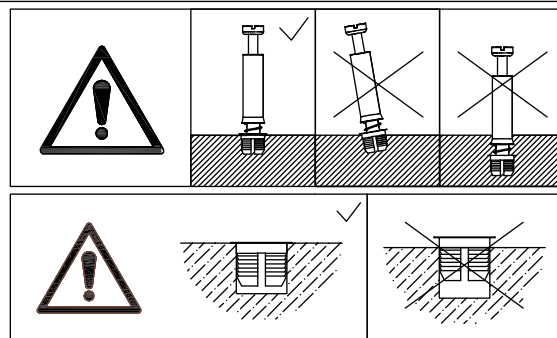 

 
First, install plug (C) onto panel 15, then screw self-tapping rod (B) into panel 15.

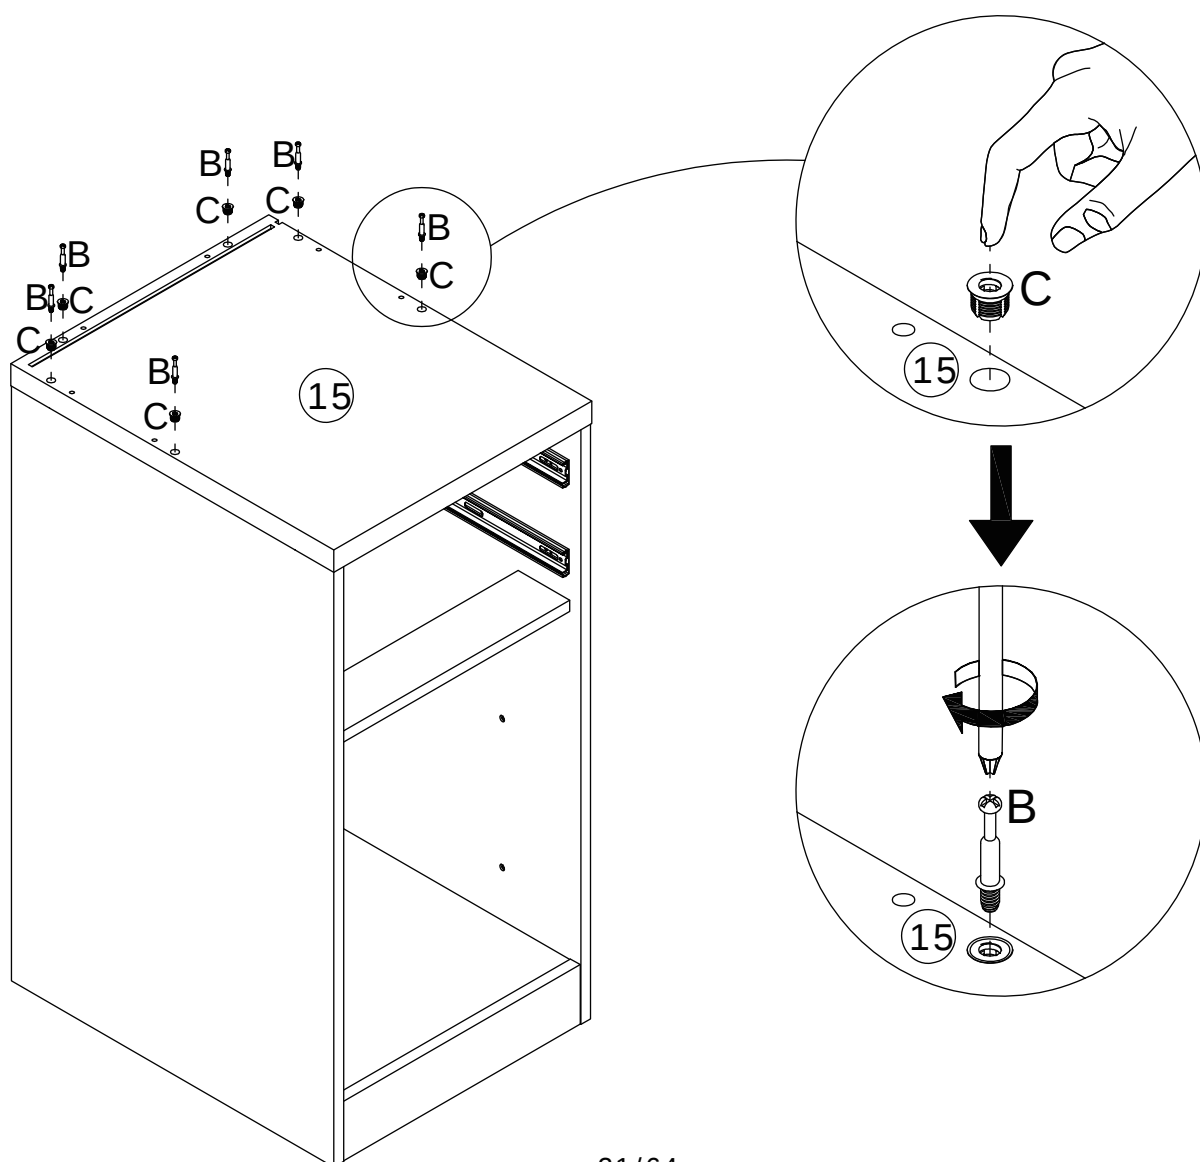


16

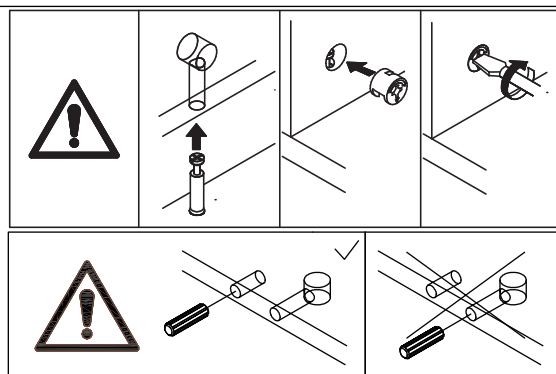 

 
Connect panel 15 to panel 2, 3, and 10 using wooden dowel (D), then tighten by turning cam lock (A) clockwise.

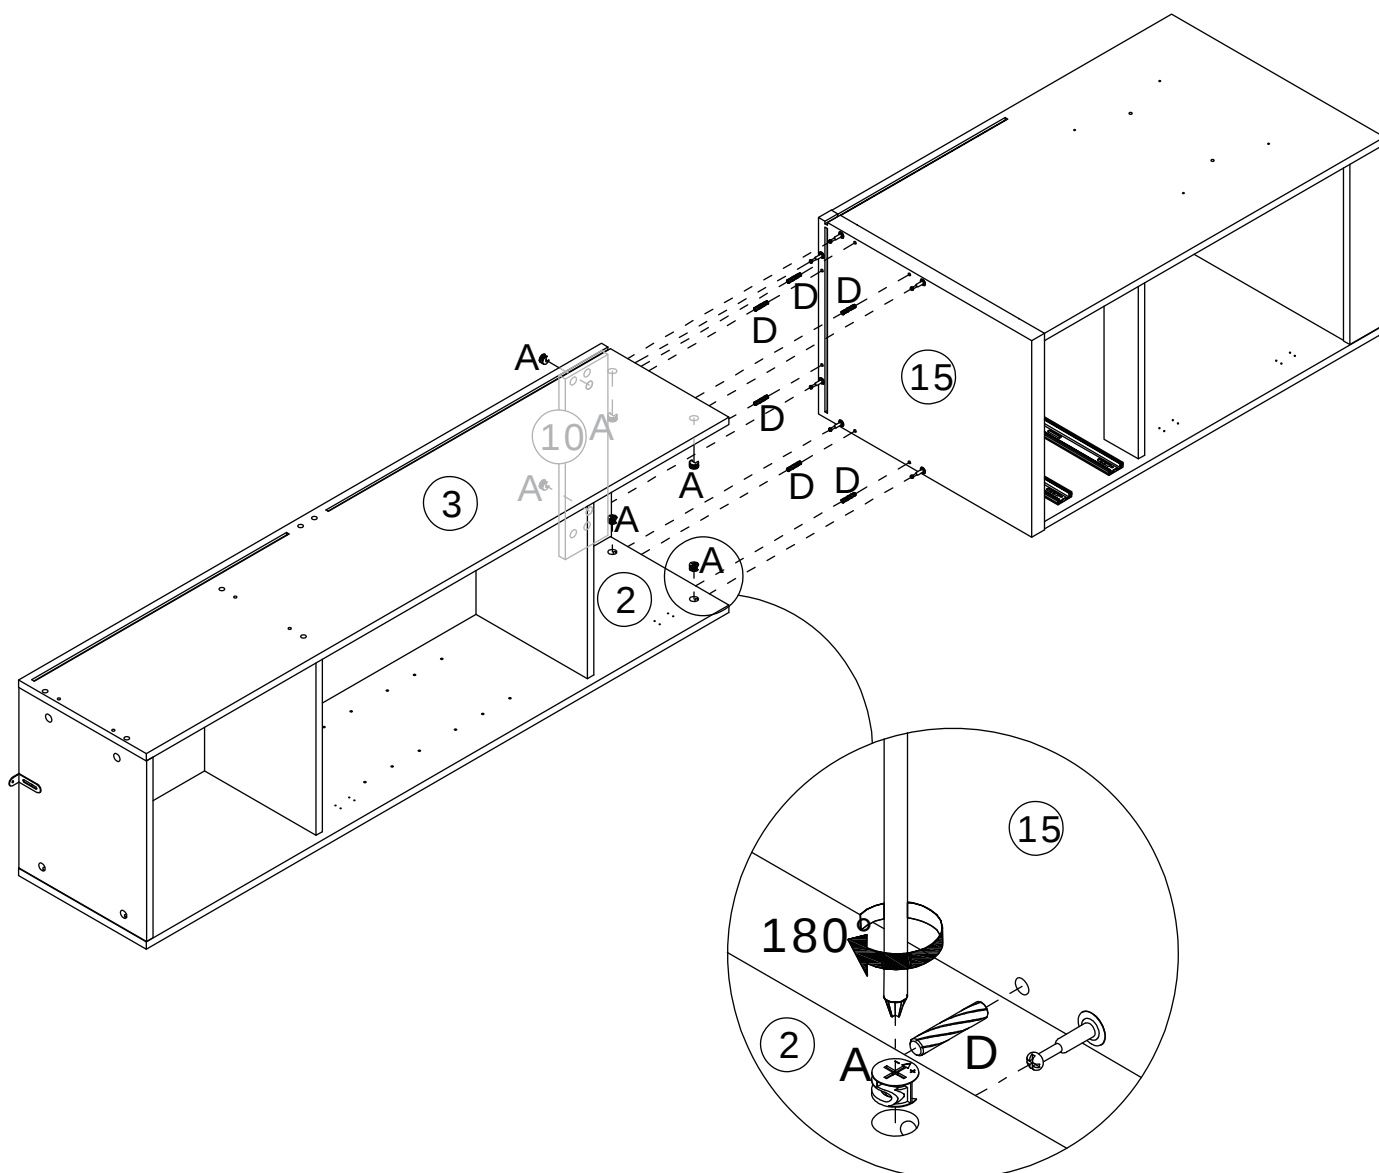


17

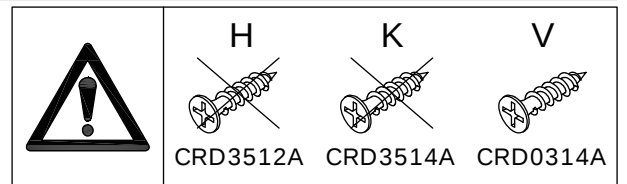 

 
Secure part (X) to panel 2, 3, 15, 16, and 17 using screw (V).

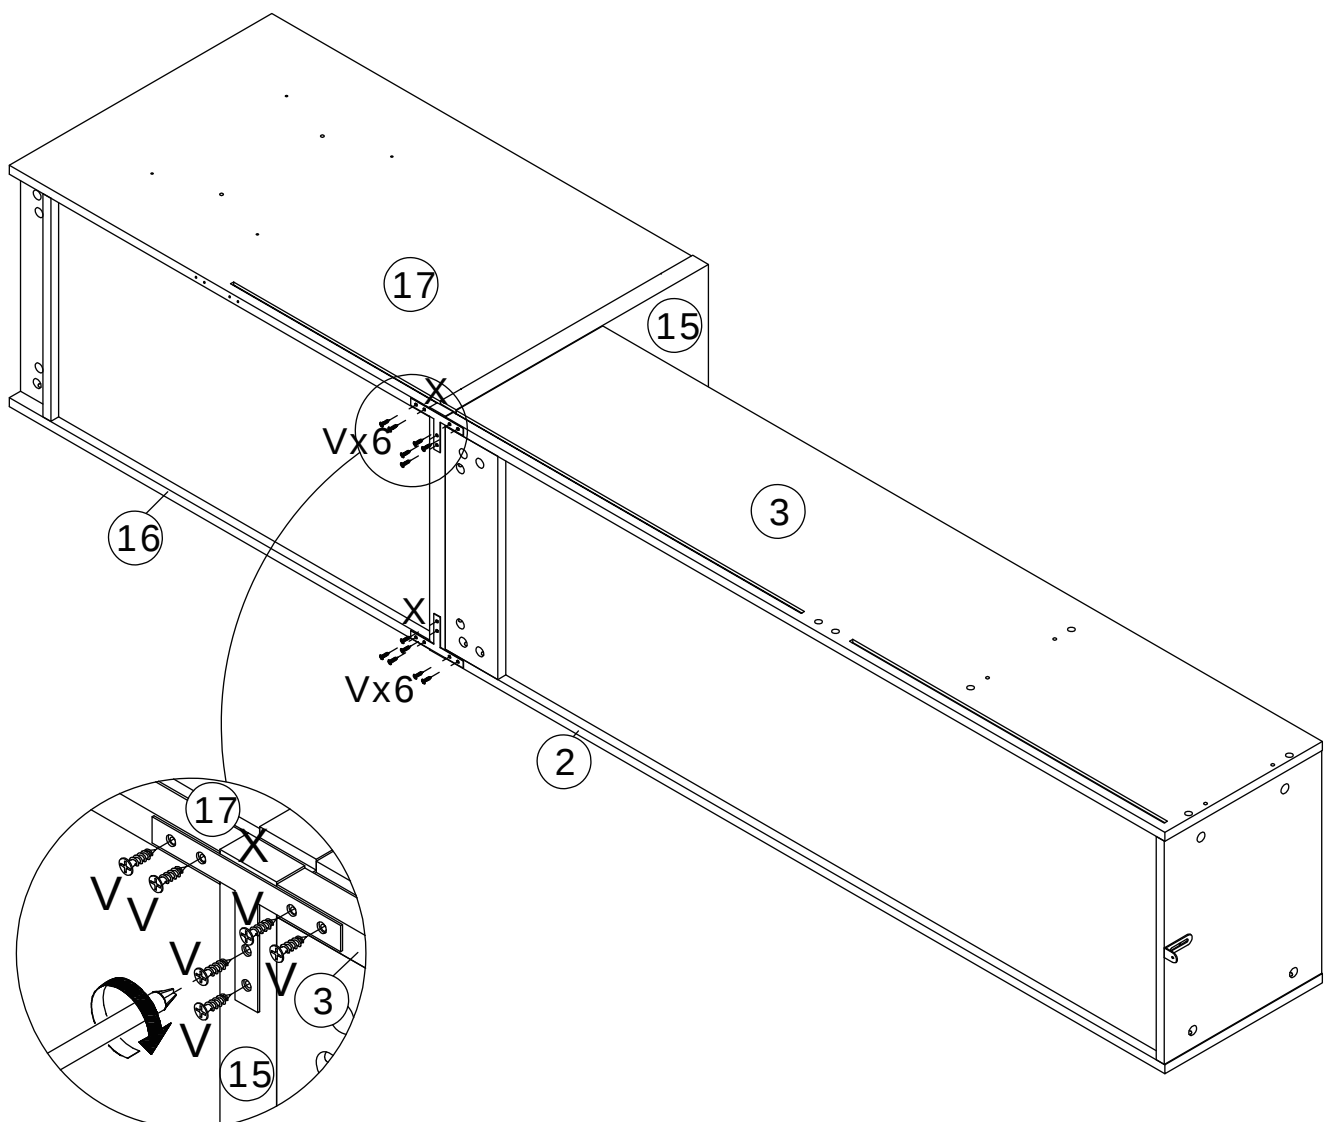


18

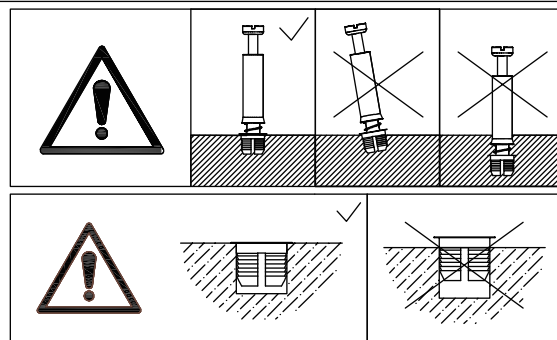 

 
First, install plug (C) onto panel 3, then screw self-tapping rod (B) into panel 3.

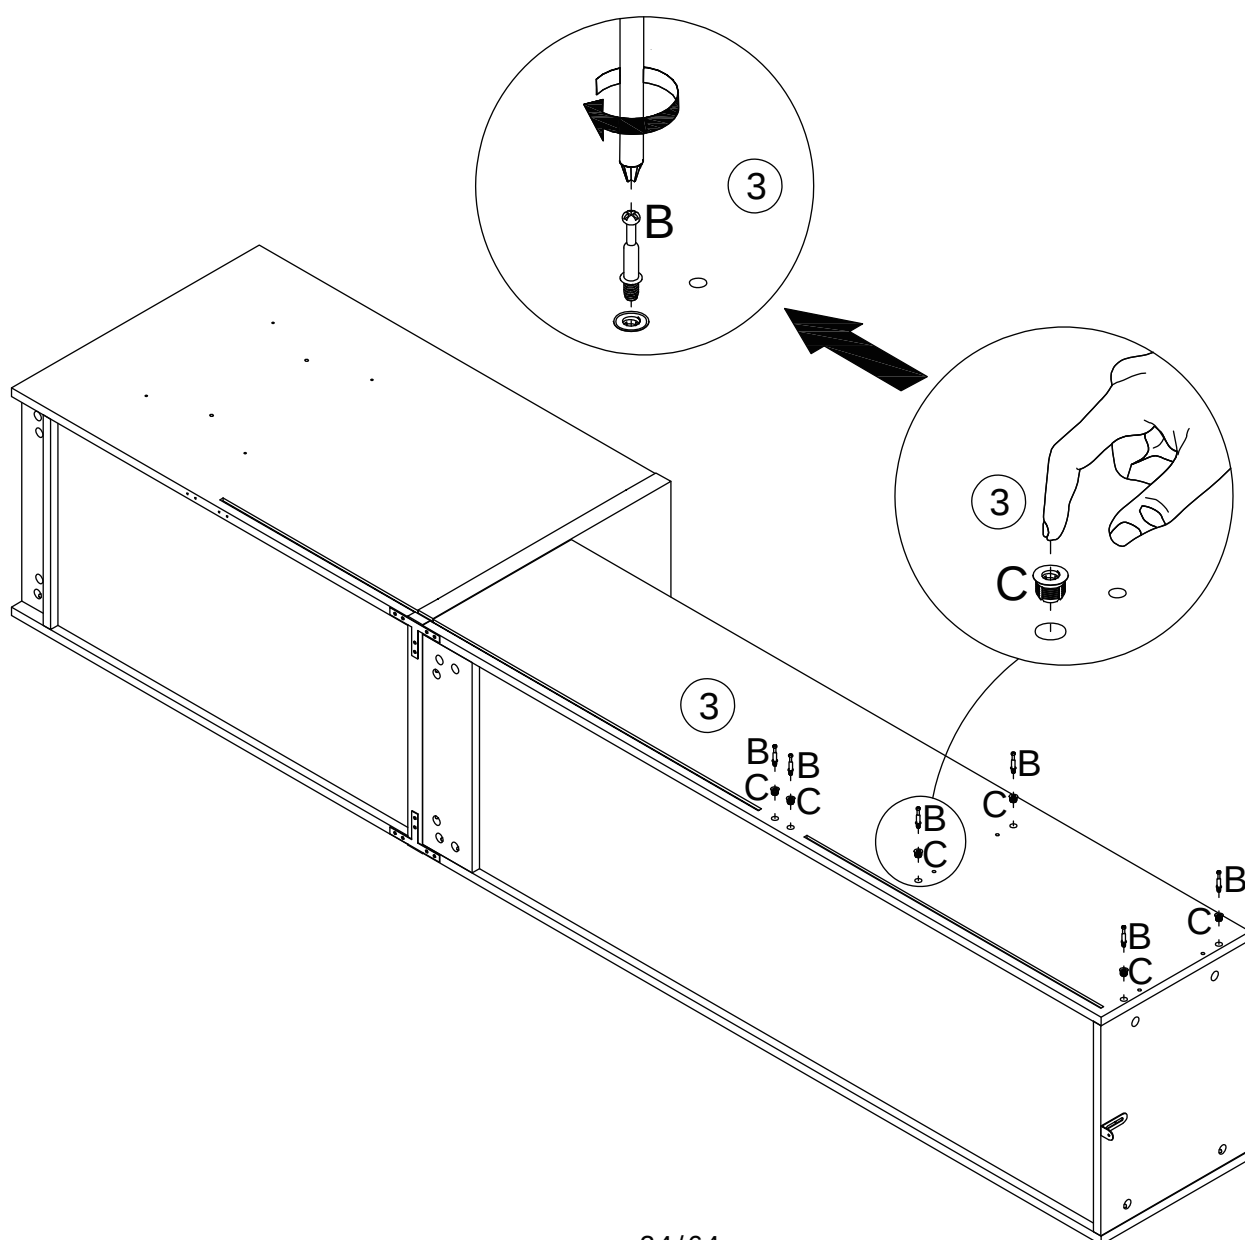


19

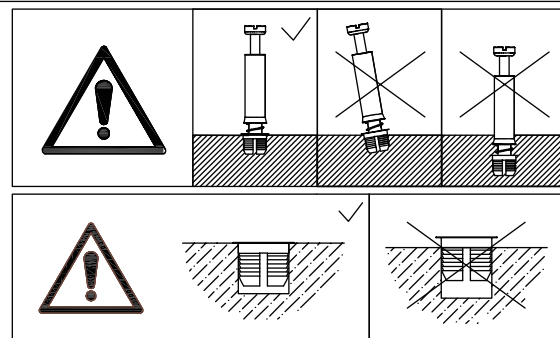 

 
First, install plug (C) onto panel 33, 36, and 34, then screw self-tapping rod (B) into panel 33, 36, and 34.

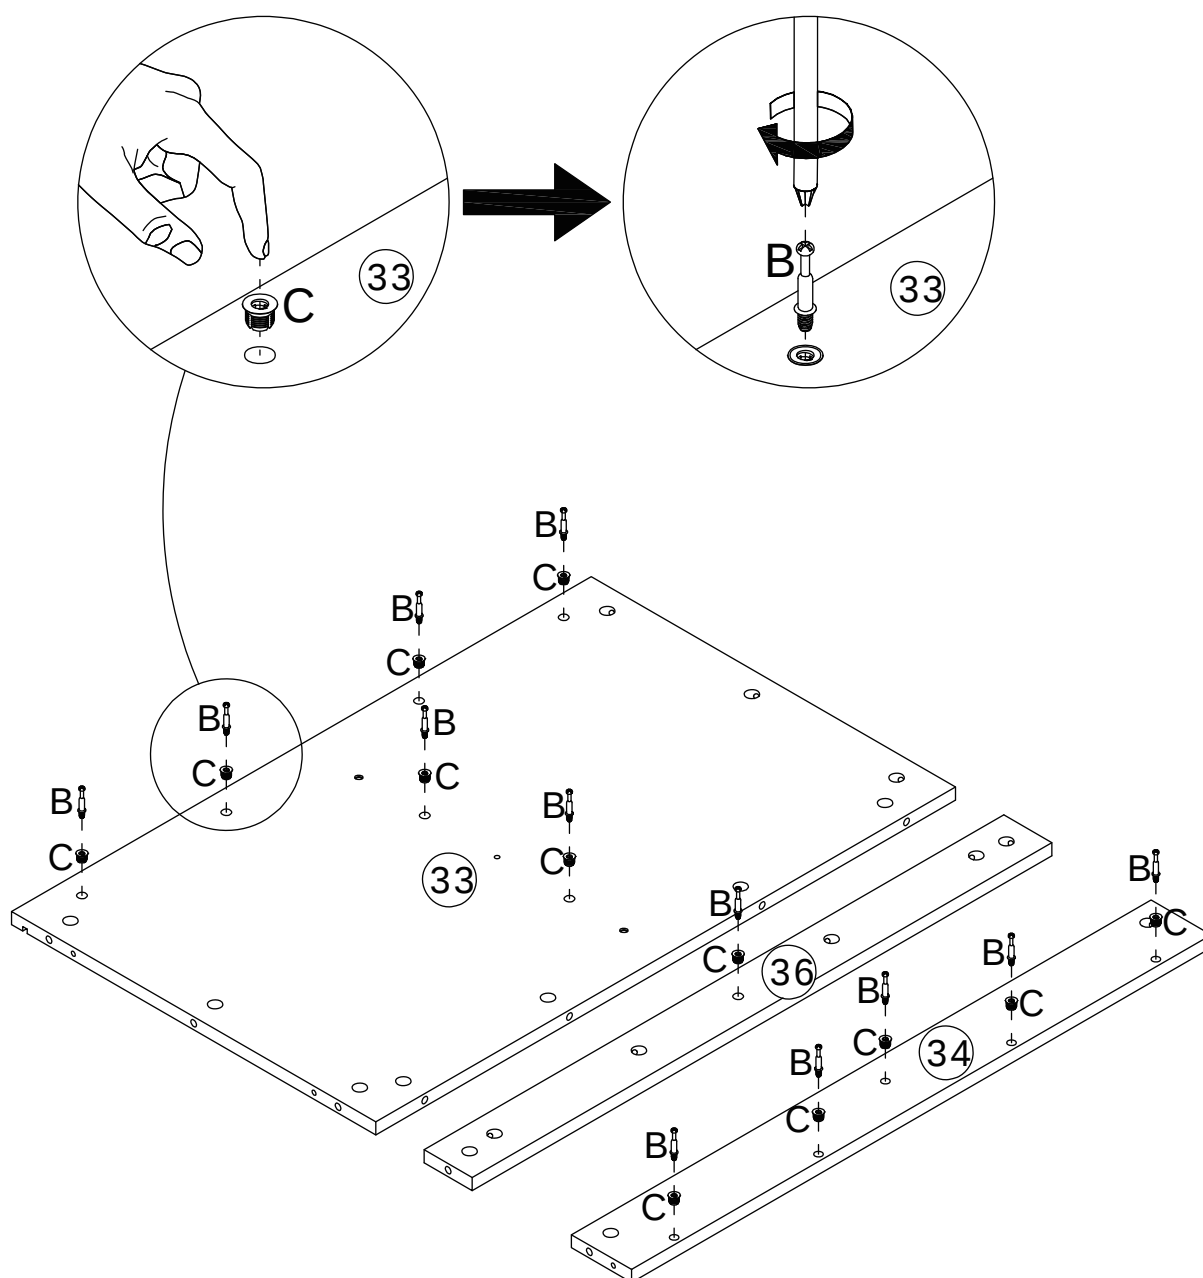

20


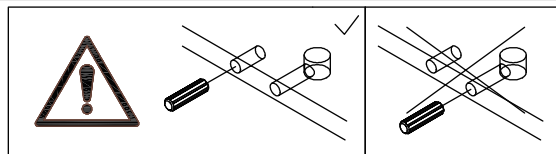 


 Connect panel 31 to panel 33 using wooden dowel (D), and secure it with screw (E).

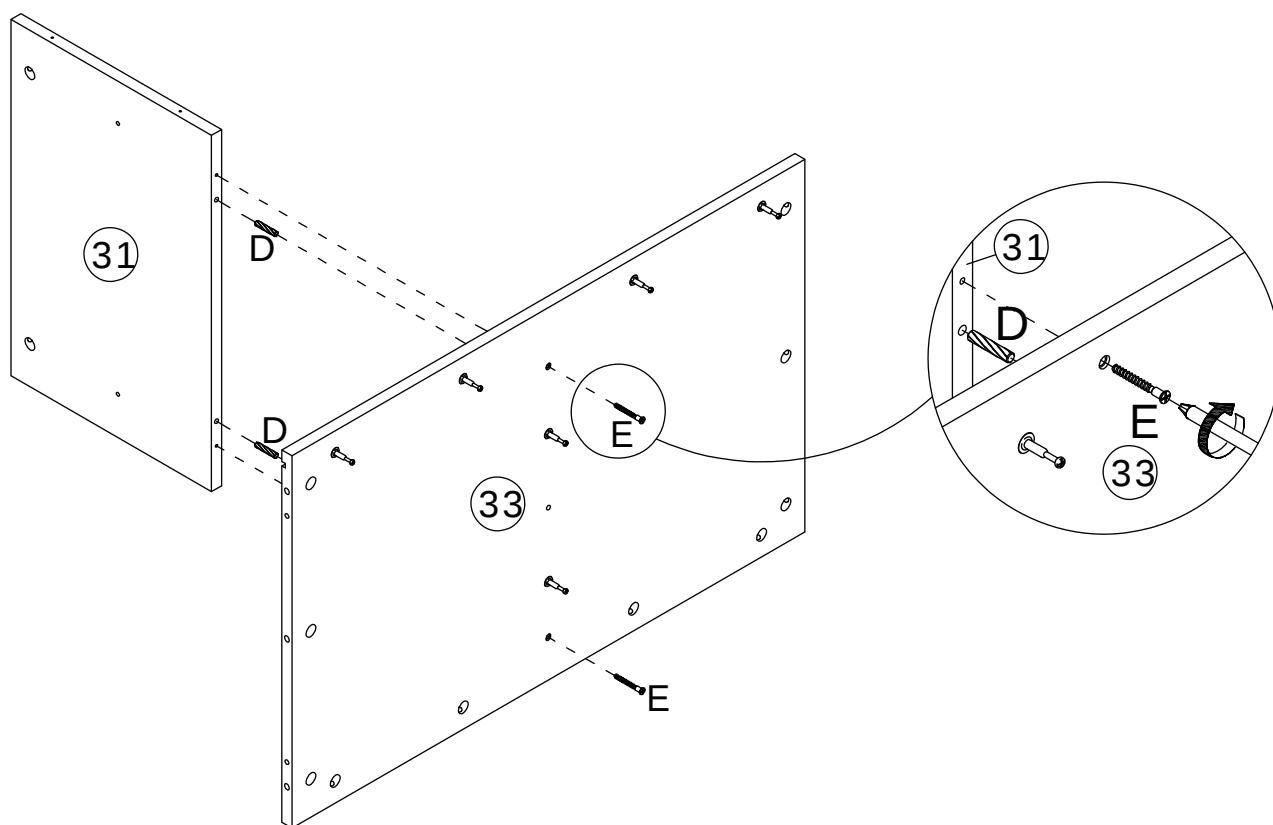


21

  
A x 1
CRB1595A

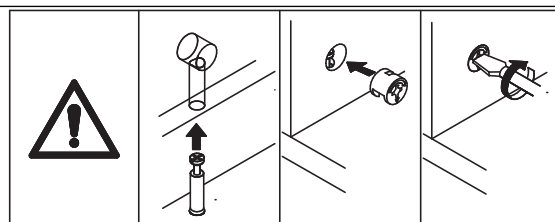

 
Connect panel 35 to panel 36, then tighten by turning cam lock (A) clockwise.

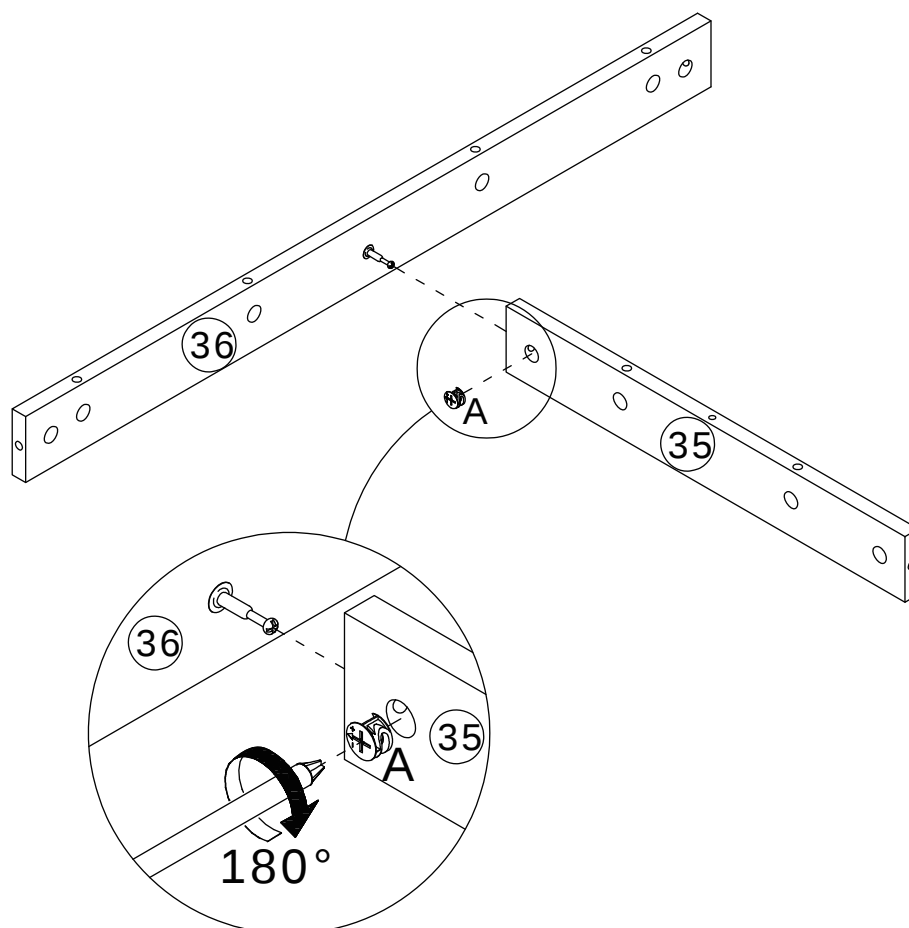

22


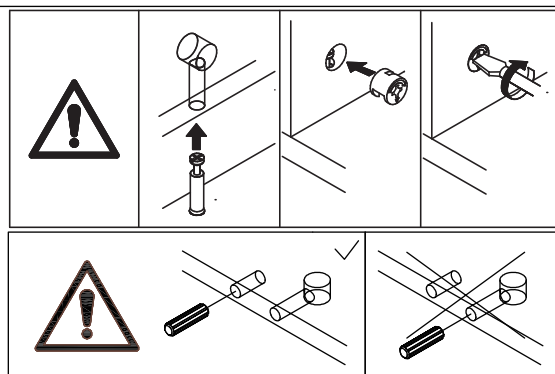 


 Insert wooden dowel (D) into panel 35.
Connect panel 33 to panel 35 and 36, then tighten by turning cam lock (A) clockwise.

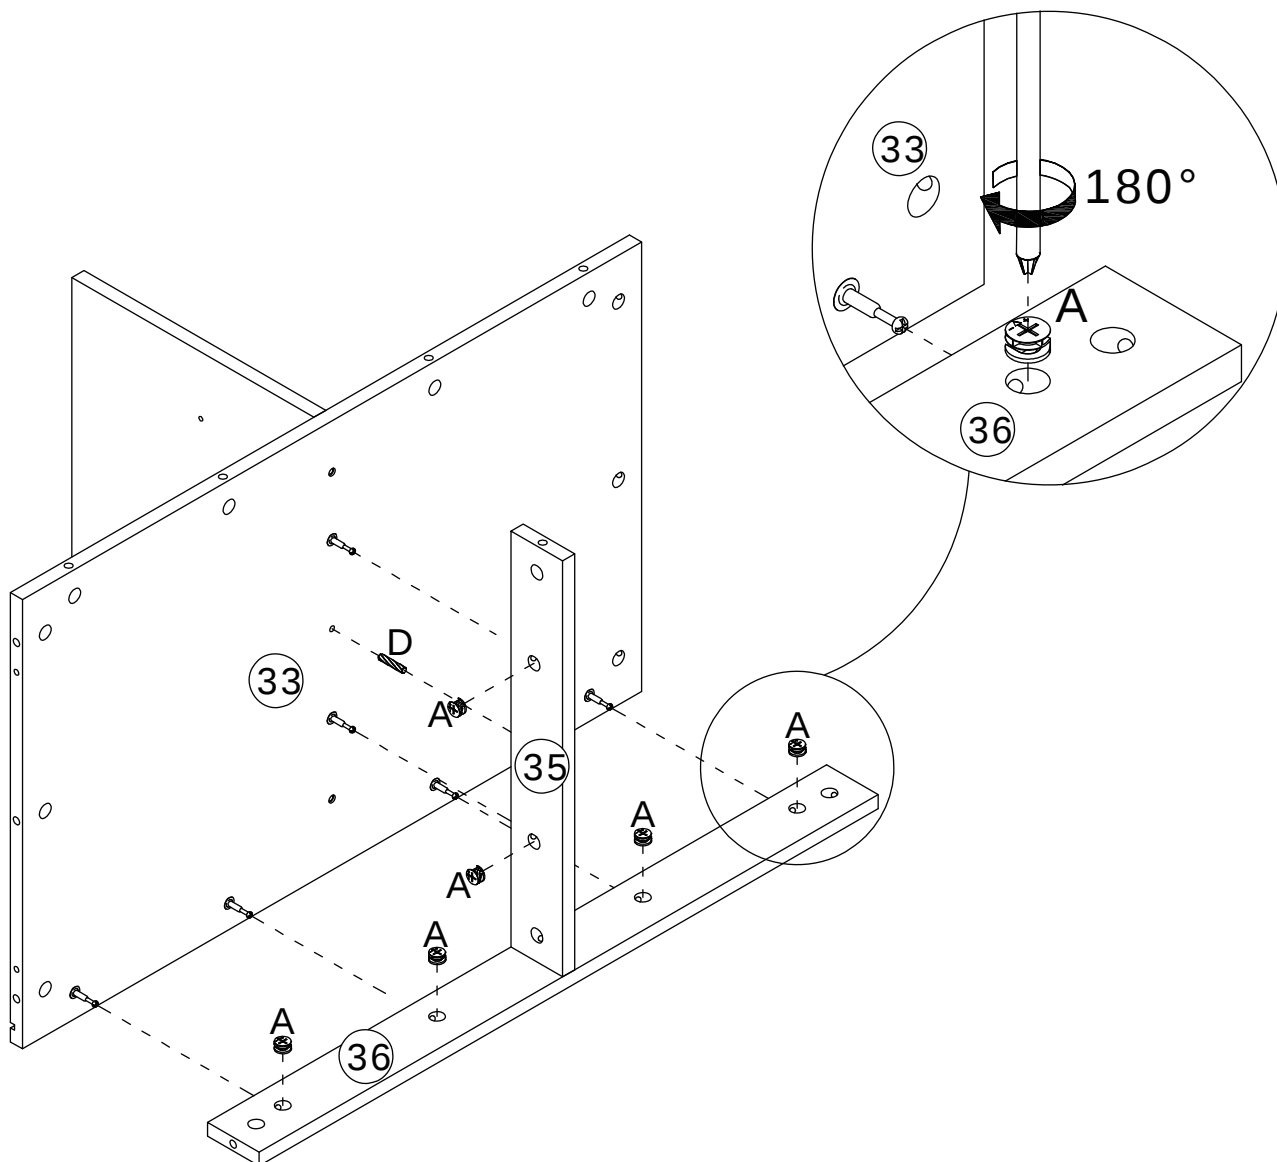


23

  
A x 5
CRB1595A

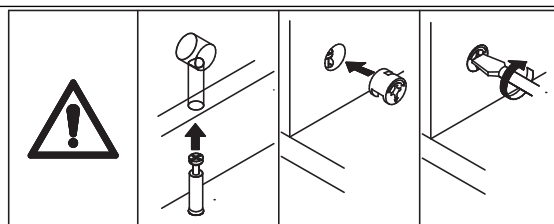

 
Connect panel 34 to panel 33 and 35, then tighten by turning cam lock (A) clockwise.

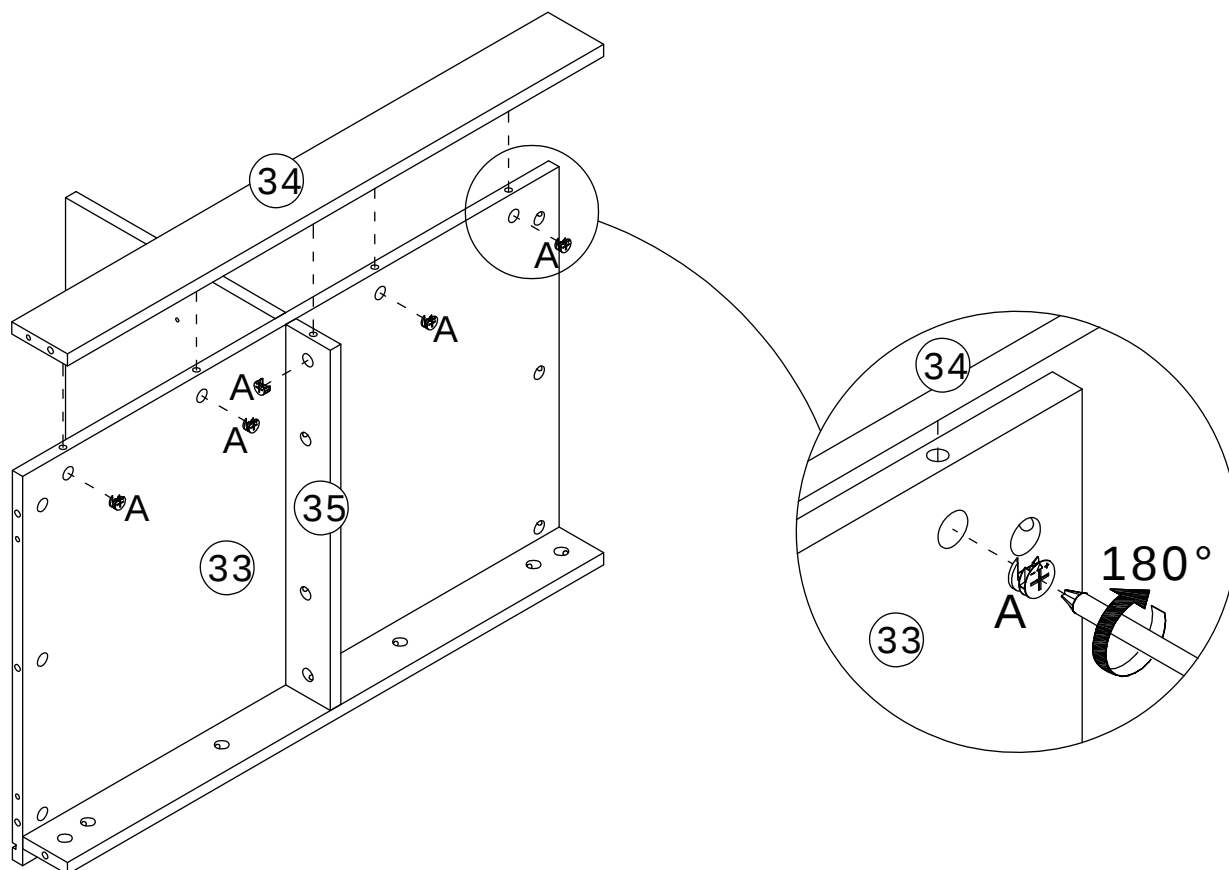


24

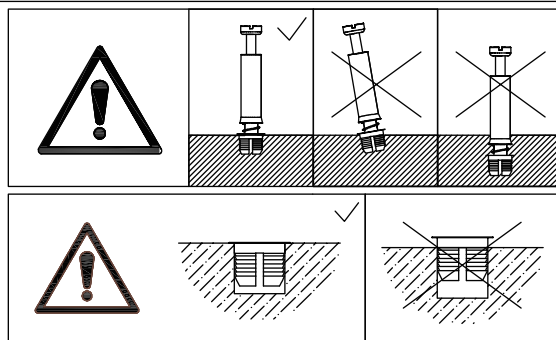 

 
First, install plug (C) onto panel 30 and 32, then screw self-tapping rod (B) into panel 30 and 32.

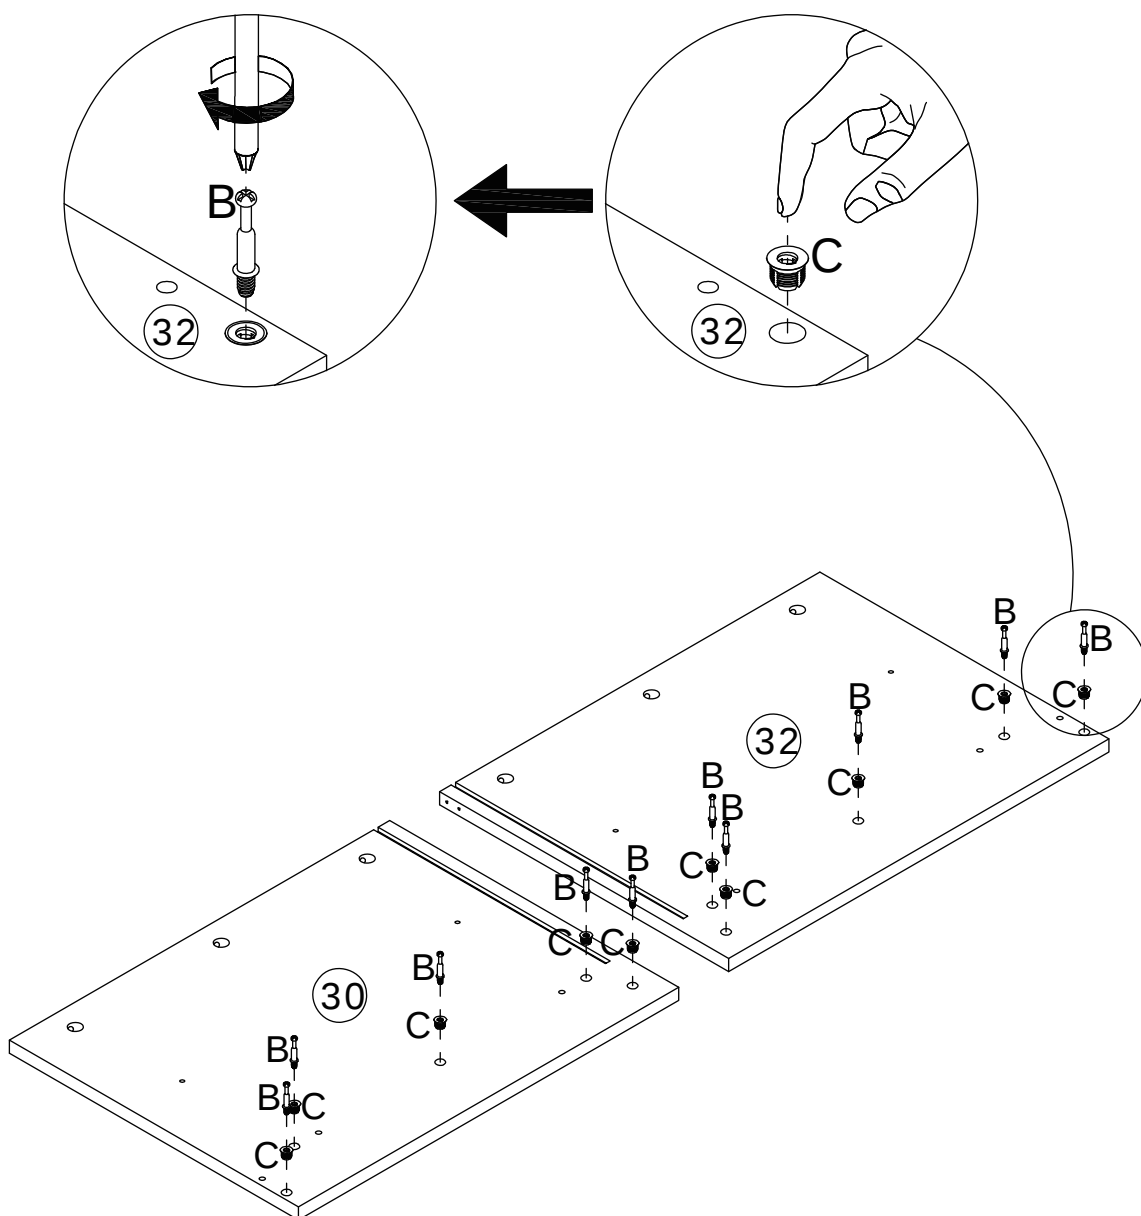


25

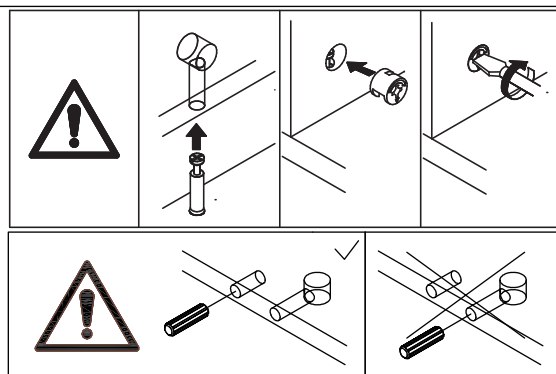 

 
Connect panel 32 to panel 33, 34, and 36 using wooden dowel (D), then tighten by turning cam lock (A) clockwise.

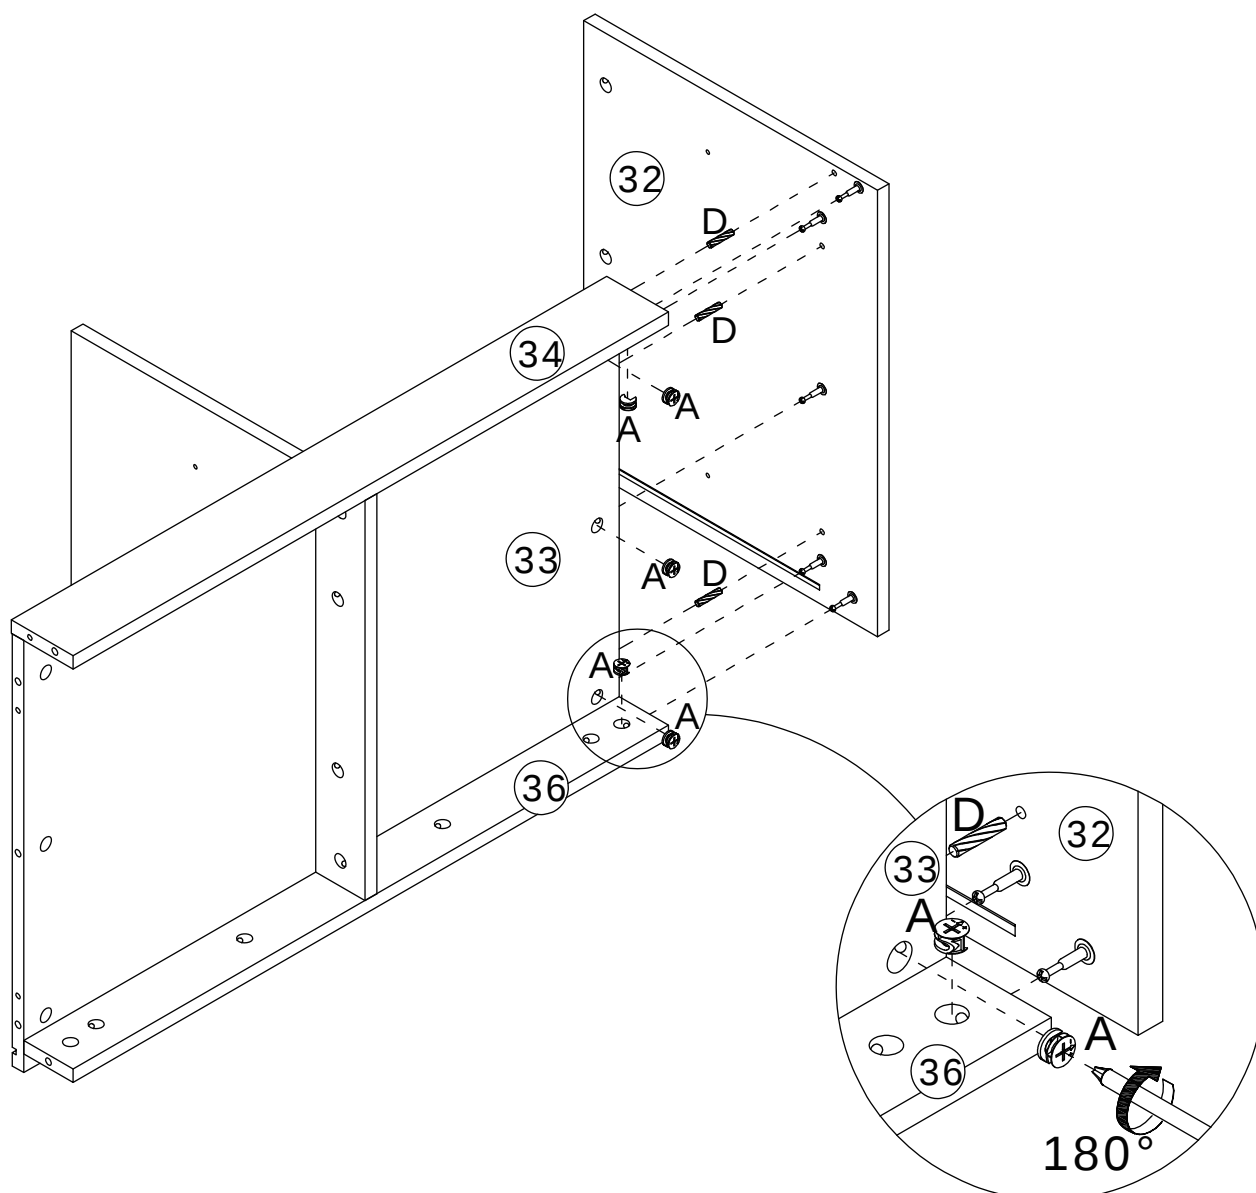

26

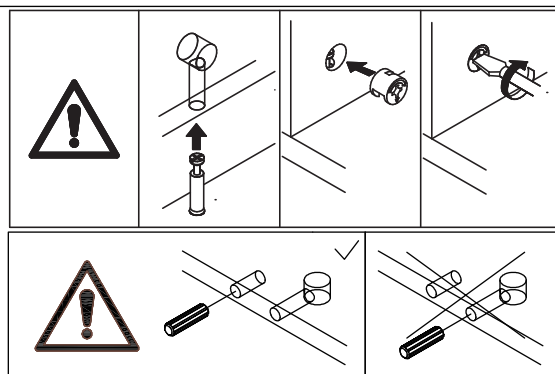 


 Connect panel 30 to panel 33, 34, and 36 using wooden dowel (D), then tighten by turning cam lock (A) clockwise.

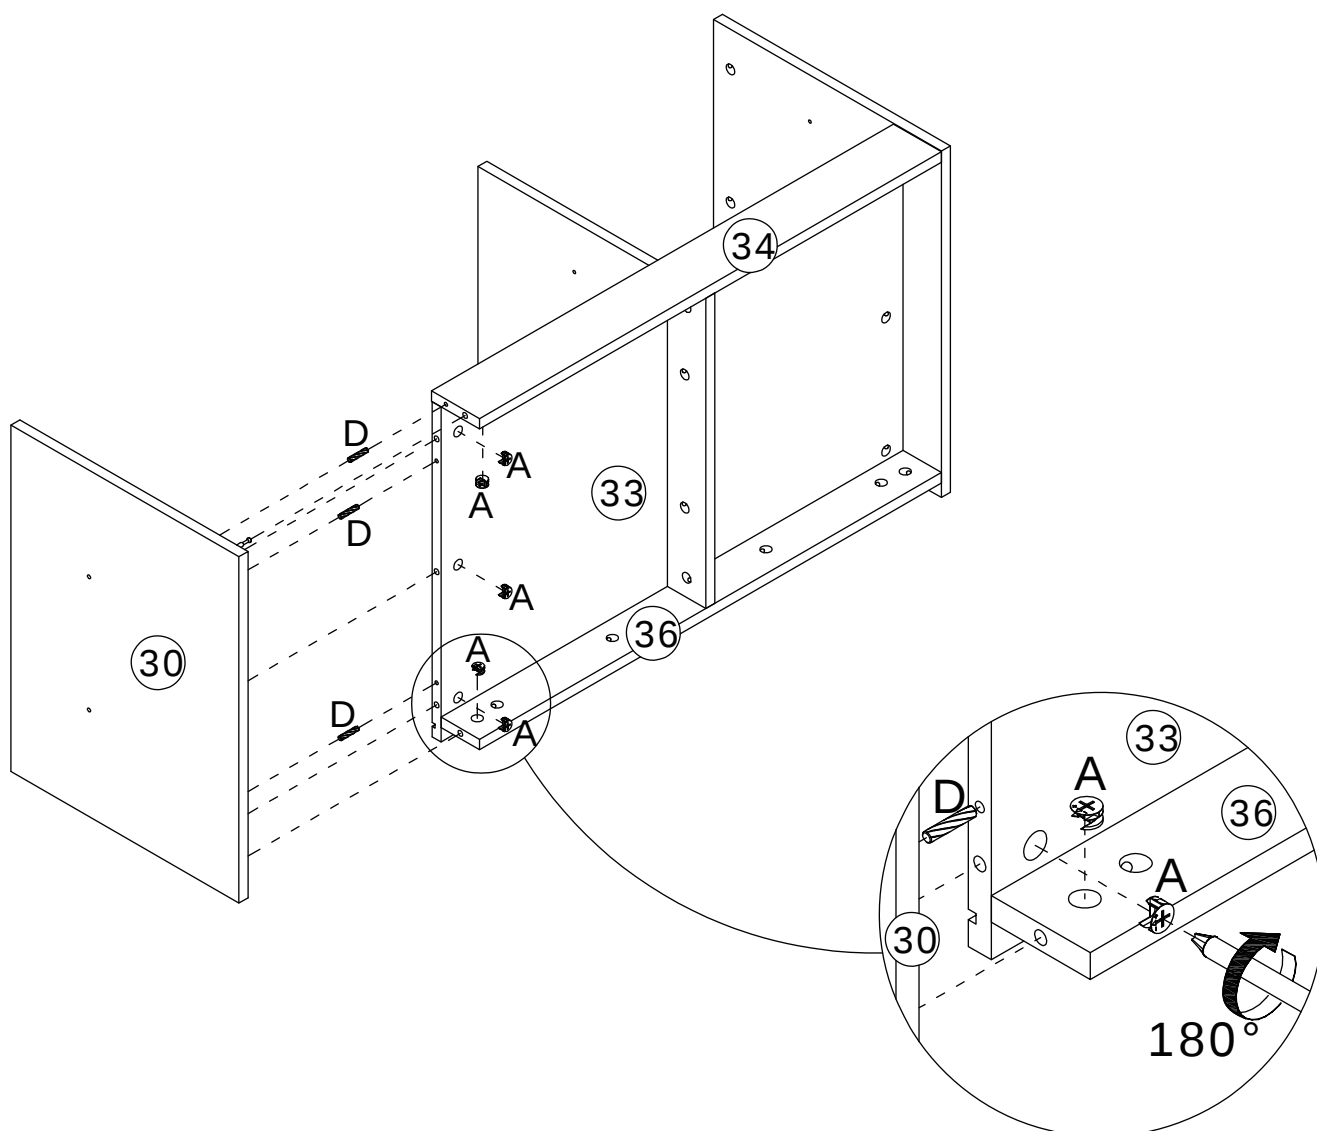


27

 
Turn the cabinet upside down and insert panel 37 into the available slots.

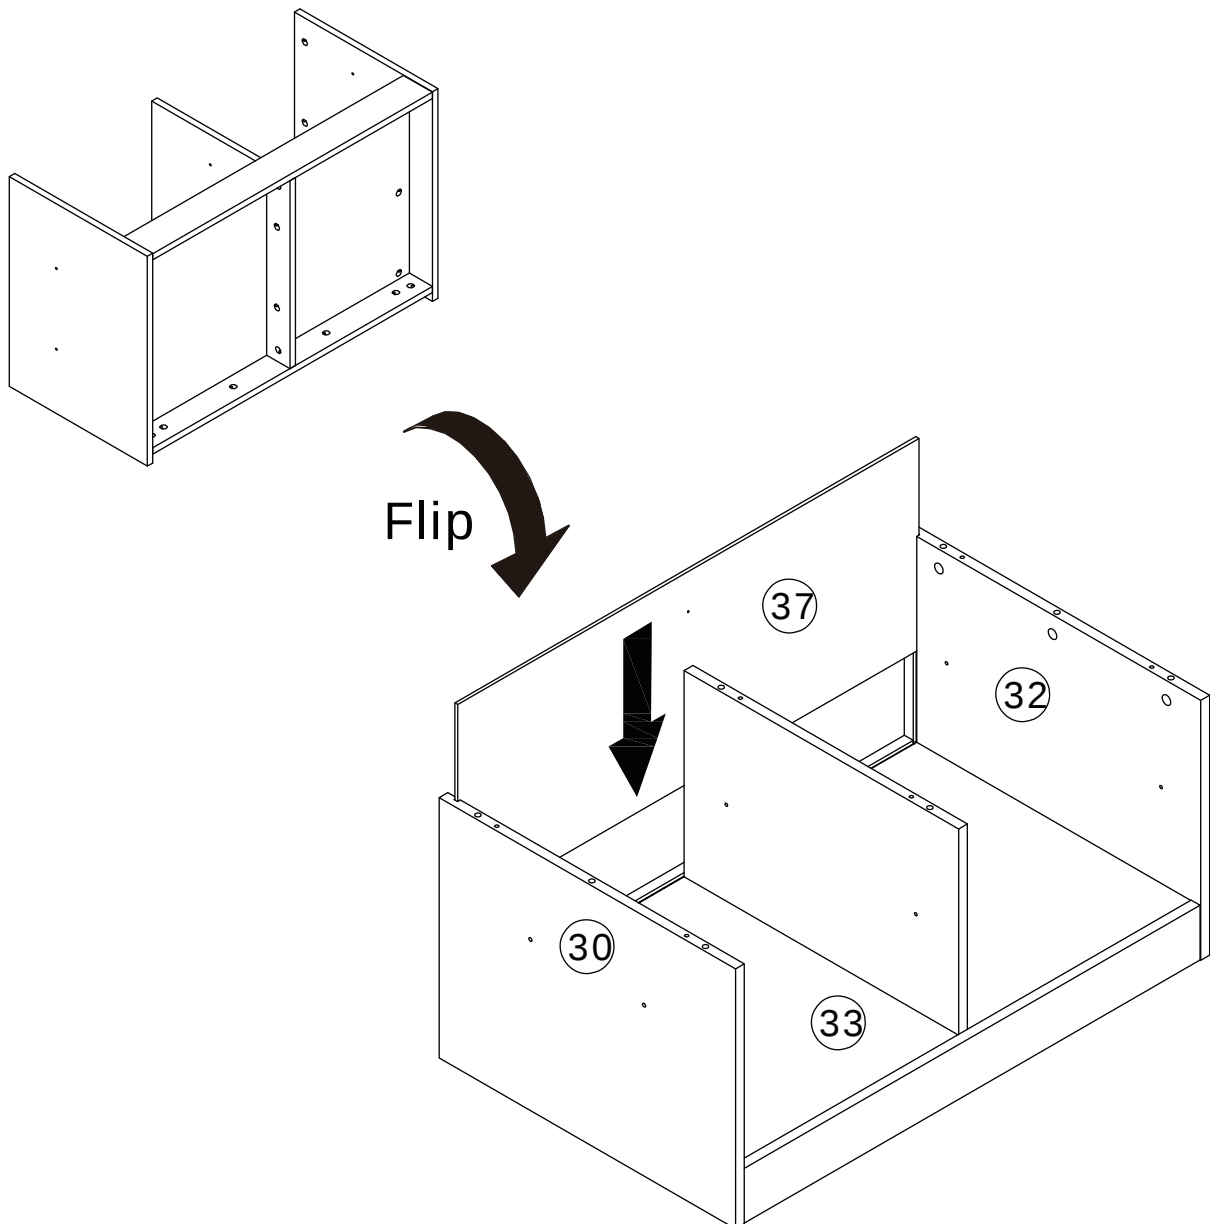


28

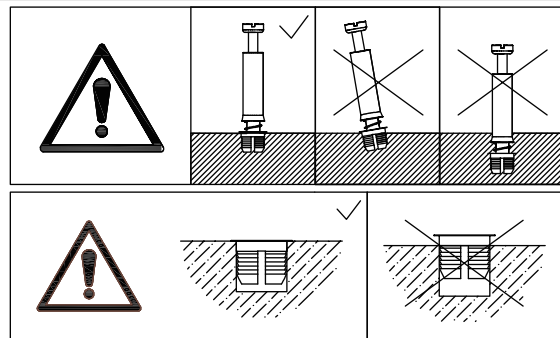 


 
First, install plug (C) onto panel 29, then screw self-tapping rod (B) into panel 29.

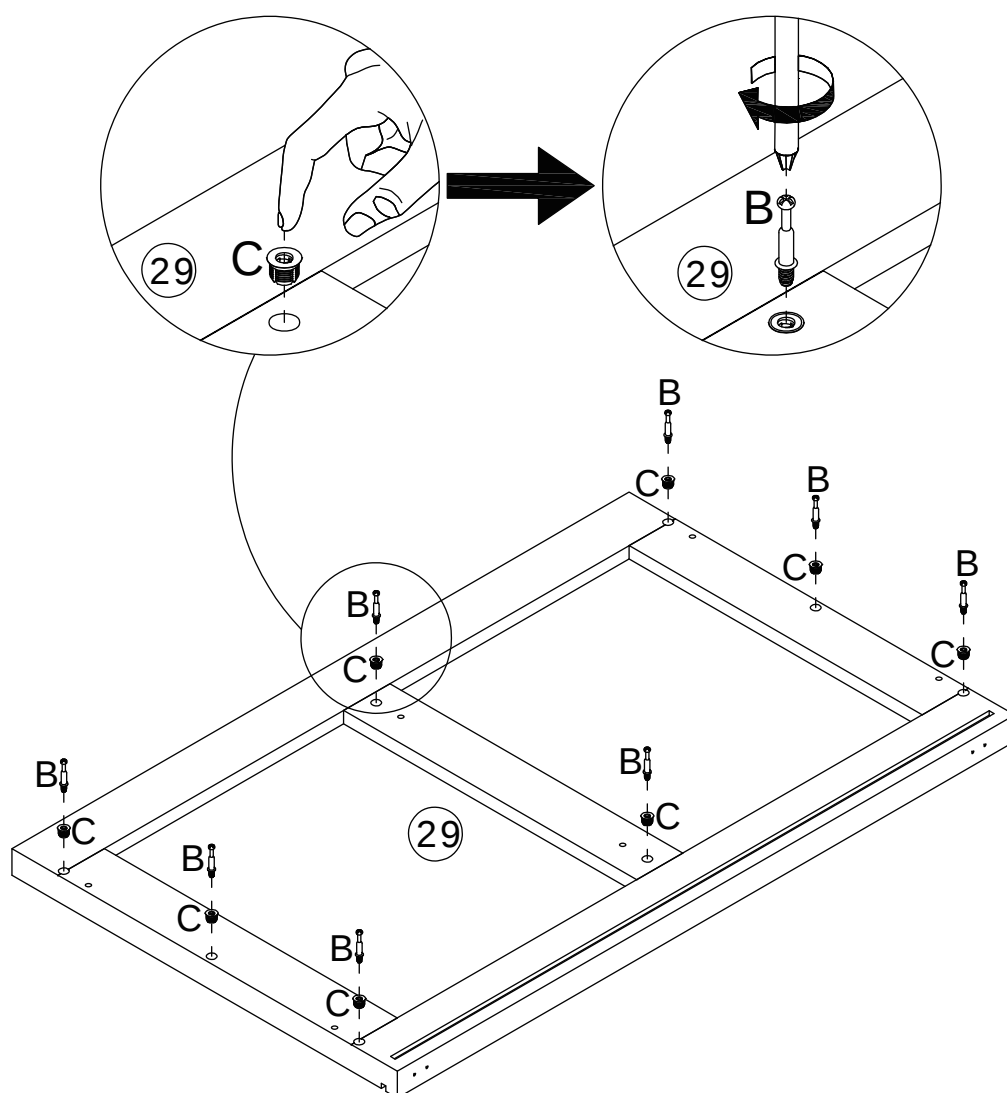




29

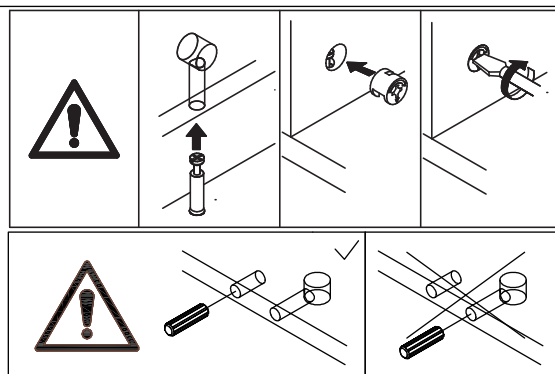 

  
Connect panel 29 to panel 30, 31, and 32 using wooden dowel (D), then tighten by turning cam lock (A) clockwise.

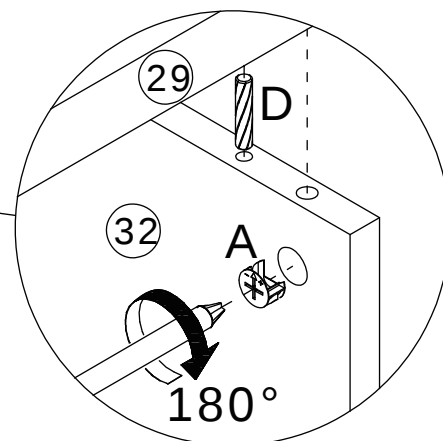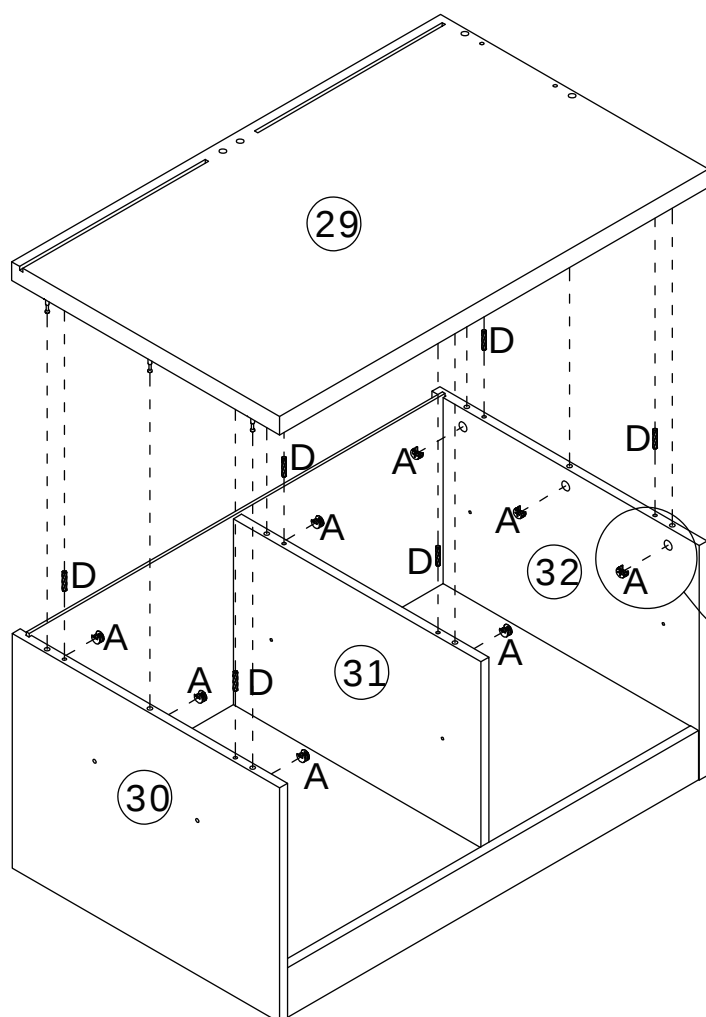


30

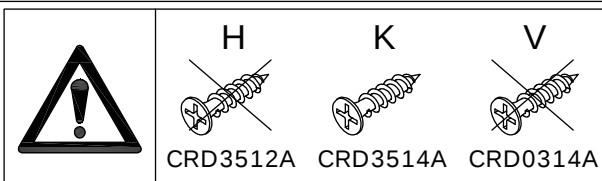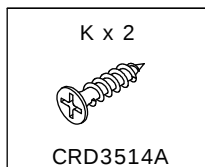   

 
Secure panel 37 to panel 31 using screw (K).

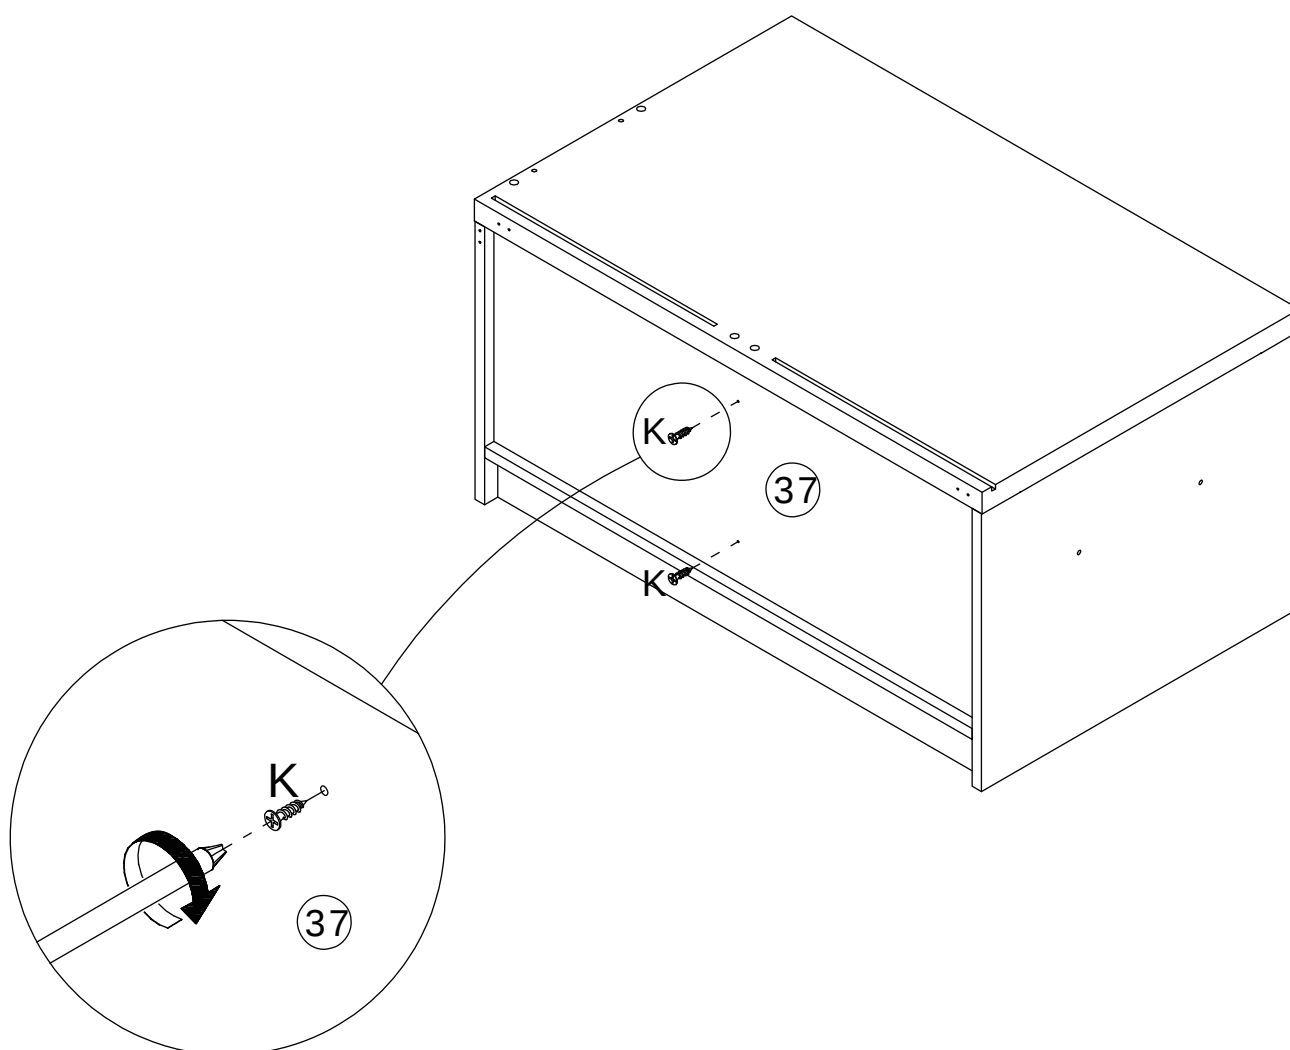



31

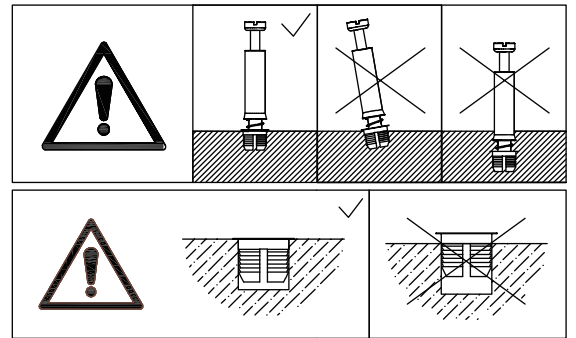 

 
First, install plug (C) onto panel 29, then screw self-tapping rod (B) into panel 29.

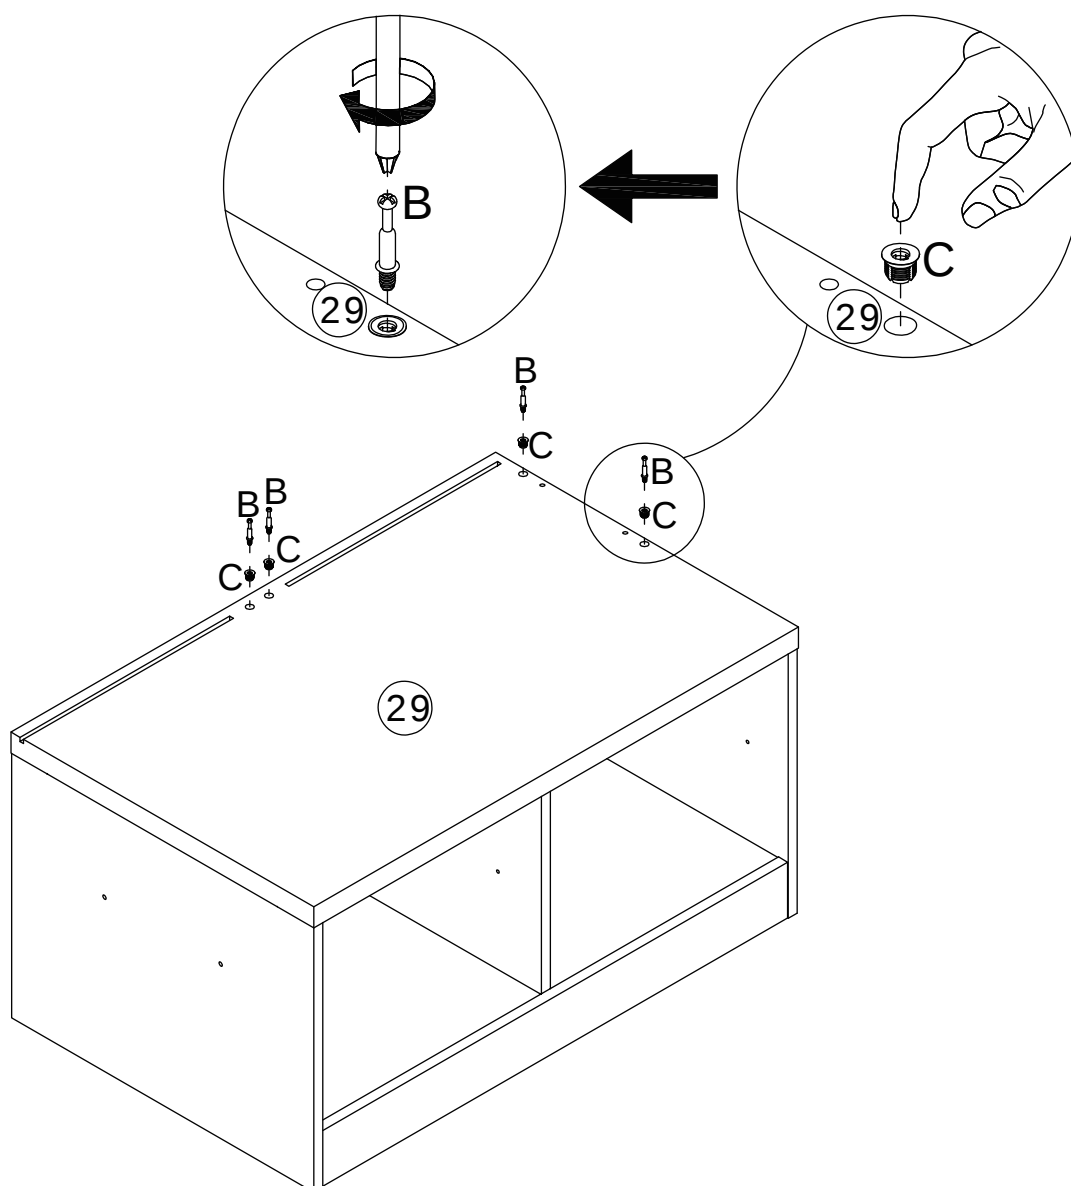



32

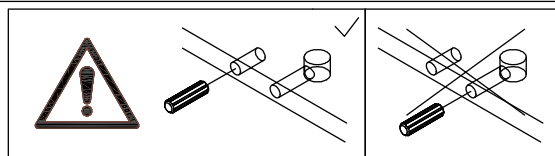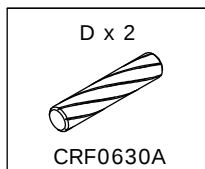  

 Connect panel 8 to panel 9 using wooden dowel (D).

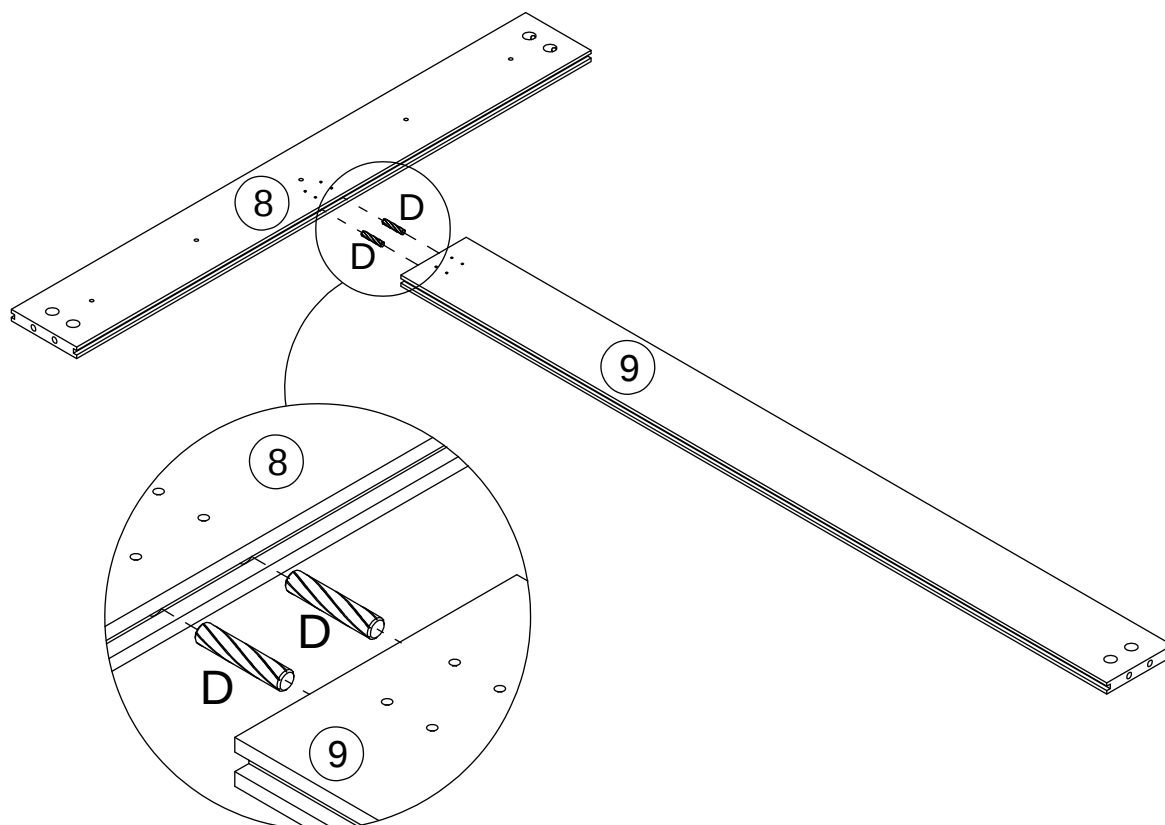


33

  
K x 9  CRD3514A	Q x 1 	R x 1 	
--	--	--	---

	H  CRD3512A	K  CRD3514A	V  CRD0314A
--	--	--	--

 
Secure bracket (R) to panel 7 using screw (K), and secure iron sheet (Q) to panel 8 and 9 using screw (K).

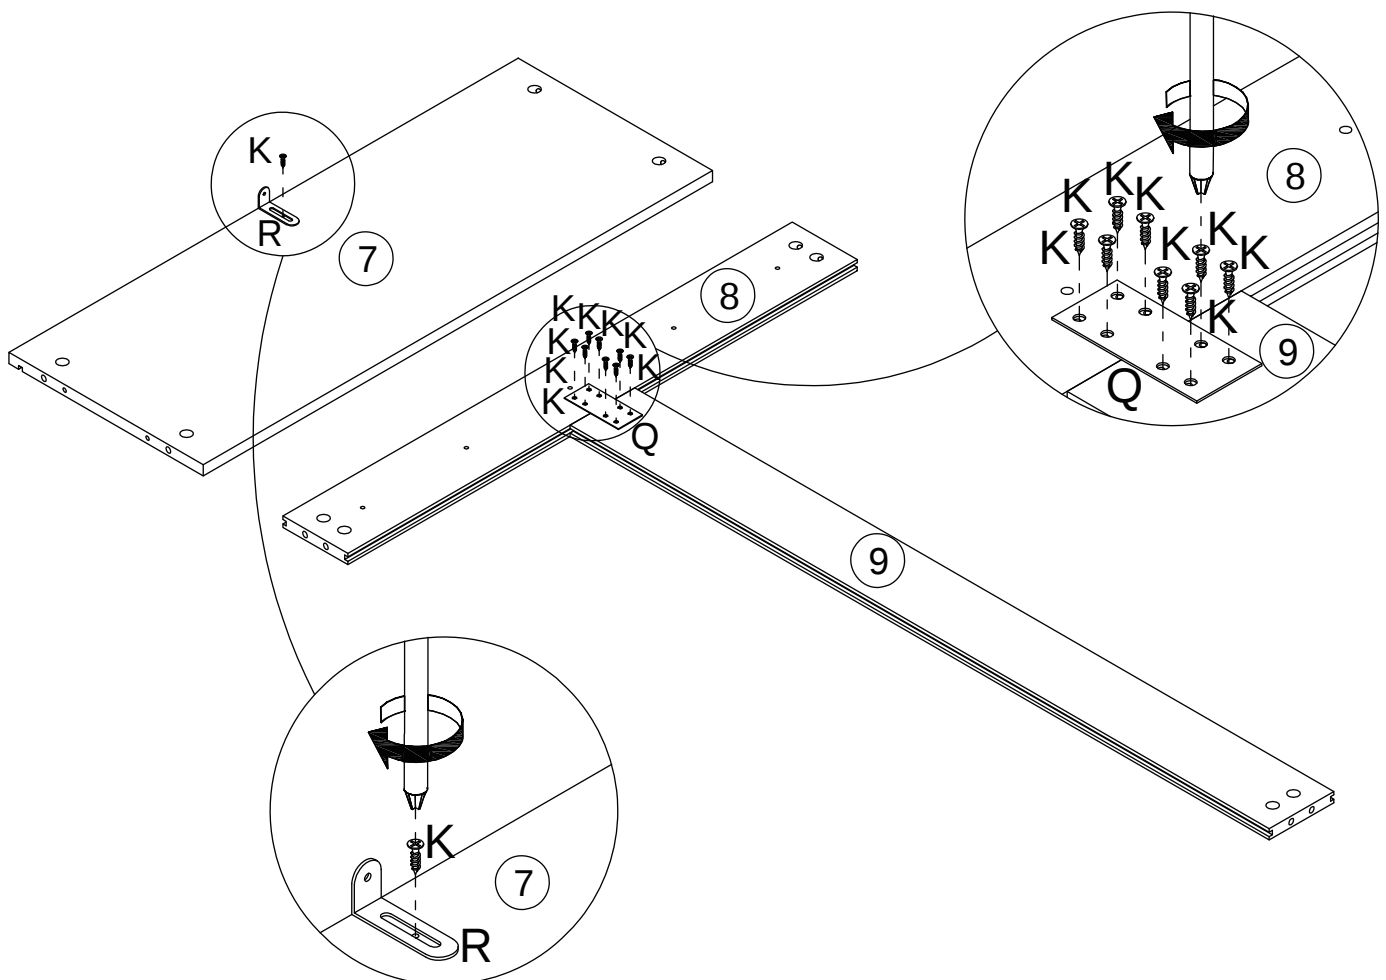


34

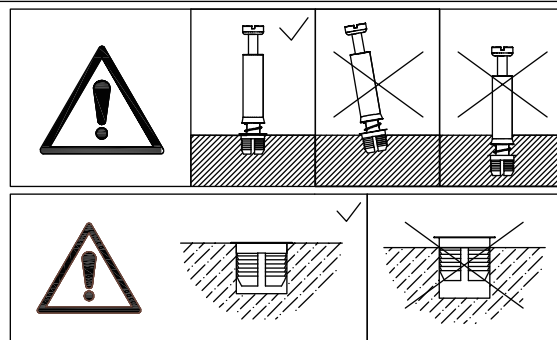 

 
First, install plug (C) onto panel 4, then screw self-tapping rod (B) into panel 4.

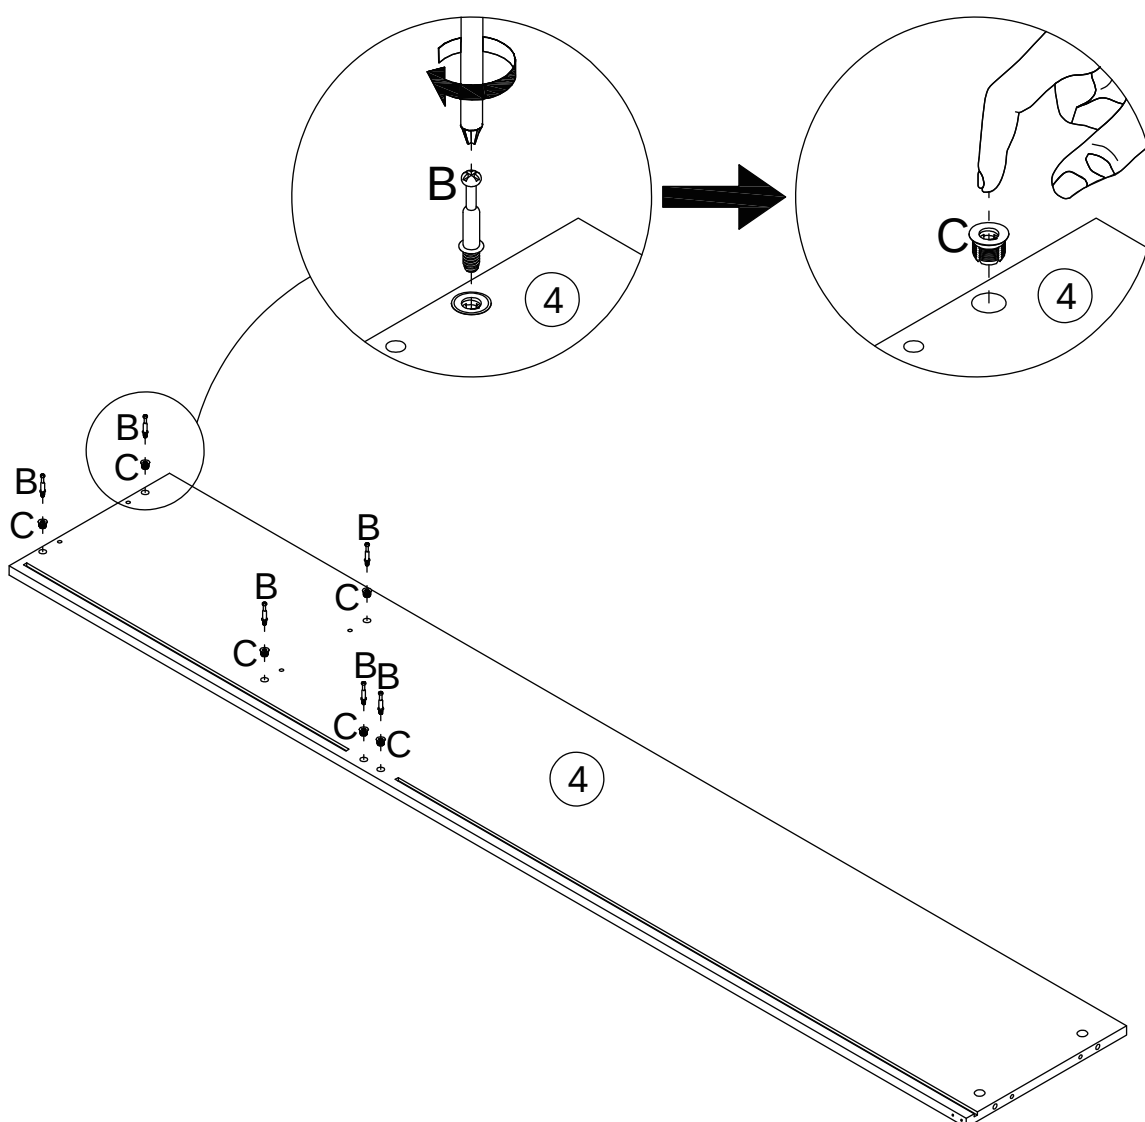

35

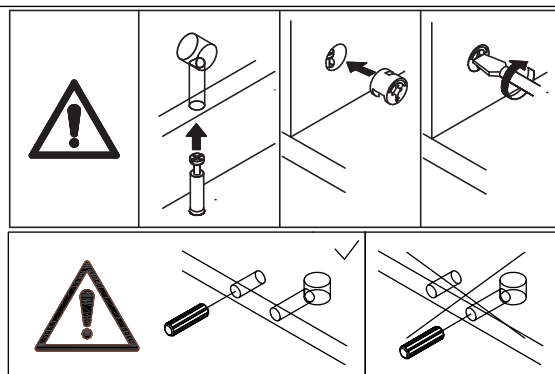 


 Insert wooden dowel (D) into panel 6 and 7.
Connect panel 6, 7, and 8 to panel 4, then tighten by turning cam lock (A) clockwise.



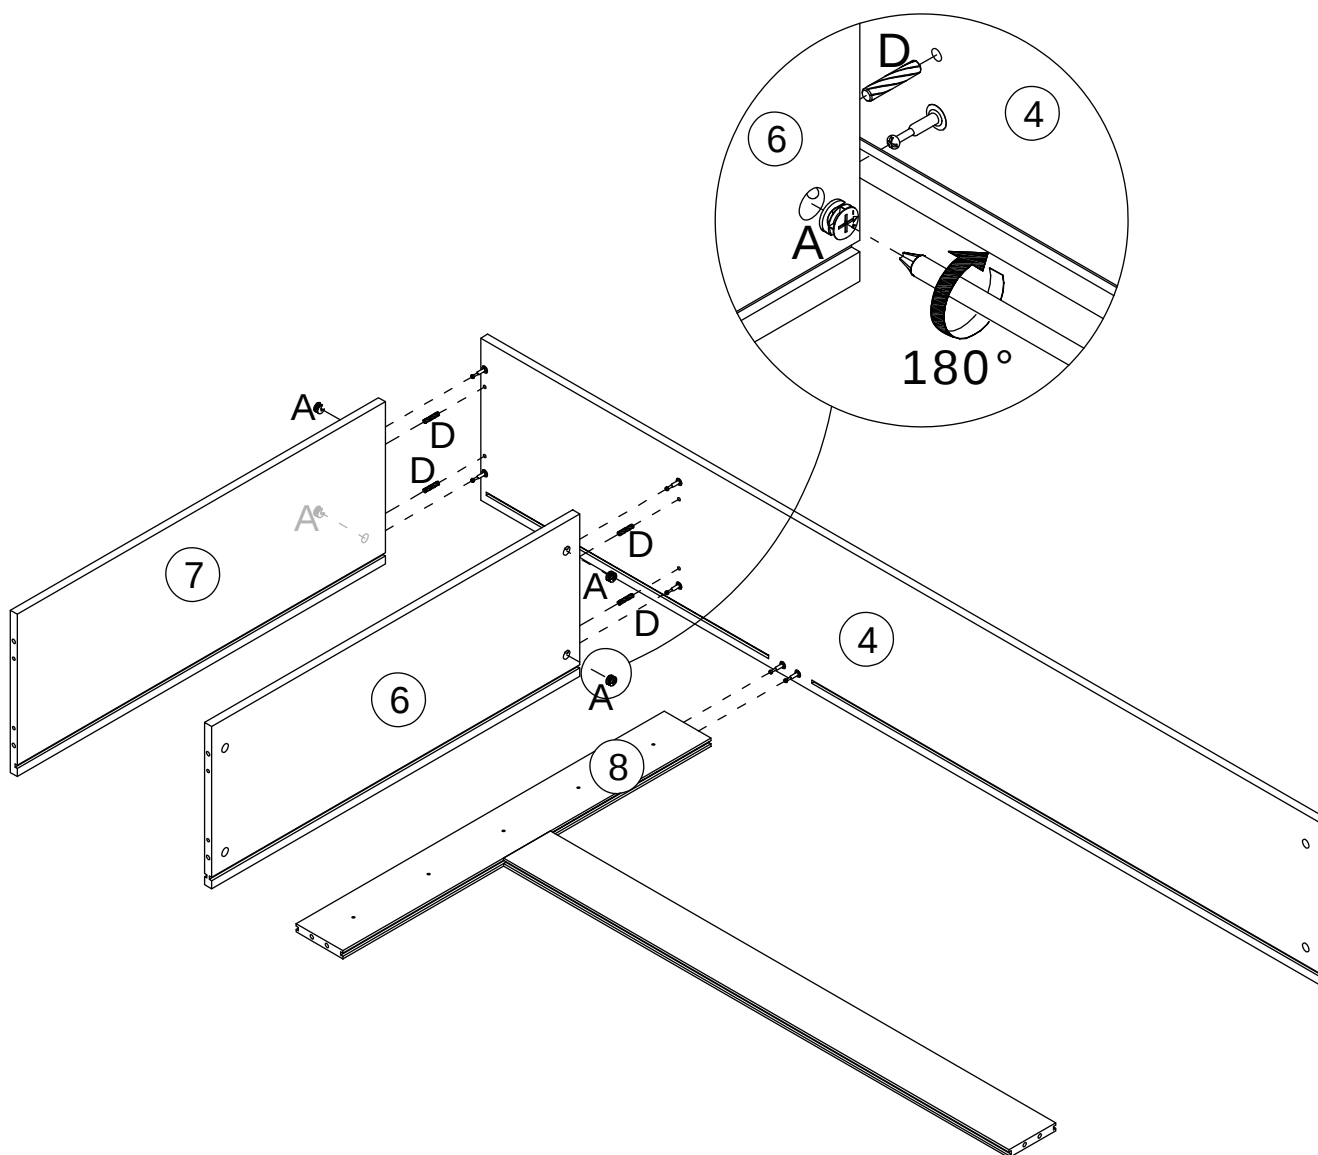


36

 Insert panel 14 into the available slots.




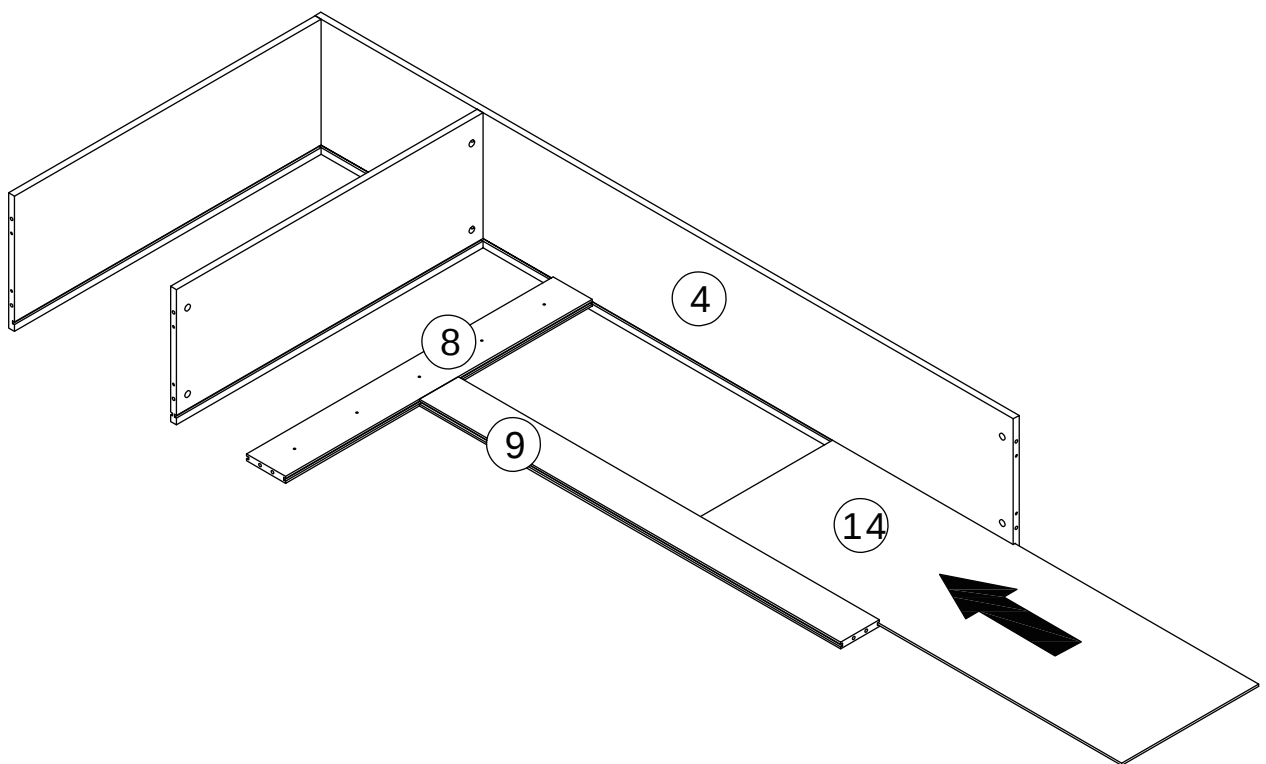


37

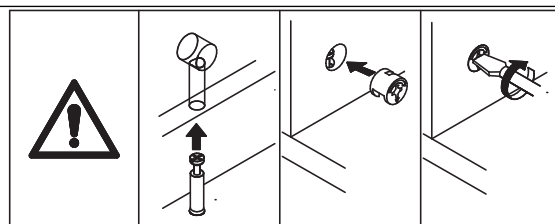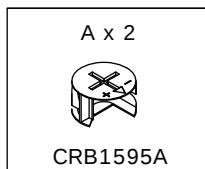   


Turn the cabinet upside down. Hold panel 8 with your hand to prevent it from breaking.

    
Insert the eccentric wheel (A) into panel 8 and tighten it by turning clockwise.

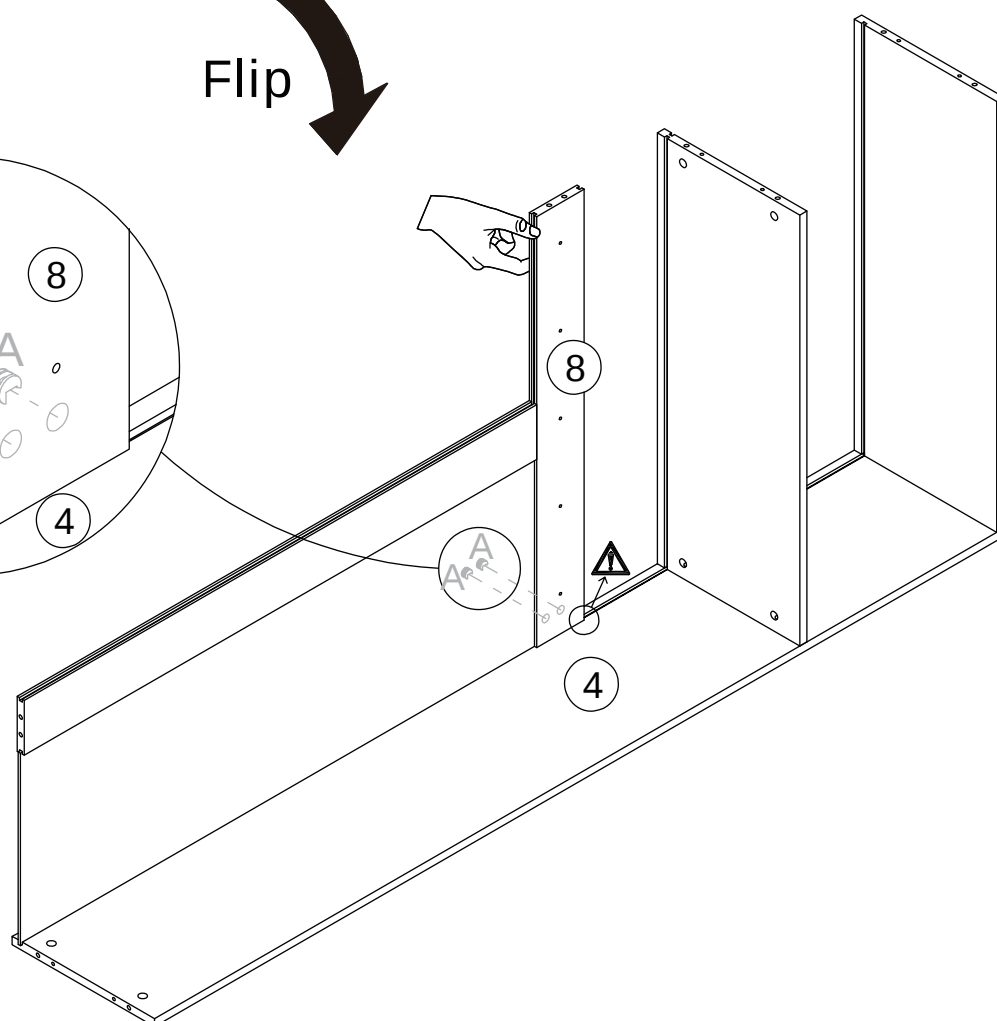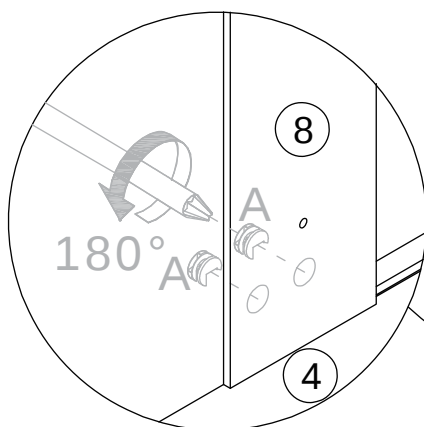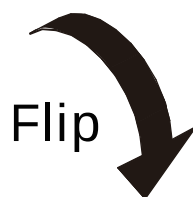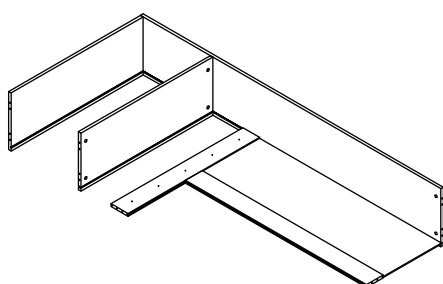

38

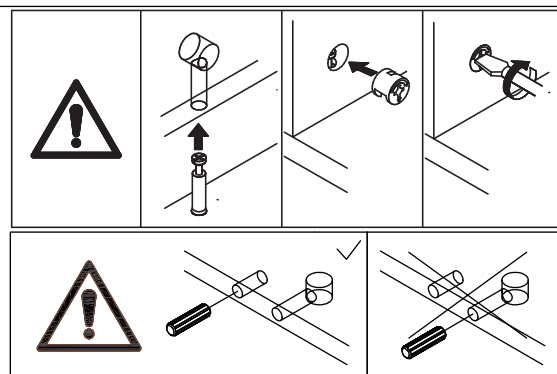 


 Insert wooden dowel (D) into panel 4.
Connect panel 29 to panel 4 and 9, then tighten by turning cam lock (A) clockwise.

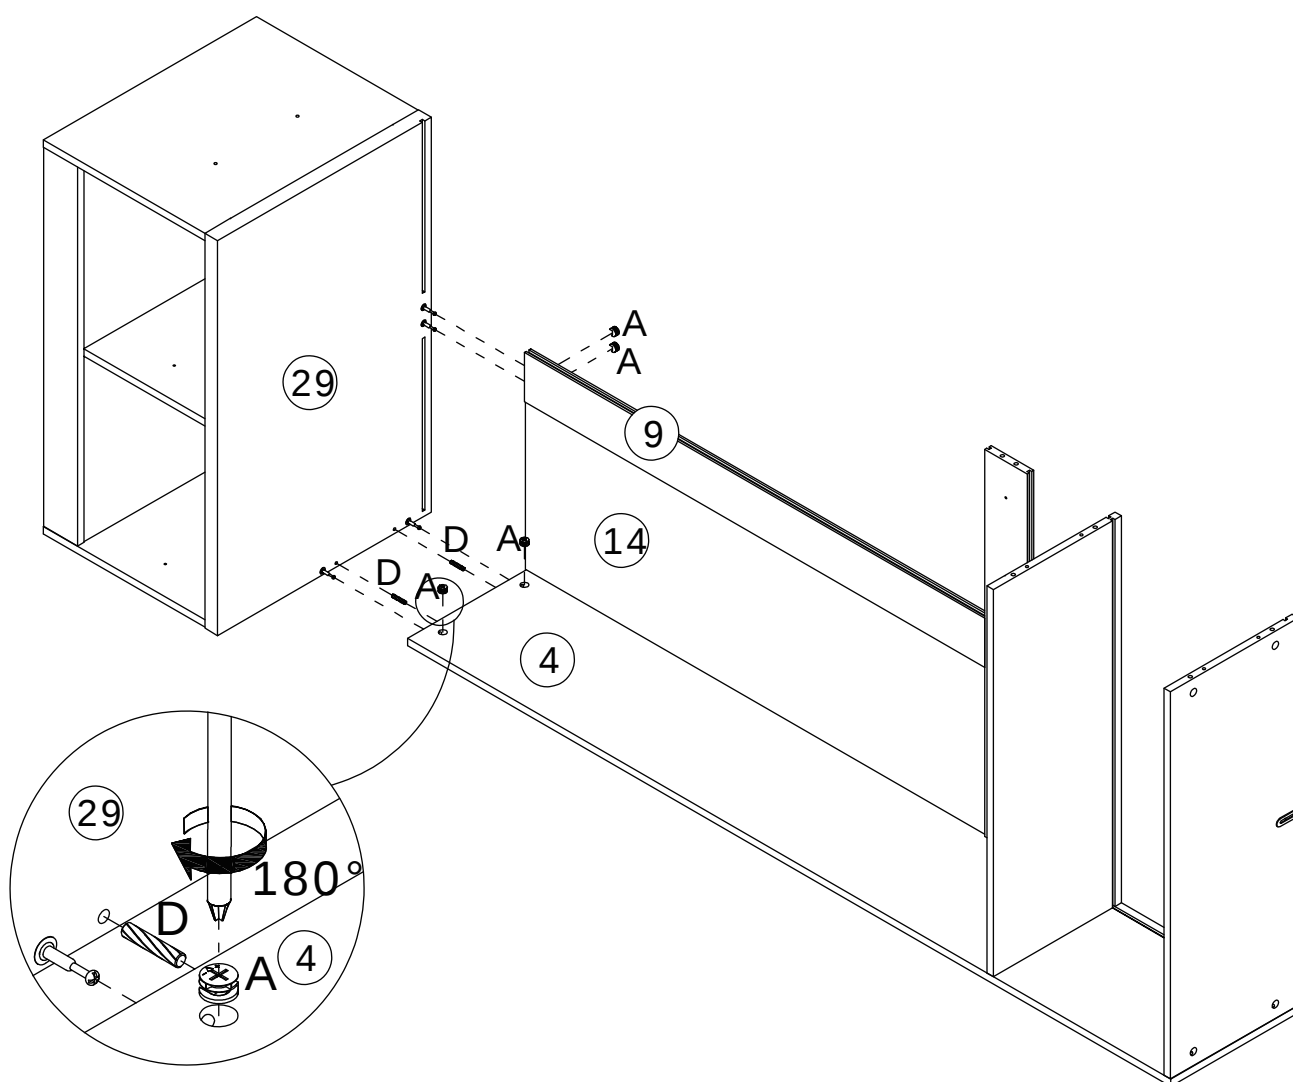

39

 
Insert panel 12, 13, and 14 into the available slots.

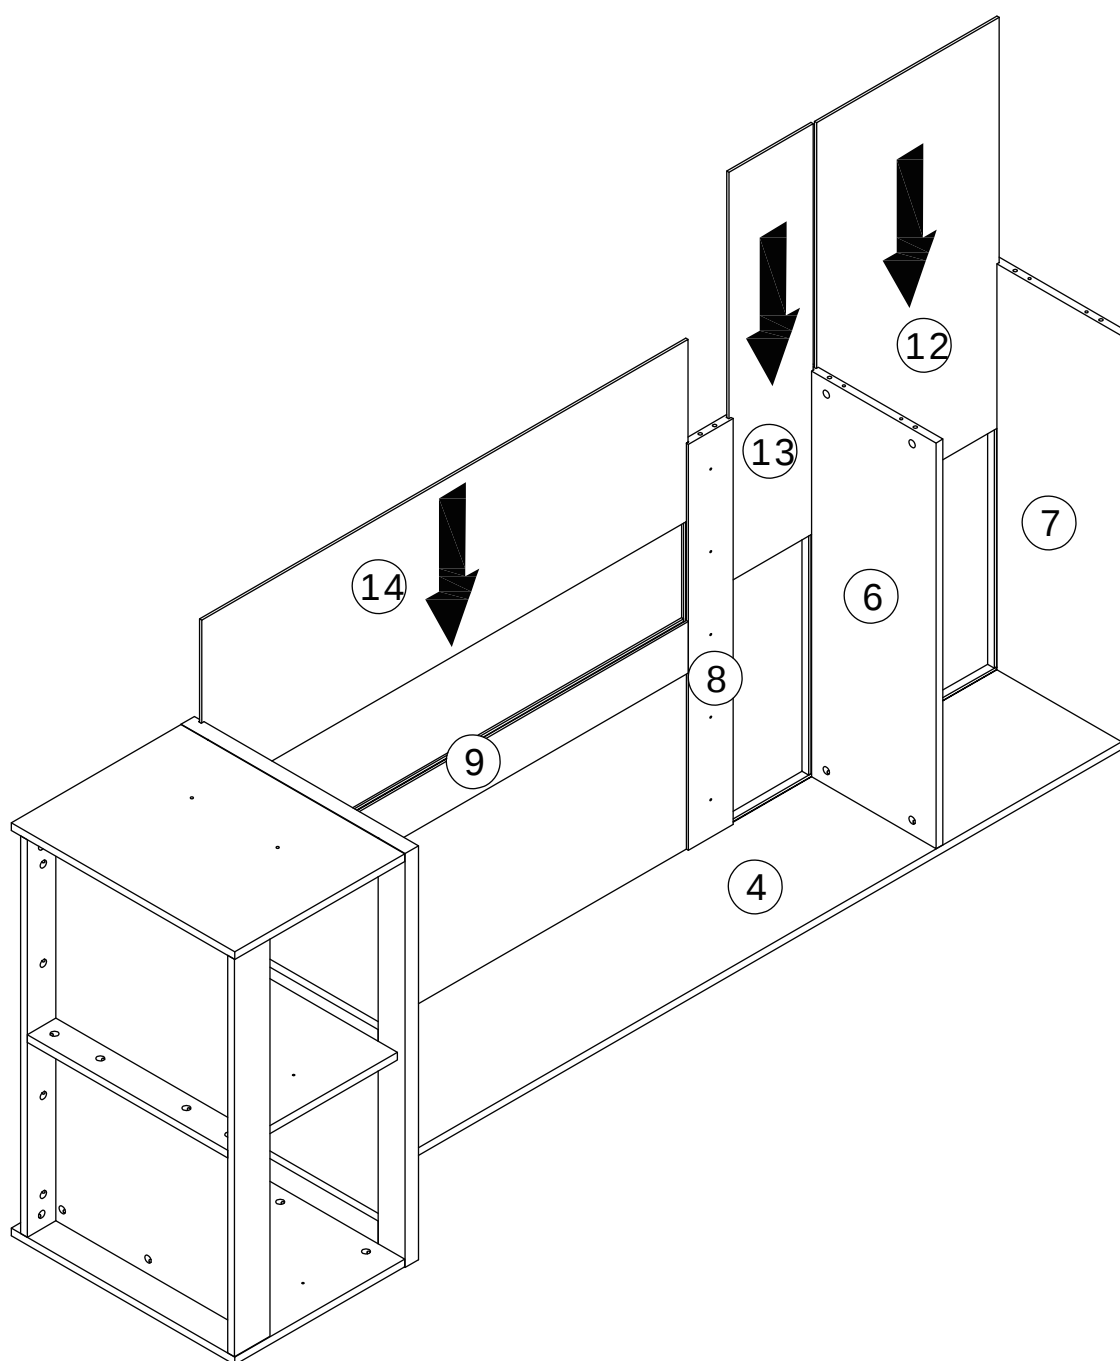


40




 Secure knob (L) to panel 8 using screw (P).

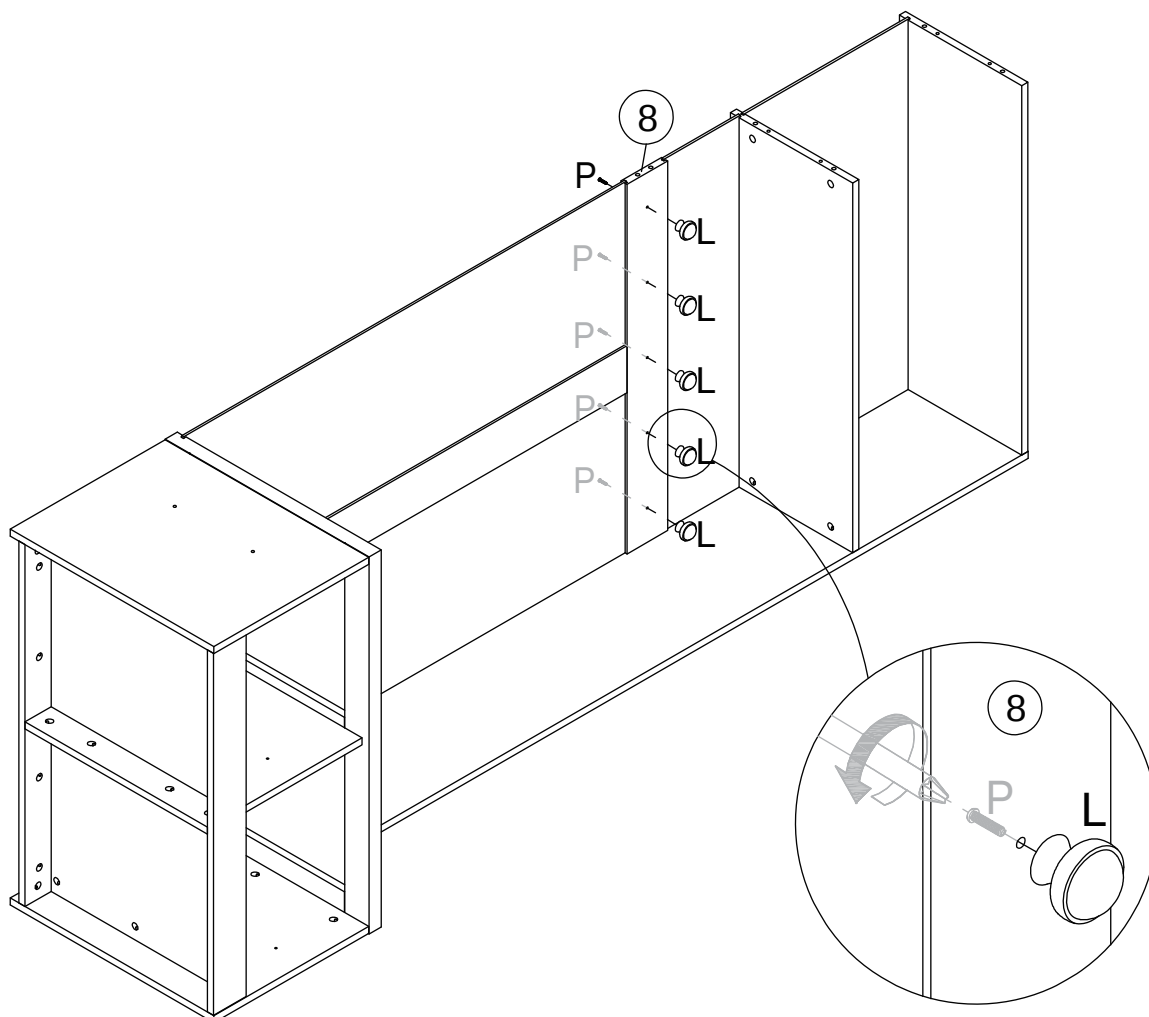


41

 A x 6  CRB1595A	D x 4  CRF0630A	Y x 2  CRF0620A	
--	--	--	---

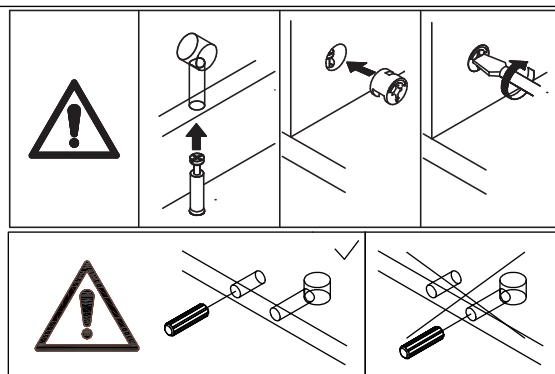 


Insert wooden dowel (D) into panel 6 and 7, and wooden dowel (Y) into panel 30.

 
Connect panel 3 to panel 6, 7, and 8, then tighten by turning cam lock (A) clockwise.

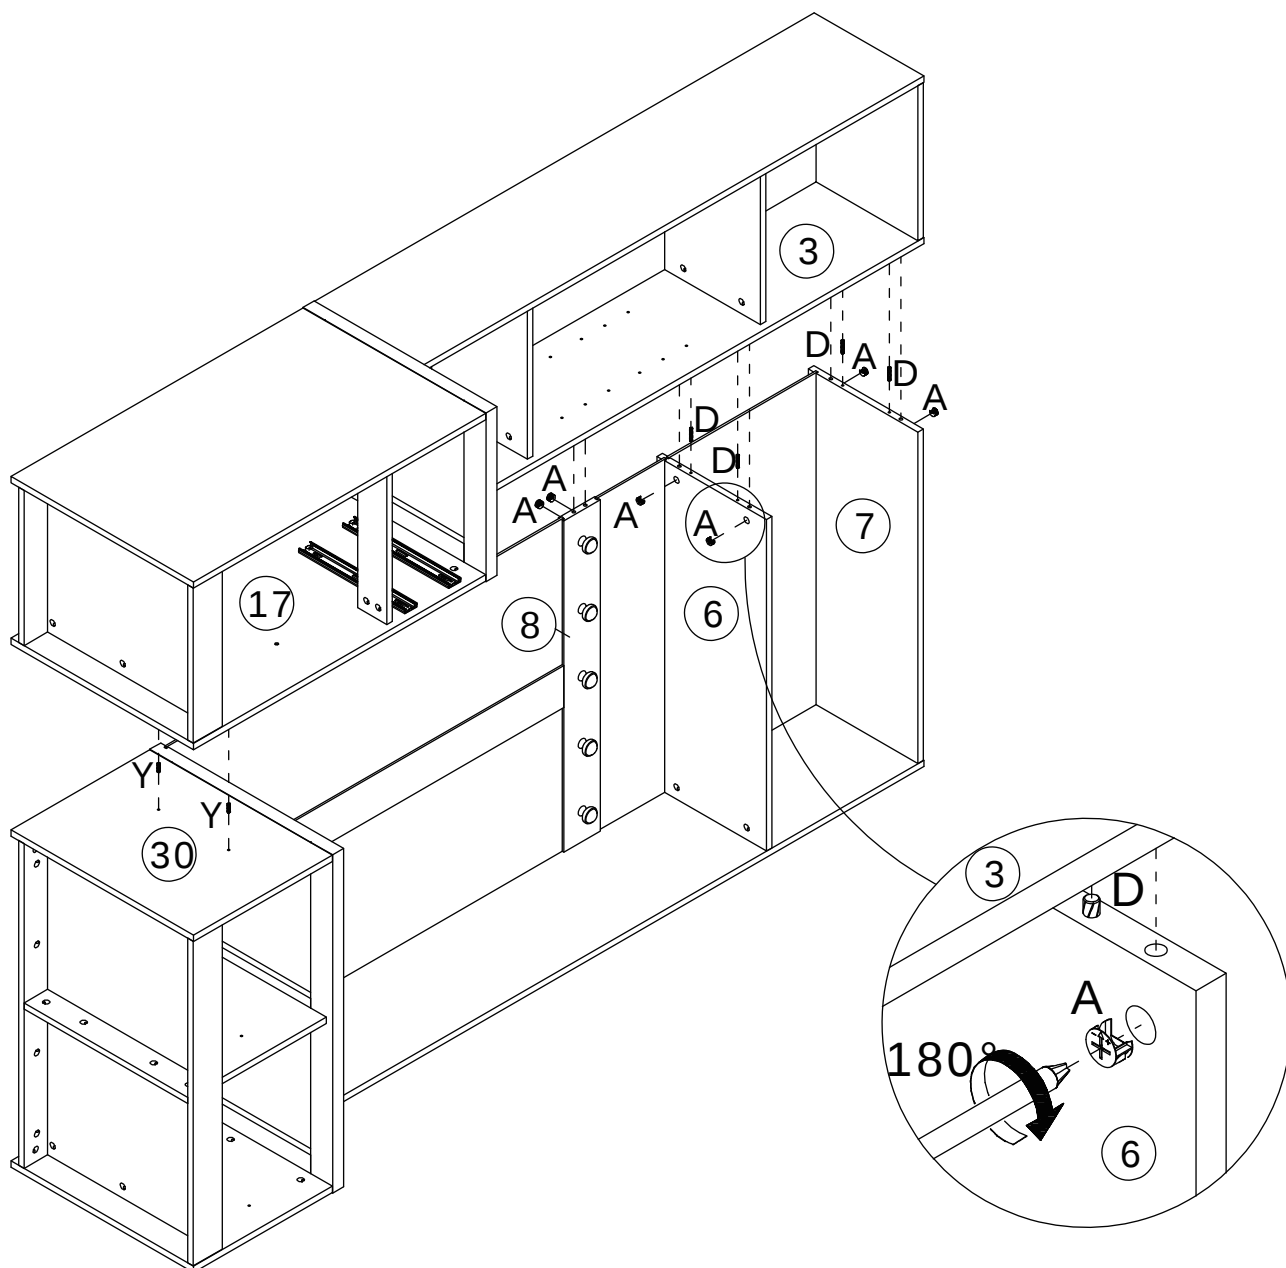


42

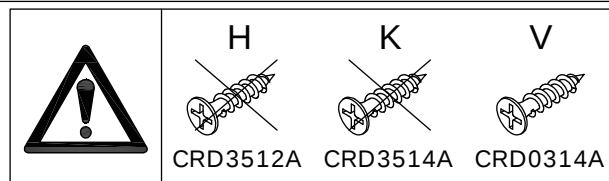 

 
Secure part (X) to panel 4, 17, 29, 30, and 32 using screw (V).

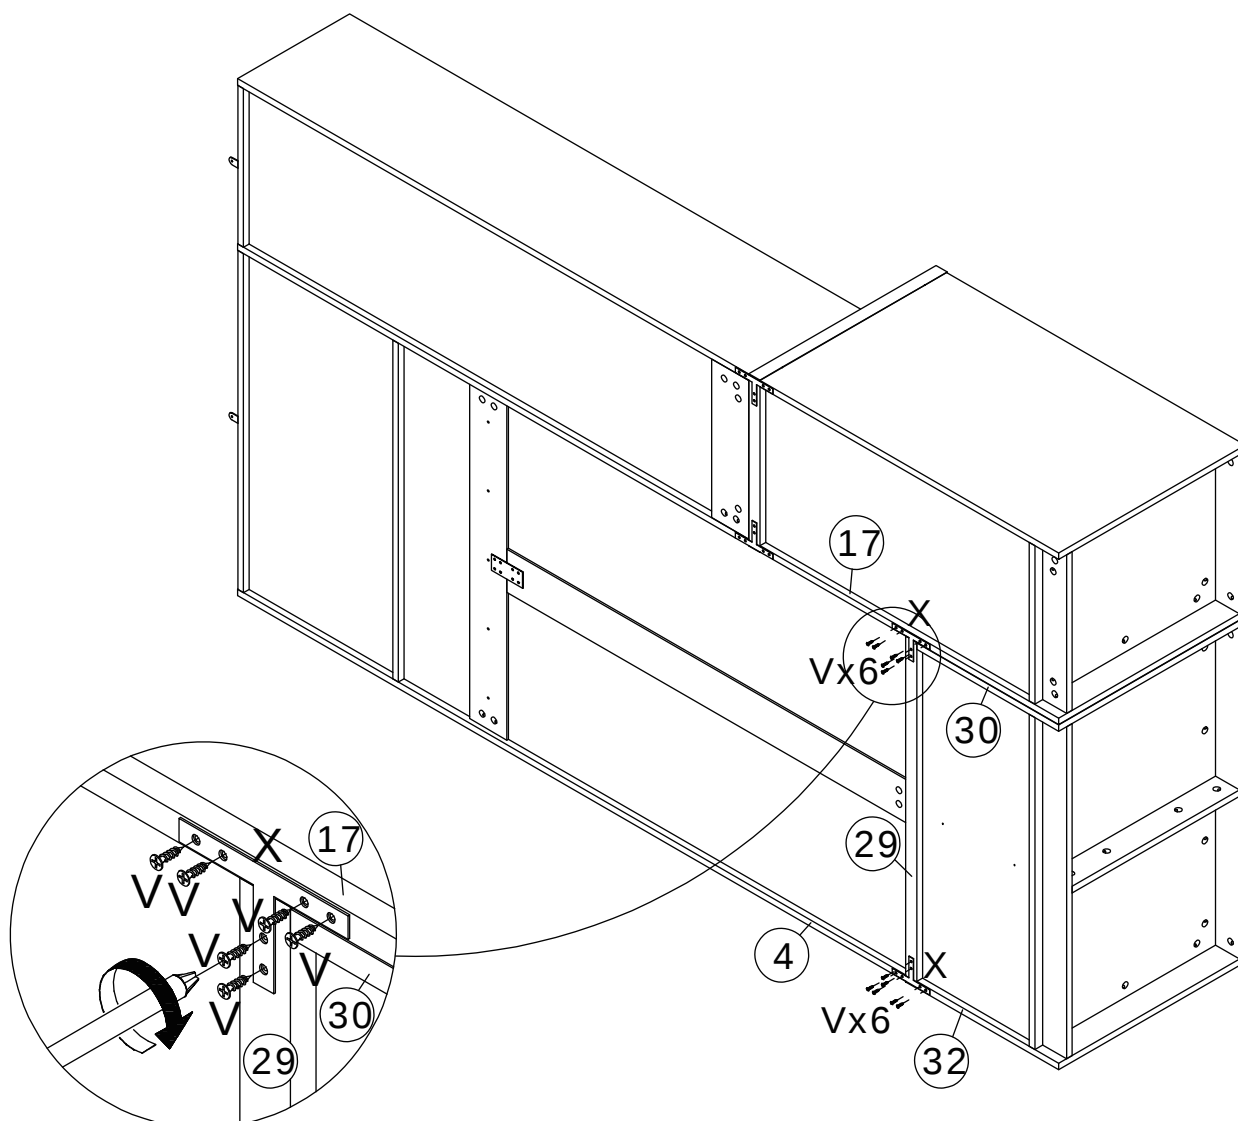


43

 


Secure panel 17 and 30 using screw (W).

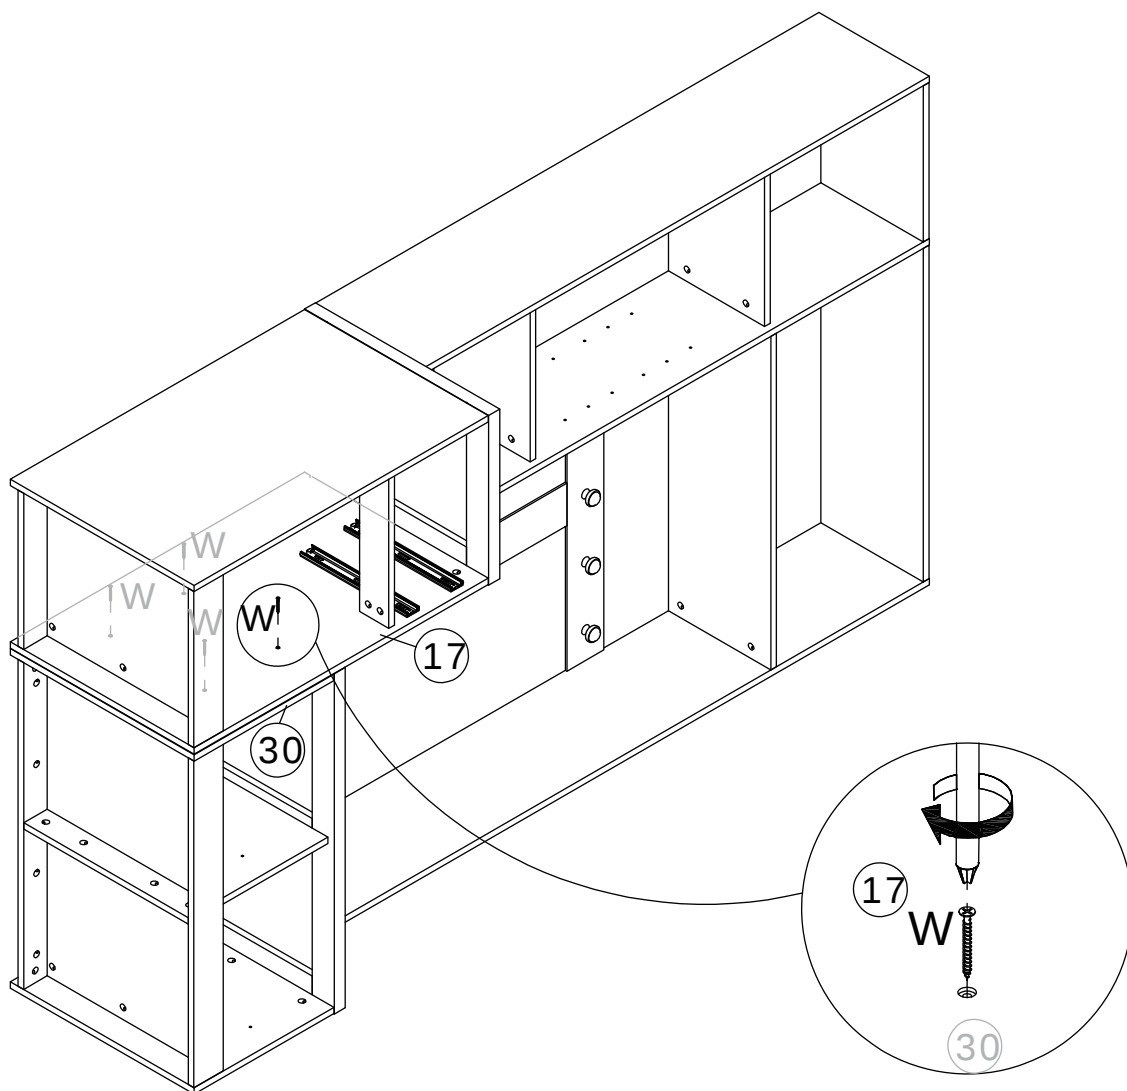 

44

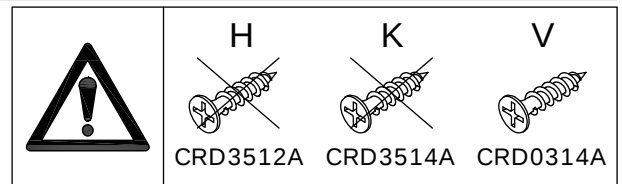 


 First, insert clip (U) into the available slots, then secure them with screw (V).

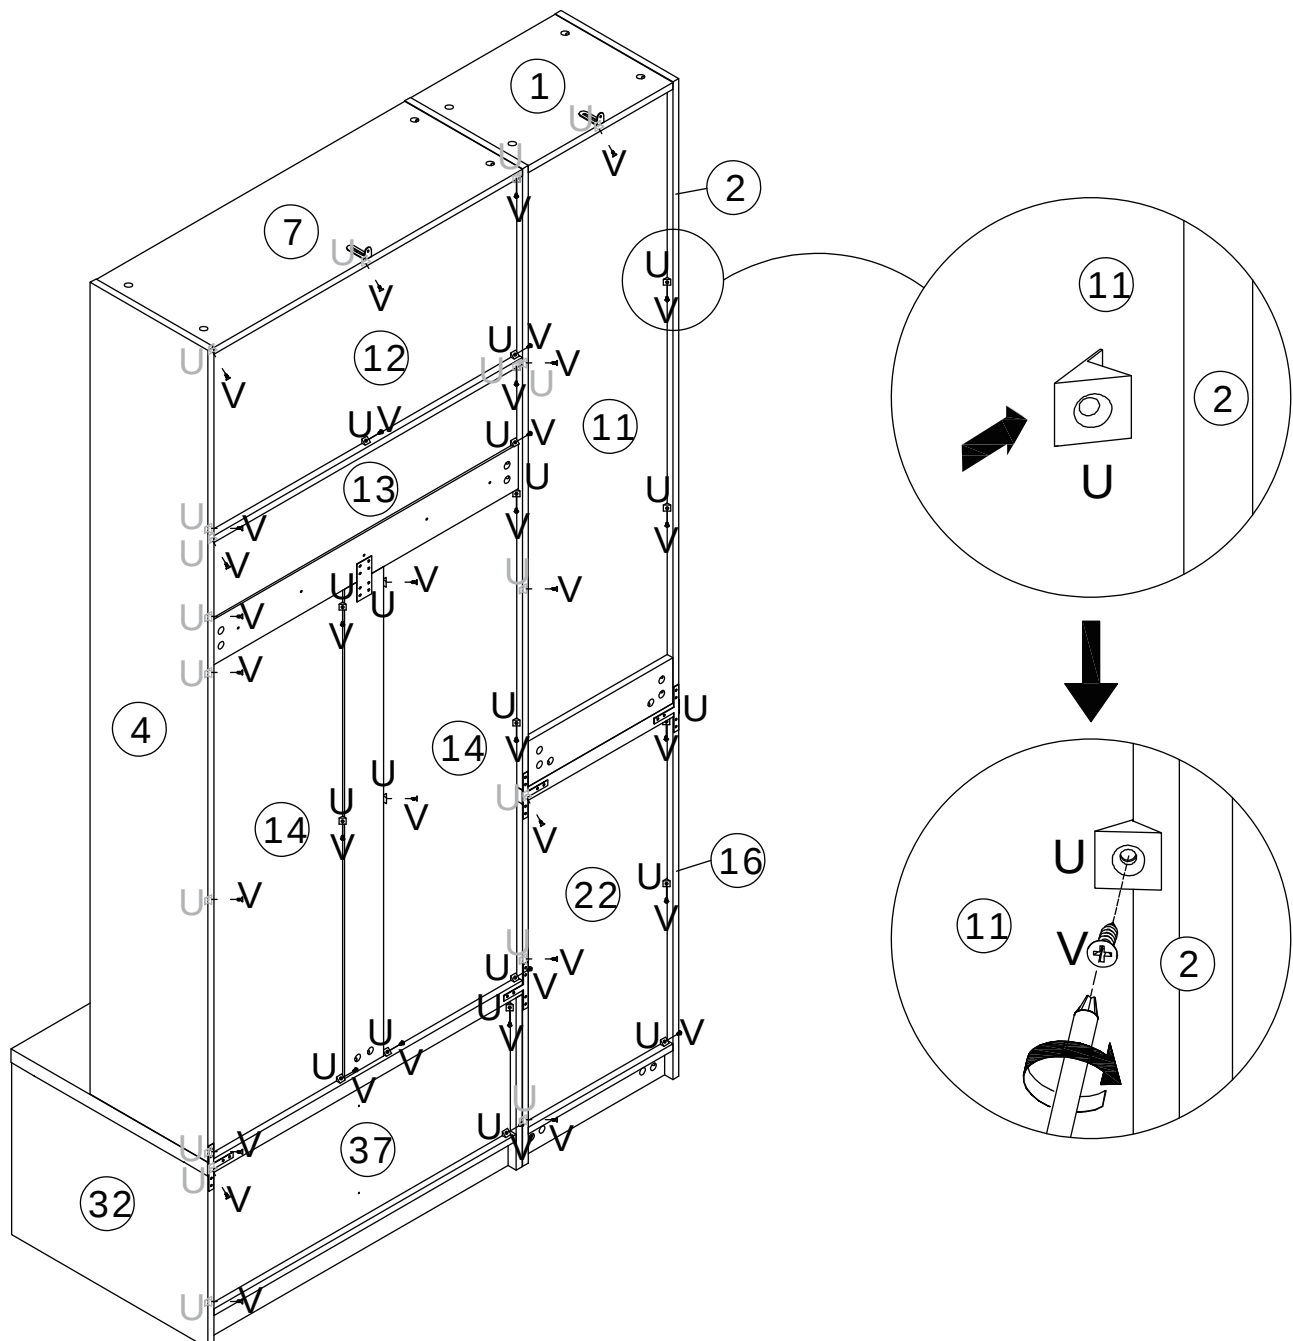

45




 
S x 2



T x 2




    CRD3535A

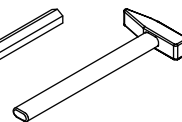


Install the anti-tip device.

 
wall

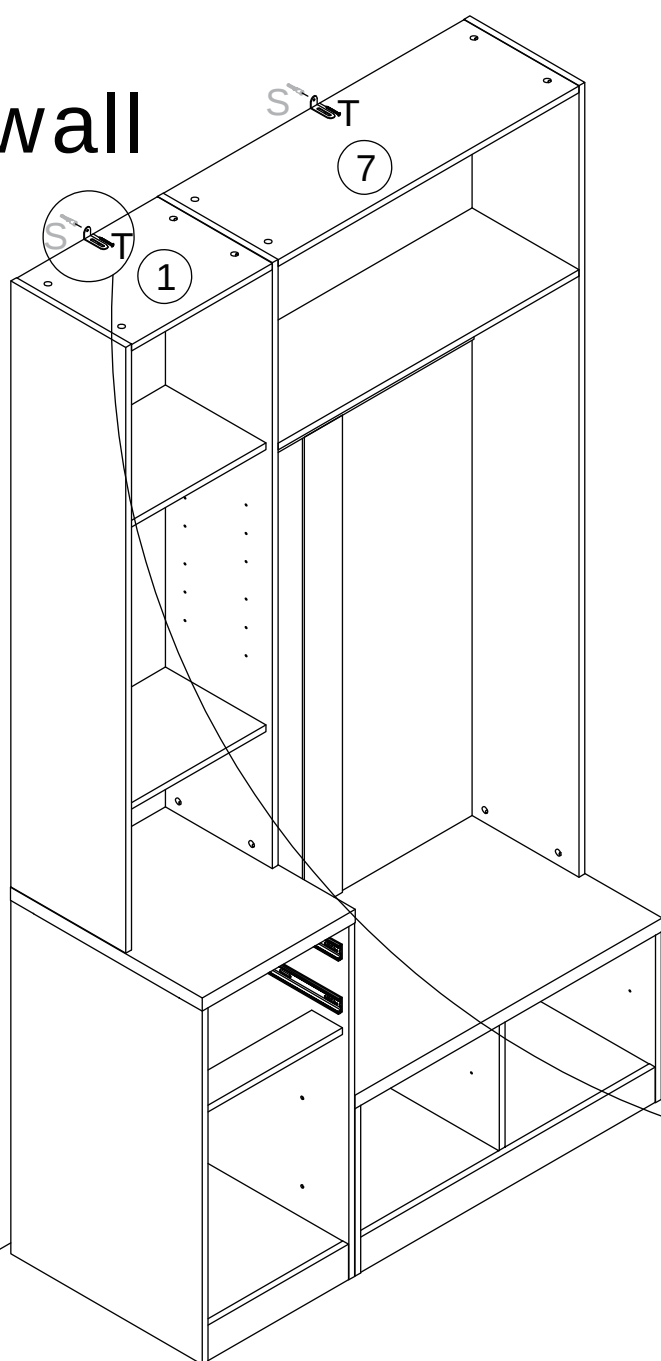

 
1.

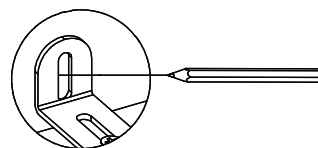


 
2.

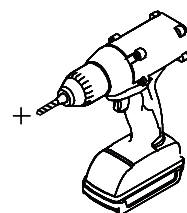


 
3.

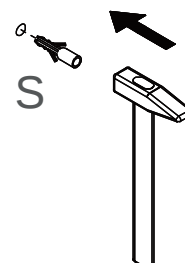


 
 
4.

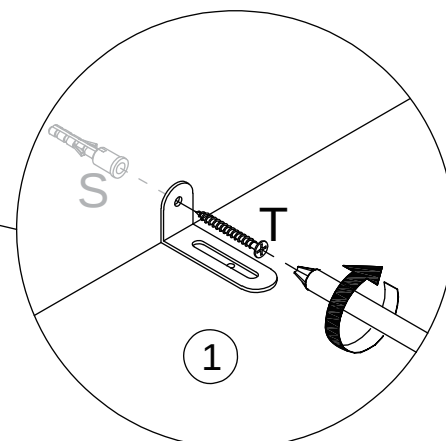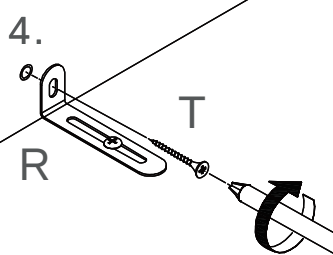


46

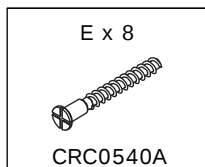  

   
Secure panel 24 and 25 to panel 26 using screw (E), then slide panel 27 into the available slots.

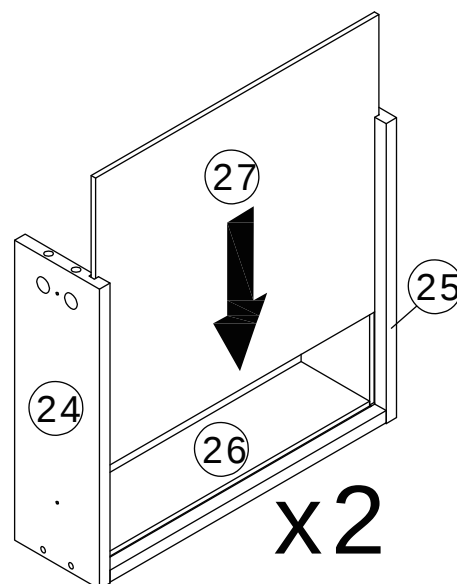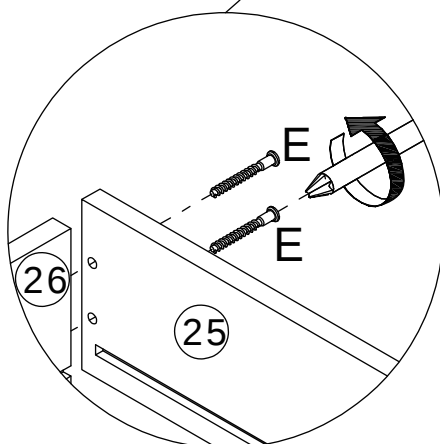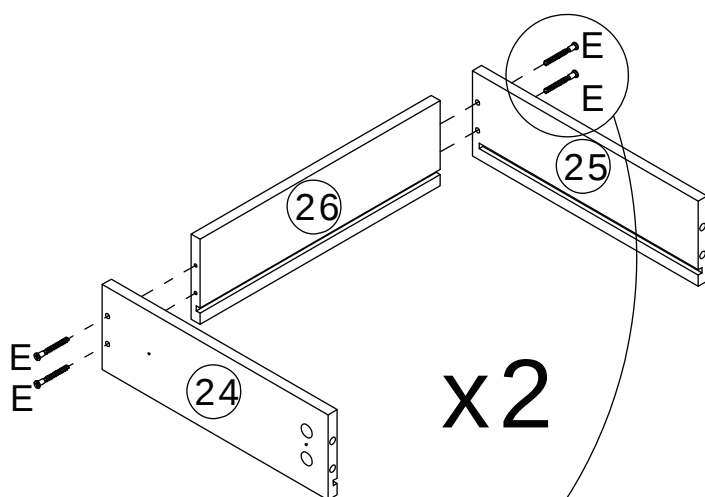

47


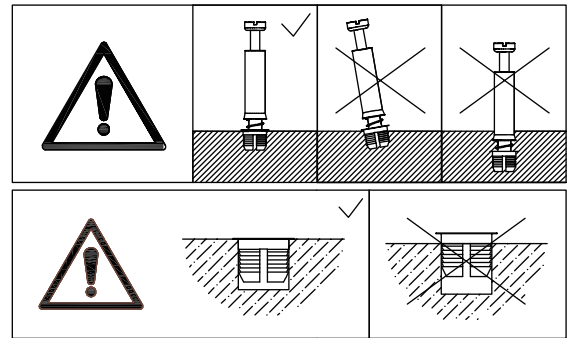 


 First, install plug (C) onto panel 23, then screw self-tapping rod (B) into panel 23.

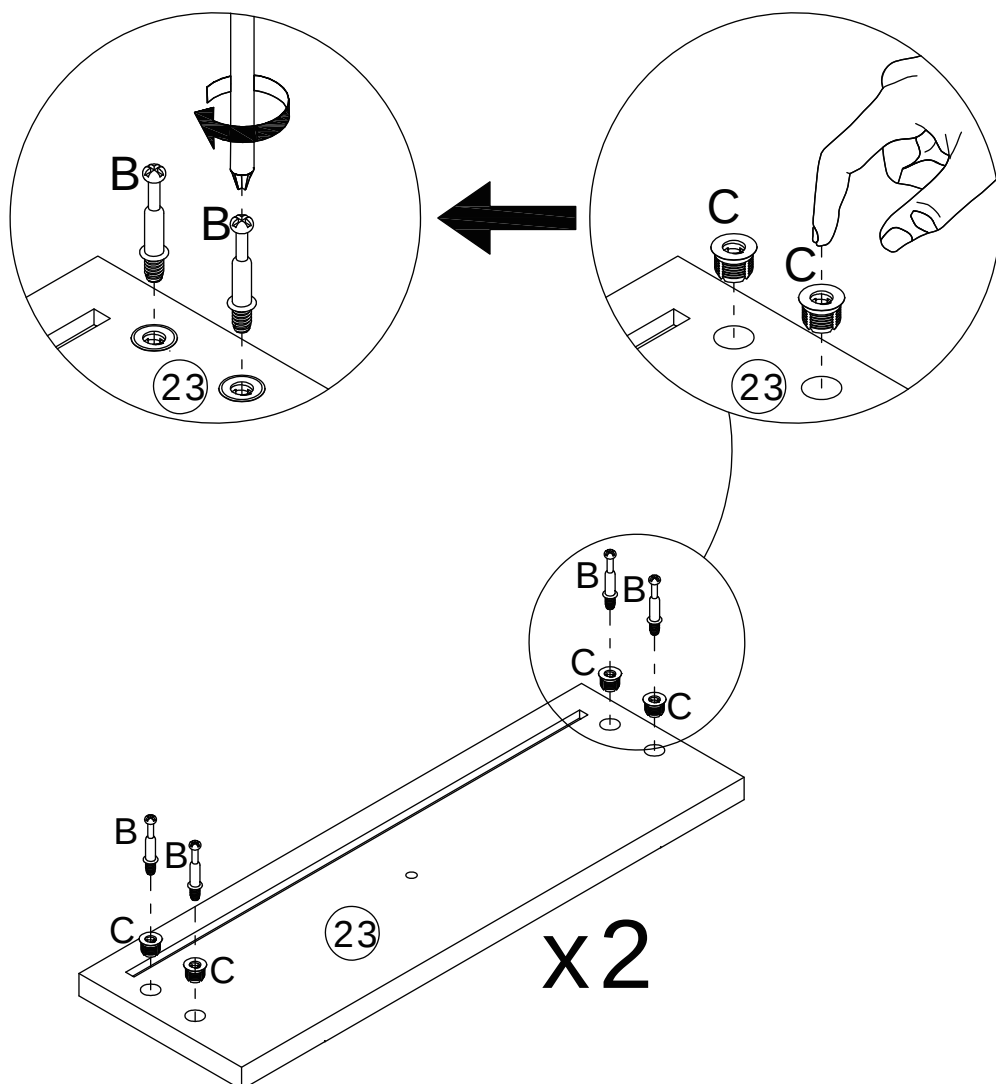


48


 
 
A x 8
CRB1595A

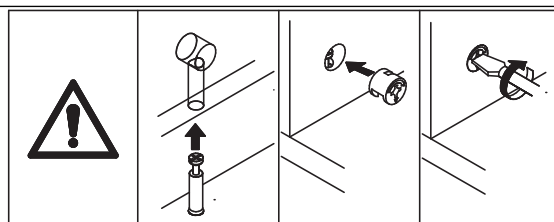

 
Connect panel 23 to panel 24 and 25, then tighten by turning cam lock (A) clockwise.

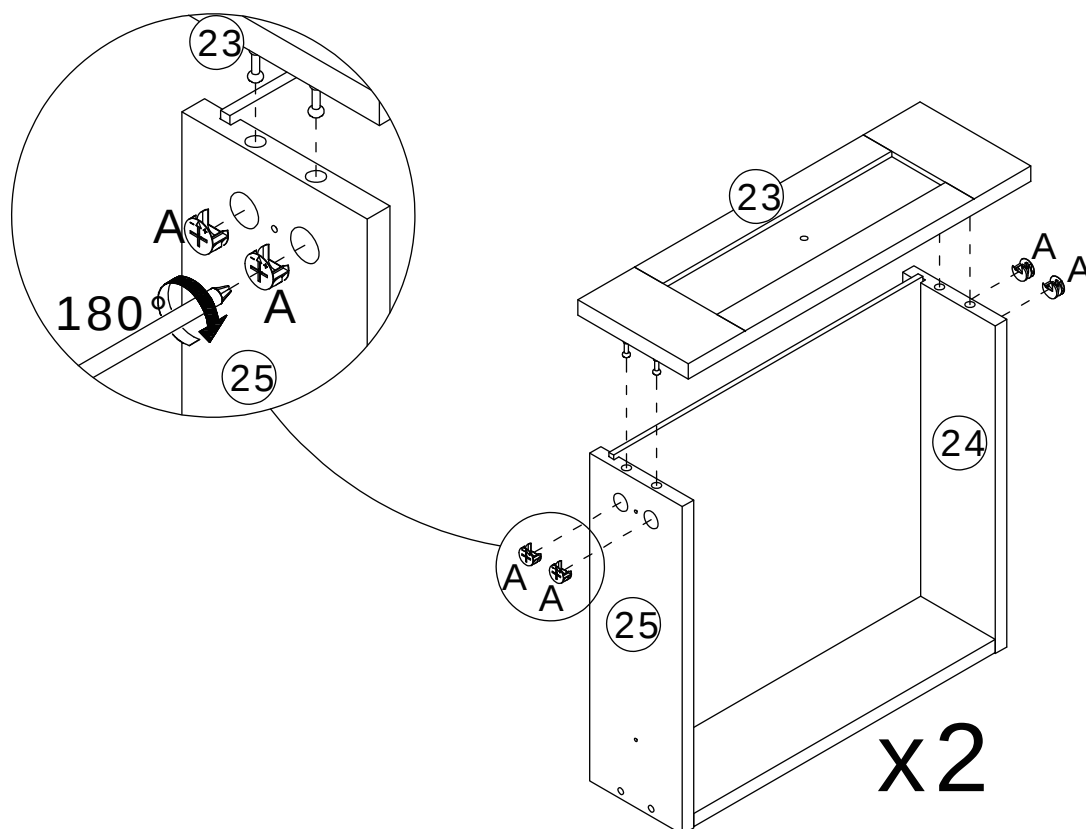

49

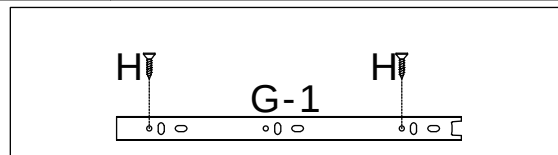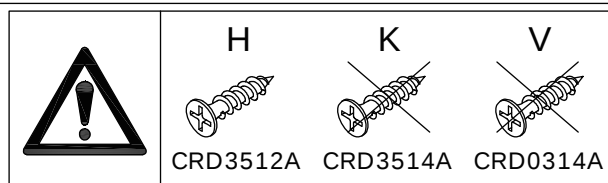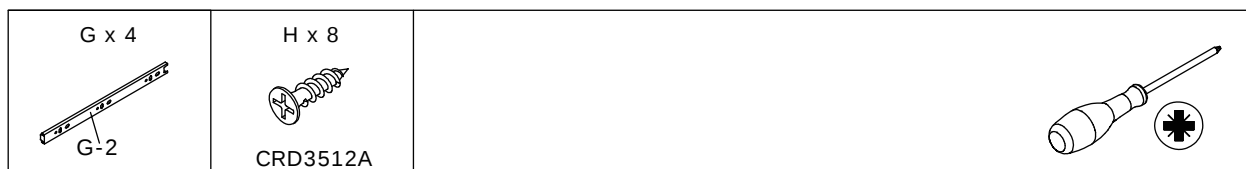   

 
Secure slide rail (G-2) to panel 24 and 25 using screw (H).

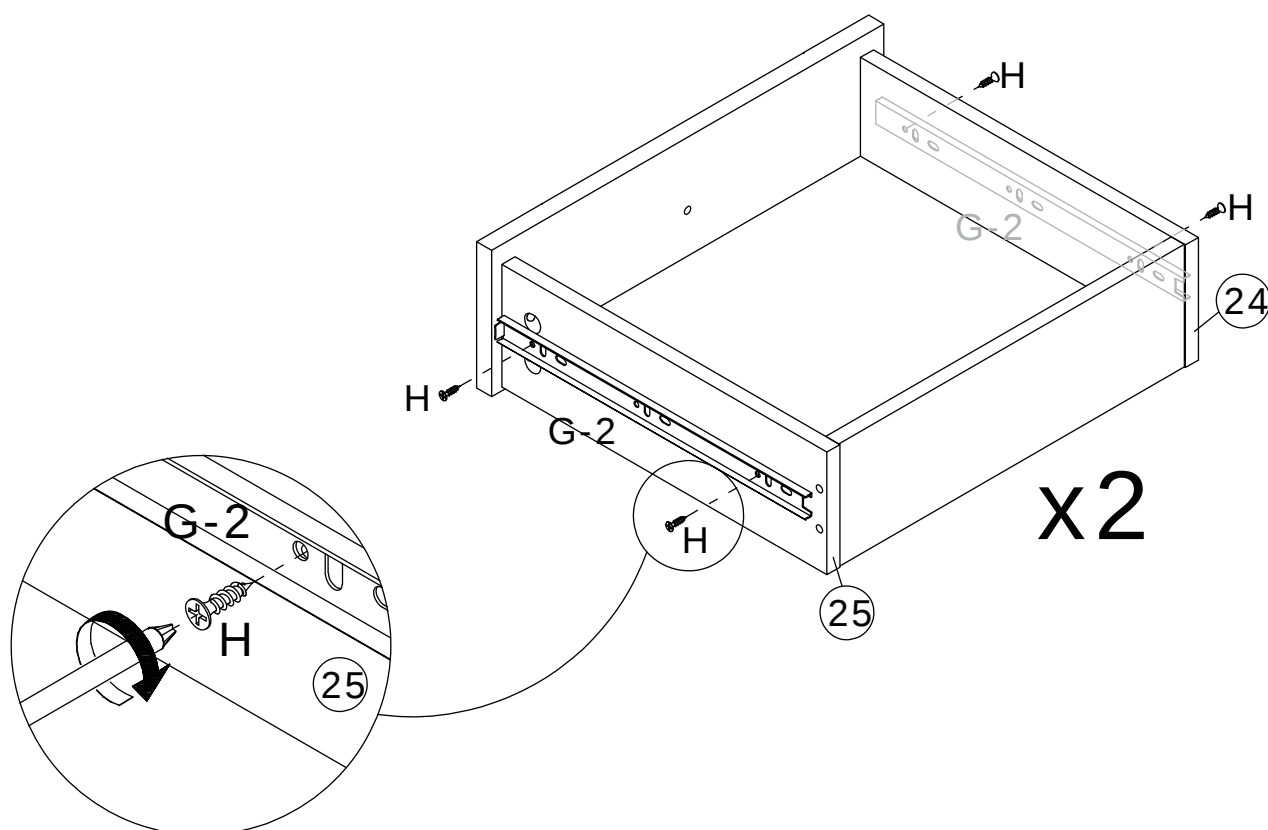

50





 Secure knob (L) to panel 23 using screw (N).

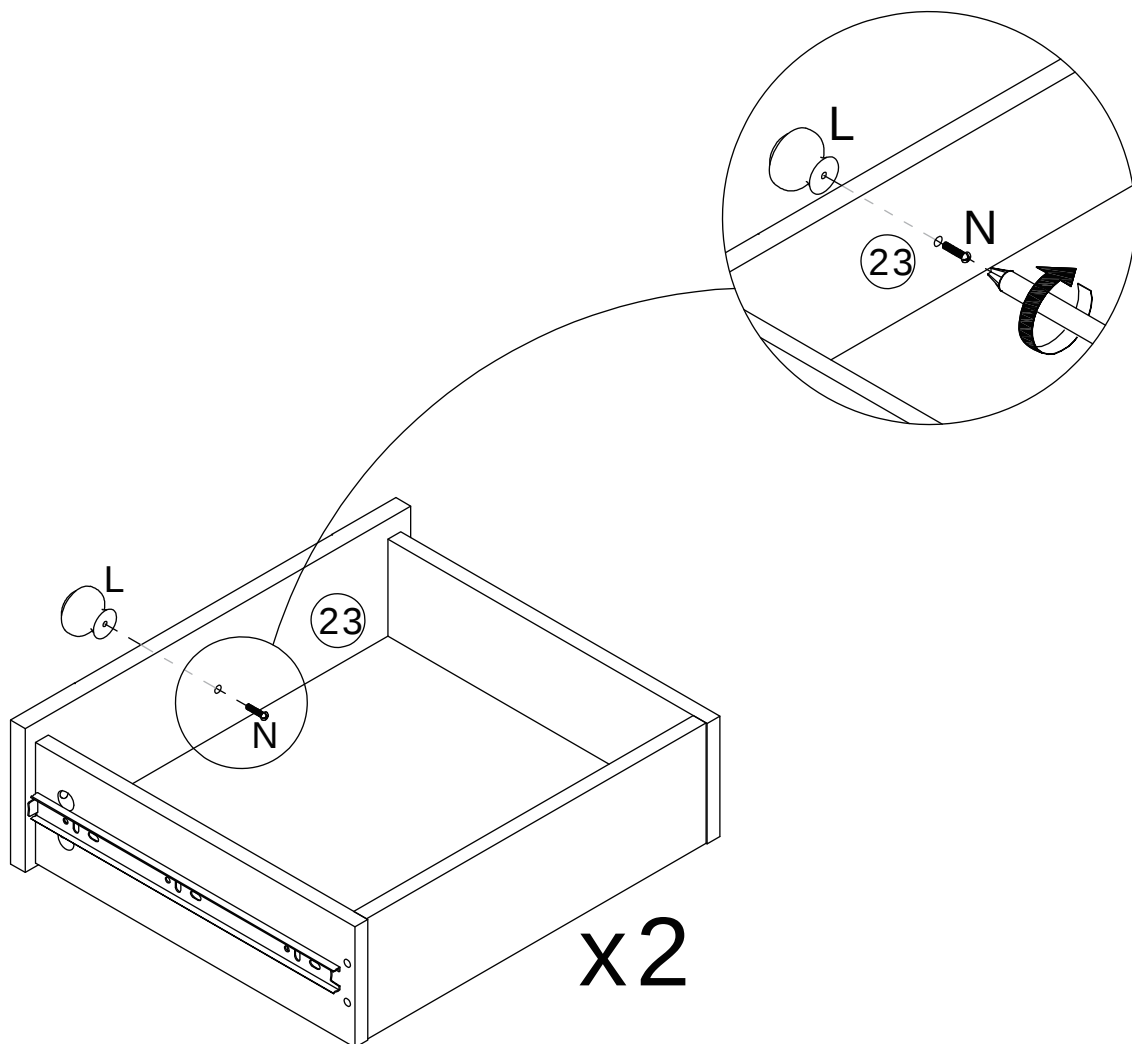

51

  Install the drawers as shown.

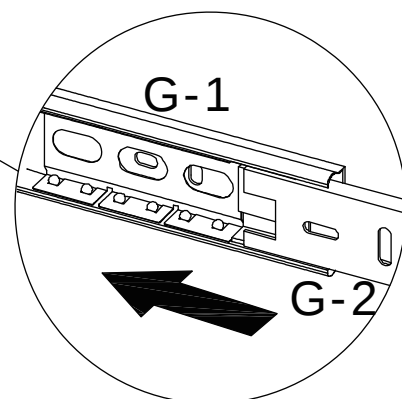
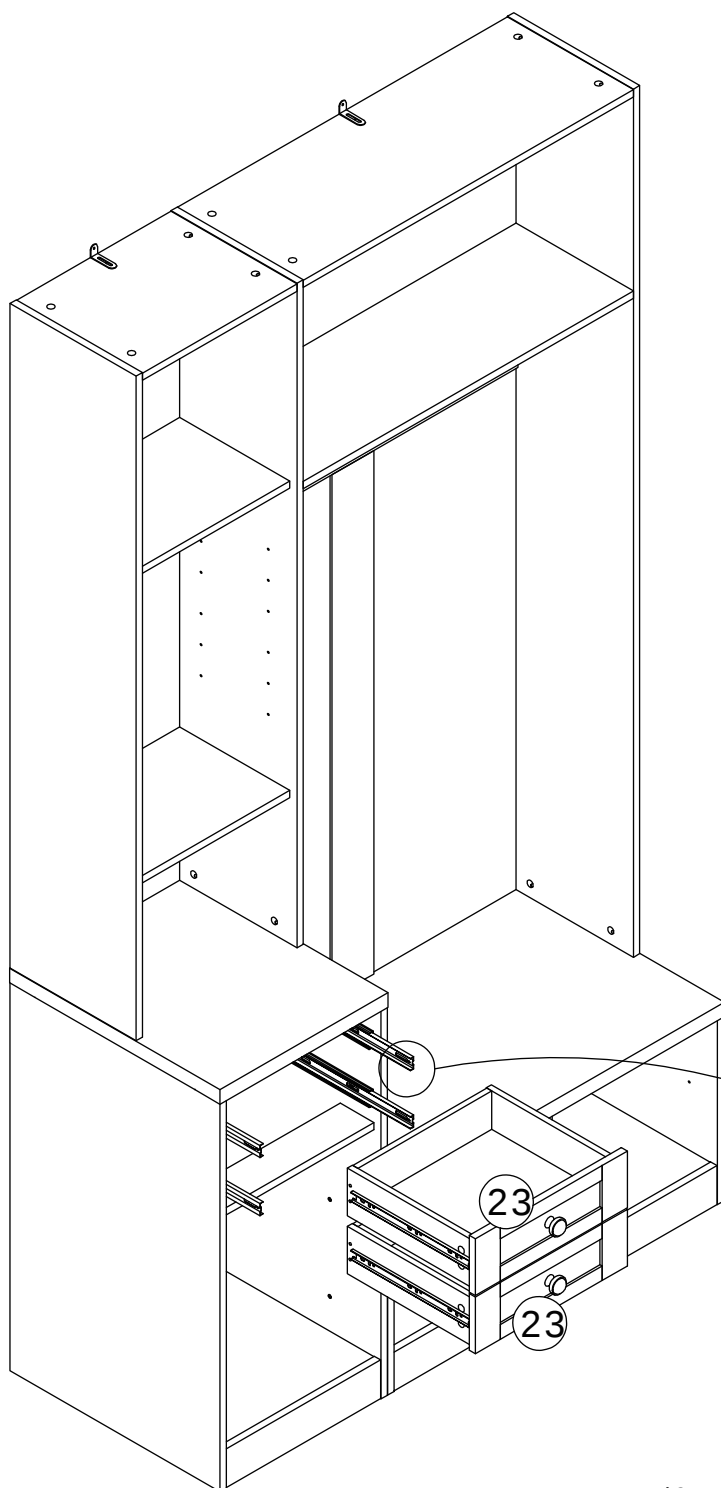


52


F x 16



  
Insert pin (F) into panel 2, 3, 30, 31, and 32.

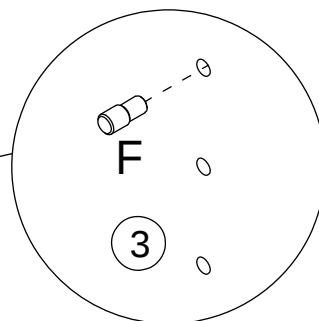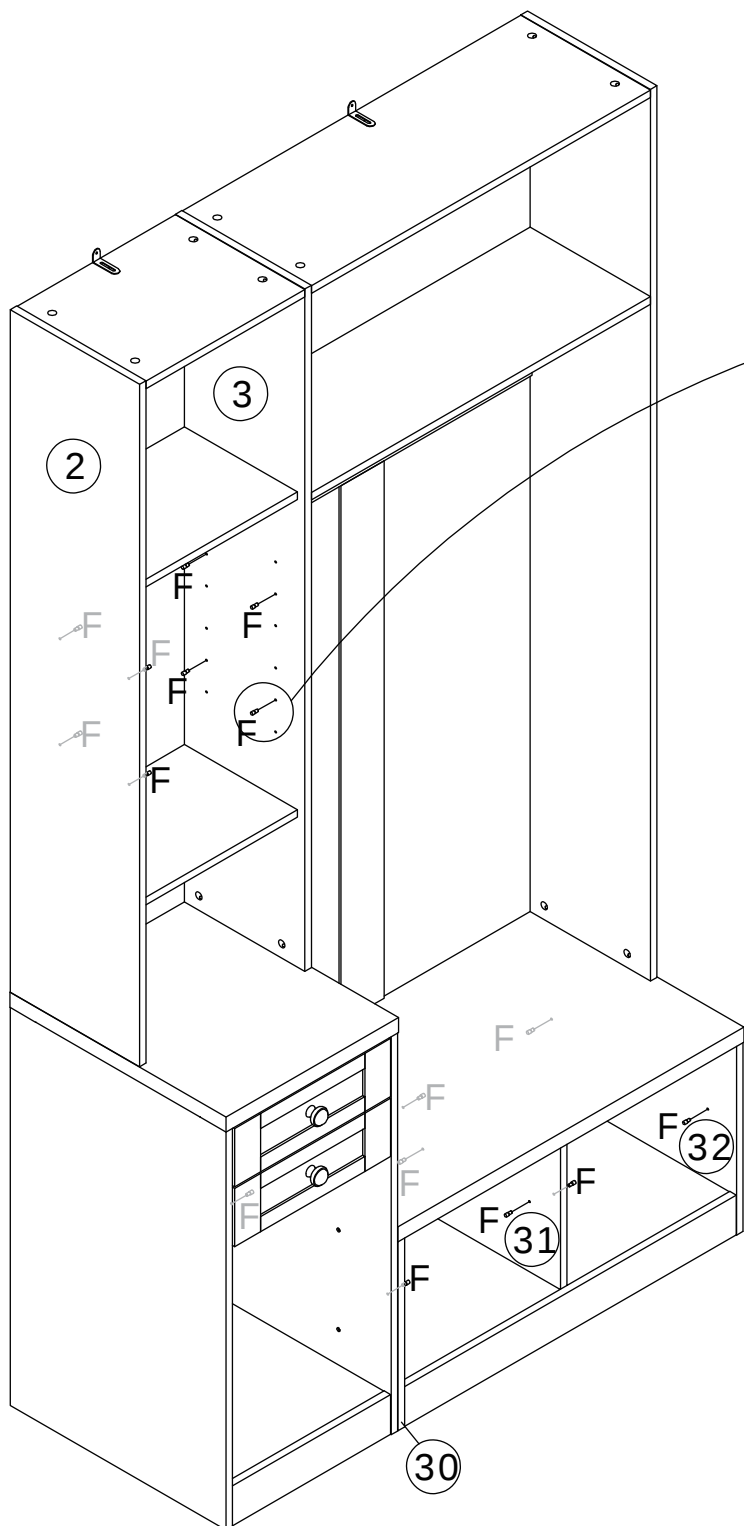

OR

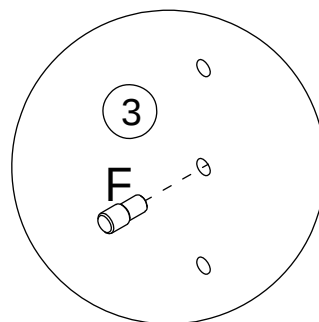 


OR

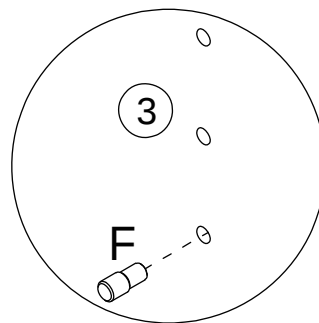 





53

 Place panel 38 and 40 on.

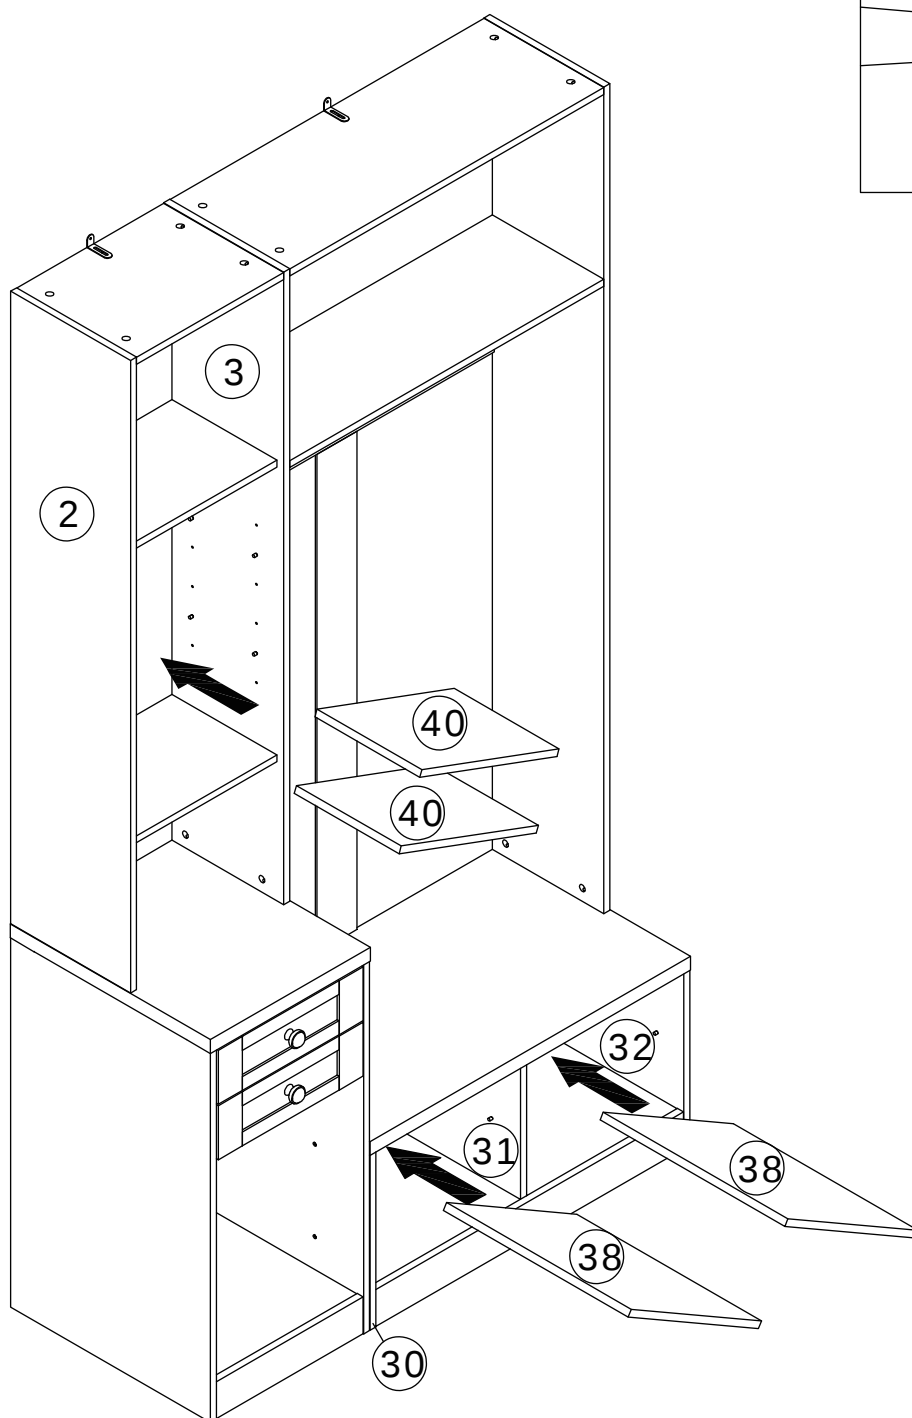


54



 
J x 4  DGA861C	K x 8  CRD3514A	
---	--	---

   	H  CRD3512A	K  CRD3514A	V  CRD0314A
--	--	--	--

 
Secure hinge (J) to panel 28 and 39 using screw (K).

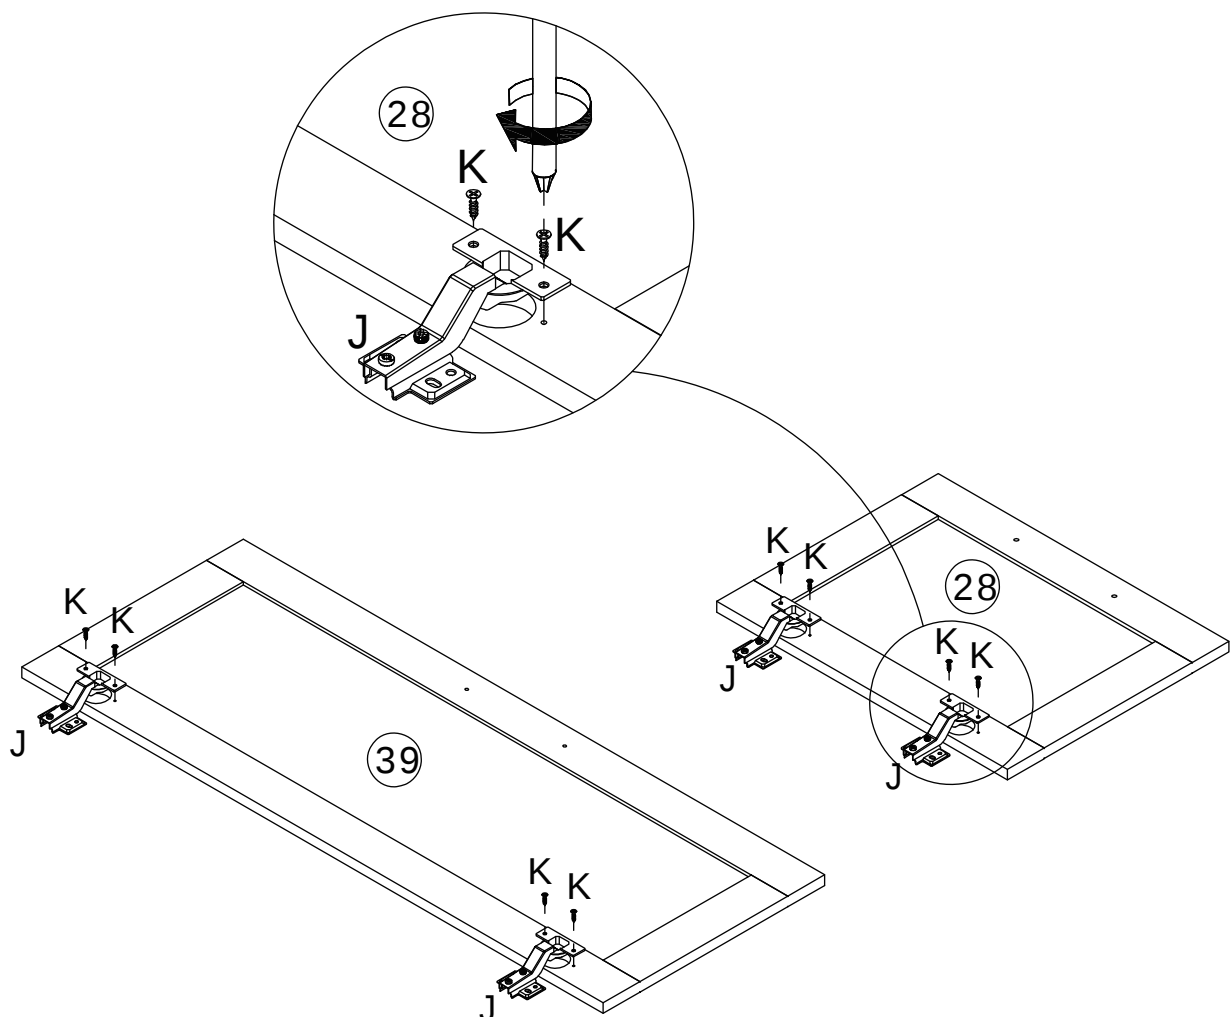

55

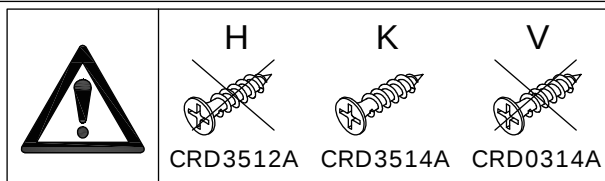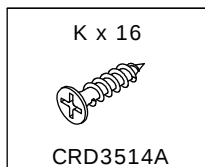   

 
Attach panel 39 and 28 to panel 2 and 16 via hinges using screw (K).

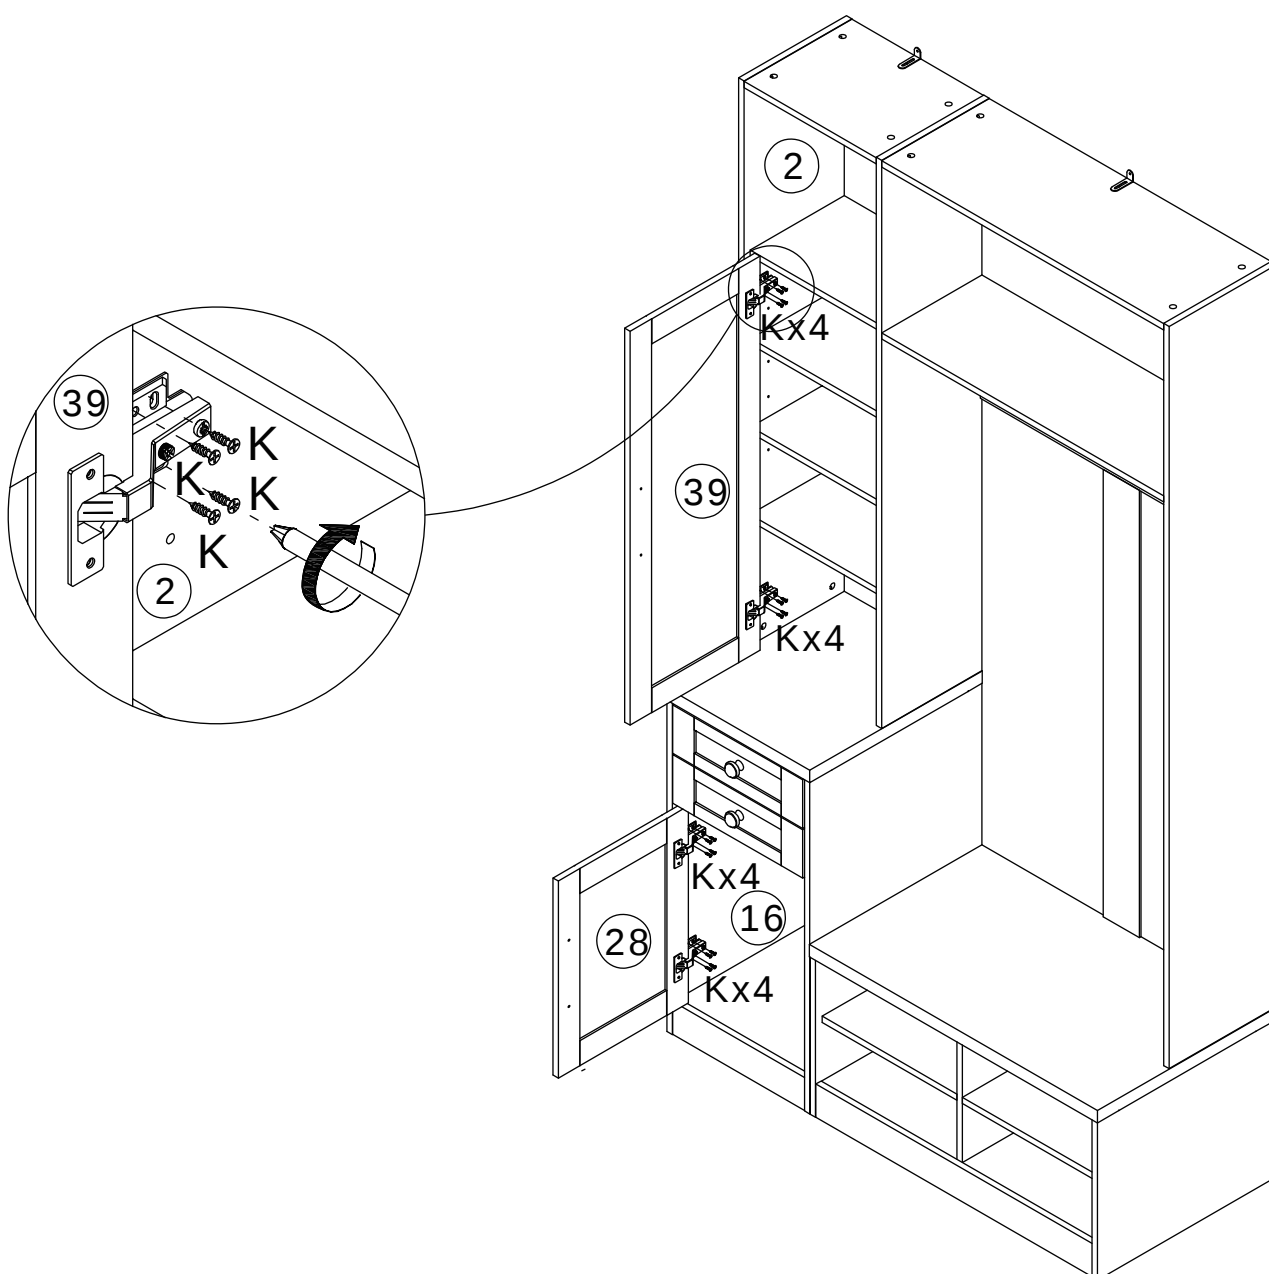



56



   Secure handle (M) to panel 39 and 28 using screw (P).

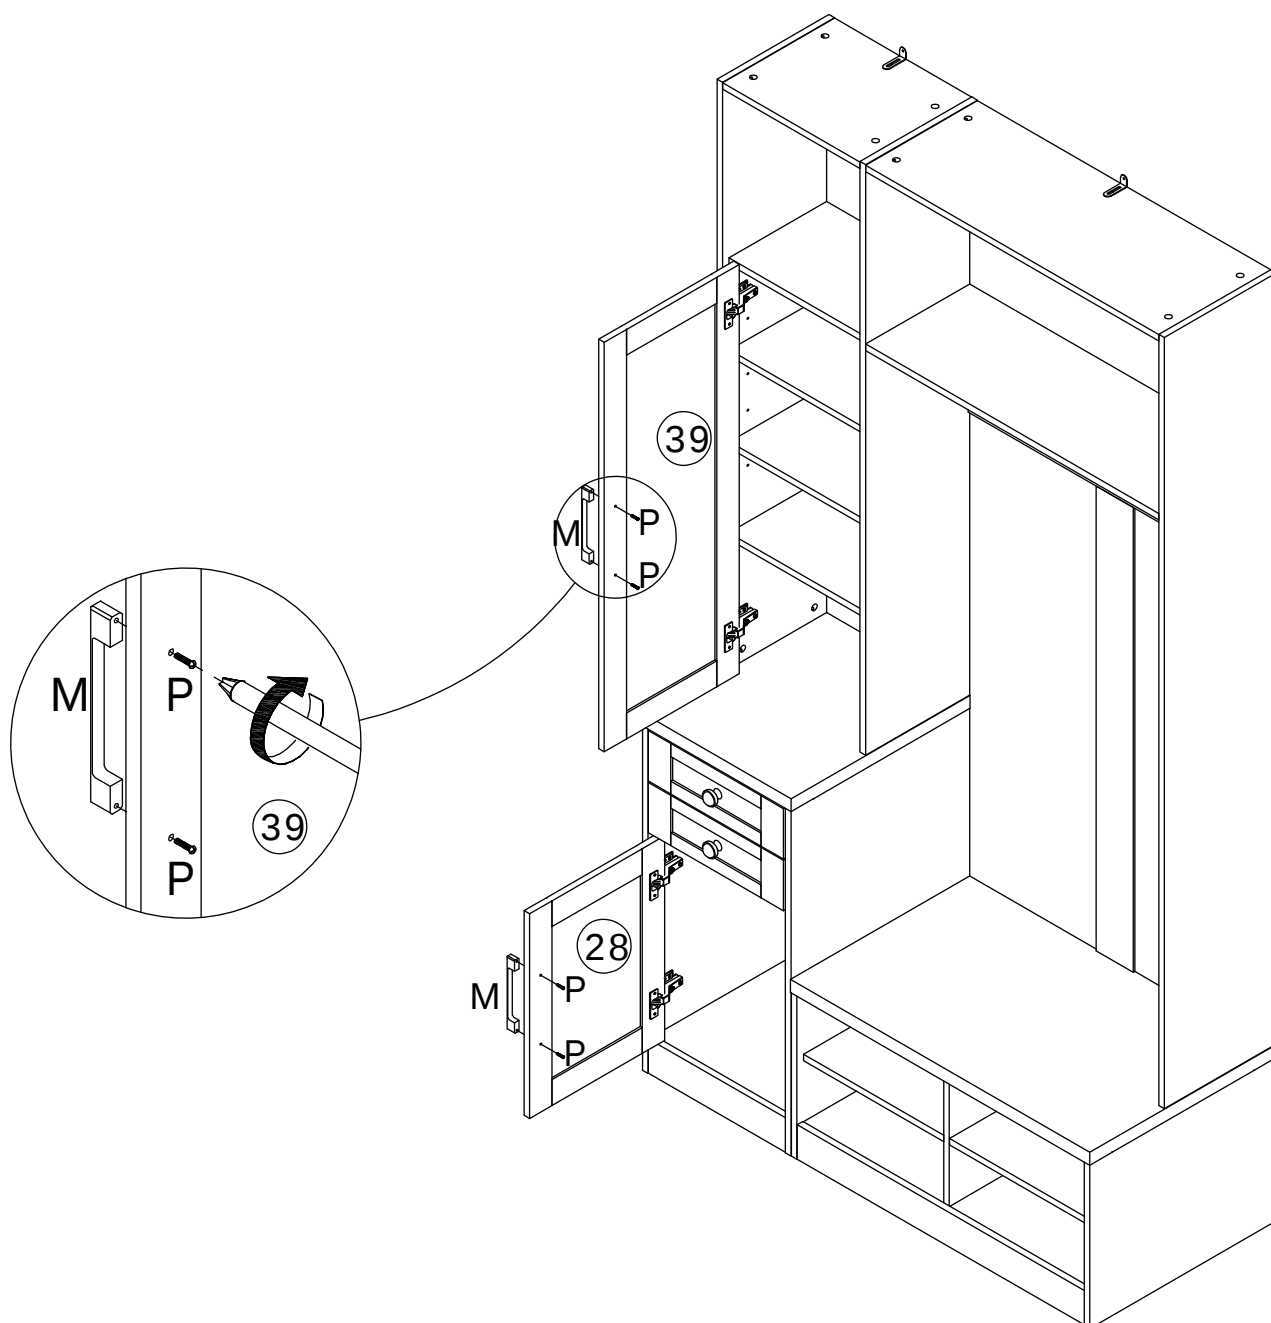


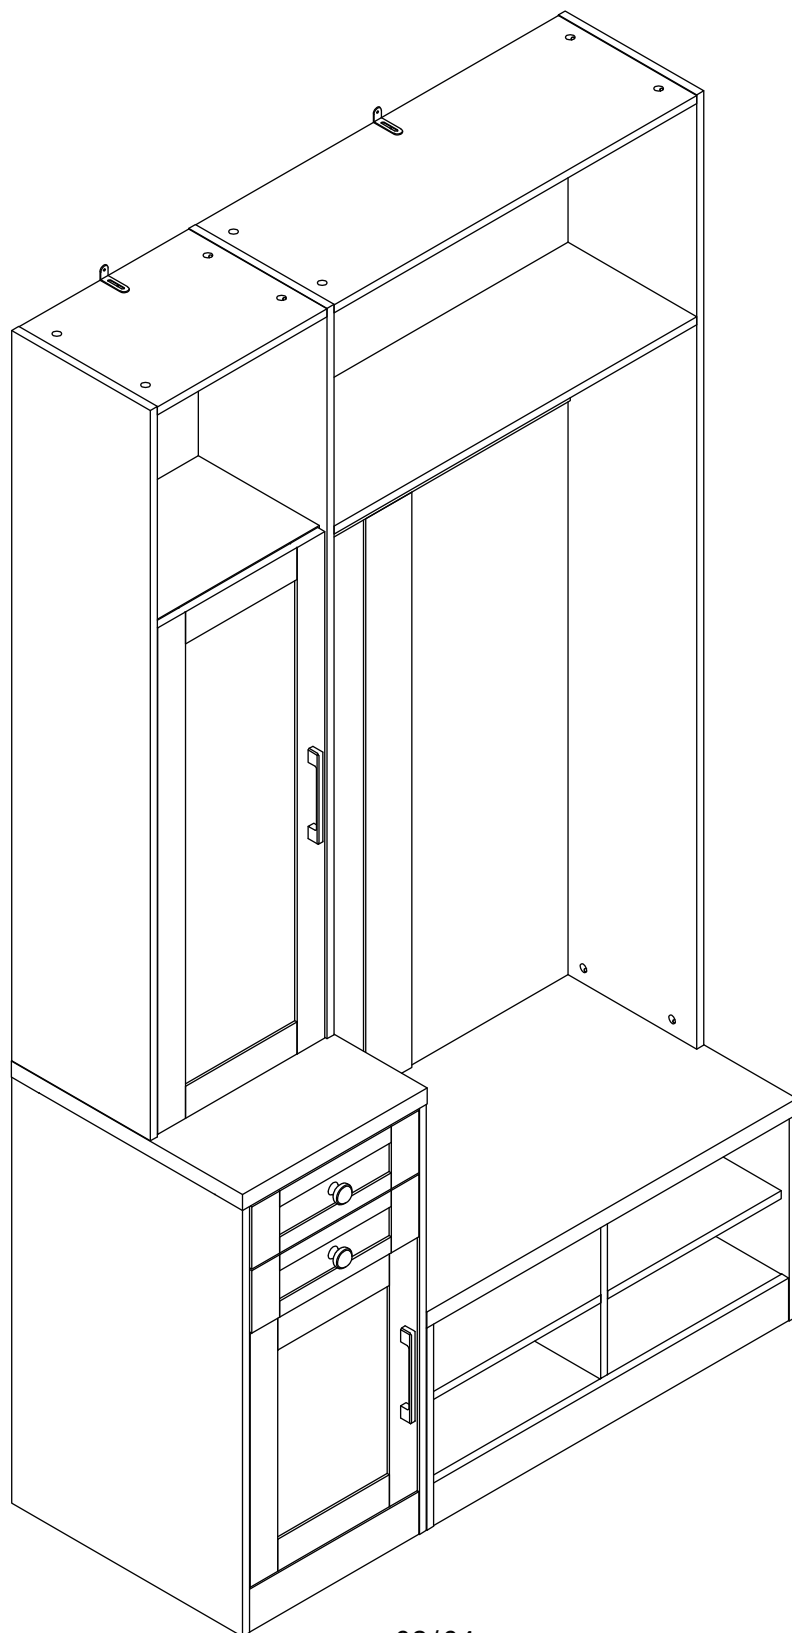





If the door panels are not aligned, please adjust the screws on the hinges according to the illustration.

Or you can search this link to view the teaching video.

  
<https://youtu.be/n0Lb36SoODM>

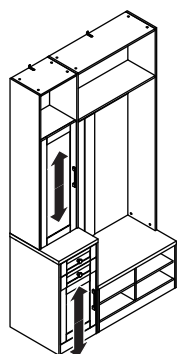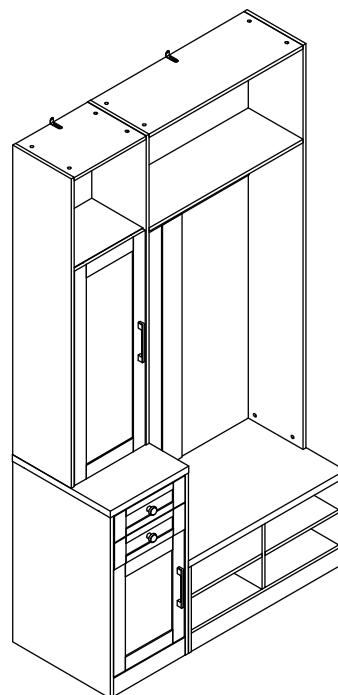



I

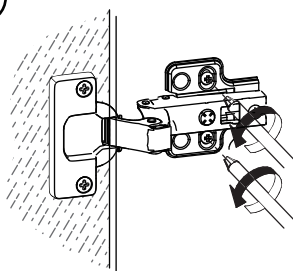 


II

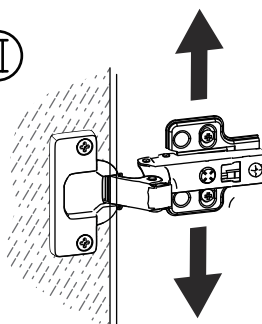 


III

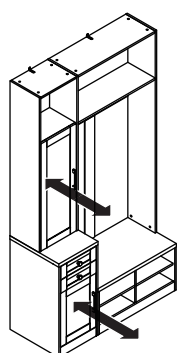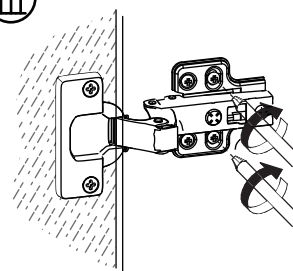  



I

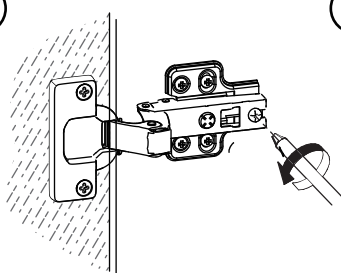 


II

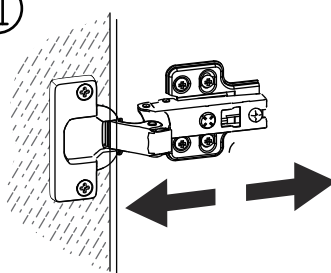 


III

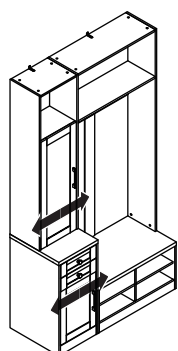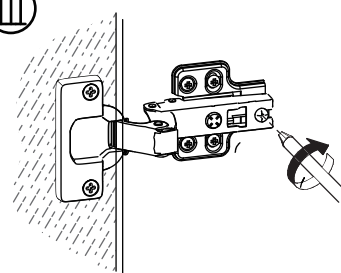  

I

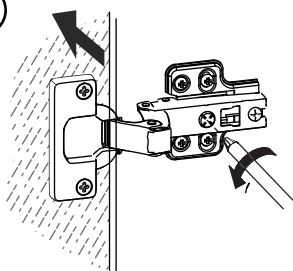 

II

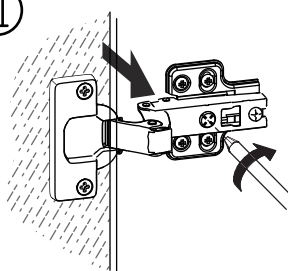 

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT



adelahu@fufugaga.com



208-820-0068