



**2** Place Seat Cushion (E) on assembled Dining Chair Frame.

Model: \_\_\_\_\_  
Lot No: \_\_\_\_\_  
Date of Purchase: \_\_\_\_\_

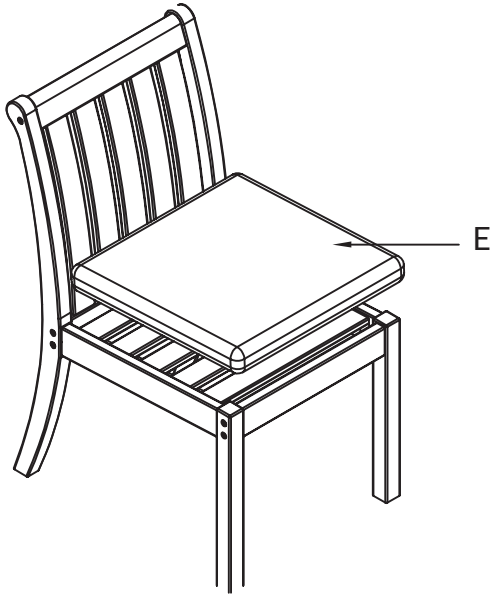

## DINING CHAIR

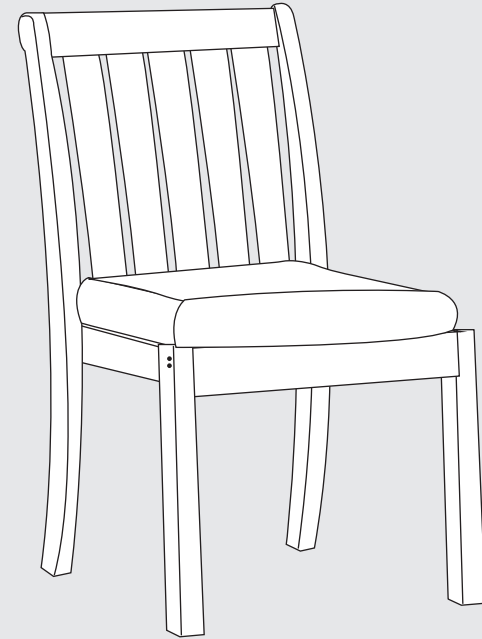

### ADULT ASSEMBLY REQUIRED

If you are missing any parts or have any questions regarding assembly, do not return this item to the retailers store. Please call our toll-free, customer service number and have this assembly manual open to the parts list ready to provide the model name, number and part name or number.




**WARNING:** This product may contain small components, please ensure they are kept away from small children.

## PARTS AND HARDWARE


Avoid using sharp objects such as a knife to cut open packing as you may accidentally damage the upholstery.




A. Left Armless Frame  
1x

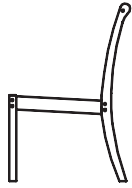


B. Right Armless Frame  
1x

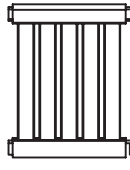


C. Back Rest  
1x

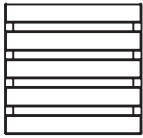

 D. Seat Deck  
1x



E. Front Frame  
1x

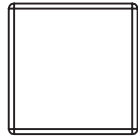

F. Seat Cushion  
1x



G. Bolt  
10x



H. Bolt  
6x



I. Allen Key  
1x

## ASSEMBLY INSTRUCTIONS

Do not fully tighten bolts until assembly is complete.

- 1 Attach Left Armless Frame (A) and Right Armless Frame (B) to Back Rest (C) and Seat Deck (D) using Bolts (G). Secure Seat Deck (D) to Left Armless Frame (A) and Right Armless Frame (B) using Bolts (H). Tighten using provided Allen Key (I).

