

WARNING



Please read the instructions carefully and follow the assembly steps.

To ensure proper assembly, please follow all steps and use all parts provided. Not following this warning may result in serious injury to you or others.

Please install it on a flat surface. During installation, ensure that all screws are loaded to 50%. After ensuring that all the chair legs are fully in contact with the ground, load the screws 100%


Avoid overtightening or forcing the screws, as this could cause them to break, strip or damage the threads of the holes.

Using the wrong size of screws for a particular part could cause damage to the screw or the part.



Please lubricate all moving parts regularly and tighten all bolts and screws every 6 months, or as needed.

ATTENTION

Please read the following instructions to help you assemble the dining chair faster.

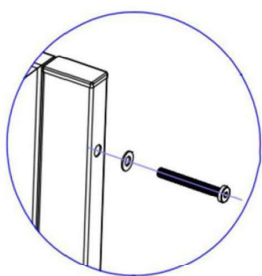


1. Partly screw in bolts, but do not fully tighten.

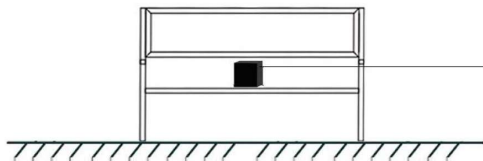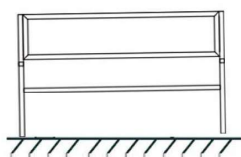






Put pressure on the seat.
(Above 66lbs / 30kg)

2. Place the park chairs on a flat surface. First, tighten the bolts in the middle of the chair backs, then the bolts on both sides. Before using the chairs, make sure all the bolts are fully tightened.


ASSEMBLE INSTRUCTIONS

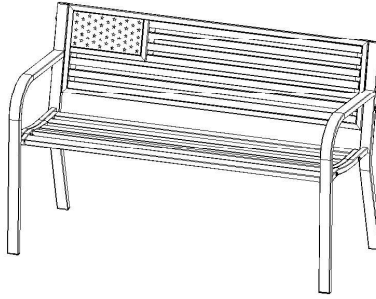

American Flag Park Chair

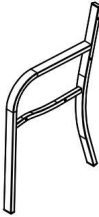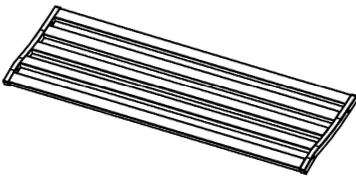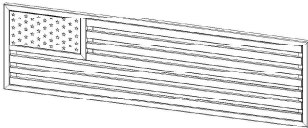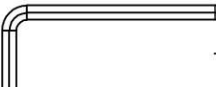 Part	Description	PIC	QTY
A	Leg Frame		2
B	Seat		1
C	Backrest		1
D	Washer		12
E	Screw		8
F	Nut		4
G	Hex Key		1
H	Spanner		1

Step1: Assemble the leg frames(A) onto the seat(B) with screws(E), washers(D) and nuts(F).

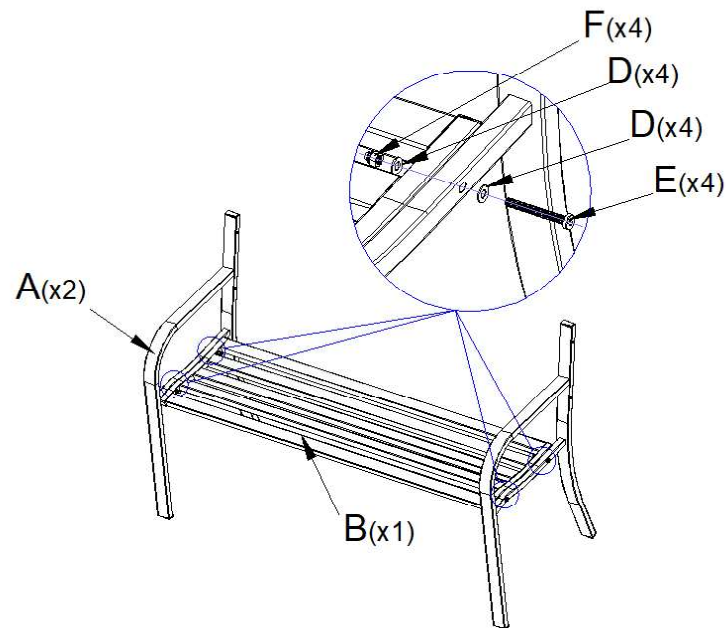

Note: For the three or four screw holes on the same bracket, ensure all screws are inserted into the holes before tightening them gradually.

Step2: Put washers(D) on screws(E) first. Assemble the backrest(C) onto the leg frames(A) with screws(E) and washers(D).

