


 


 




CARE AND MAINTENANCE

Spot clean using a mild water-free solvent. Only a professional cleaner should undertake a complete overall cleaning.
The use of steam or water-based cleaners may cause excessive shrinking or staining.

NOTICE

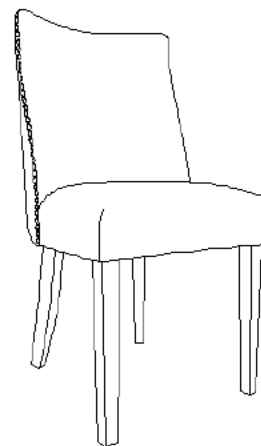
- * Please make sure that you have all parts indicated before you begin assembly of this item
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly
- * This item may require periodic tightening

Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	SEAT		1X
B	Front leg-1		1X
C	Front leg-2		1X
D	Back leg-1		1X
E	Back leg-2		1X
H1	Allen bolt		8X
H2	Spring washer		8X
H3	Flat washer		8X
H4	Allen key		1X

ASSEMBLY INSTRUCTIONS

THE DESIGN OF THE CHAIR IN THE DRAWINGS MAY VARY FROM YOUR ACTUAL CHAIR, BUT ASSEMBLY IS THE SAME ON ALL MODELS.



Weight Capacity: 275 lbs

WARNING: DO NOT STAND ON CHAIR

WARNING: DO NOT OVER TORQUE BOLTS/SCREWS



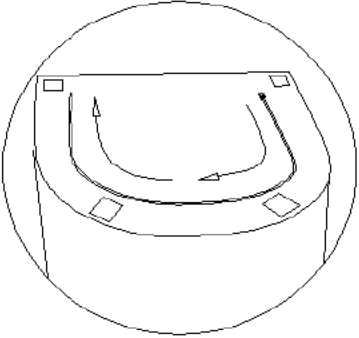
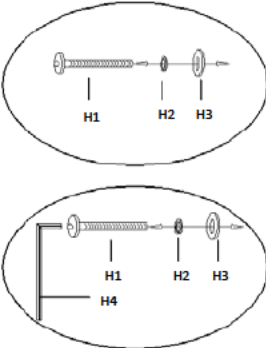
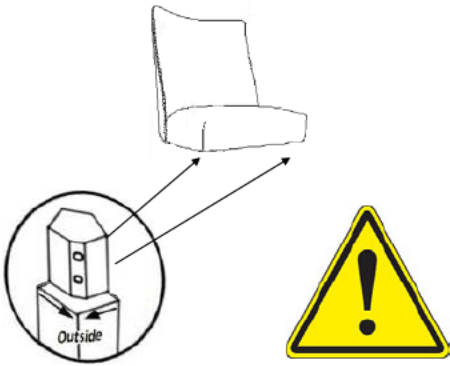
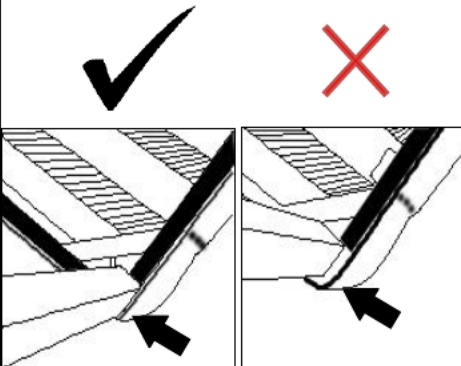
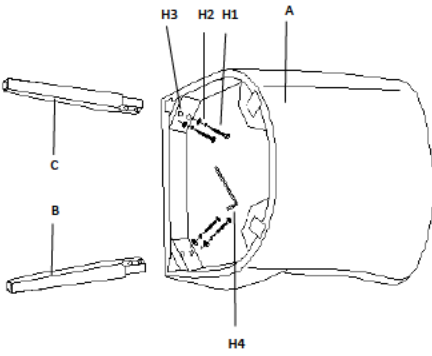
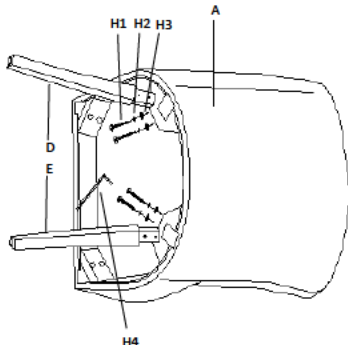
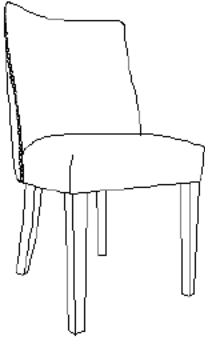
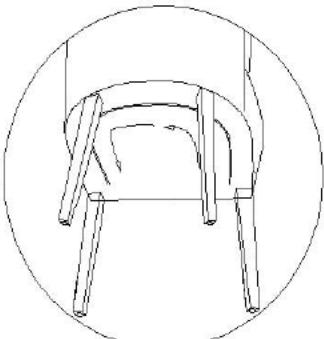
The legs and hardware are located underneath the chair in the zipper compartment.

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 10 minutes.

Tools Required for Assembly (included): Allen Key

	
<p>STEP1 OPEN THE ZIPPER ON THE UNDERSIDE OF THE SEAT AND TAKE OUT LEGS AND HARDWARE</p>	<p>STEP2 PUT THE WASHERS ON THE BOLT IN THE ORDER SHOWN IN THE PICTURE</p>
	
<p>ATTENTION</p>	<p>CORRECT INCORRECT</p>
	
<p>STEP3 INSERT THE FRONT LEGS AND SCREW IN THE BOLTS BUT DON'T TIGHTEN COMPLETELY</p>	<p>STEP4 INSERT THE BACK LEGS AND SCREW IN THE BOLTS BUT DON'T TIGHTEN COMPLETELY</p>
	
<p>STEP5 PUT THE CHAIR UPRIGHT AND MAKE SURE ALL LEGS ARE LEVEL, THEN FIRMLY TIGHTEN BOLTS WITH ALLEN KEY WHILE THE CHAIR IS UPRIGHT AS PICTURED ABOVE</p>	<p>STEP6 CLOSE THE ZIPPER ON THE UNDERSIDE OF THE SEAT, THIS ITEM MAY REQUIRE PERIODIC TIGHTENING</p>
<p>The legs and hardware are located underneath the chair in the zipper compartment.</p>	