

WOOD PLANT STAND

Assemble components on a soft, clean surface to avoid damaging the finish. Save this manual for future reference.

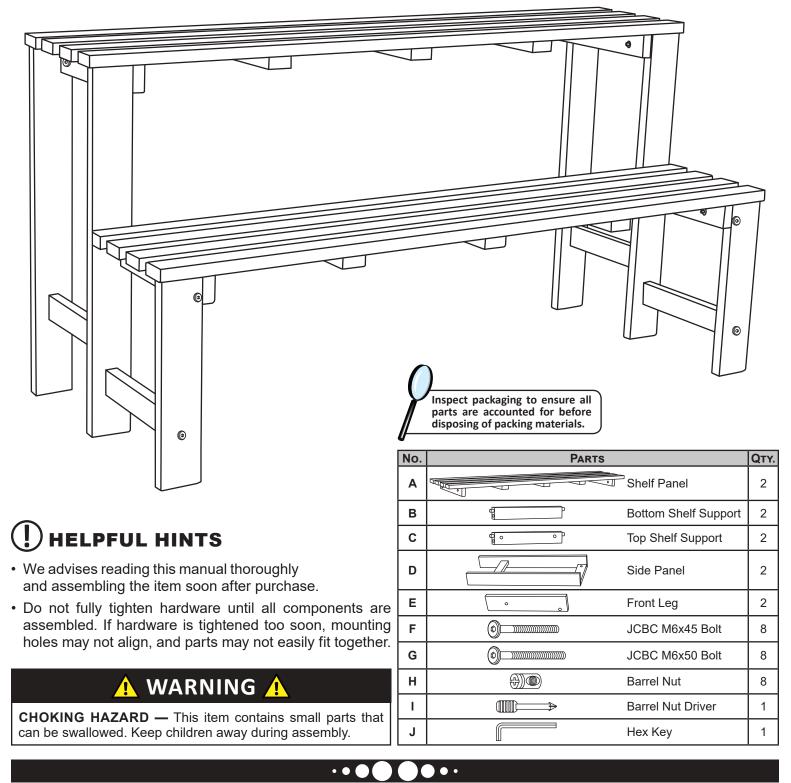

ASSEMBLY

Read carefully and understand assembly before beginning. Do not fully tighten bolts all until all components have been loosely assembled.

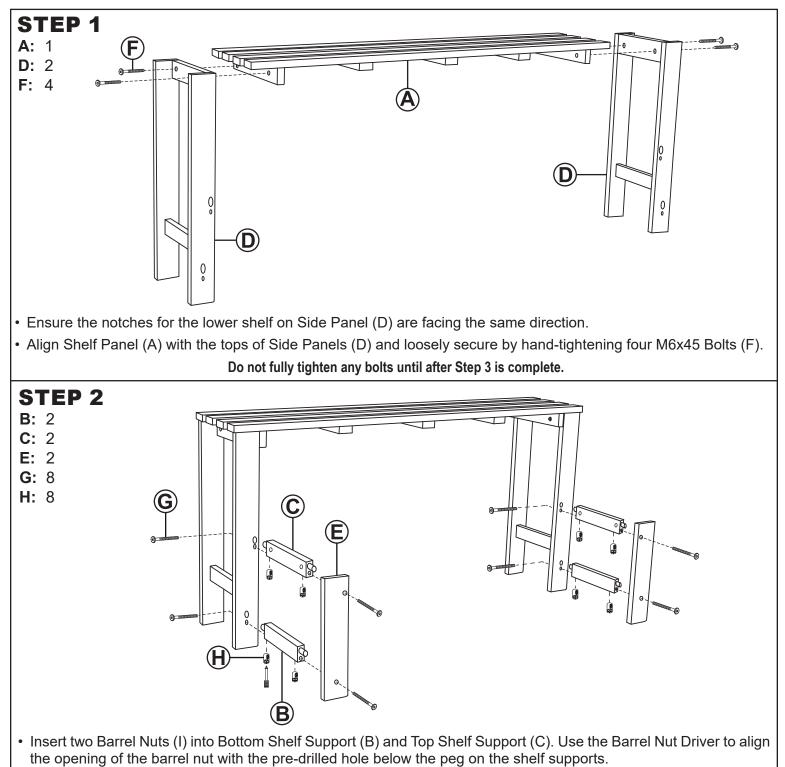


- Ensuring Top Shelf Support (C) is on top, align the pegs and holes of Top Shelf Support (C) and Bottom Shelf Support (B) with the side panel and Front Leg (E), then loosely secure by hand-tightening four M6x50 Bolts (G), ensuring the bolts thread into the barrel nuts.
- Repeat the previous step on the opposite side of the unit.

Do not fully tighten any bolts until after Step 3 is complete.

07/2020

••

• •

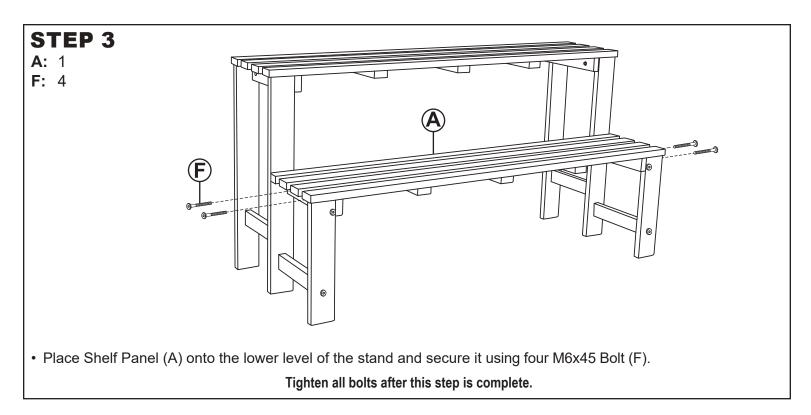

Care & Maintenance

SAFE USE: For residential use only. Only use on a flat, level surface. Do not climb or sit on the shelves.

INSPECT: Periodically check assembly points and tighten fittings as necessary.

CLEANING: Identify the direction of the woodgrain. Following the direction of the woodgrain, wipe surfaces with a soft, dry cloth. Do not use harsh chemicals or abrasive materials or a pressure washer to clean.

COVER: When not in use, cover unit with a breathable cover to help protect it from the harmful effects of sunlight, inclement weather, dust build-up, and collecting debris.

WINTER CARE & STORAGE: Protect this item from inclement weather, especially ice and snow. Move to a cool, dry indoor location. Covering while in storage is recommended to help prevent dust build-up.

MAINTENANCE: If left untreated, the wood may weather. A suitable wood stain or oil may need to be applied yearly.

WARNING: THE ONE-YEAR WARRANTY DOES NOT COVER DAMAGES OR DEFECTS CAUSED BY THE USE OF CHEMICAL TREATMENTS OR PROTECTIVE COATINGS.

Any modification to the product or failure to follow recommended care will void the product warranty.

MARNING!

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.

