

FRASER HILL FARM[®]

Thank you for your purchase!

With proper use and care, this product will provide you with years of enjoyment. If you have any questions, please contact us directly.

✉ **Holiday@FraserHillFarm.com** (Anytime)
☎ **855-591-7451**

(9AM to 9PM Eastern Time, Monday - Friday)
(9AM to 5PM Saturday - Sunday)

In the unlikely event that you experience a problem, please provide pictures and a description of the problem, a receipt (if available), name and address of the purchaser and the name of retailer where you purchased the product.

Please do not return this item to the retailer.

Please call our toll-free number 1 (855) 591-7451 or email us at Holiday@FraserHillFarm.com and a customer service representative will assist you.

ENJOY YOUR HOLIDAY!

IMPORTANT SAFETY INSTRUCTIONS:

- This product is intended for both indoor and outdoor use.
- Do not mount or place the product near gas or electric heaters, fireplaces, candles, or other heat sources.
- Do not cover the product with cloth, paper, or any material not included as part of the product while in use.
- Do not leave the product unattended when children are present. This product is not a toy.
- Set the timer or turn off the product before leaving the house, going to bed, or leaving it unattended.
- Never operate the product if the battery compartment is damaged.
- Do not use the product in extreme weather conditions unless specifically recommended.
- This product is not intended for permanent installation.

CARE AND MAINTENANCE:

Before using or reusing, inspect product carefully. Discard any product that has cut, damaged or frayed wire insulation or battery compartment. When not in use, store neatly in a cool, dry location protected from sunlight. Clean the product with a cloth before storing after season's use.

ASSEMBLY INSTRUCTIONS

1. Remove all the parts from carton including blow mold figurine and mounting hardware.



2. Drill a hole in the wall using a drill bit that is slightly smaller than the diameter of the rubber plug.
3. Insert the rubber plug into the hole. Then screw the screw into the plug, leaving approximately 1/4 inch exposed.

Inserting the batteries:

1. Unscrew the battery compartment cover.
2. Insert AA batteries (not included) into the battery compartment.
3. Align the "+" and "-" symbols as marked inside the compartment.
4. Securely tighten the battery compartment cover.

Operating Instructions:

1. Move the switch to the "ON" position to turn on the lights.
2. Move the switch to the "OFF" position to turn off the lights.
3. Move the switch to the "TIMER" position for automatic operation: 6 hours ON / 18 hours OFF.

TROUBLESHOOTING

If the product does not light:

1. Make sure the batteries are inserted correctly. Make sure to align the "+" and "-" as marked inside the battery compartment.
2. Switch is in "OFF" position. Move the switch to the "ON" position. Timer switch is activated and the item is in the off time.
3. Batteries are exhausted. Change to new batteries.

BATTERY INSTRUCTIONS:

1. Do not dispose of batteries into a fire as they may explode or leak.
 - Do not mix old and new batteries.
 - Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
 - Always replace batteries with the same type and brand.
 - Remove fully discharged batteries immediately.
2. Failure to insert batteries in the correct polarity, as indicated in the battery compartment, may shorten the life of the batteries or cause batteries to leak.
3. Remove all the batteries for storage of the unit to avoid battery leakage.
4. Batteries should be recycled or disposed of as per state and local guidelines.

FRASER HILL FARM®

Register your product today!

Congratulations on your new Fraser Hill Farm product! Register your item using the link below to activate your warranty and stay updated with product news, helpful tips, troubleshooting support, maintenance advice, and any important recall or safety notices.

<https://fraserhillfarm.com/register-your-product>



Warranty Information

Fraser Hill Farm provides a one-year Limited Warranty from the purchase date, covering repair or replacement of defective components. This warranty applies only to the original purchaser and requires the original sales receipt with the purchase date and location. Warranty coverage for replacements defaults to the original purchase date.

Contact Warranty Services at: 1-855-591-7451

Email us at: *Holiday@FraserHillFarm.com*

www.FraserHillFarm.com

1-YEAR LIMITED WARRANTY

"Limited" Warranty Program

For a period of one (1) year after purchase, Fraser Hill Farm ("Manufacturer") will either repair or replace defective components in accordance with this Limited Warranty.

Sales and use taxes, plus shipping and handling charges are the responsibility of the consumer.

This warranty is between Manufacturer and the original purchaser and is valid only when accompanied by the original purchaser's sales receipt showing original date of purchase and location of purchase. Replacements under this warranty revert back to the date of original purchase for future warranty.

Manufacturer or its authorized dealer can accept or reject warranty claims based on its findings. This warranty applies in normal residential use only, where an issue with the product is due to a defect in material or workmanship. Manufacturer can make substitutions as required of materials, components, and sub-components of comparable value and utility. This warranty is limited to product repair or replacement (to be determined solely by Manufacturer). Warranty return is limited to only the single affected component.

This warranty covers only manufacturing defects and does not cover normal wear and tear, abuse or misuse, including: water damage, chemical damage, exposure to extreme heat or cold, abrasion or excessive weight. This product is intended to be used with standard ornaments only. This warranty is invalid if the product is not used for intended purpose. Manufacturer disclaims liability for any aspect of installation and any inconvenience caused by a defective part or component.

Certain items are not covered by this warranty. These include, but are not limited to the following:

1. Components subjected to abuse, including abuse intended to simulate failure.
2. Damages caused by retailer, shipper or installation crew (such as scratches, dents, tears, etc.).
3. Any part which merely exhibits normal wear yet functions essentially as new, including stretching of materials and stitching.
4. Tears, punctures, scratches or any damage caused by improper installation or use.
5. Items sold "as is" or floor models.

To make a claim, send a copy of the original sales receipt along with a brief description of the problem to the email address below. Please include your email address and daytime telephone or cell phone #. All items maybe charged actual freight and handling costs. Repairs or replacement will be made at the Manufacturer's option.

THIS IS THE ENTIRE EXCLUSIVE EXPRESS LIMITED LIABILITY. THE MANUFACTURER NEITHER MAKES NOR IS RESPONSIBLE FOR ANY OTHER WARRANTIES, EITHER EXPRESS OR IMPLIED, INCLUDING THOSE OF RETAILING DEALERS. THIS EXCLUSIVE REMEDY IS LIMITED TO RECEIPT OF A CREDIT IN CONNECTION WITH THE REPAIR OR REPLACEMENT OF ANY PRODUCT OR COMPONENT DEEMED TO BE DEFECTIVE UNDER THE TERMS AND CONDITIONS AS STATED IN THIS WARRANTY. NEITHER FRASER HILL FARM, THE PRODUCT MANUFACTURER NOR ITS AGENTS SHALL BE LIABLE IN ANY CASE FOR INCIDENTAL, INDIRECT, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY OR NEGLIGENCE EVEN IF IT HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

EXCEPT AS OTHERWISE MAY BE REQUIRED BY LAW, THERE ARE NO OTHER EXPRESS OR IMPLIED WARRANTIES OTHER THAN THE WARRANTY DESCRIBED HEREIN, AND ALL OTHER WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ARE EXPRESSLY DISCLAIMED.

Holiday@FraserHillFarm.com