 


Model No.:
MAT7600

 
 
 
 
 
 
 
 
 
 
 
 
 
 
Important

Please inspect all items carefully before assembling.
If for any reason you need to return this
item, you must return it in its original packaging.
Assembled items can not be returned.

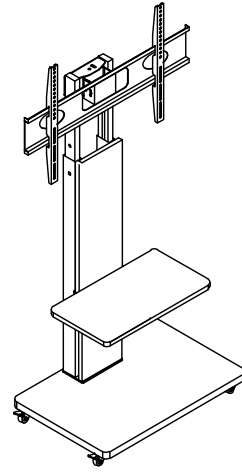


Important Note:


- *Place all parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- *Kindly follow the assembly instruction step by step.
- *Don't tighten all screws until the table is fully set-up.

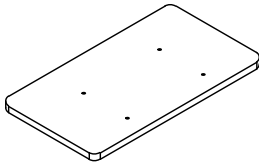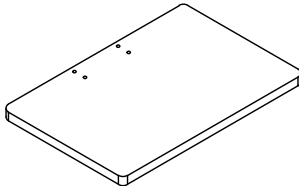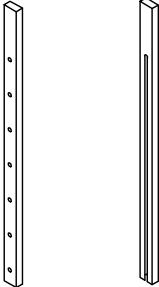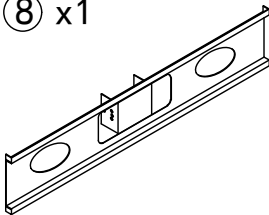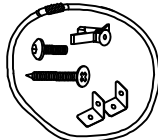① x1 	② x1 	③ x1 	④ x1 (SET)  (Left) (Right)	
⑤ x1 	⑥ x1 (SET)  (Left) (Right)		⑦ x1 	
⑧ x1 	⑨ x2 	⑩ x2 	⑪ x4 	
A x5 	B x6  M6*12mm	C x8  M6*8mm	D x16  ST3. 5*14mm	E x4  M8*40mm
F x2  M6*35mm	G x2  G1 G2 M8*30mm	H x2 	S Screws for TV	Z x1 Tipping Restraint Hardware Kit 

 
1 Install the wheels.

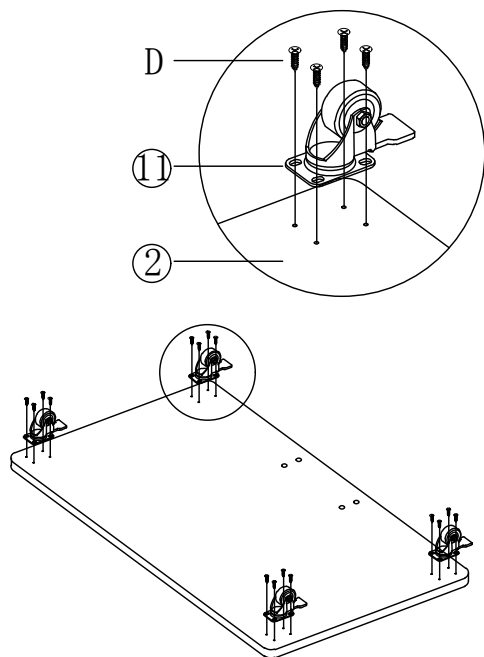


2 Assemble the lower frame and base.

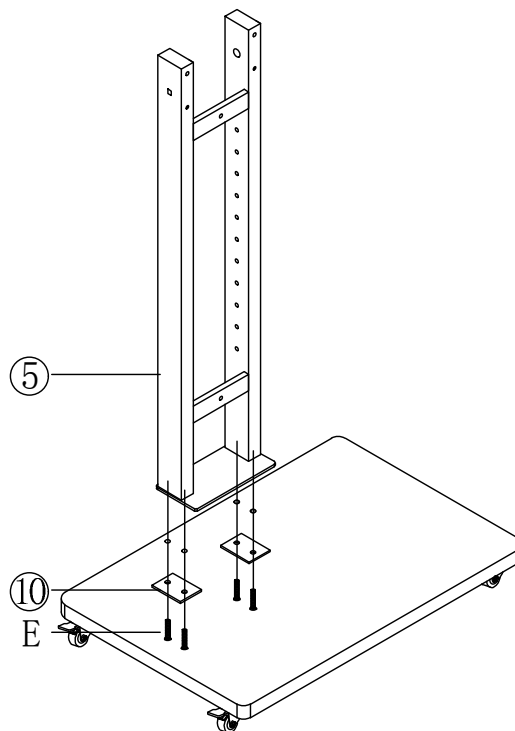 

 
3 Plug in two top frames. * Please pay attention to the left and right. Adjust the height of bracket to fix it.

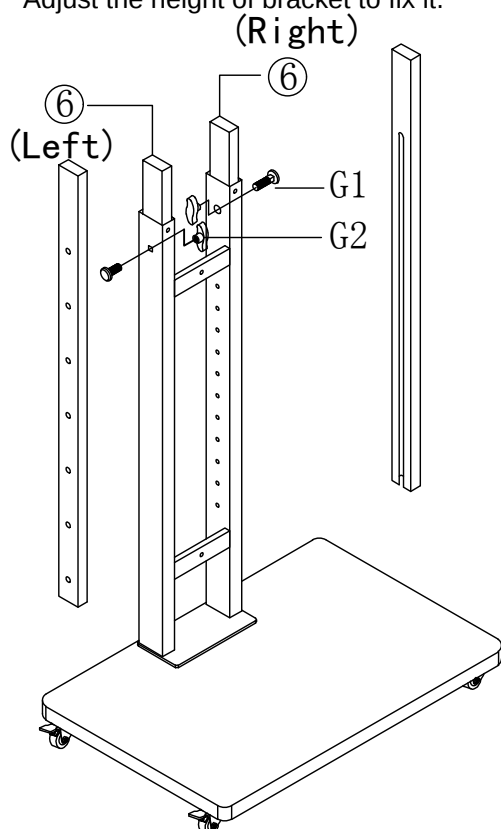

 
4 Position the shelf board and install the left and right shelf board brackets.

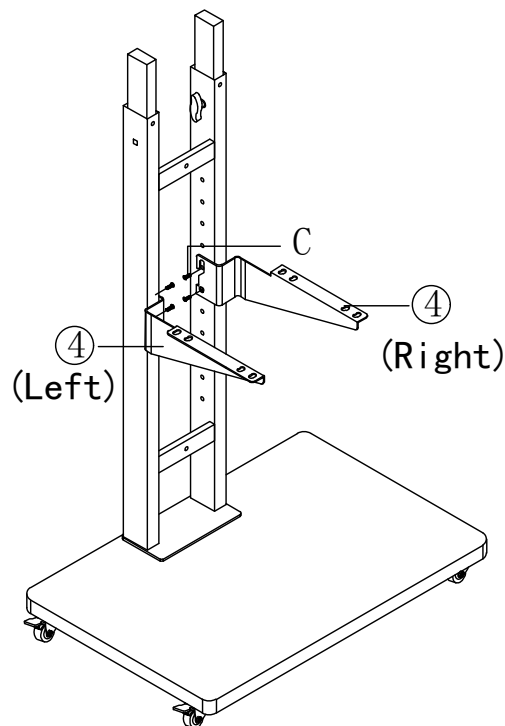


5 Install the front plate.

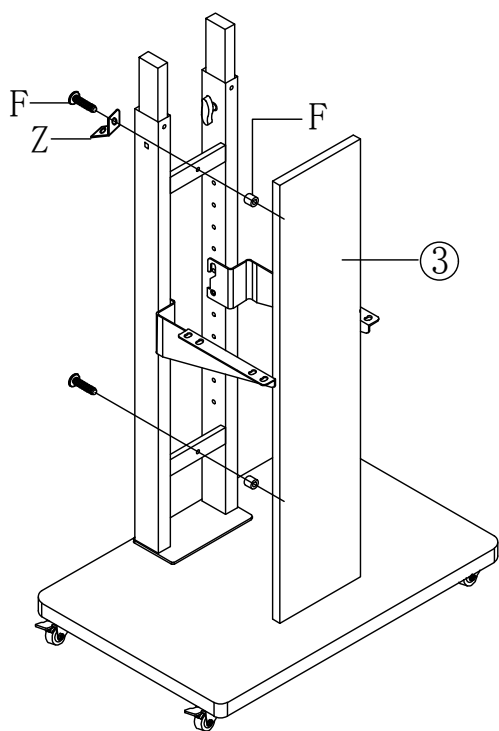 


6 Install bracket.

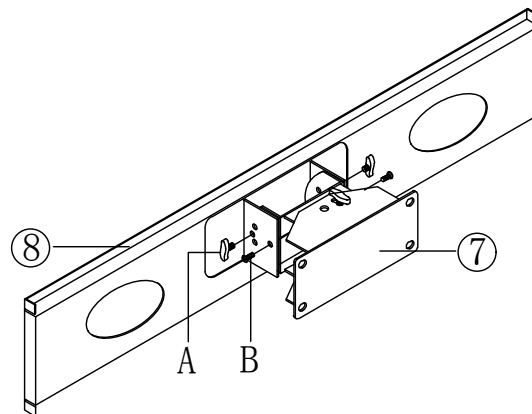 


7 Install bracket.

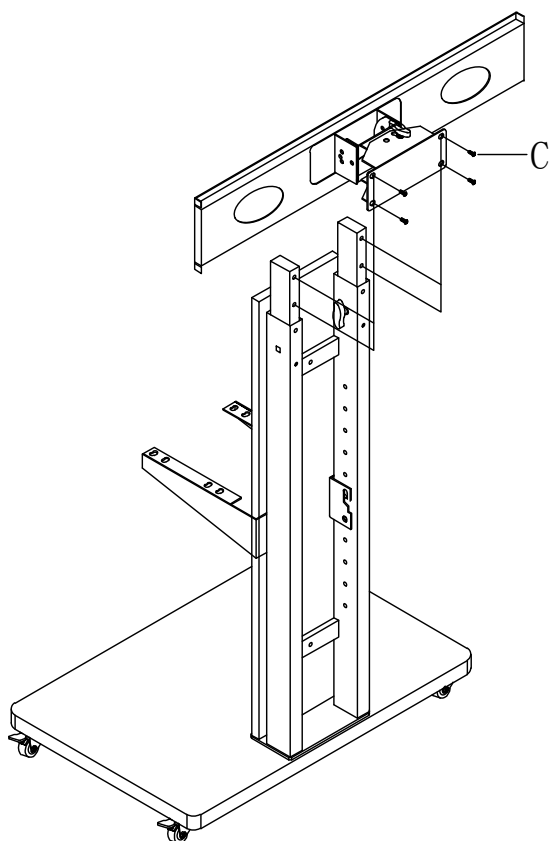 

 8 Make sure the height of bracket and fix it.

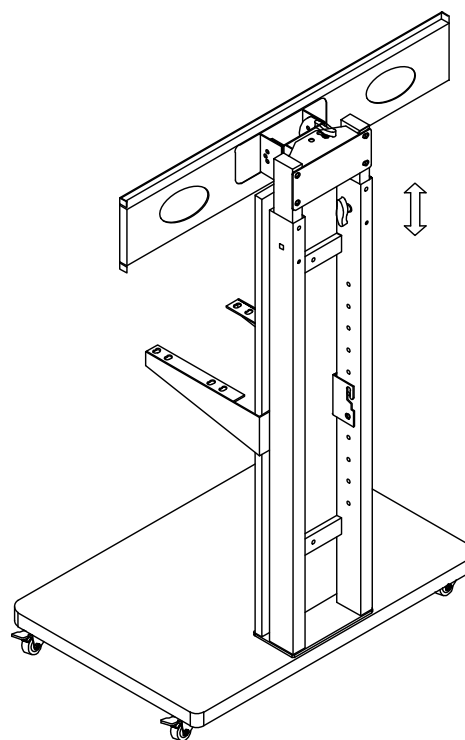

9 Install the shelf board.

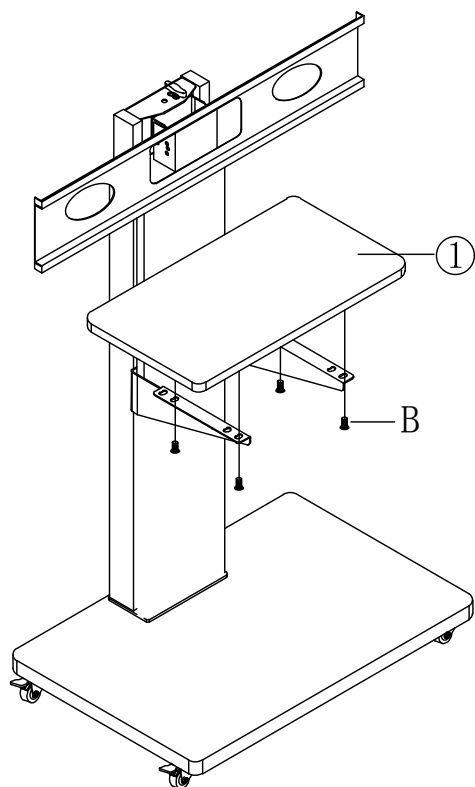 


10

S1	M6X25	x4	S5	Square Washer	x4
S2	M6X40	x4	S6	Space 18X22	x4
S3	M8X25	x4		Space 13X17	x4
S4	M8X45	x4	9	Bracket	x2

Choose right screws for TV, the screws suit to most of TVs, but not all TVs.

 
In case the supplied screws are not compatible with your TV's threaded holes, you will need to obtain the correct size screws on your own.

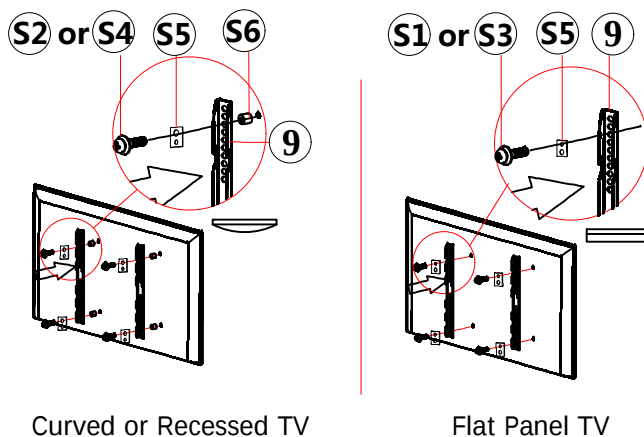


Curved or Recessed TV

Flat Panel TV


11 Close the bolt on the lower side of the attached bracket 9 to secure the TV.

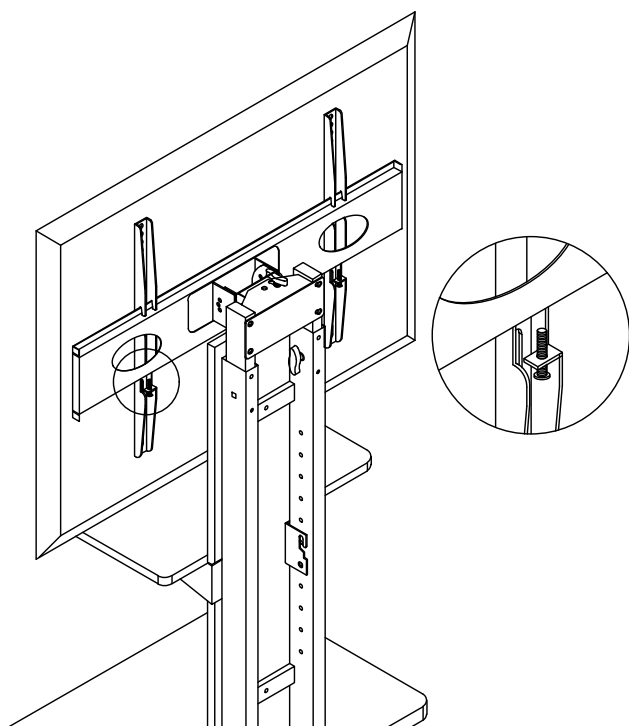

12 After confirming the installation height of the TV, tighten Part A on the rear of the bracket to ensure the bracket is secure.


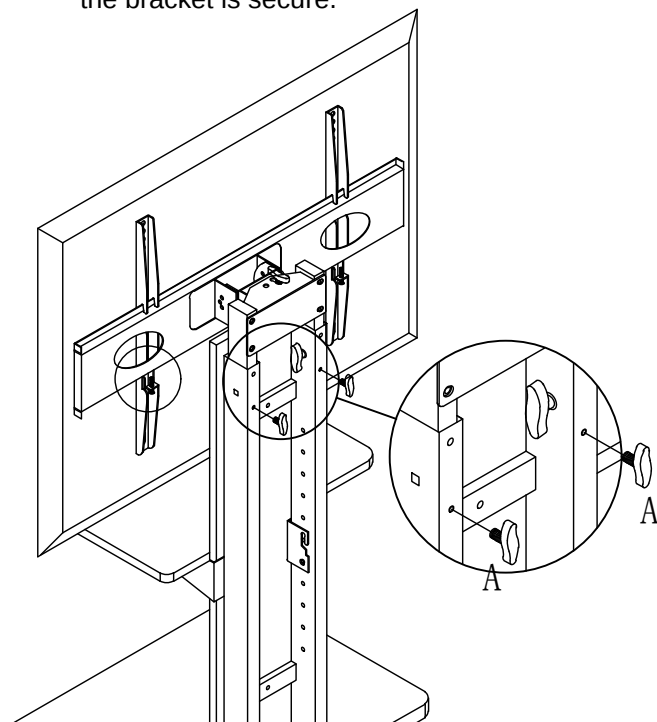


Angle adjustment

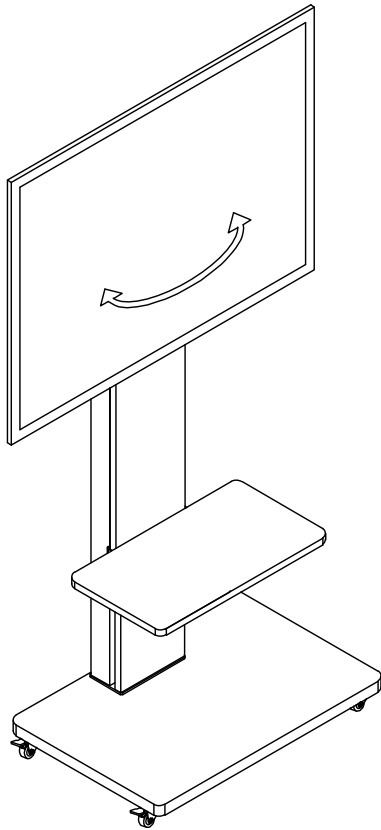


[Left and right angle adjustment]

Loosen the adjustment bolts shown in the figure to adjust the left and right angles. After adjusting the angle, tighten the bolts.

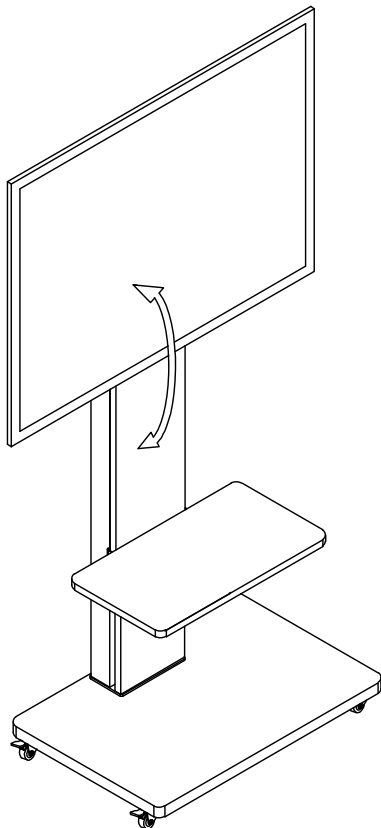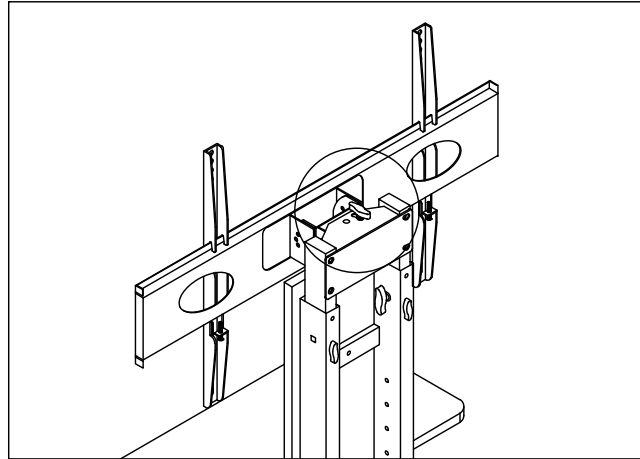





[Vertical angle adjustment]

Three levels of angle adjustment are possible. Loosen the adjustment bolts (left and right) shown in the figure, insert them into the three holes at any angle you like, and tighten them.

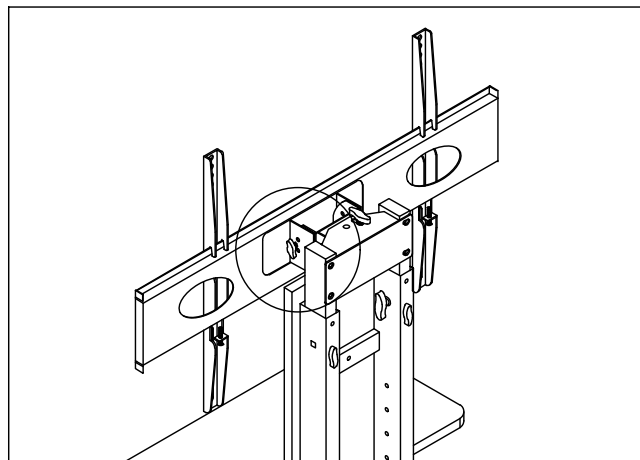

Position the assembled console at the desired location against a wall. Now, follow the instructions printed on the plastic bag containing the Tipping Restraint Hardware to attach the tip-over restraint to the Top Metal Frame and the wall.

NOTE: YOU MUST USE THIS TIPPING RESTRAINT TO ATTACH THIS UNIT TO THE WALL, TO PREVENT ACCIDENTS AND/OR INJURIES.

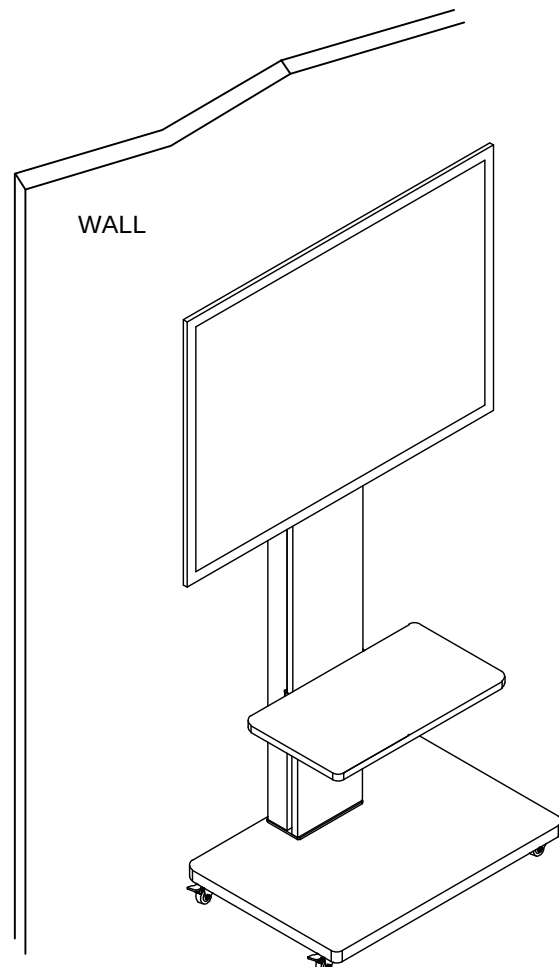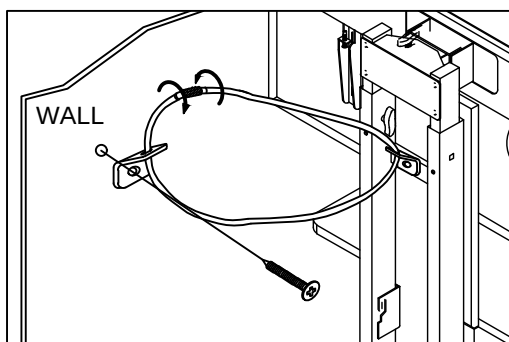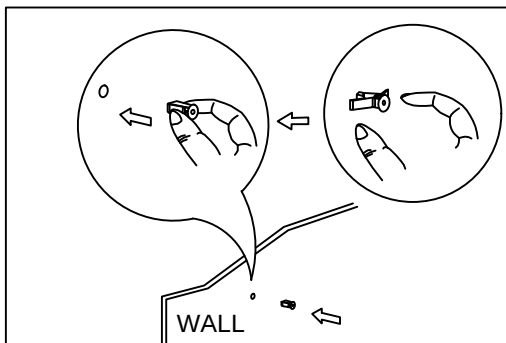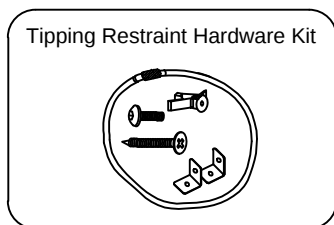

This unit is just for sample display.