




Warning! Make sure your Party Bar is set up on flat, level surfaces to prevent your bar from tipping over.

- 1. Lay your Party Bar on its side and lock legs into place
 - 2. Stand Party Bar/Bars upright
 - 3. Install support shelf (See pictures below)
 - 4. Velcro bar skirt around the frame

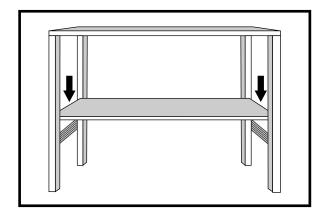

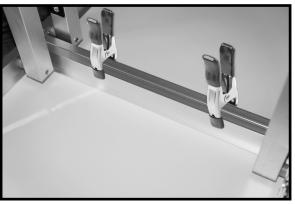



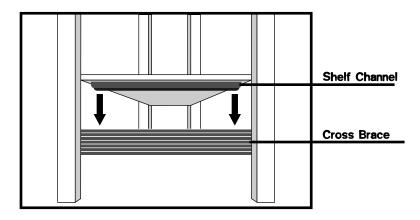

LED Lights Instructions

(If ordered w/ LED Lights)

▲ (RGB LED)

MODE

- 1.) Insert **new** or **fully charged** AA batteries
- 2.) Set battery pack switch to "ON"
- 3.) FLASHING or SOLID Red Light = LOW BATTERIES
- 4.) Lights not working?
 - a.) Ensure batteries are inserted correctly and making contact with metal contacts
 - b.) Switch battery pack off, then on again
 - c.) Email support@partypongtables.com for help

LED Light Color: Press "COLOR" to change light color

LED Mode: (Flash, Strobe, Solid): Press "MODE" to adust

LED Brightness: Press "COLOR" then press "SPEED/BRIGHT" to adust

LED Speed: Press "MODE" then press "SPEED/BRIGHT" to adust

ILLUMINATED TABLE Patent No. D836,726

Call or Email

888-606-2888 | sales@partypongtables.com