

Assembly Instruction

Please follow this instruction to avoid assembly errors.

For customer service, please contact **E-mail:shop@robud.com**

98.1WCF05.150



WARNING:

- The product requires 1 CR1632 3V battery. (Battery for self-preparation).
- Before loading or removing batteries, please loosen screws on the cover of the battery box with the screwdriver first.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the toy before being charged.
- Different types of batteries or new and used batteries are not to be mixed.
- Batteries are to be inserted with the correct polarity(+ and -).
- Remove the exhausted battery in time.
- The power supply terminal cannot be short circuited.
- Do not connect the wire to a mains outlet.
- The product is not to be connected to more than the recommended number of power supplies.
- Check each part before assembly.If the part is damaged,fix it well before assembly.
- Toys intended to be assembled by an adult. Children should use the product under adult's guidance.
- After opening the package,please keep the packaging items such as plastic film or bags away from babies and children to avoid danger of suffocation.
- The instruction must be retained since it contains important information.

 


WARNING:

 
 
 
 
 
 
 
 
 
 
 
 

 
 
 
•This product designed to use a Button or Coin Cell Battery. A swallowed Button or Coin Cell Battery can cause internal chemical burns in as little as two hours and lead to death. Dispose of used batteries immediately. Keep new and used batteries away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.
Due to customs policy in international shipping, the battery may not be included. Please prepare them yourself.

MAINTENANCE:

 
 

 
 
 
 
 
 
 
 
 
 
 
 
 
- Please clean the product with dry soft cloth,don't clean this product with chemical cleaners: alcohol, ammonia water, glass cleaner, etc.
- Please keep the product away from fire, substances flammable and humid environments to prevent damage.
- Please keep the product away from water,and don't put liquid in the toy sets.

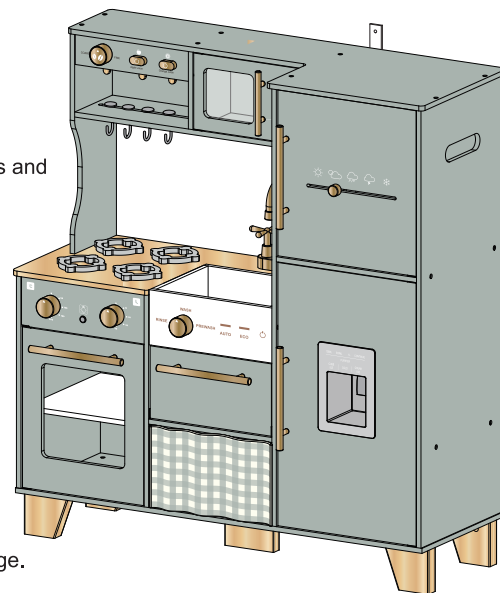

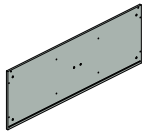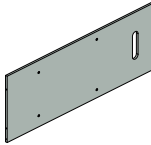

 
 
 
 
 

 
 
 
Product Parts

1		2		3		4	
	x1		x1		x1		x1
5		6		7		8	
	x1		x1		x1		x2
9		10		11		12	
	x1		x1		x1		x1
13		14		15		16	
	x1		x1		x1		x1




 
 
Product Parts

17		18		19		20	
x1		x1		x1		x1	
21		22		23		24	
x1		x1		x1		x1	
25		26		27		28	
x1		x1		x1		x1	
29		30		31		32	
x1		x1		x1		x1	






Product Parts

33		34		35		36	
	x2		x2		x1		x1
37		38		39		40	
	x4		x1		x1		x1
41		42		43			
	x5		x5		x1		



 







Hardware

44		45		46		47		48	
	M4*35mm				M4*8mm		M6*30mm		M4*32mm
	x1		x1		x6		x6		x55


Hardware

49  M4*18mm x12	50  M3*16mm x2	51  M3*12mm x12	52  M2.5*8mm x3	53  M3*8mm x4
--	---	--	--	--

Accessories

54  x1	55  x1	56  x1	57  x1	58  x1
59  x1	60  x2	61  x2	62  x2	63  x4

 
Accessories

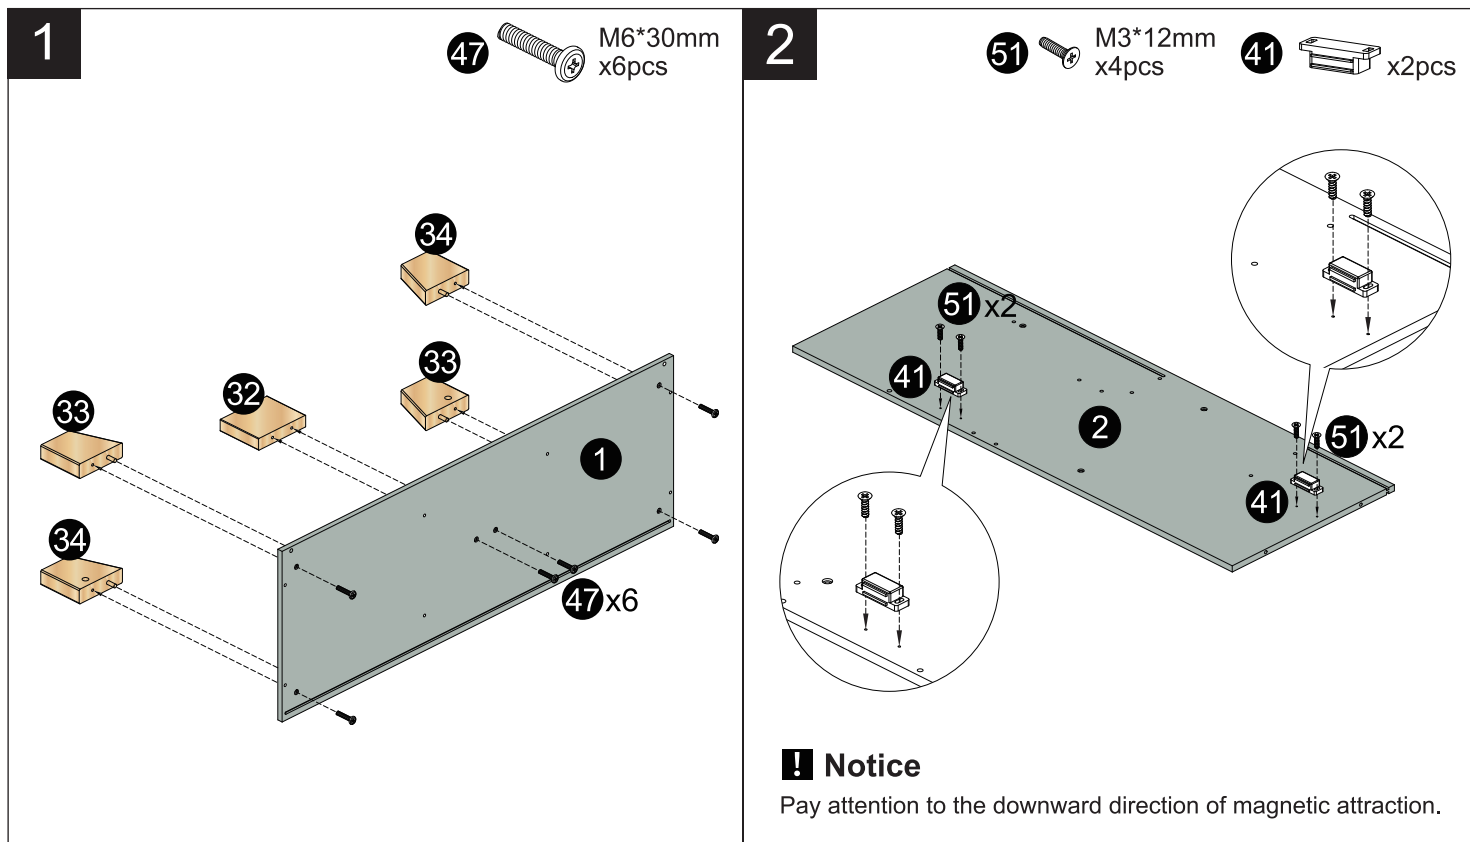


Assembly Instruction

3

 51  M3*12mm x4pcs

41  x2pcs

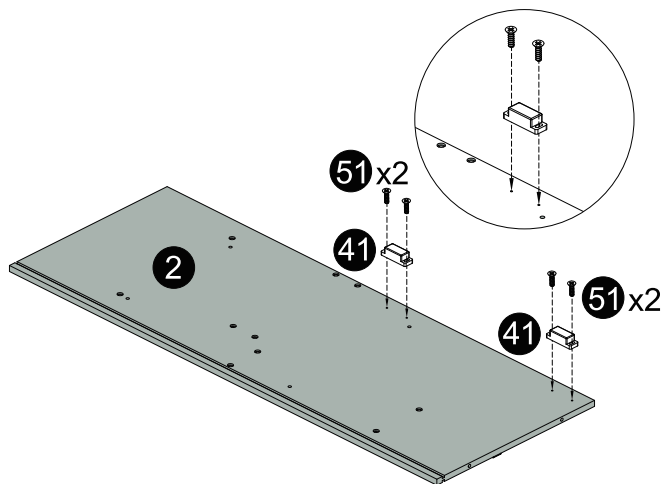 


! Notice

Pay attention to the downward direction of magnetic attraction.

4

 
48  M4*32mm x2pcs

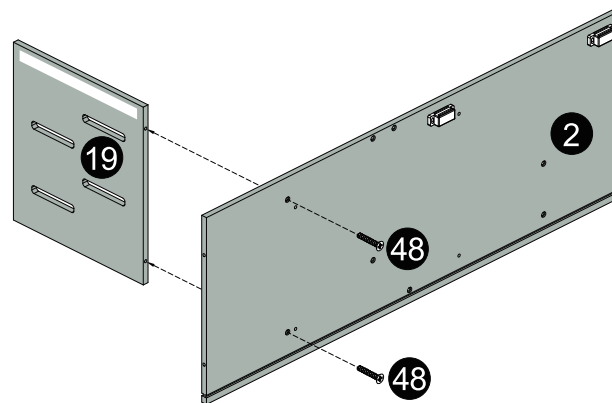

Assembly Instruction


5

 48  M4*32mm
x2pcs

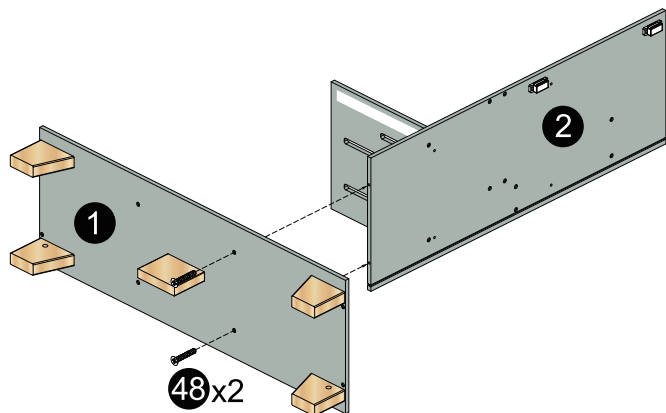

6

 
48  M4*32mm
x2pcs

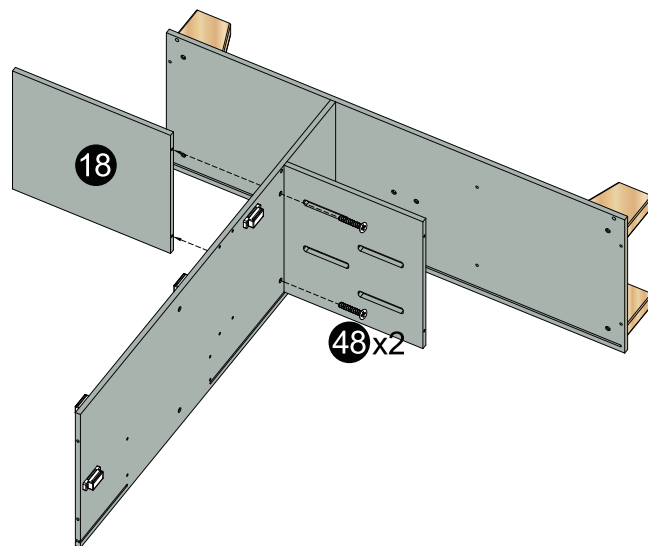

Assembly Instruction


7

 48  M4*32mm
x2pcs

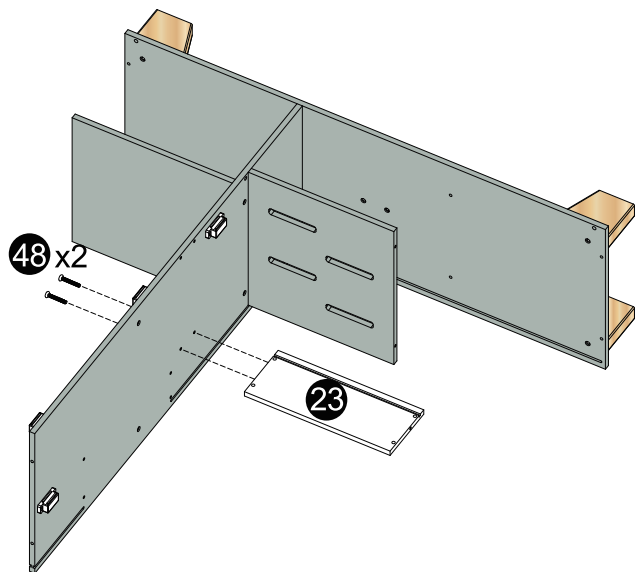


8

 49  M4*18mm
x2pcs

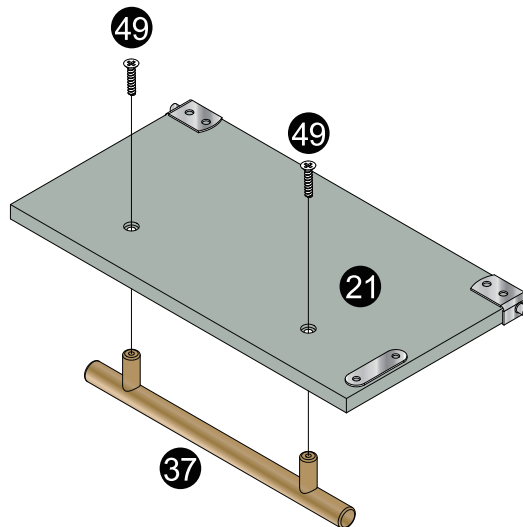


Assembly Instruction

 9

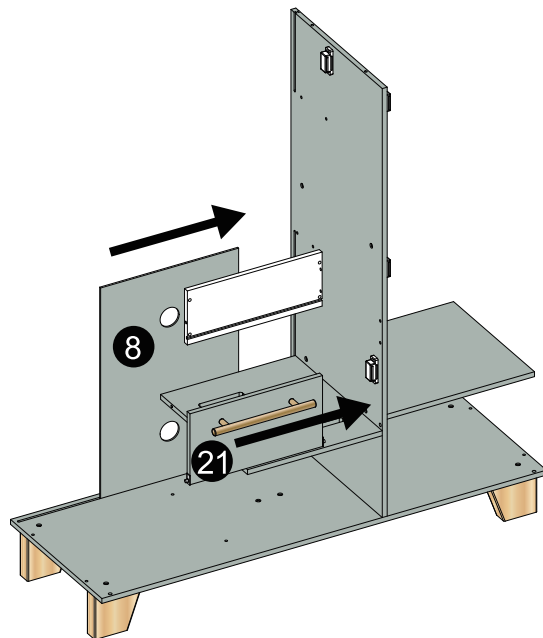

10

 51  M3*12mm x2pcs 41  x1pcs

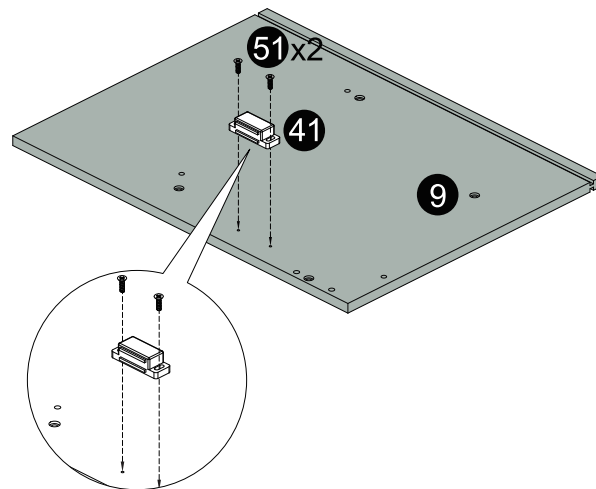


! Notice

Pay attention to the downward direction of magnetic attraction.

Assembly Instruction


11

 48  M4*32mm
x2pcs

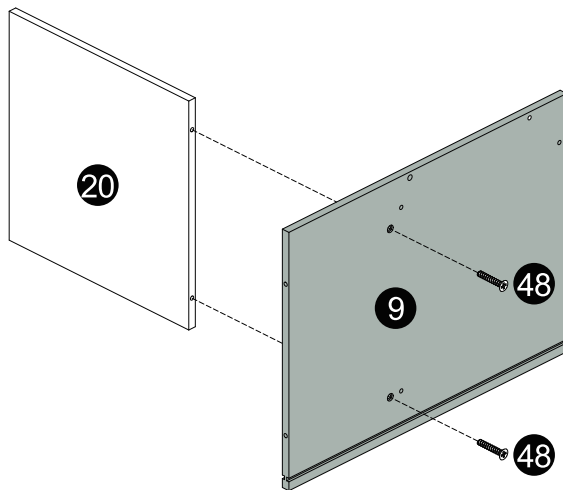

12

 
48  M4*32mm
x3pcs

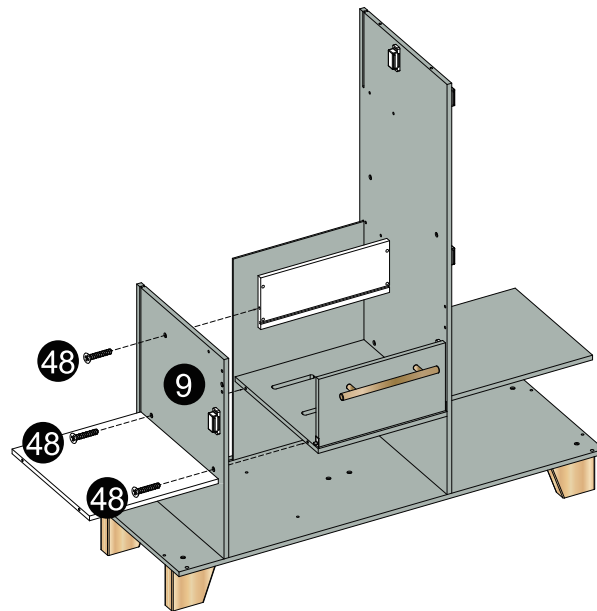


Assembly Instruction

13

 48 M4*32mm
x2pcs

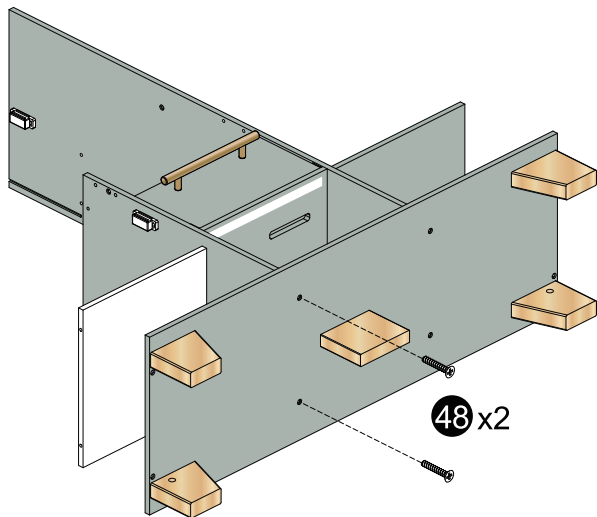


14

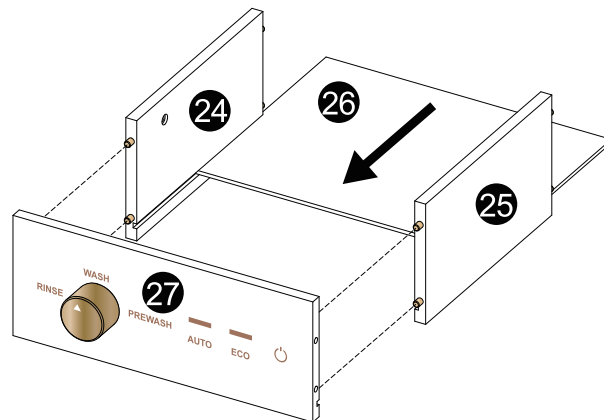 


Assembly Instruction

 15

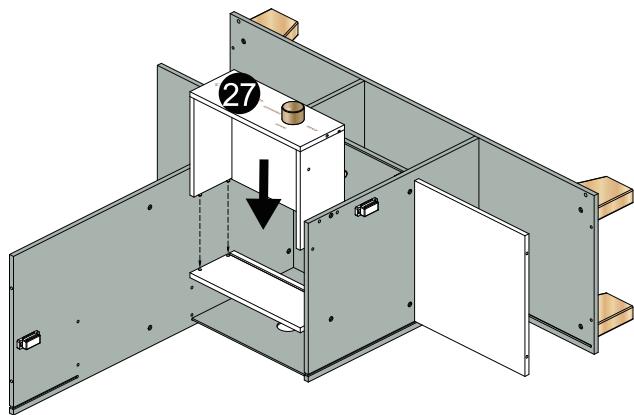

16

 
48 M4*32mm
x1pcs

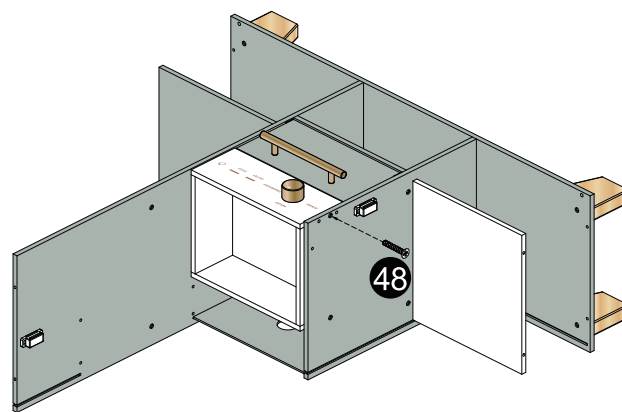

Assembly Instruction


17

 48  M4*32mm
x2pcs

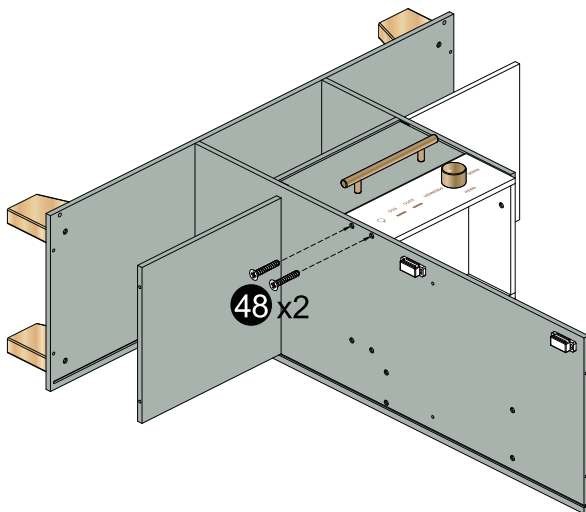


18

 
49  M4*18mm
x2pcs

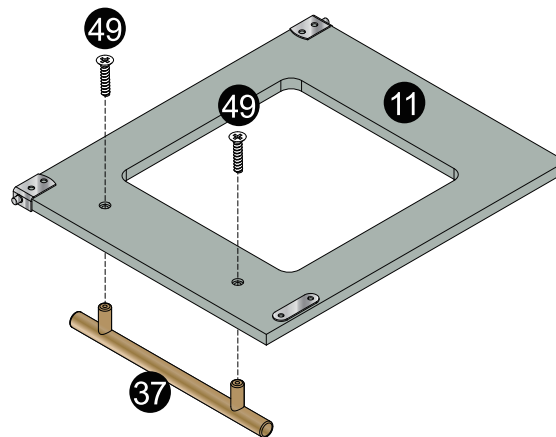


Assembly Instruction

19


 
52  M2.5*8mm
x3pcs

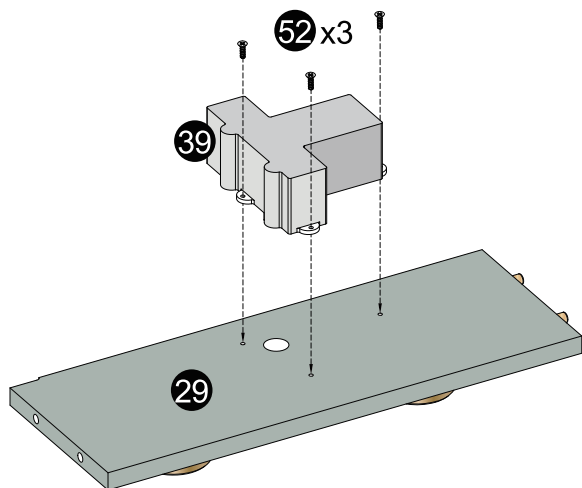


20

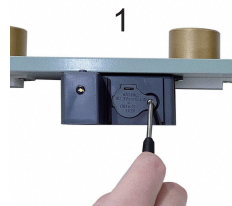 

Unscrew It

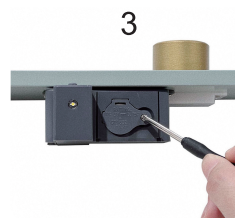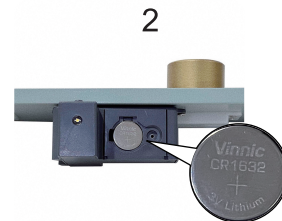  

Tighten It

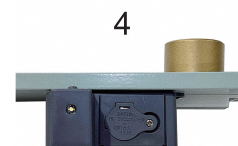 


Close the back cover.
Tighten the screw.

! Notice

Use a screwdriver to loosen the screws (do not unscrew them completely) open the back cover. Install one CR1632 3V battery that you provide.


Assembly Instruction

 21

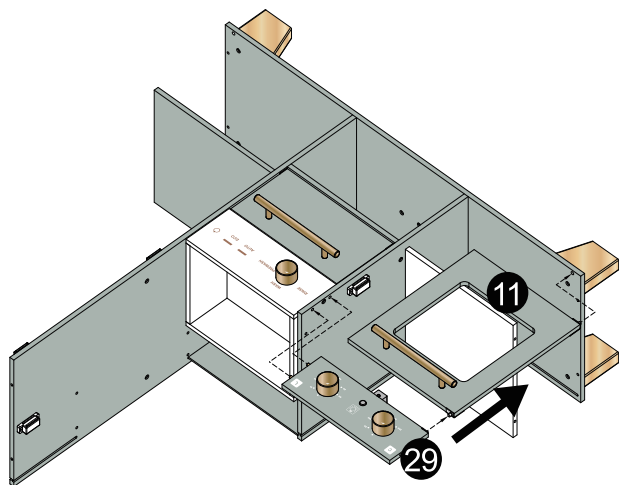

22

 48 M4*32mm
x4pcs

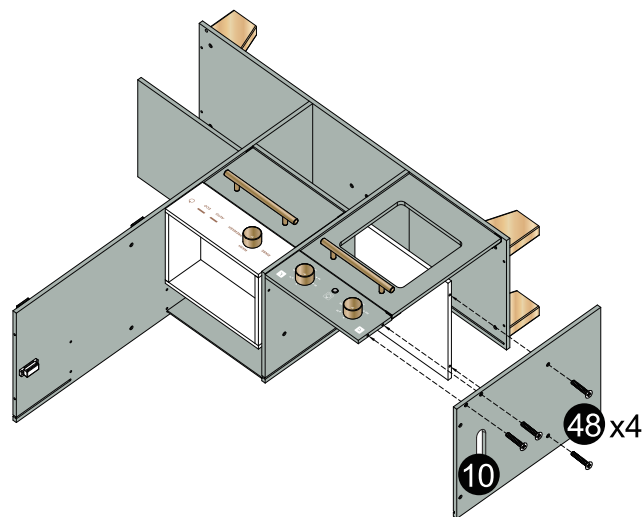


23



M4*32mm
x2pcs

48x2

 
24

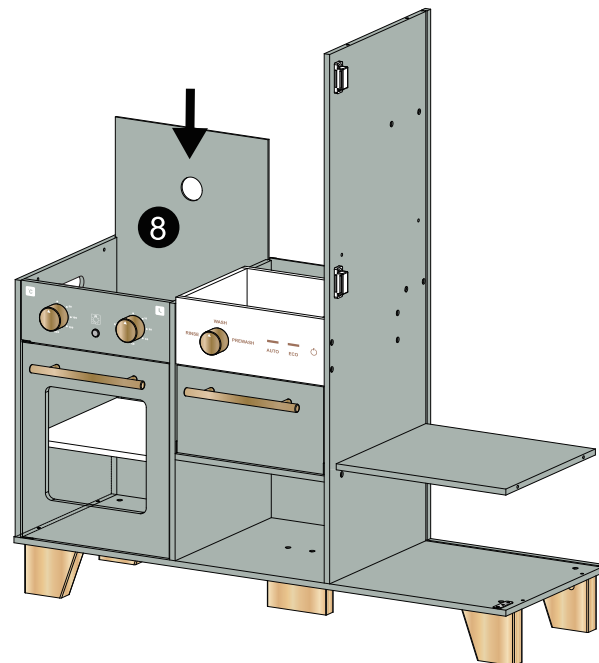

Assembly Instruction


25

 48 M4*32mm
x1pcs

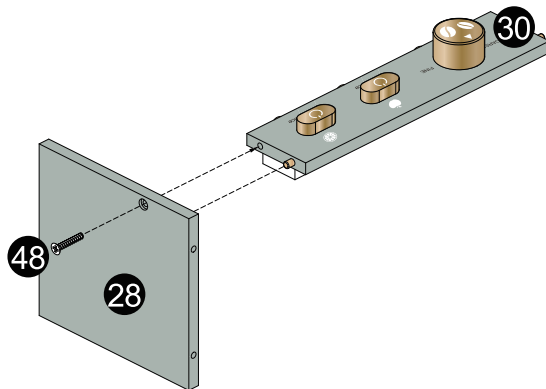

26

 48 M4*32mm
x2pcs

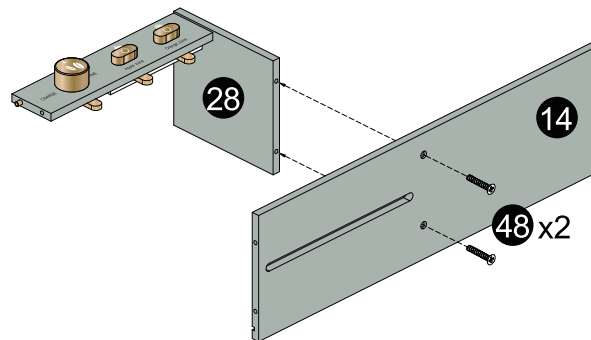


Assembly Instruction

27

48

 M4*32mm
x3pcs

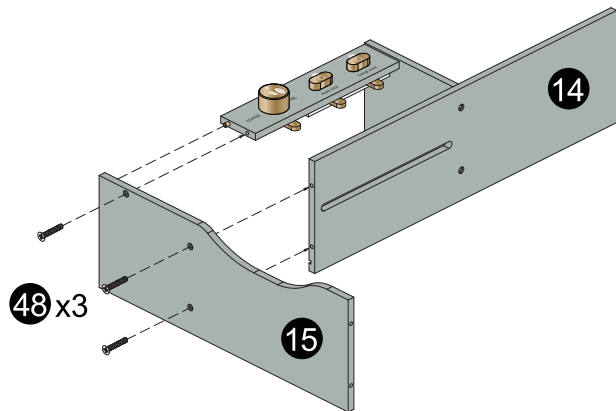


28

46

M4*8mm
x3pcs

42

 x3pcs

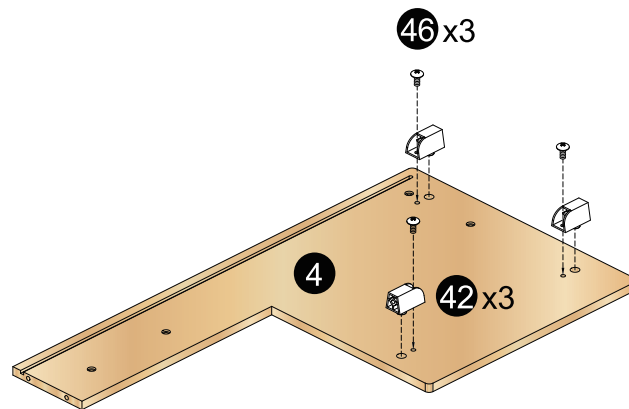


Assembly Instruction

29

50



 M3*16mm
x2pcs

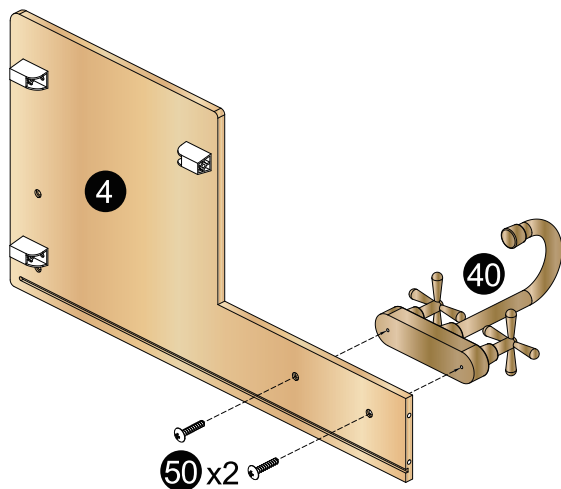


30

48




 M4*32mm
x2pcs

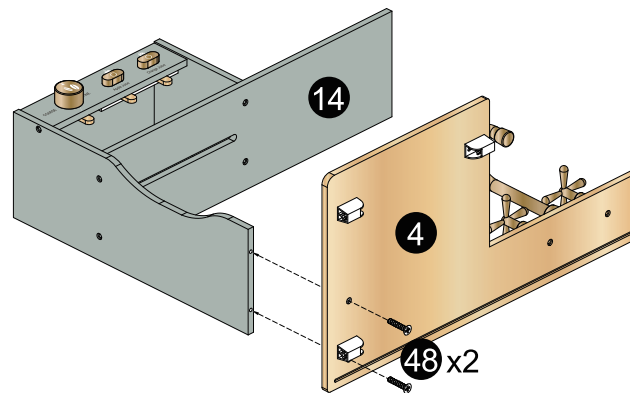


Assembly Instruction

 31

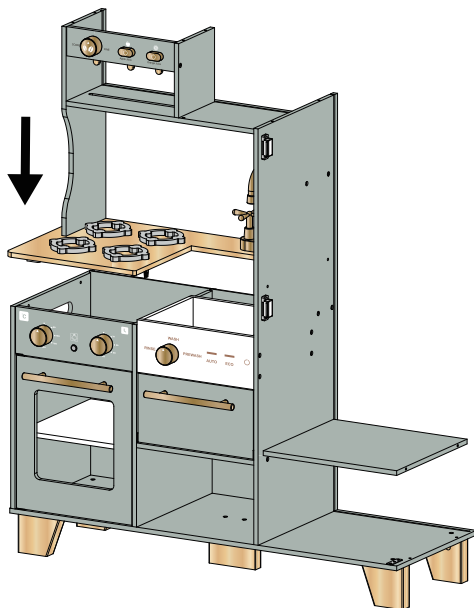

32

 48  M4*32mm
x5pcs

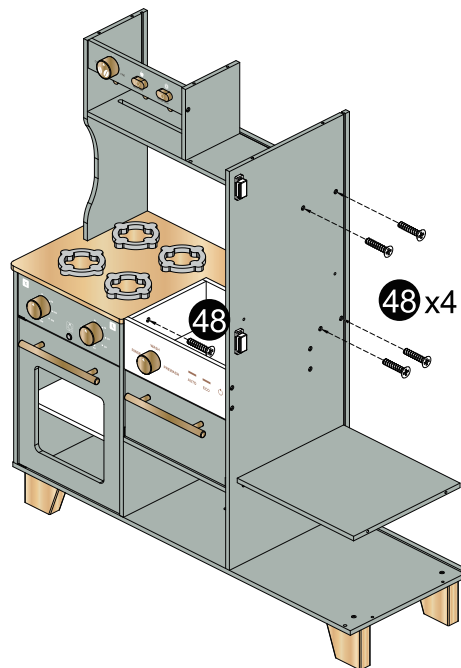


Assembly Instruction

33

48

 
M4*32mm
x2pcs

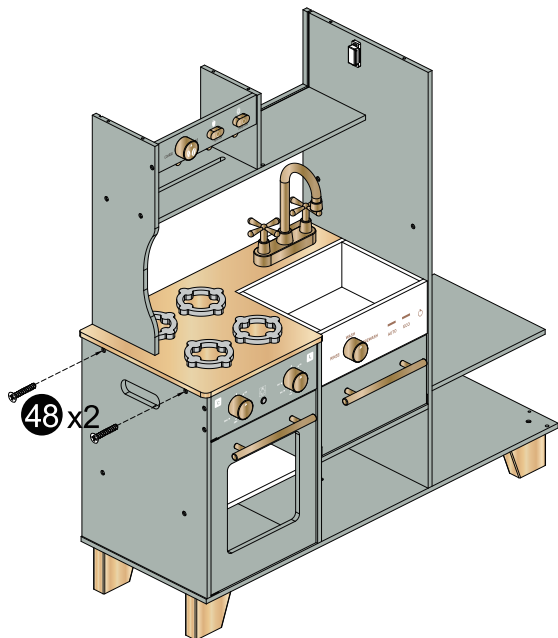

34

53

 
M3*8mm
x4pcs

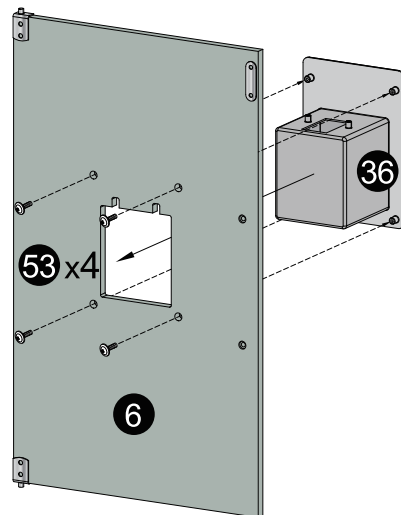

Assembly Instruction


35

 51  M3*12mm
x2pcs

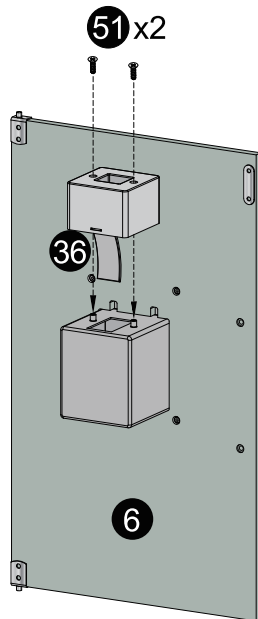


36

 49  M4*18mm
x2pcs

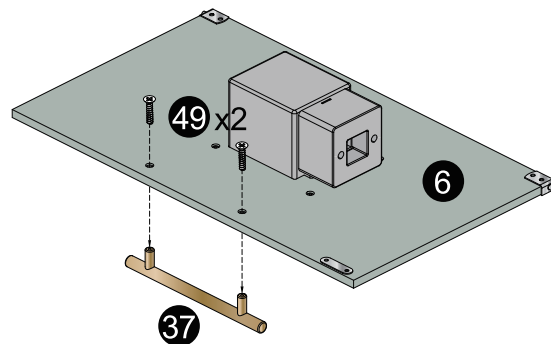


Assembly Instruction

 37

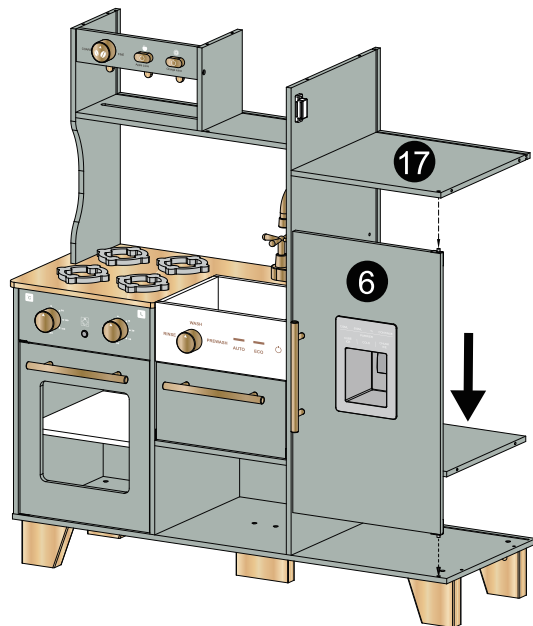

38

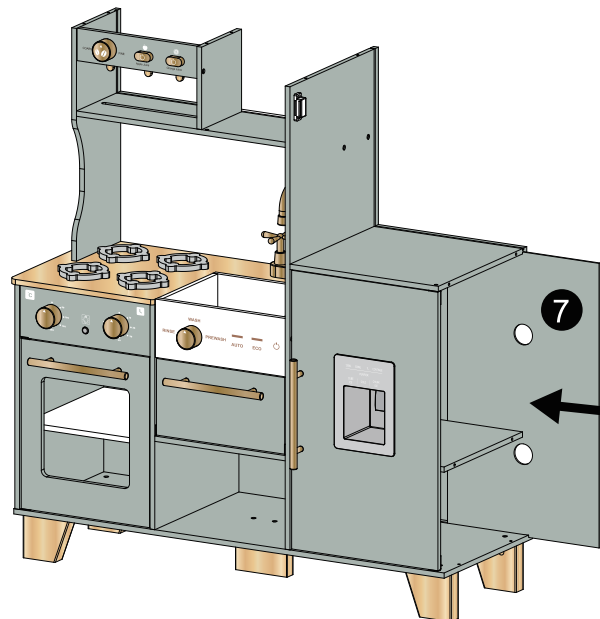 


Assembly Instruction

39

48



 M4*32mm
x2pcs

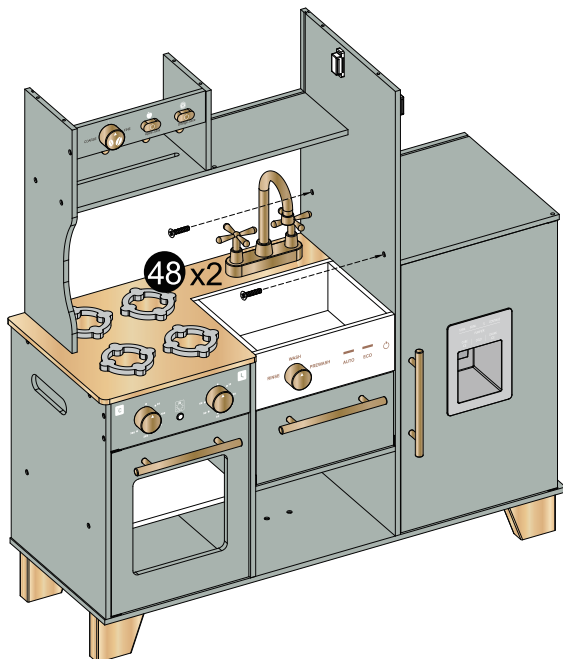


40

48



 M4*32mm
x4pcs

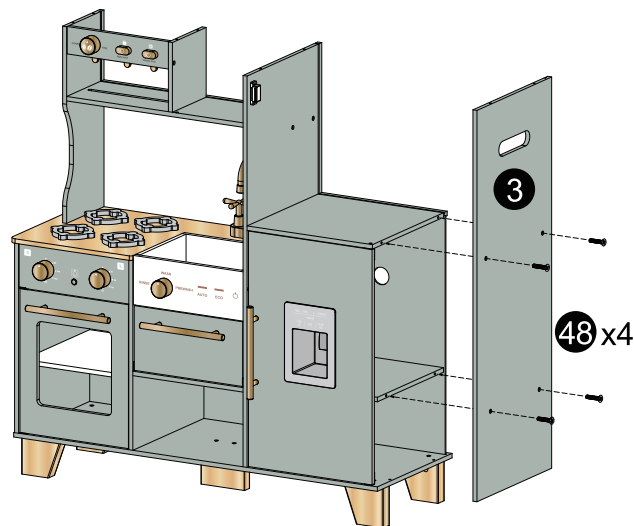

41



M4*32mm
x2pcs

48x2

42

 


13

Assembly Instruction


43

49 M4*18mm
x2pcs

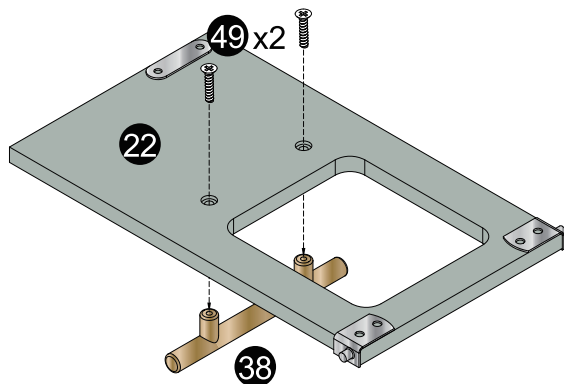

44

 
49 M4*18mm
x2pcs

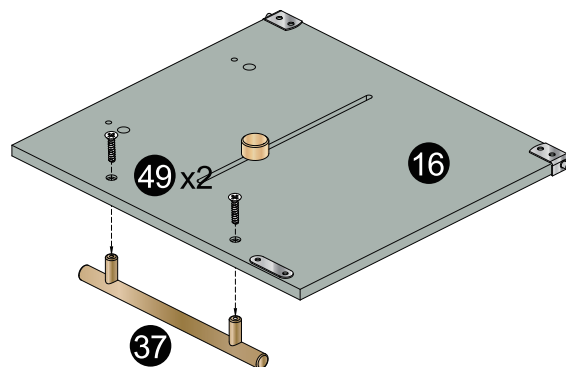

Assembly Instruction


45

 46  M4*8mm
x2pcs 42  x2pcs

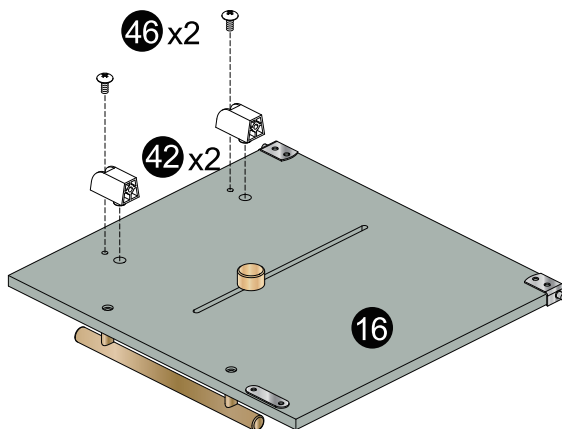


46

 49  M4*18mm
x2pcs

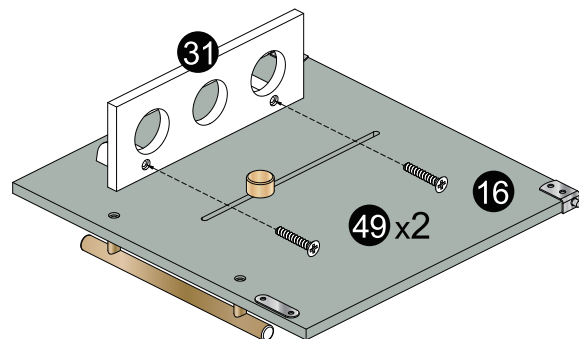


Assembly Instruction

 47

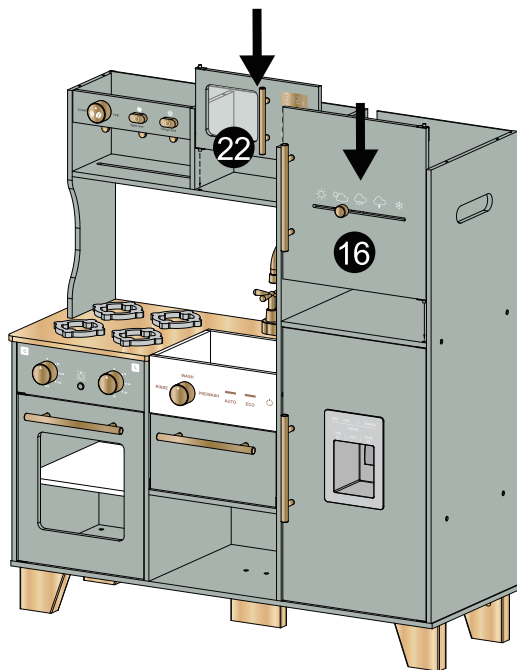


48

 46  M4*8mm
x1pcs

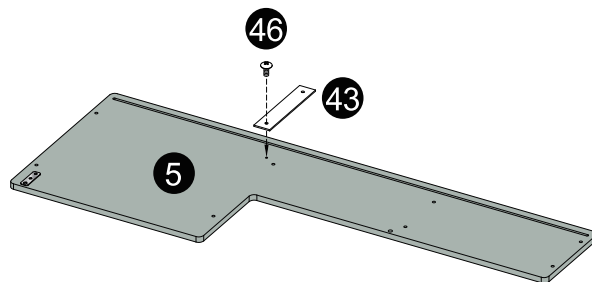


Assembly Instruction

 49

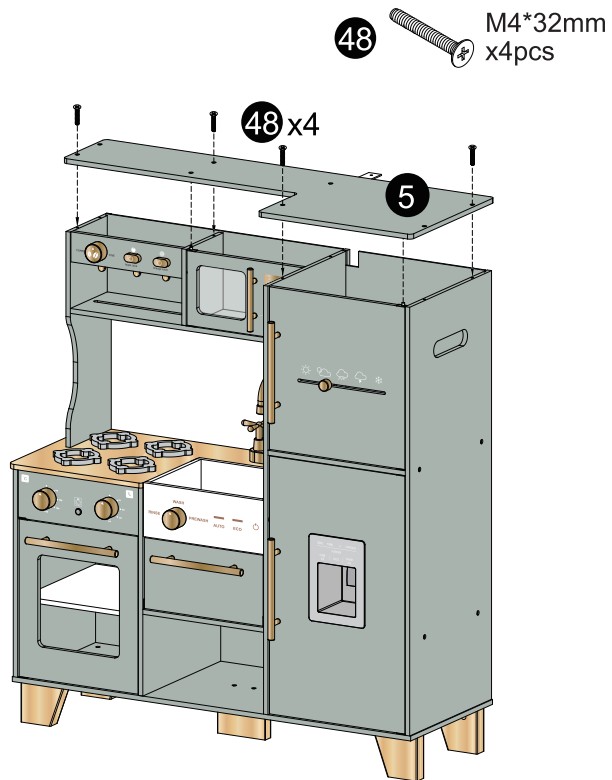


50

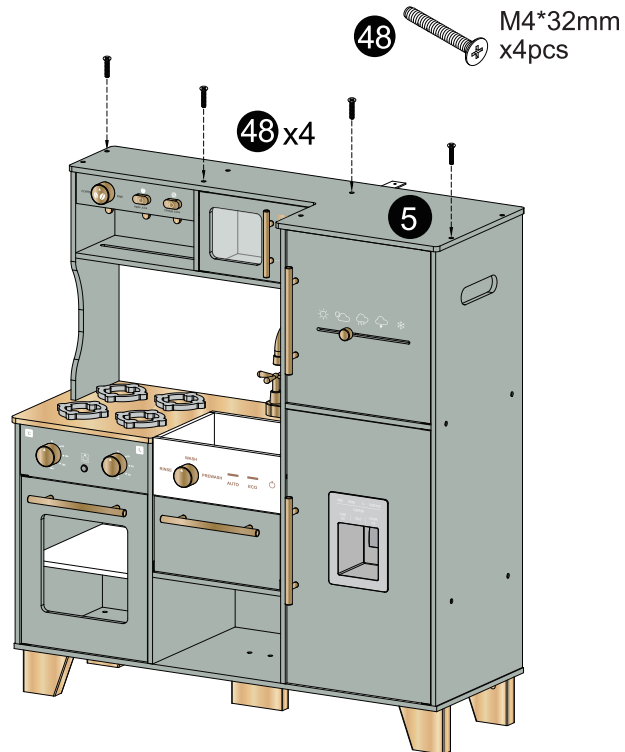 


Assembly Instruction

 51

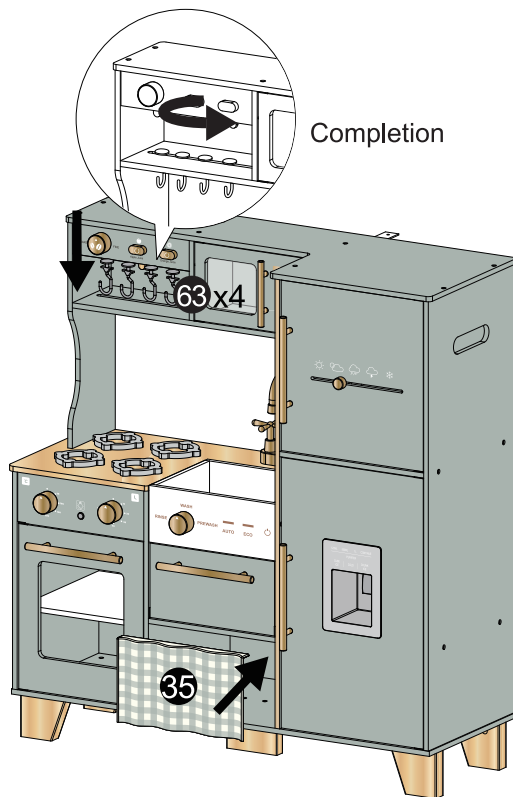


52

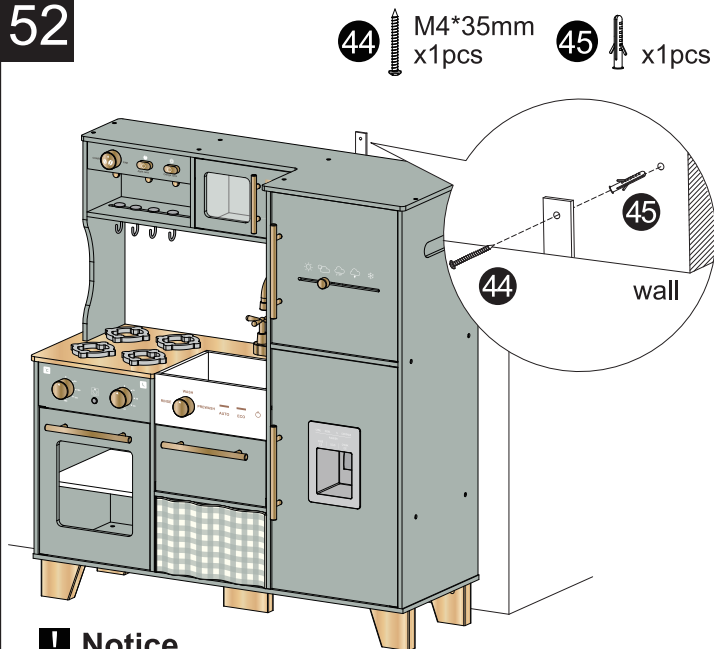 

! Notice

 Secure your child's play area with our anti-tip strap. Connect one end to the play kitchen and the other to the wall to prevent any forward tilting when a child reaches, pulls, or climbs on it.

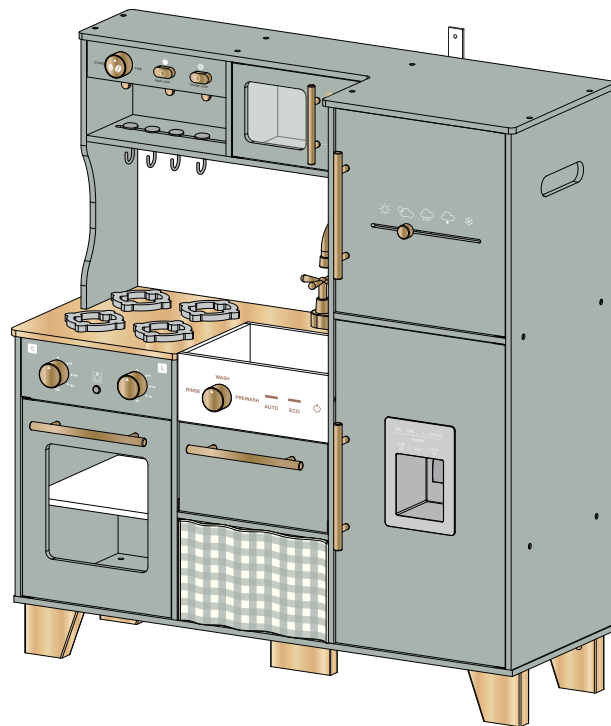

robud

www.robud.com