

ASSEMBLY INSTRUCTIONS DINING CHAIR

 
ASSEMBLY REQUIREMENTS:

1-Person
Assembly

Assembly Time
Per Chair (Approximate)

30 MINUTES

Tools Required
(Not Provided)




Thank you for purchasing our product!

Please refer and use this assembly instruction to assemble the product. Contact our customer service department in case there are any missing or damage parts or hardware. Replacement parts are normally shipped within 2 or 3 days.

Within 30 days from delivery date

We appreciate your business!

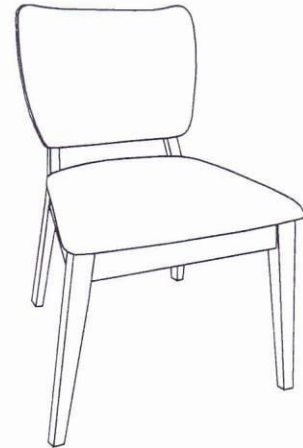

ASSEMBLY PREPARATION

1. Remove all packaging materials, staples and packing straps from the carton.
2. Refer to Parts List and Hardware List and ensure they are complete before you start assembling.
3. Place all wooden parts on a clean, flat and soft surface (e.g. carpet or rug) to prevent parts from getting scratched.

SAFETY PRECAUTION:

1. KEEP ALL HARDWARE PARTS OUT OF REACH OF CHILDREN.
2. DISPOSE PLASTIC PACKAGING MATERIAL IMMEDIATELY TO AVOID ANY RISK OF SUFFOCATION TO CHILDREN AND ANIMALS.

TIPS FOR ASSEMBLY:

1. Allow ample room for assembly and in close proximity to where product will be placed.
2. Assemble the product on a surface that does not scratch or damage the exterior gloss and finish of the furniture.
3. Please check all of the parts and quantities are included before assembly. Contact customer service for missing parts.
4. Identify all of the parts, hardware and quantities required for each step.
5. During assembly, do not over-tighten any fittings as this may cause damage.
6. DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT.
7. Always place the product on a flat surface.
8. Do not sit or stand on the partially assembled product; only use the product for which it is intended.

CARE AND MAINTENANCE

CLEANING - Use a slightly damp cloth to clean the product. Do not use bleach or abrasive cleaning material.

FITTINGS - Check all the fittings periodically and re-tighten as necessary. Do not use the product if any of the parts is damaged or broken.

This product is for indoor and household use only - not for commercial use.



ASSEMBLY INSTRUCTIONS DINING CHAIR

PARTS LIST (FOR 2 COMPLETE CHAIRS)

NO	COMPONENT	QTY
P1	CHAIR BACK	2
P2	SIDE RAIL	4
P3	FRONT LEG	2
P4	CHAIR SEAT	2

STEP 1

Identify the edge of Side Rail (P2) that has one slot for screw and 2 drilled hole. Insert Wood Dowel (C) into the 2 drilled hole and attach (P2) to Front Leg (P3) as shown. Use Allen Key (D) to drive JCBC Bolt (A) fitted with Spring Washer (B) to fasten (P2) to (P3). Do not tighten completely at this time.

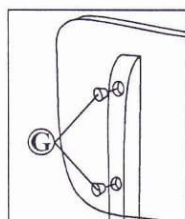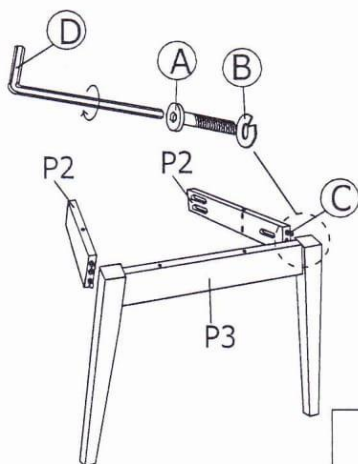

STEP 3

Place the Chair Seat (P4) bottom-side up on an elevated surface (e.g. table top). Center the seat frame to the Chair Back with rear of the seat against the Chair Back. Use Screw (F) to fasten the Chair Seat to the seat frame. Use a mallet or hammer to gently nail Leg Stud (E) into each end of the leg. Place the chair right-side up. The assembly of the chair is complete.

STEP 2

Lay Chair Back (P1) flat down on a material that does not scratch or damage the part.

Attach the subassembly completed in Step 1 to the Chair Back (P1).

Insert a Wood Dowel into the drilled hole between the 2 screw slots on the other end of each Side Rail. Fasten Side Rails to Chair Back with JCBC Bolt (A) fitted with Spring Washer (B) by using Allen Key (D).

Do not tighten completely until all 4x (A) are in place. Tighten JCBC Bolt (A) in Step 1 completely. Do not over-tighten. Do not use power tools. Affix Wood Button (G) into hole Chair Back (1).

