

 
 







CARE AND MAINTENANCE

Store outdoor furniture indoors or cover well when not in use.
Remove wooden furniture from standing water. Dust regularly with small brush or vacuum
Spills should be taken care of immediately before they harden or stain with a slightly dampened sponge.


NOTICE

 - * Please make sure that you have all parts indicated before you begin assembly of this item
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly
- * This item may require periodic tightening

Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Seat Frame		1X
B	Leg Frame		2X
C	Back frame		1X
D	Cross bar of leg		1X
E	Screw	 6x60mm	2X
H1	Allen bolt L	 6x60mm	2X
H2	Allen bolt L	 6x50mm	5X
H3	Horizontal spread		2X
H4	Allen key		1X

Product Dimensions:24" W x 23.62" D x 30.31" H

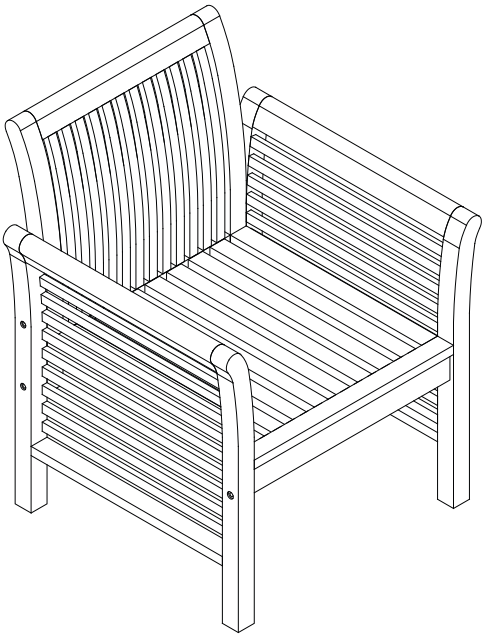


PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.


Estimated Assembly Time: 10 minutes.

Tools Required for Assembly (included): Allen Key


1

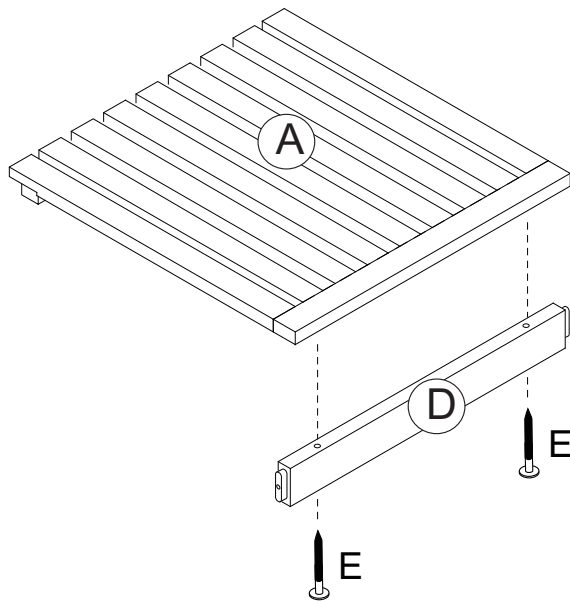

2

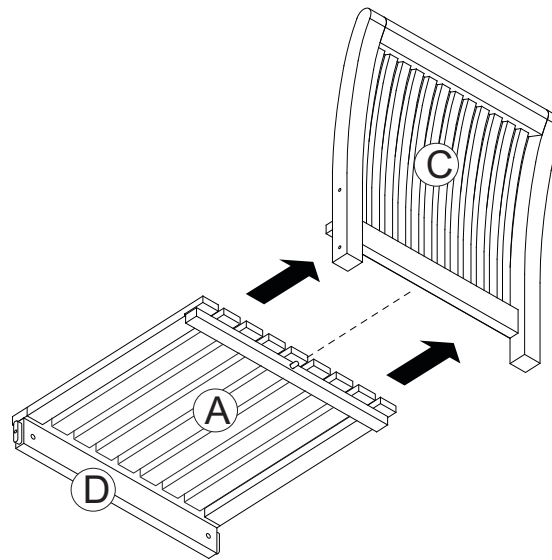

3

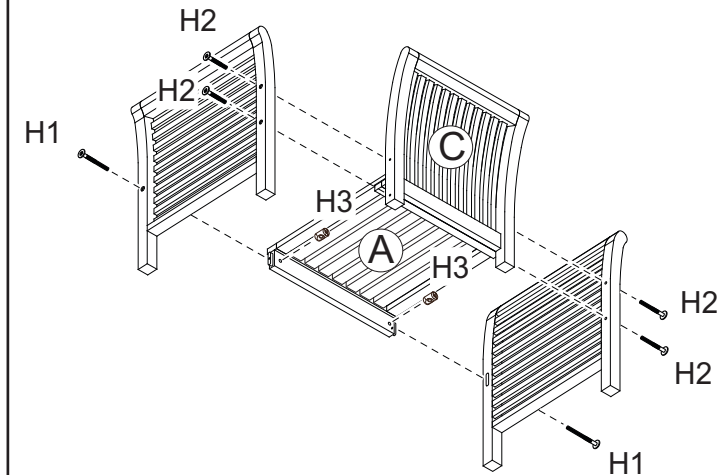

Step 1

Attach seat frame (C) to cross bar of leg (D), use screws (E) and tighten with allen key (H4).

Step 2

Connect back frame (A) with seat frame (C) as arrow direction.

Step 3

Attach leg frame (B) to back frame (A), use allen bolts (H2), tighten with allen key (H4). Attach leg frame (B) to seat frame (C), use allen bolts (H1) & horizontal spreader (H3), tighten with allen key (H4).