




Thank you for your purchase of this quality clock. Please read these instructions carefully and store in a safe place for future reference.

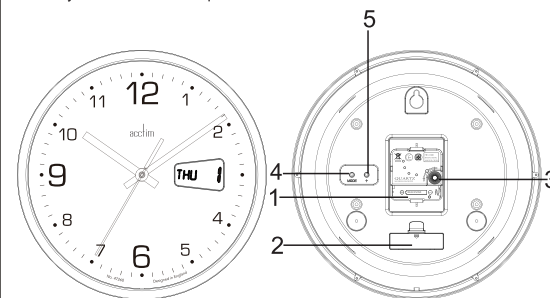

- A. Front case      B. Rear Case (Buttons)
- 1 –CLOCK BATTERY COMPARTMENT (1)
  - 2 –LCD DISPLAY BATTERY COMPARTMENT (2)
  - 3 –TIME SET KNOB
  - 4 –MODE
  - 5 –“+”
- 1

## FRONT VIEW (LCD DISPLAY DESCRIPTION)



## GETTING STARTED

- 1.Insert 1 X AA Alkaline battery into the battery compartment (1) on the analog movement, taking care to observe the polarity (+) and (-).
- 2.Open the battery compartment (2) cover and insert 1x AA Alkaline battery into the battery compartment, taking care to observe the polarity (+) and (-).
- 3.Replace the battery compartment (2) cover.

## SETTING THE TIME ON THE ANALOG PART

- To set the time on the analog part, rotate the “Time set knob” until the correct time is reached.

## TO SET THE CALENDAR MANUALLY

- Once the batteries are installed properly, the LCD will display “THU 1 ”.
- Press the **MODE** button once and the year digit will flash on LCD.



- Press the “+” button to adjust to the correct year (press and hold the “+” button for more than 3 seconds to fast advance).
- Press the **MODE** button once:  
The month digit will flash, press the “+” button to adjust to the correct month.



- Press the **MODE** button once:  
The date digit will flash, press the “+” button to adjust to the correct date.



- Press the **MODE** button once:  
The hour digit will flash, press the “+” button to adjust to the correct hour.



- Press the **MODE** button to complete.



## SETTING THE LANGUAGE OF DAY OF THE WEEK

- Press and hold the **MODE** button for more than 3 seconds:  
The language of day of the week flash, press the “+” button to set the language, English (ENG), German (GER), French (FRE), Italian (ITA), and Spanish (ESP), Dutch (NED), Danish (DAN).



- Press the **MODE** button to complete.
- If no key is pressed for 30 seconds, the clock will revert to normal calendar display.

## Reference table for different languages of day of the week:

English (ENG)→German (GER)→ French (FRE)→ Italian (ITA)→ Spanish (ESP)→ Dutch (NED)→Danish (DAN)→English(ENG)

	ENG	GER	FRE	ITA	ESP	NED	DAN
Sunday	SUN	SON	DIM	DOM	DOM	ZON	SON
Monday	MON	MON	LUN	LUN	LUN	MAA	MAN
Tuesday	YUE	DIE	MAR	MAR	MAR	DIN	TIR
Wednesday	WED	MIT	MER	MER	MIE	WOE	ONS
Thursday	THU	DON	JEU	GIO	JUE	DON	TOR
Friday	FRI	FRE	VEN	VEN	VIE	VRI	FRE
Saturday	SAT	SAM	SAM	SAB	SAB	ZAT	LOR

## CHANGING THE BATTERIES

It is recommended that you replace the batteries annually even if the product is still running. Only use AA (1.5V) Alkaline batteries in this clock. Remove the batteries if the clock is stored or not in use. Remove exhausted batteries from the product.

**Warning:** Do not recharge non-rechargeable batteries.  
Please dispose of used batteries in a responsible manner. For more information please contact your local authority.

## MAINTENANCE

A soft cloth may be used to clean your clock. Do not use any corrosive cleaner or chemical solutions on the clock. Keep the clock clean and dry to avoid any problems.

## YOUR GUARANTEE

Your clock is guaranteed for 24 months from the date of purchase against any faults arising from defective materials or manufacture. Damage caused through careless handling, misuse or in transit is expressly excluded. Should this clock fail within 24 months please return it in the first instance to your retailer.

## Environmental Protection

**Disposal of electrical & electronic equipment**  
Do not dispose of this product with household waste. For the proper treatment, recovery and recycling please take this product to the appropriate collection point. If you are unsure of where this is contact your local authority. Improper disposal may be harmful to the environment.



For more innovative Acctim products please visit: [www.acctim.com](http://www.acctim.com)