





ASSEMBLY INSTRUCTION

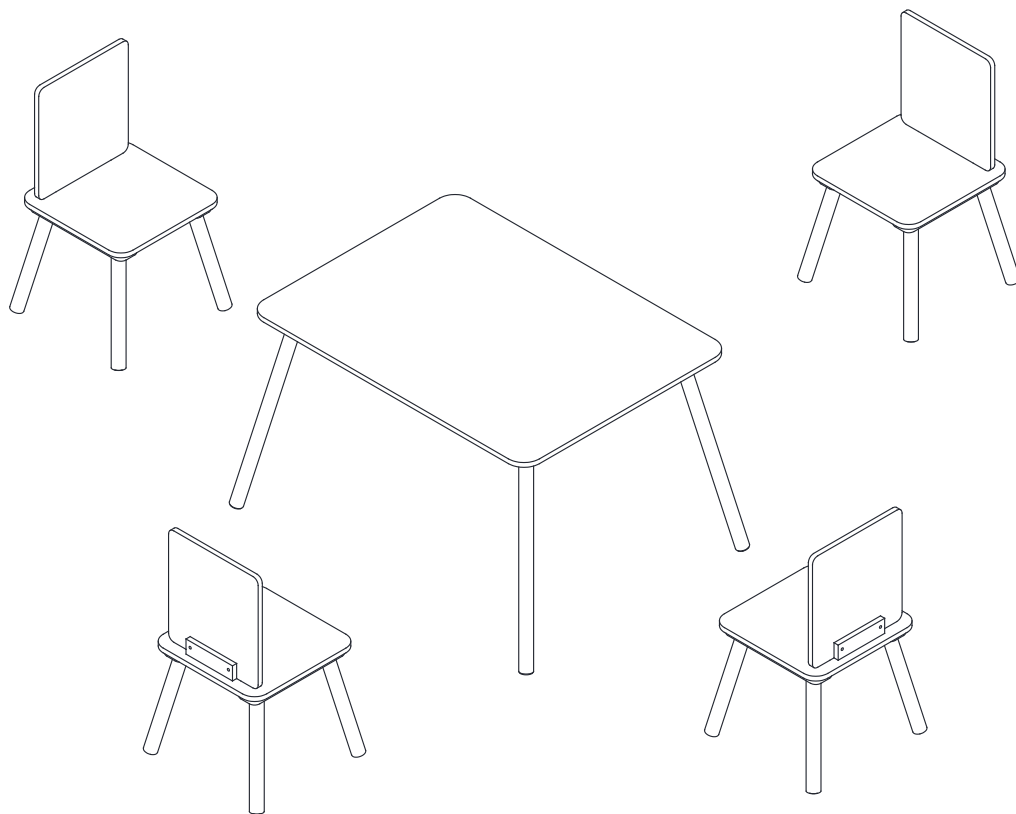

AX1PC

BX4PC



CX4PC

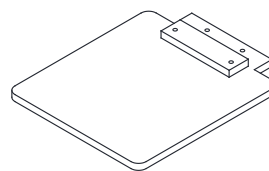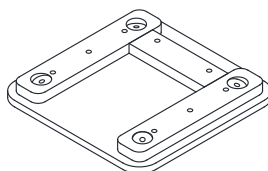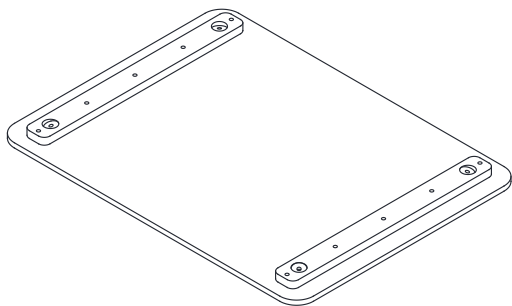


DX4PC

EX16PC

  
FX8PC




1

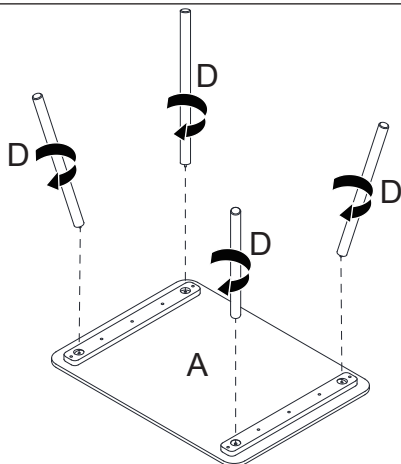

2

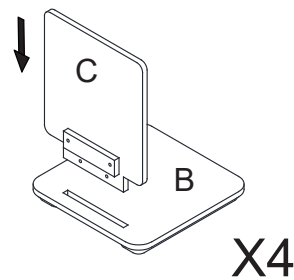

3

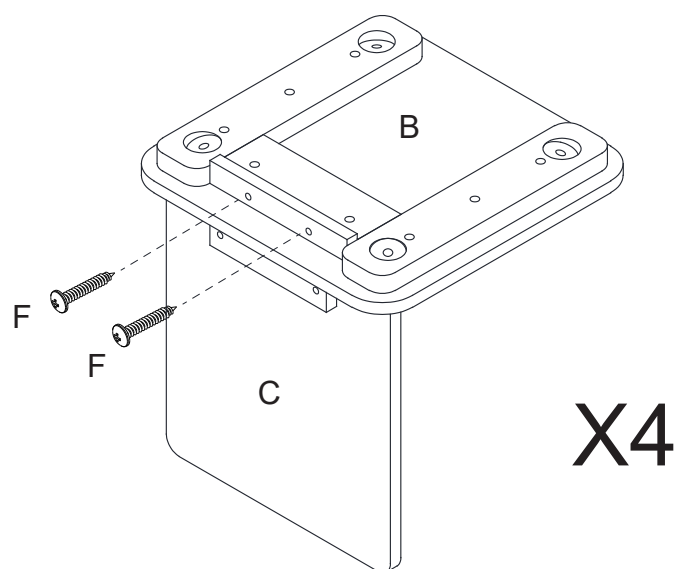

4

