 


Manual Book

Ceiling Fan With Lights

Model No.: FS1030-50 / FS1030W-50 / FS1030B+WD-50 /
FS1030B-60

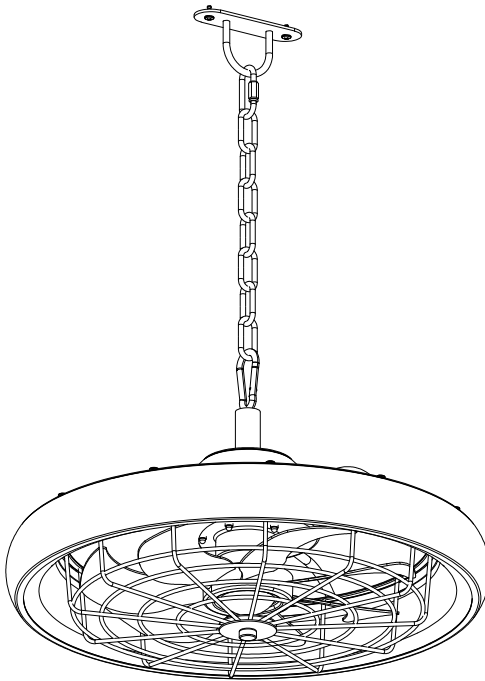

Scan for Installation Video



APP Control Applicable

Safety Rules

1. Be sure the power to the wires you are working on is disconnected, either the fuse is removed or the circuit breaker is turned off. Turning the power off using the light switch is not sufficient to prevent electrical shock.
2. A qualified licensed electrician is required for the installation.
3. The outlet box and support structure must be securely mounted and capable of reliably supporting a minimum of 70 pounds. Use only UL (cUL for Canadian Installation) listed mounting boxes marked "FOR FAN SUPPORT".
4. The fan must be mounted with a minimum of 7 feet clearance from the trailing edge of the blades to the floor.
5. Do not operate reversing switch while fan blades are in motion (if applicable). The fan must be turned off and the blades stopped before reversing the blade direction.
6. Do not place any objects in the path of the blades.
7. To avoid personal injury or damage to the fan and other items, be cautious when working around or cleaning the fan.
8. Do not use water or detergents when cleaning the fan or fan blades. A dry dust cloth or lightly dampened soft cloth will be suitable for the cleaning.
9. After marking electrical connections, spliced conductors should be turned upward and pushed carefully up into the outlet box. The wires should be spread apart with the grounded conductor on one side of the outlet box.
10. Electrical diagrams are reference only, different fan lights may have different light shades and bulbs.
11. Use only our replacement parts. This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules.

These limits are to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and radiate radio frequency energy and if not installed and used in accordance with the instructions may cause harmful interference to radio communications.

Warning:

To reduce the risk of personal injury, use only the two steel screws and washers provided with the outlet box for mounting to the outlet box. Most outlet boxes commonly used for the support of lighting fixtures are not acceptable for fan support and need to be replaced, consult a qualified electrician if in doubt.

To reduce the risk of fire, electric shock, or personal injury, mount the fan to the outlet box marked "acceptable for fan support".

 
To reduce the risk of personal injury, do not bend the blade brackets (also referred to as flanges) during assembly or after installation. Do not insert objects in the path of the blades.

Installation Preparation


Tools You Need




☒ Ladder

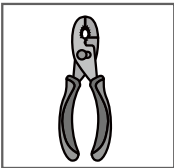


☒ Pliers

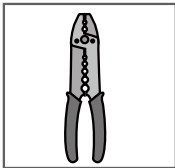 

☒ Wire Strippers

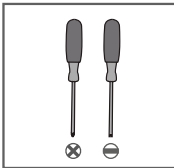 

☒ Screwdrivers



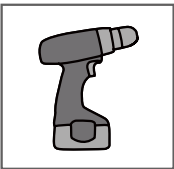 


☐ Power Drill (optional)




☐ Drill Bit (optional)

   
DIY Installation Supported

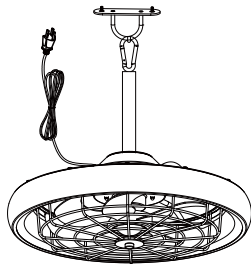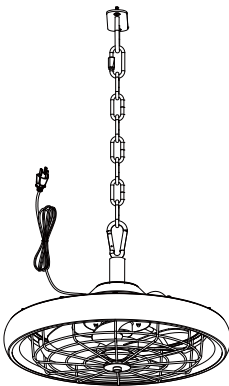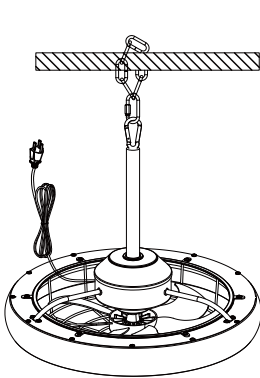

Packing List

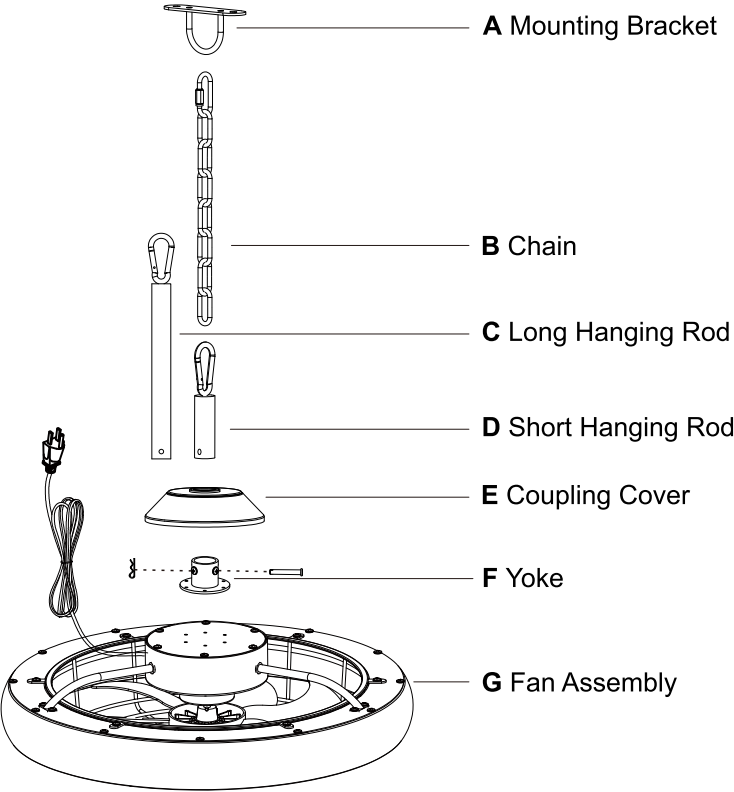 

Installation Kit

 
AA	2x	BB	2x	CC	2x	DD	6x
							
Anchor Bolt		Wood Screw		Washer		Yoke Screw	
EE	1x	FF	1x	GG	1x	HH	2x
							
Cord Tie		Gloves		Remote Control & Holder		Remotel Holder Anchor & Screw	

NOTE:
 The listed quantity is for installation, extra hardware may be included.

Installation Instructions

1. Install the Yoke

 
Align the screw holes of the yoke (F) with those of the fan assembly (G), then secure using the yoke screws (DD).

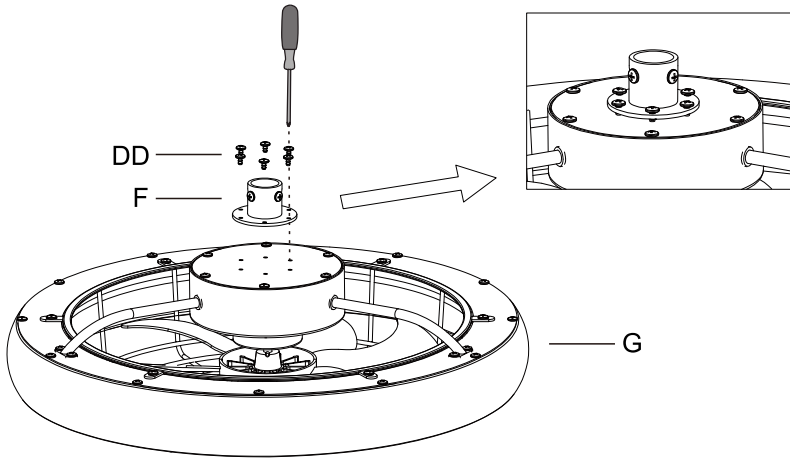



2. Mount the Bracket (2 Options)

Option 1. (For Solid Wood Structure)

 
Use wood screws (BB) and washers (CC) to fix the mounting bracket (A) on the solid wood structure.

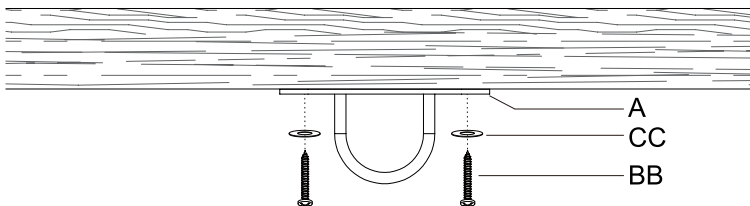


Option 2. (For Concrete Structure)

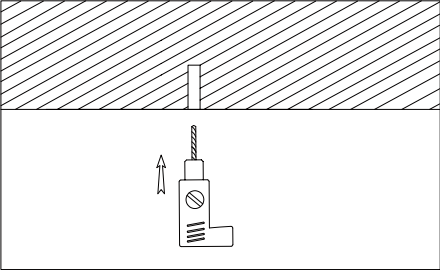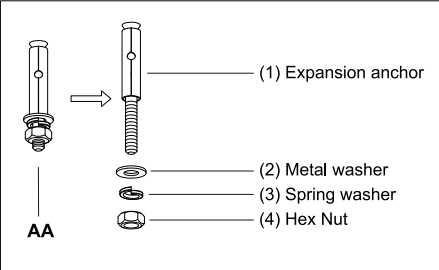  

 
Step 1 : Drill the holes.

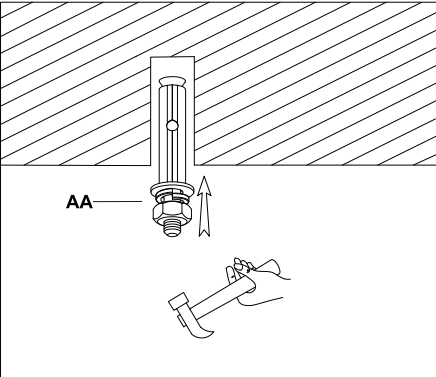

 
Step 2 : Drive (AA) into the hole.

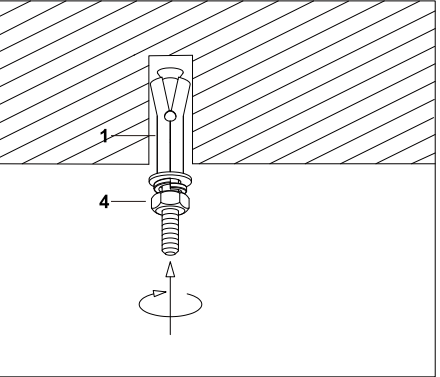

 Step 3 : Tighten (4) until (1) is secure.

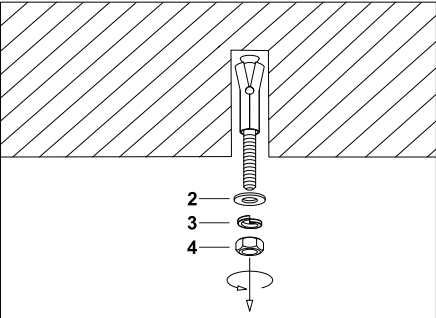

 
Step 4 : Remove (4), (3), and (2).

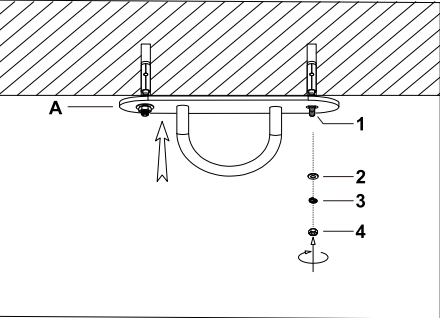


Step 5 : Attach (A) onto the (1), fit in (2), (3), and tighten with (4).

3. Install the Hanging Rod

 
Step 1 : Remove the clevis pin and R pin from the yoke (F).

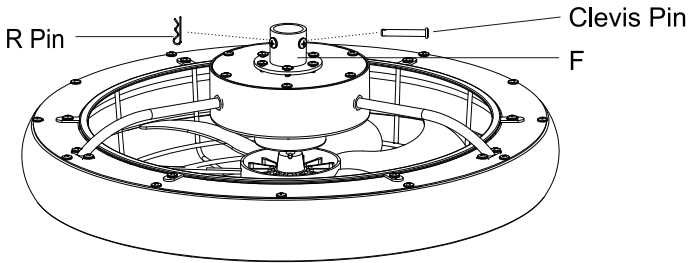

 Step 2 : Pass the hanging downrod (C or D) through the coupling cover (E).

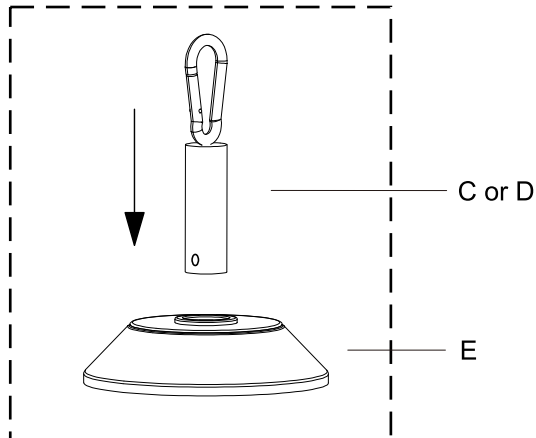


 Step 3 : Loosen the set screw on the yoke (F).

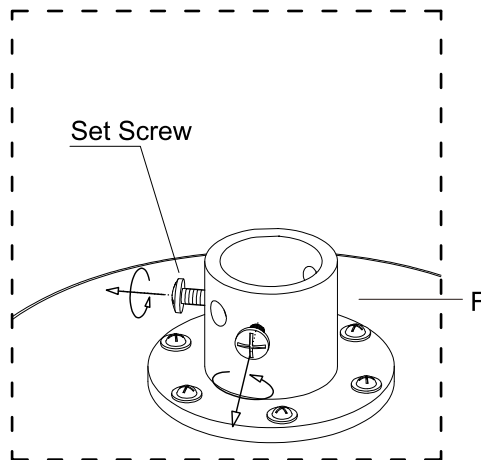


Step 4 : Align the holes of the hanging rod (C or D) with those in the yoke (F), insert the clevis pin and R pin that were removed from the yoke (F).

 Step 5 : Tighten the set screw on the yoke (F) to secure the hanging rod (C or D).

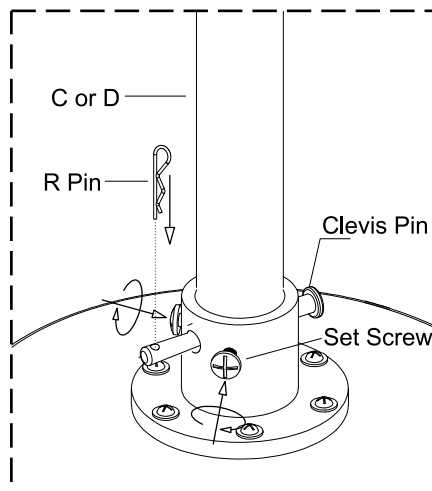

 
Step 6 : Fit the coupling cover (E) onto the fan.

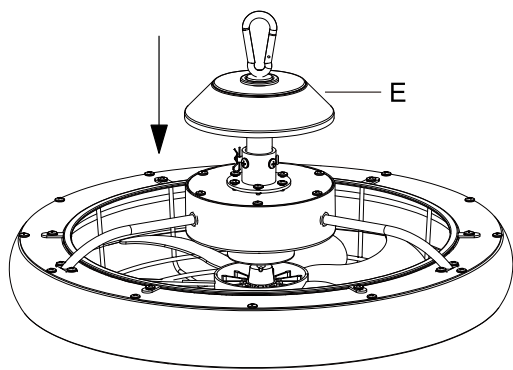

4. Install the Chain


Step 1 : Connect the fixture loop to the chain (B).

 Step 2 : Loosen the quick link of the chain (B), then connect to the mounting bracket (A), and finally tighten the quick link securely.

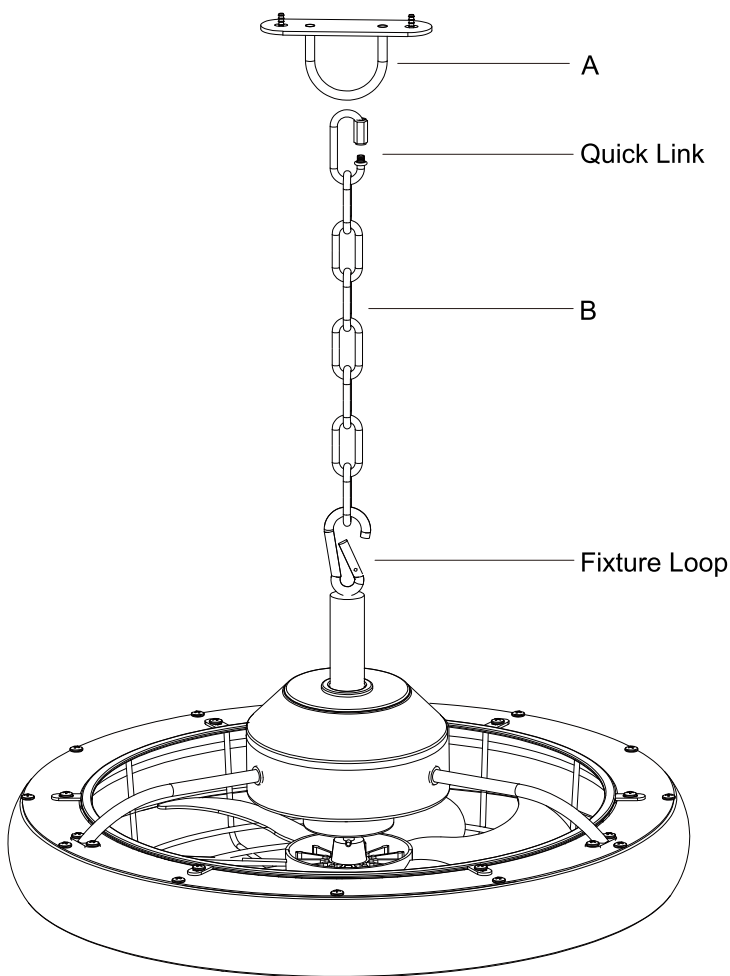


5. Organize the Supply Wire

 
Step 1: Secure the supply wire with cord tie (EE) .

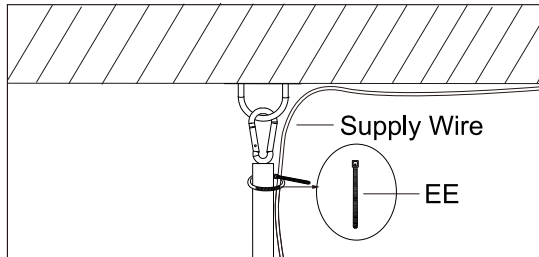

 Step 2: Plug in and operate with remote controller.

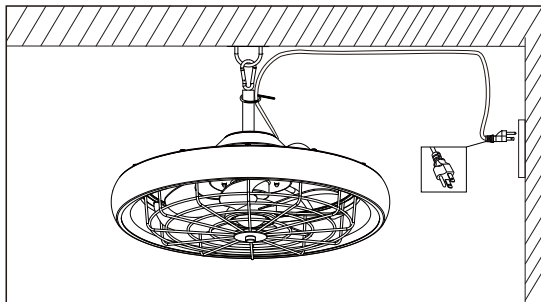

 6. Install the Remote Holder

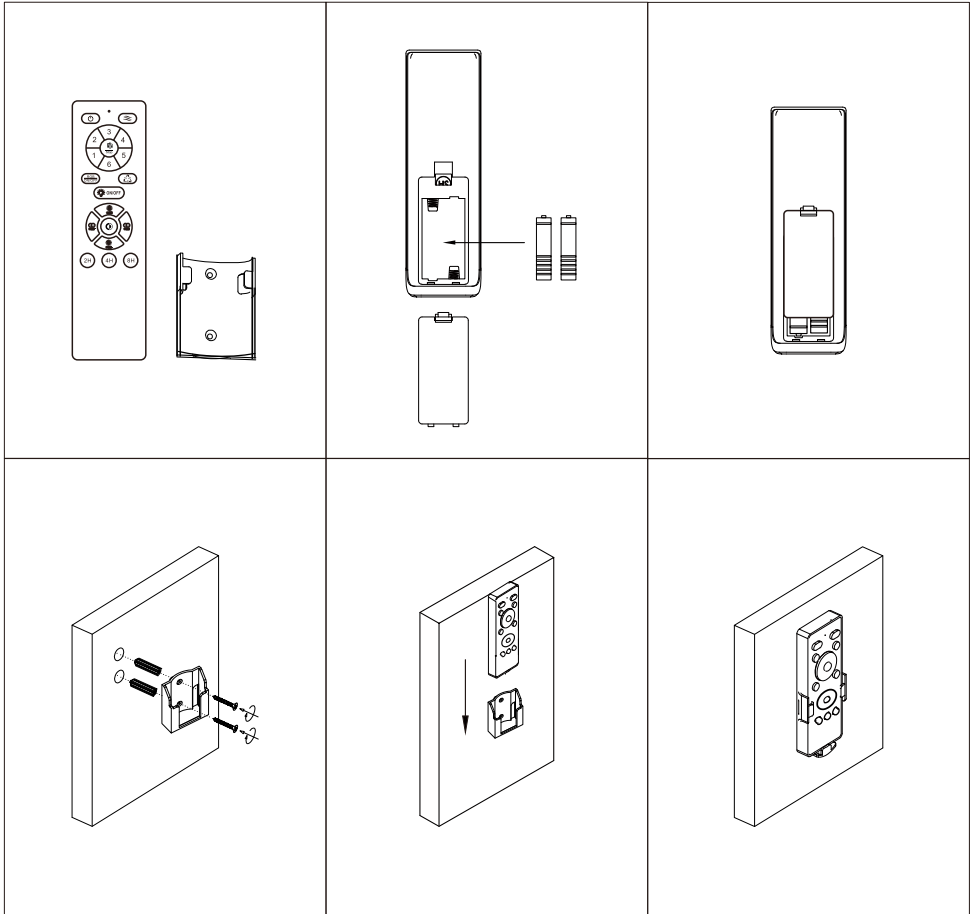

Step 1 : Insert 2 batteries before using : AAA 1.5V battery x 2pcs (not included).

Step 2 : Mark and drill screw holes in the wall, then insert the remote plastic anchors.

Step 3 : Use remote wood screws to fix the remote holder onto the wall.

Remote Control Instructions

		All off
		Natural wind
		Turn off the fan
		Turn on the fan on 1/2/3/4/5/6 speed
		RGB on/off
		Cycles through RGB light modes
		Light on/off
		Adjust the light color temperature from 2700K~6000K
		Adjust the brightness of the light
		Quick switch of the light color : Yellow Light → White Light → Natural Light
		2/4/8 hours for timing the fan
	F R	"F" refers the fan rotates forward "R" refers the fan rotates in reverse

REMOTE SIGNAL PAIRING:

 
If the remote control loses signal of the fan, press and hold the button at the very beginning after it's turned on from wall switch. After the fan light flashes or beeps, it's done.

Note:

Please insert 2 batteries before using : AAA 1.5V battery x 2pcs (not included).

APP Control Instructions

Install the "FanLamp Pro" app from Google Play, Apple App Store, or other app stores by scanning the QR code or searching for the app name. Ensure that your phone is connected to the internet and Bluetooth enabled.

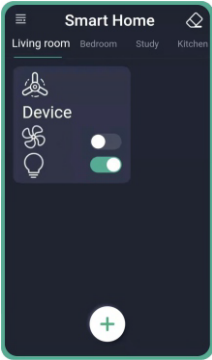  		Pairing: Click the Pair button within 5 seconds after plugging in the fan to power it on. Once the fan flashes or beeps, it has been successfully paired with your phone and can now be controlled through the app.
		Turn on/off the light.
		Quick switch for "White" light color.
		Quick switch for "Yellow" light color.
		Quick switch for "Natural" light color.
		Night mode: Dim the lights.
		Slide the slider to change the brightness of the light.
		Slide the slider to change the fan speed.
		Fan moves forward.
		Fan moves reversely.
		Change the direction of the wind. (Not supported)
		Timing the fan.
		Natural wind: The fan speed will change automatically when you use this function
		Sleeping wind. (Not supported)
		Turn on/off the fan.
		Unpairing: Click the unpair button within 5 seconds after turning on the fan. Once the fan flashes or beeps, it has been successfully unpaired from your phone.

Trouble Shooting

1. Fan doesn't work

- Check the remote control battery (not included in this package).
- Check the circuit breaker to ensure the power is on.
- Check the connection of the power cord.

2. Lights Do Not Light Up / Flicker / Noisy Operation

- Check the circuit breaker to ensure the power is on.
- Check the connection of the power cord.
- Check the connection of the LED light source.

3. Noisy Operation

- Re-tighten all screws on the bracket, and fan blades (do not over tighten)
- Check to see if the blade is cracked. If so, contact us to replace it

4. Remote does not work

- Make sure the battery is installed correctly.
- Pair the remote control again. (See "Remote Control Instructions")
- Install 2 new batteries.

Clean And Care

To clean, wipe the fixture with a soft cloth. Spraying from chemical cleaners can discolor the finish of the fixture. Do not use scouring pads, powders, steel wool, or abrasive paper to clean this fixture.

Ordering Parts

Keep this manual for future reference, and in case replacement parts are needed. Available parts can be ordered from the place of purchase. Use exact wording from diagrams when ordering parts.