



MERRY CHRISTMAS



ASSEMBLY INSTRUCTIONS

Suitable for sizes: 48, 60, 72inch



Thank you for purchasing our Christmas tree.

As a manufacturer, we are committed to provide you complete customer satisfaction.

If you have any questions, or find there are missing or damaged parts, please contact us and we guarantee you complete satisfaction. Please attach your user name, order ID, where you buy this product, details of your problem, and a photo to show us, so that we can assist you better.

READ AND FOLLOW ALL SAFETY INSTRUCTIONS

CAUTION:

- a) This seasonal use product is not intended for permanent installation or use.
- b) Do not mount or place near gas or electric heaters, fireplace, candles or other similar sources of heat.
- c) If you use other light product to decorate the Christmas tree, please use it safely.
- d) Do not use this product for other than its intended use.
- e) After assembly, it takes 30 to 45 minutes to arrange the leaves.
- f) After assembly, you need to hang the decorations on the tree by yourself.

STORAGE:

Remove all holiday decorations. Gently press tips back into center branch. Raise all branches to original upright position taking care not to place undue pressure on the attached ends of the branches. When disassembling tree, a twisting motion will help to separate the sections from each other. All tree parts can be replaced in carton and should be stored in a cool, dry place.

