 
 
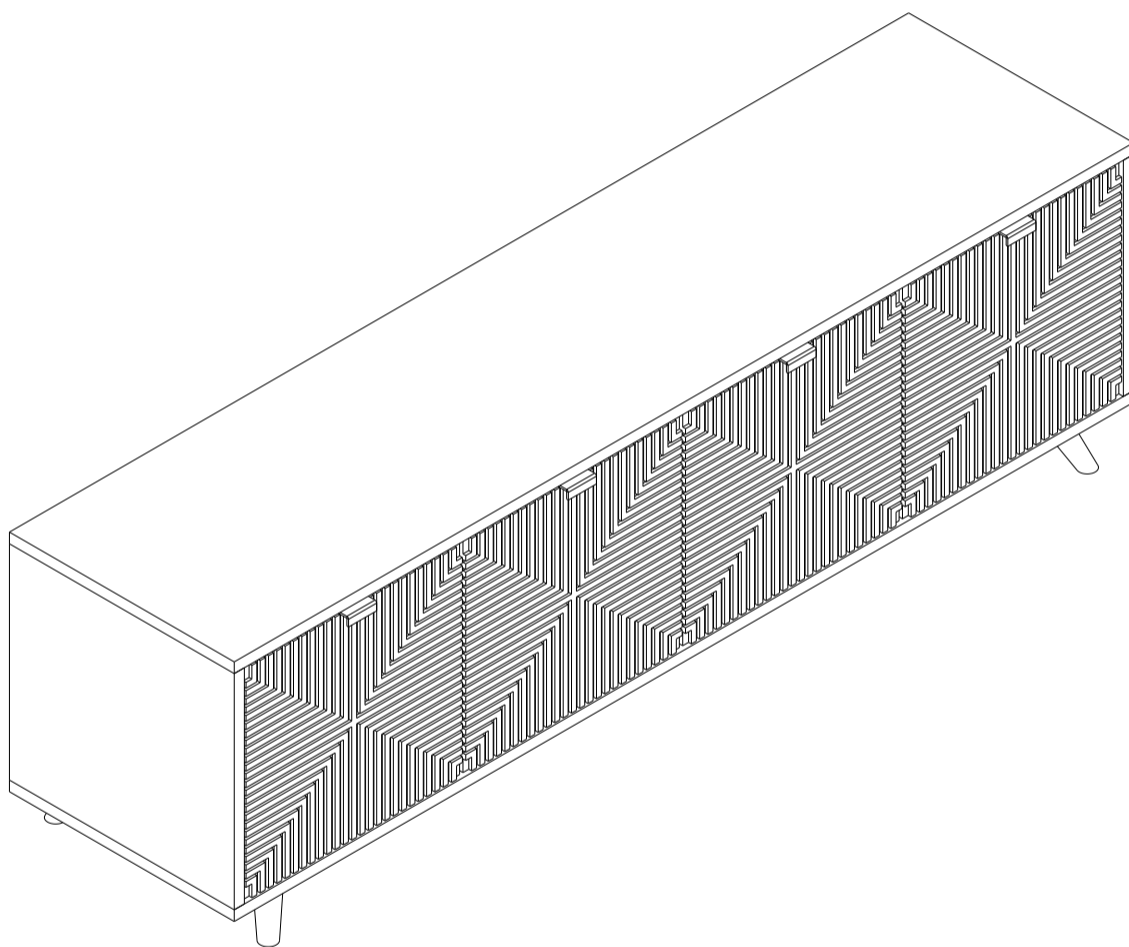 
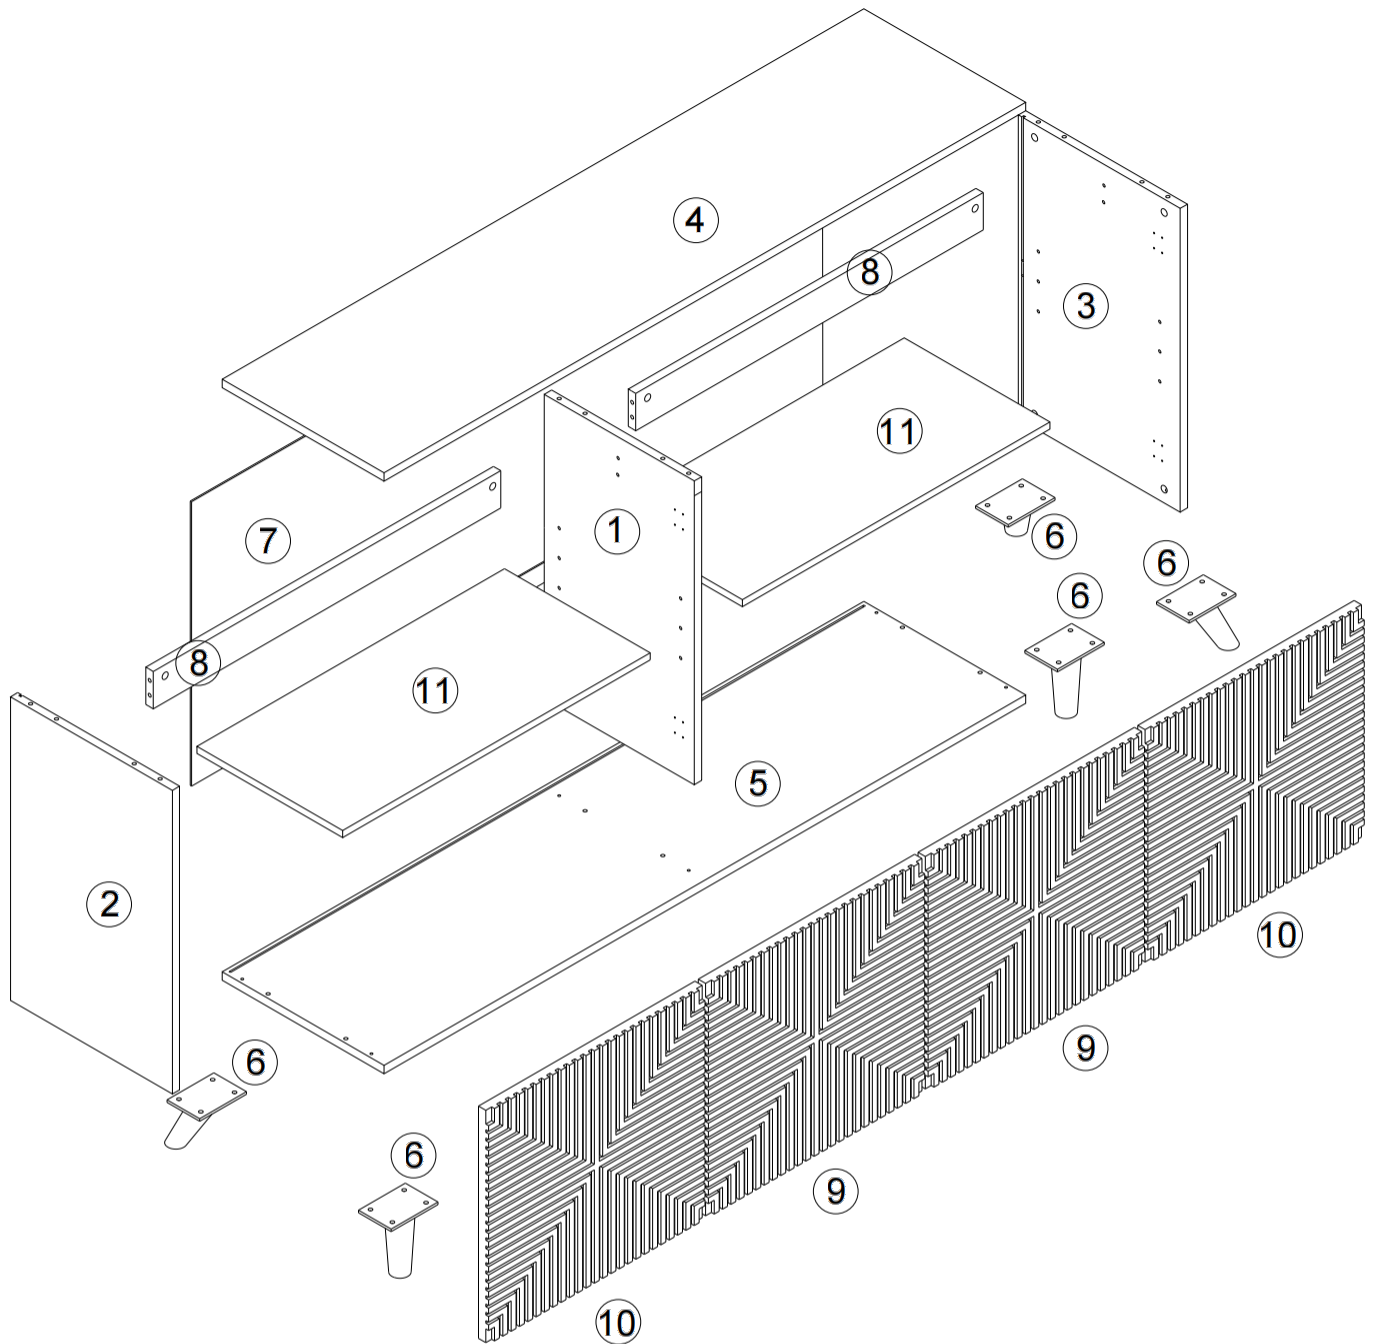 
 


INSTALLATION & ASSEMBLY




Parts List




A  16pcs	B  16pcs	C  16pcs	D 3.5X14  88pcs	F  2pcs	H  4pcs
J  4pcs	K  8pcs	L  8pcs	M  1pc	P  4pcs	


 
Step 1:

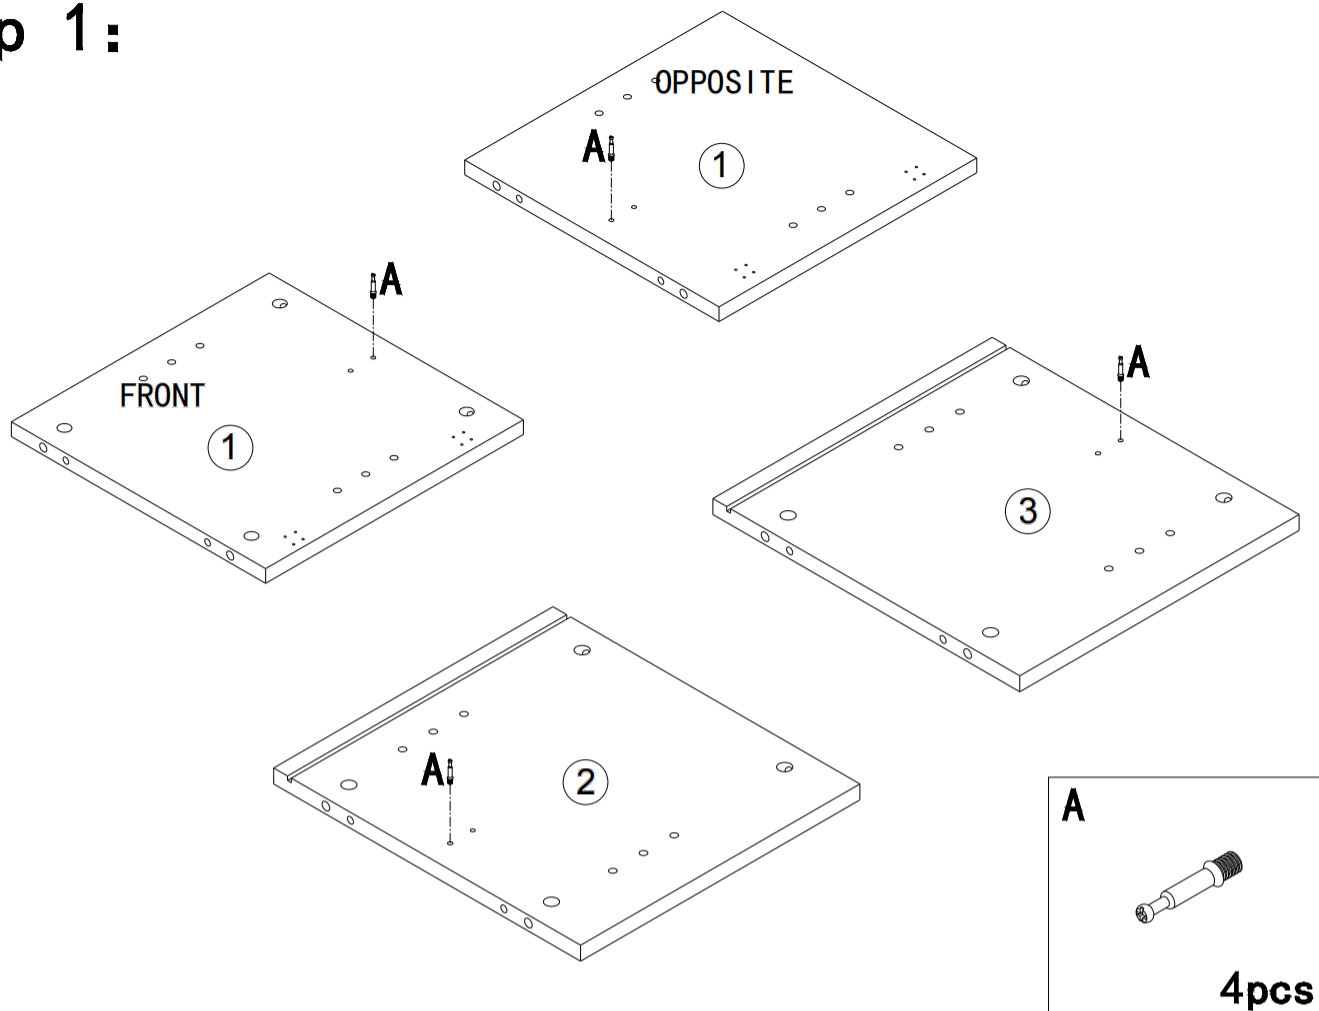


 
Step 2:

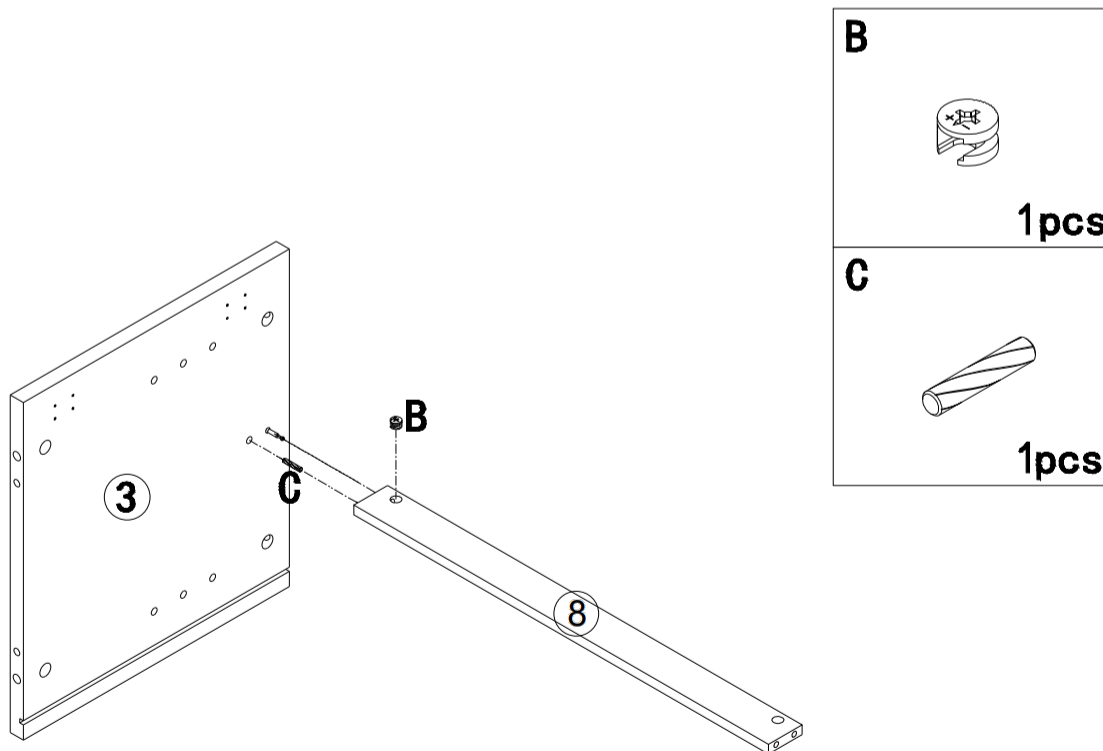

  
Step 3:

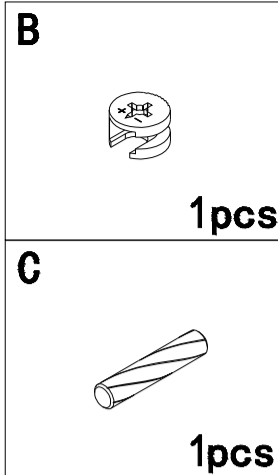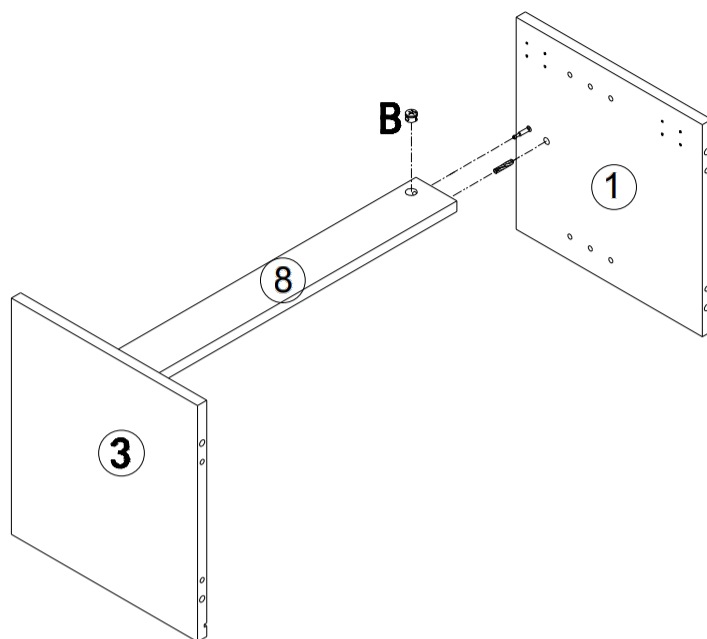

  
Step 4:

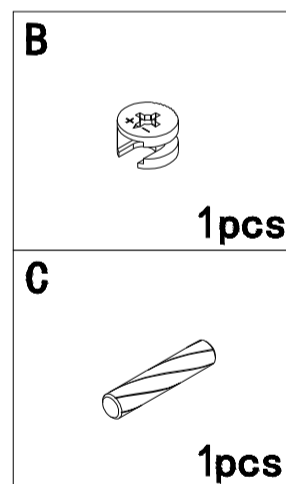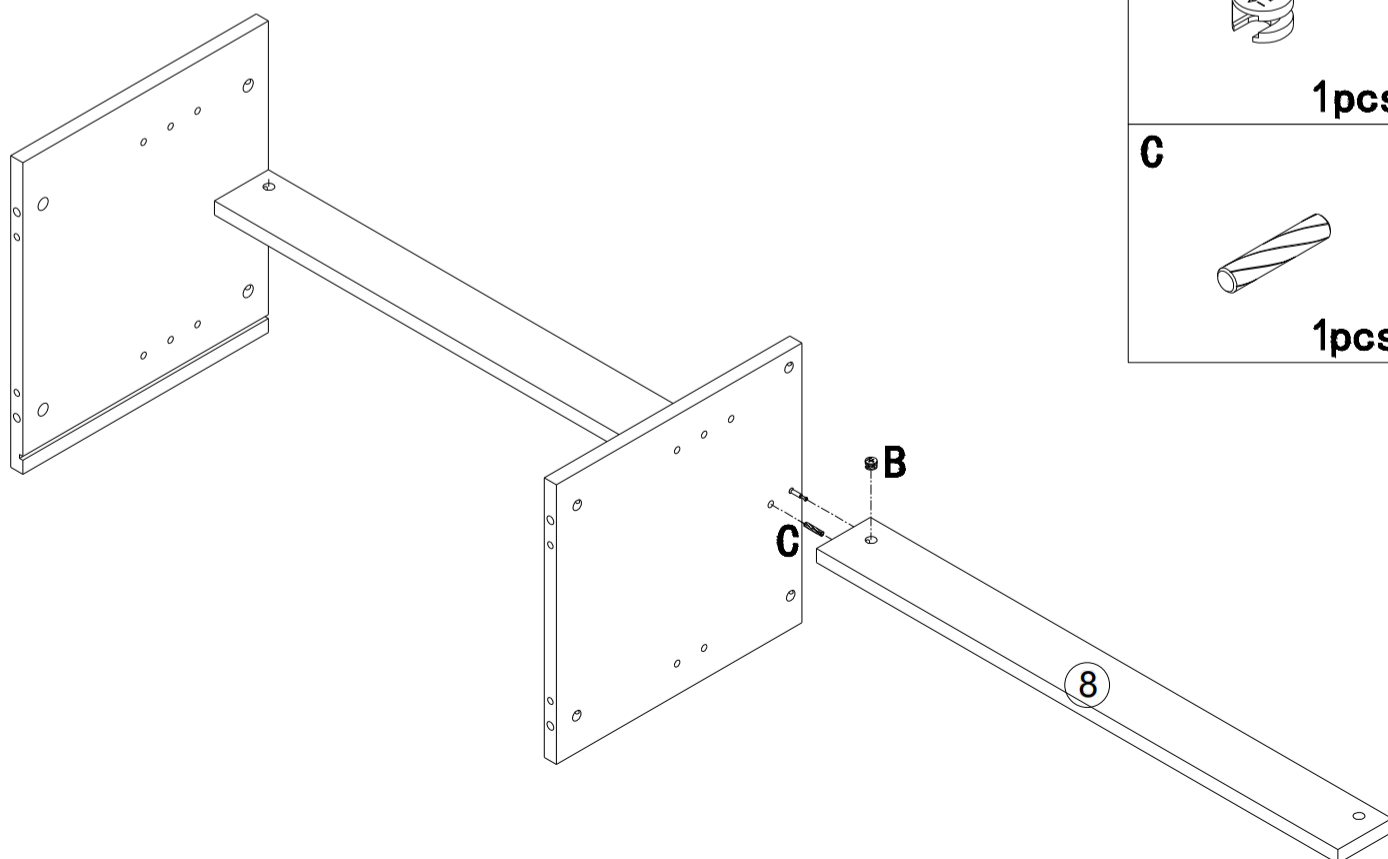

 
Step 5:

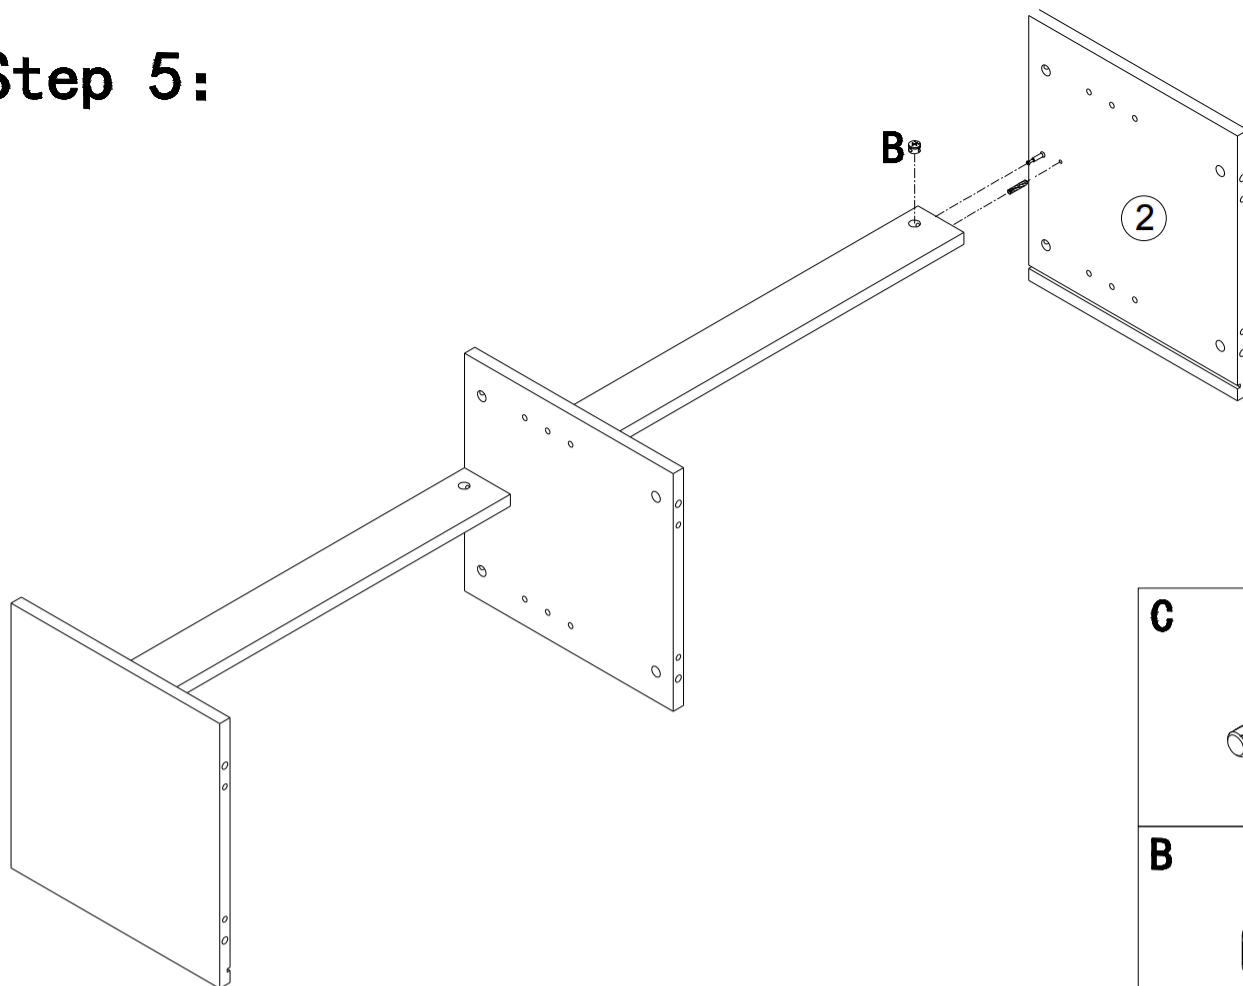

 
Step 6:

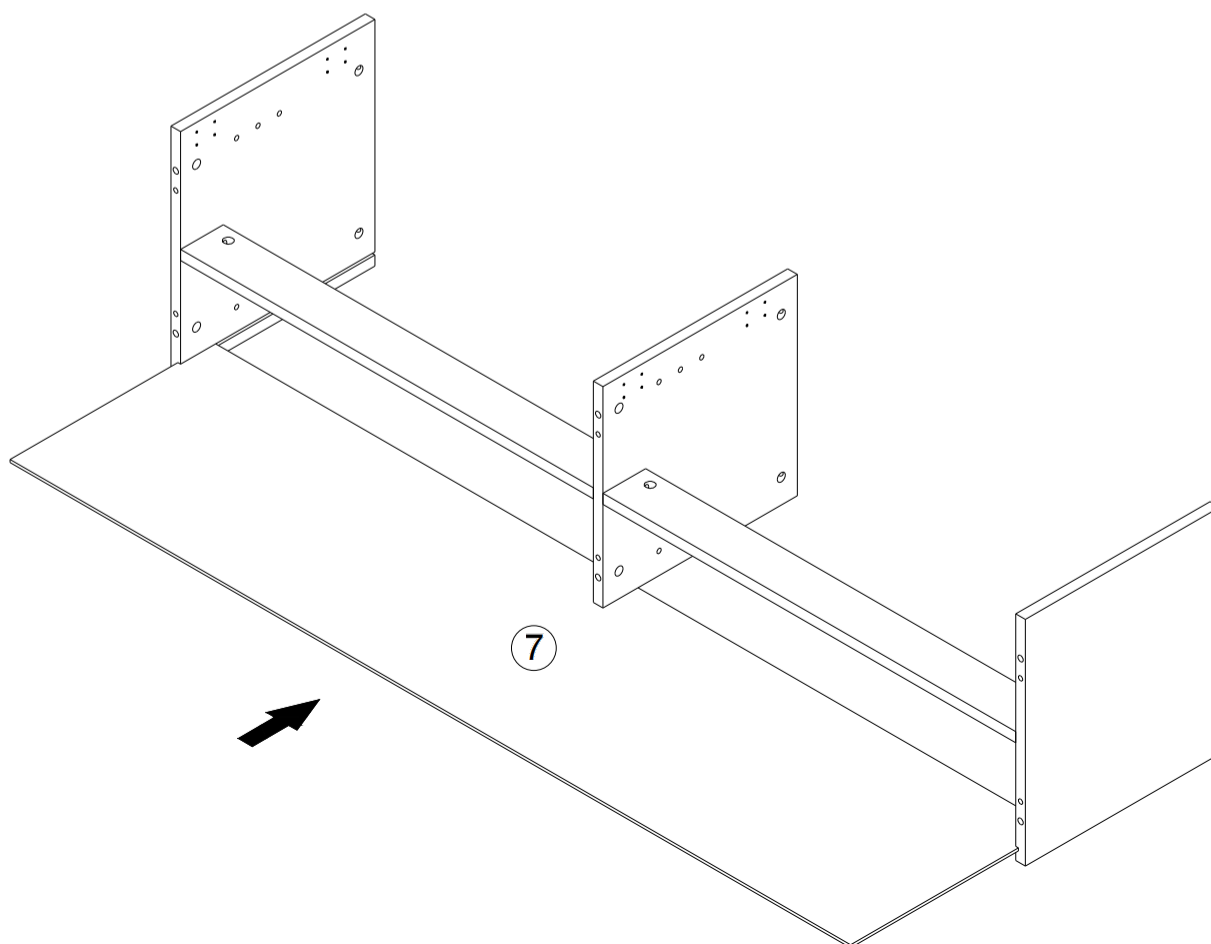

 
Step 7:

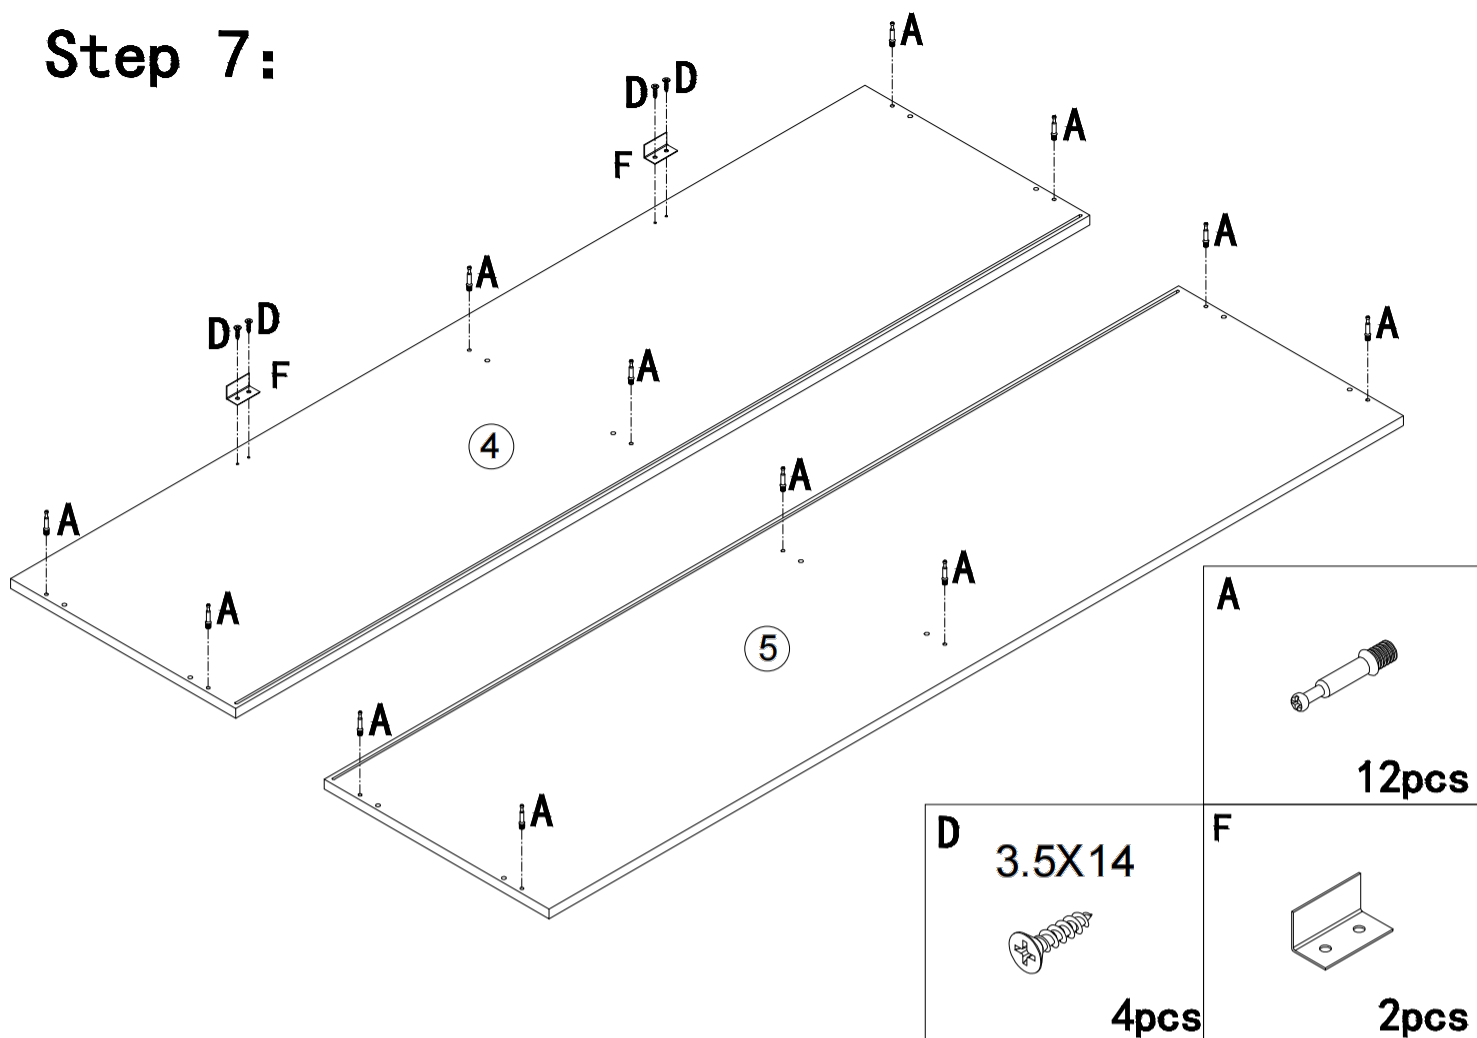


 
Step 8:

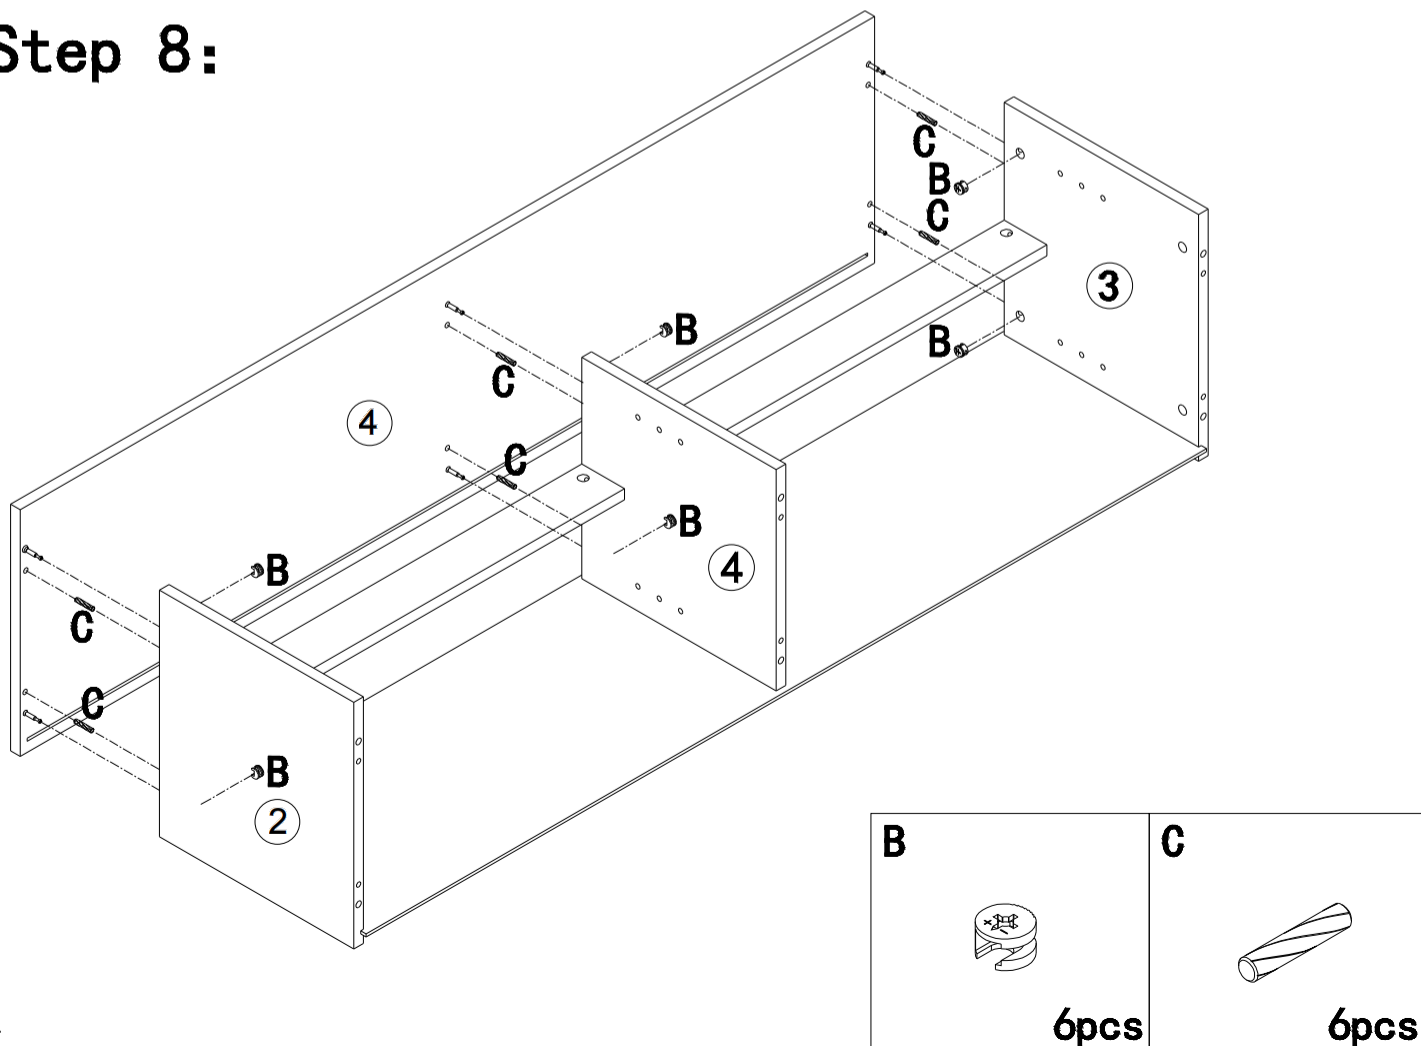

 
Step 9:

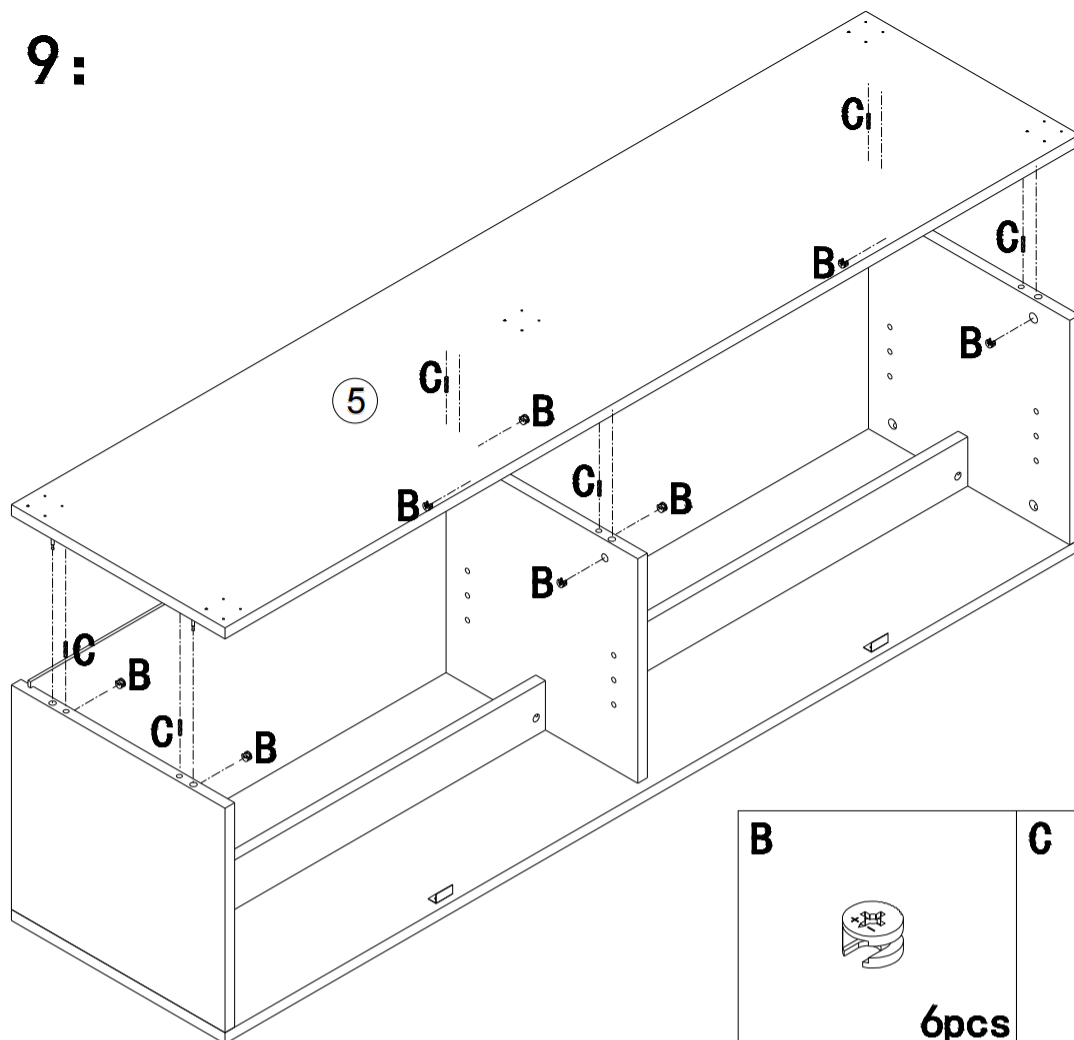


  Step 10:

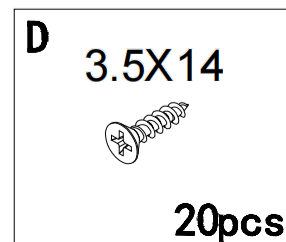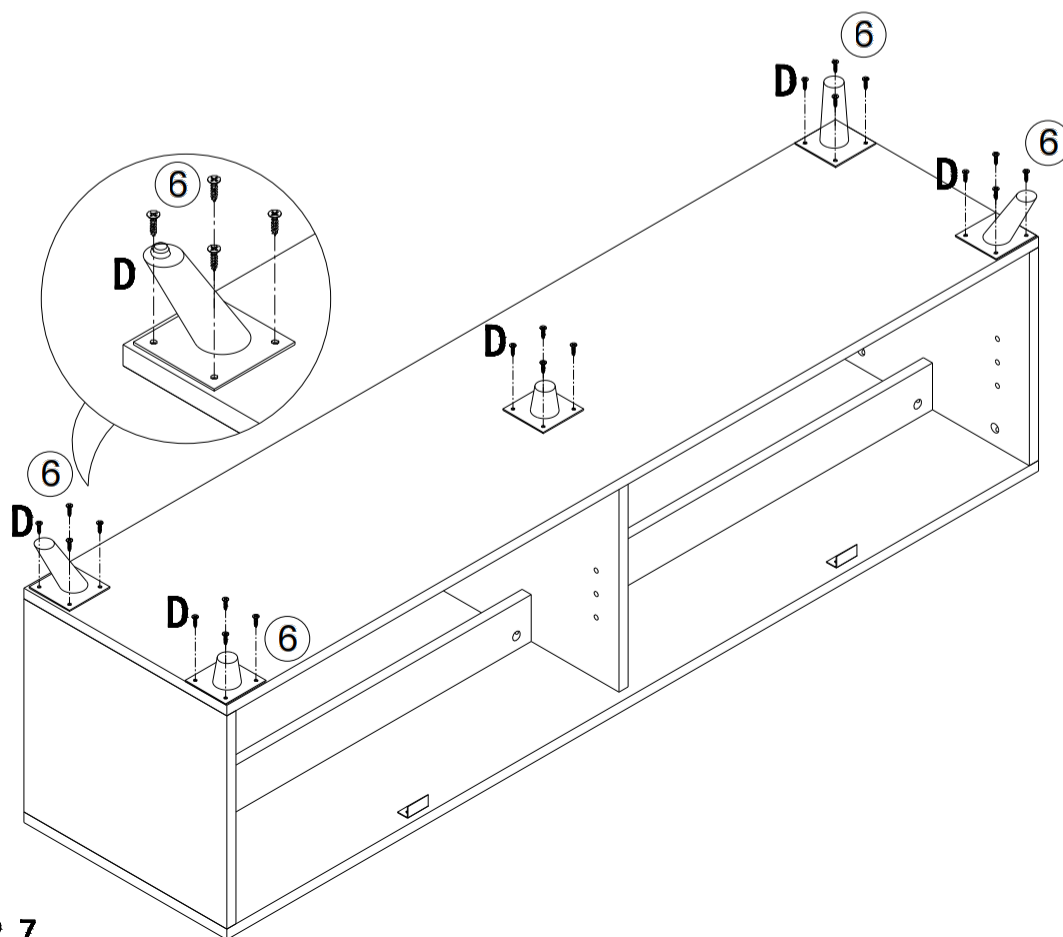



 
 
Step 11:

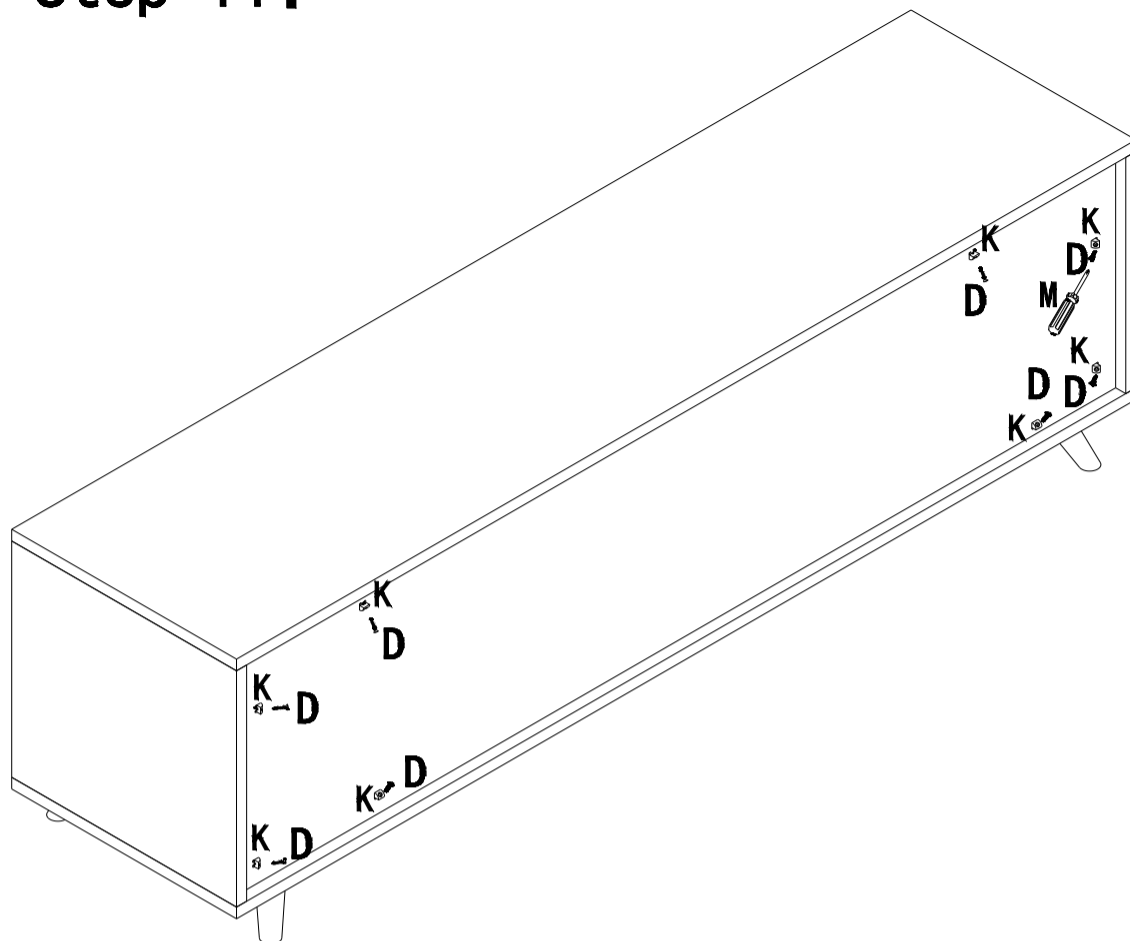


D	3.5X14
	8pcs
K	
	8pcs
M	
	1pc

   
 
Step 12:

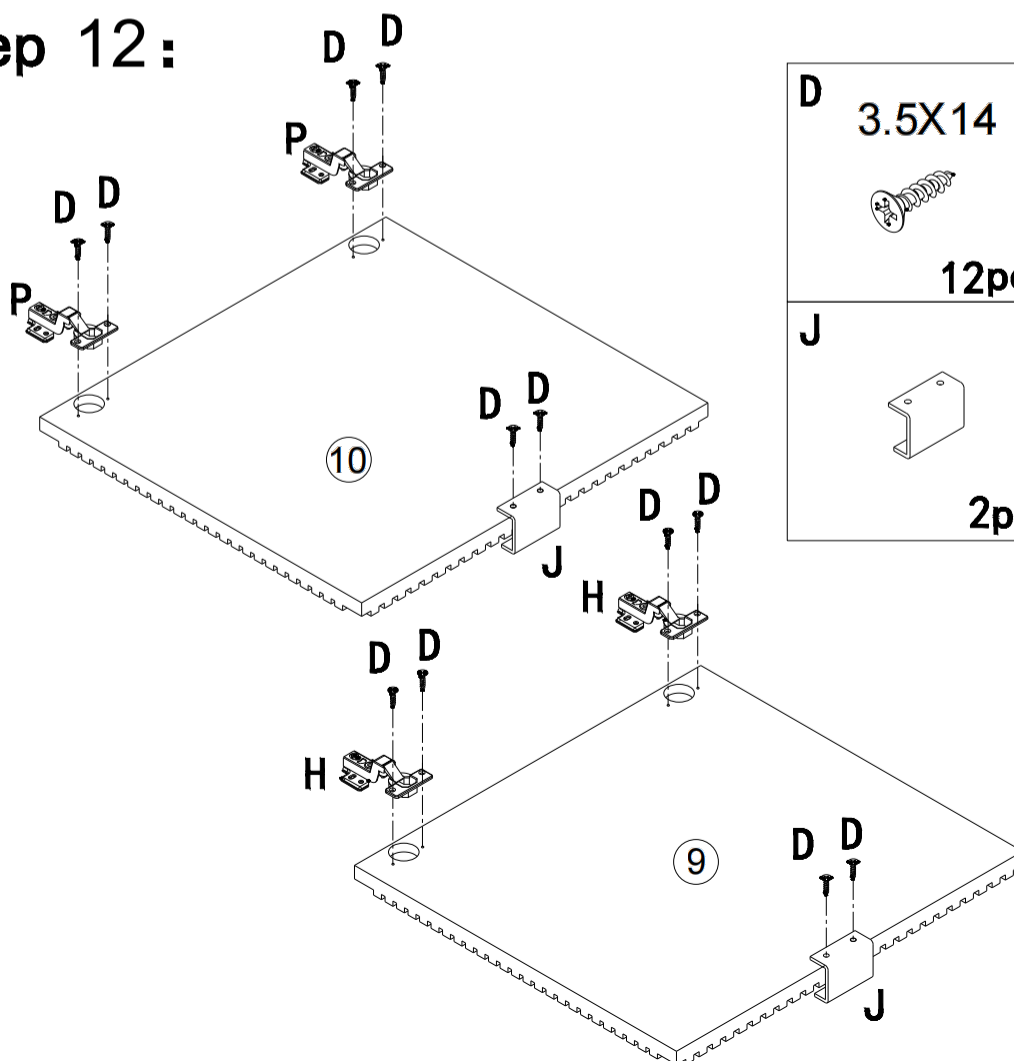

D	3.5X14	H	
	12pcs		2pcs
J		P	
	2pcs		2pcs

  
 
Step 13:

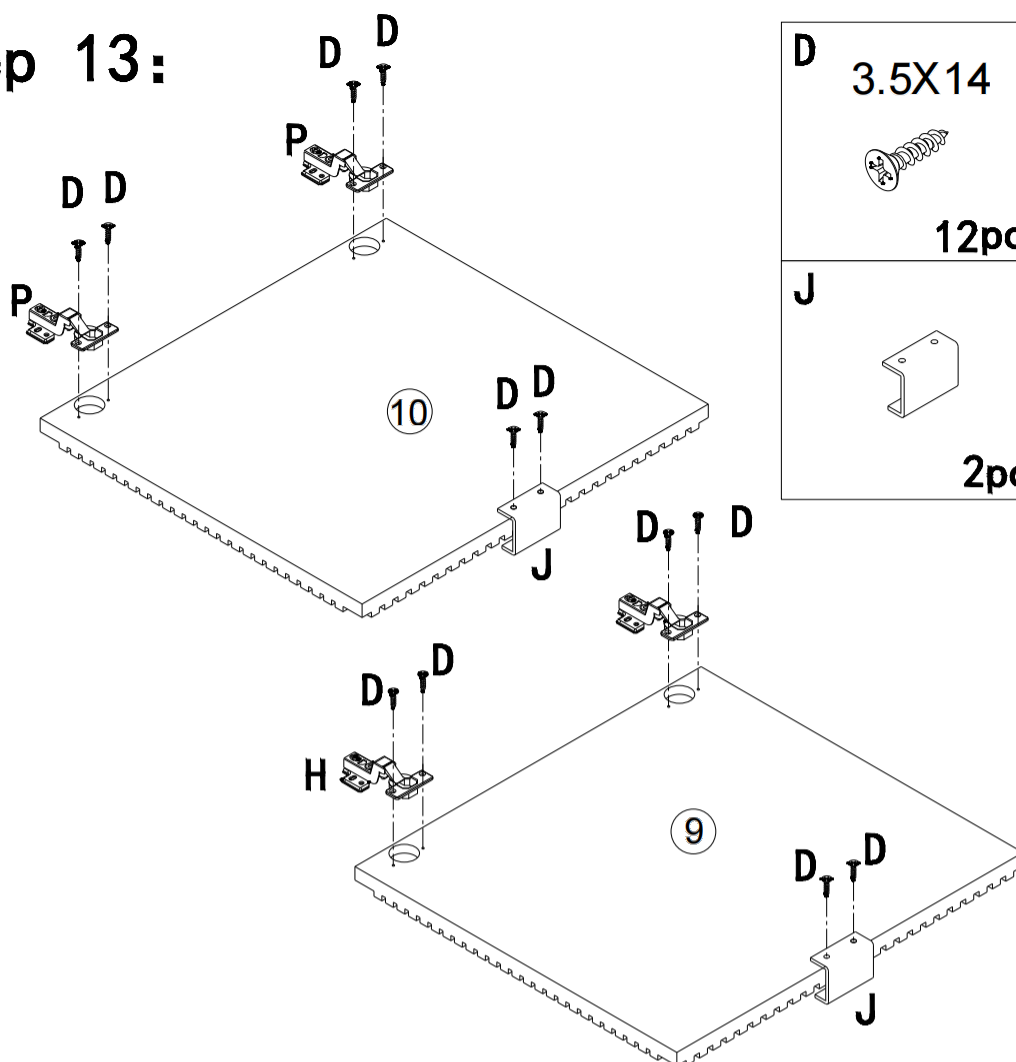



D 3.5X14 	H 
12pcs	2pcs
J 	P 
2pcs	2pcs

Step 14:

  USE HINGE P FOR THE 2 SIDE DOORS

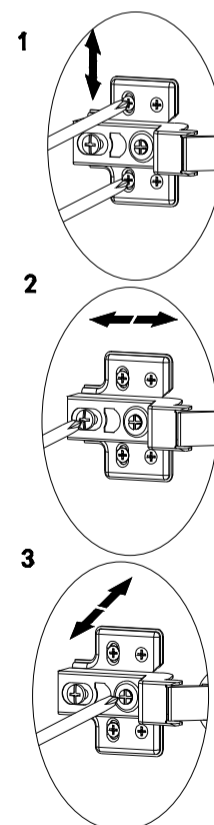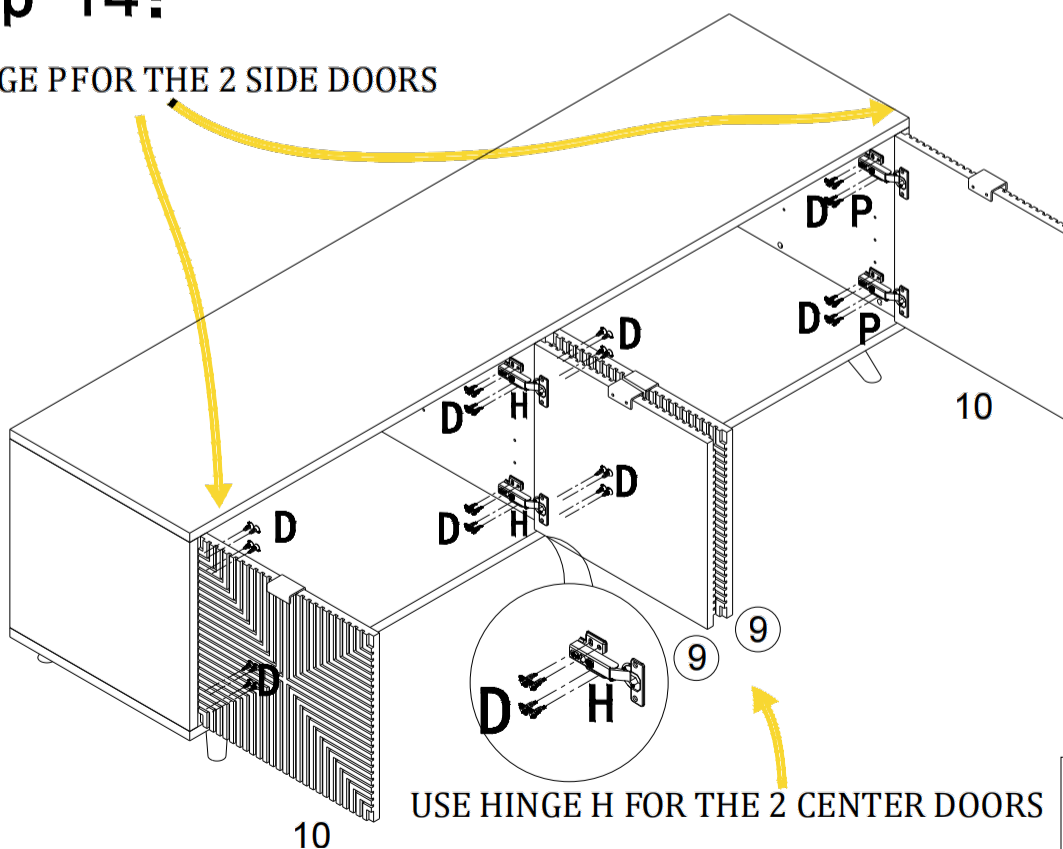


D 3.5X14 
32pcs

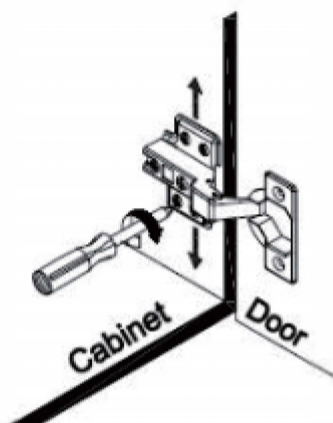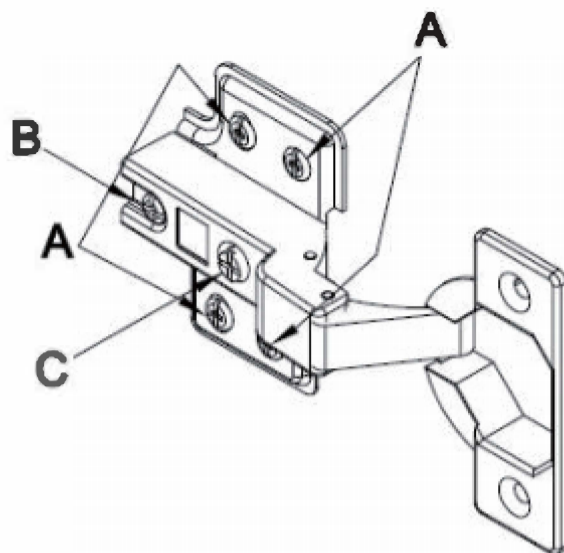  


To adjust the vertical height.

 Loosen the four screws "A" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by a few mm. Then tighten back up.

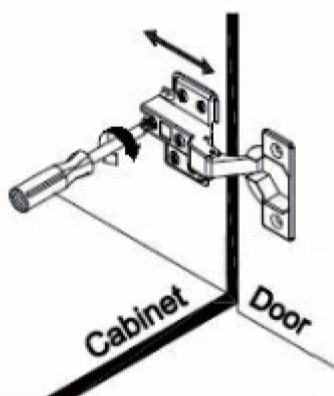

To adjust depth.


 
Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

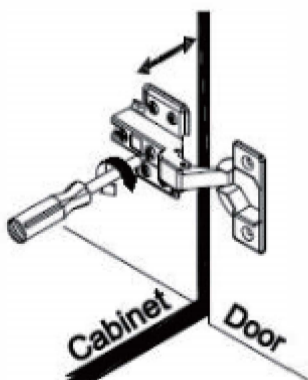


To adjust side ways.


Turning the screw "C" on BOTH hinges on each door.

  Step 15:

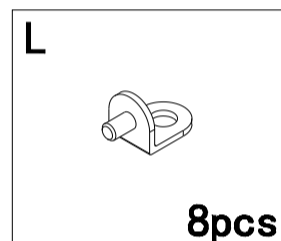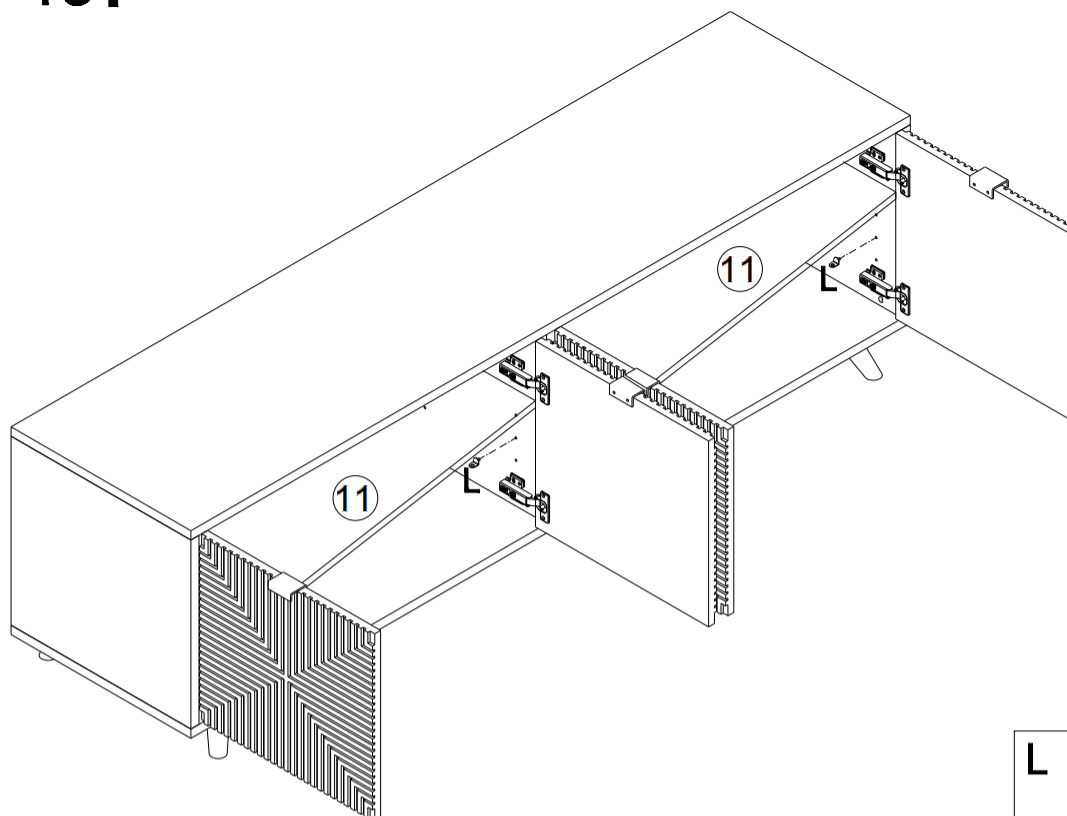

  
Step 16:

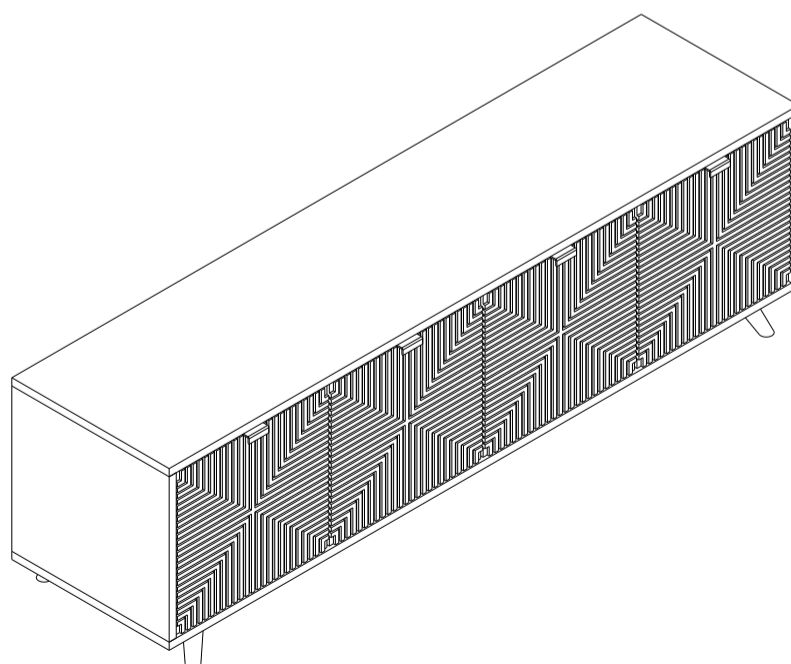

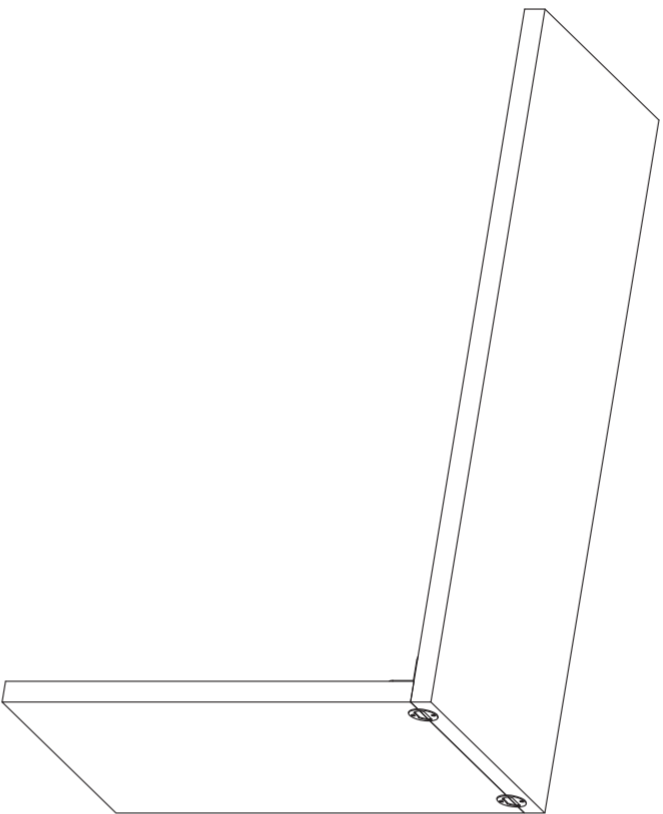


1	2	A	B	C
1pc	1pc	2pcs	2pcs	12pcs
D	E	F		
2pcs	2pcs	2pcs		

 
Step1

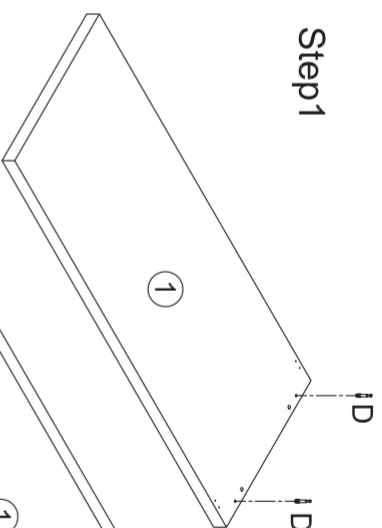

 Step2

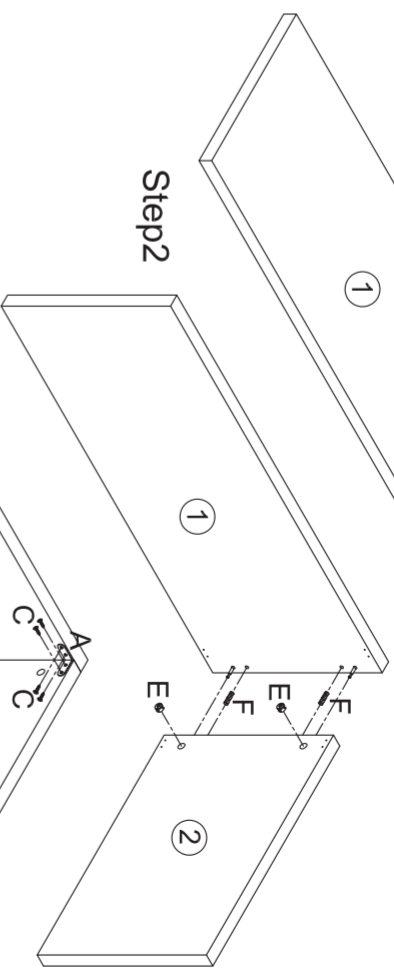

 Step3

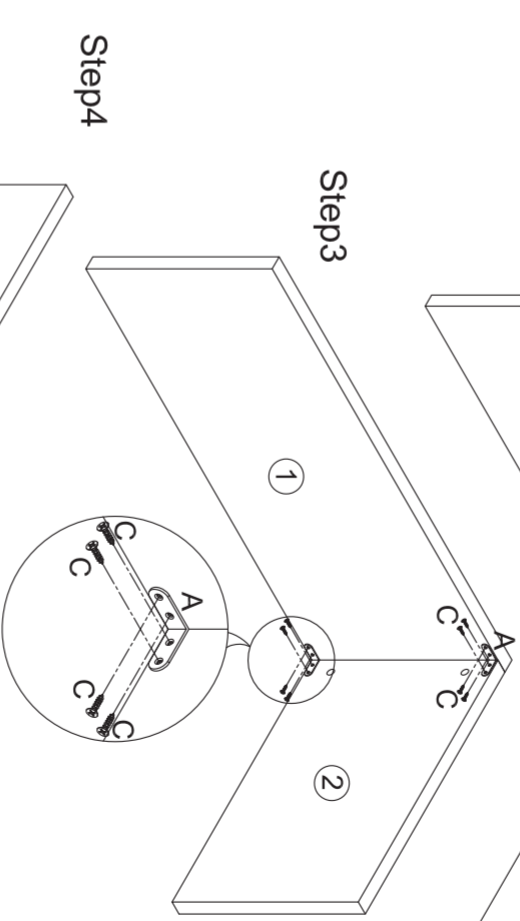

Step4

