

ASSEMBLY INSTRUCTION

 
END TABLE

A Top



1pc

B Lower Frame




1pc

C Leg




4pcs

 D Bolt
1/4"*5/8"




16pcs

 E Allen Wrench
4MM




1pc

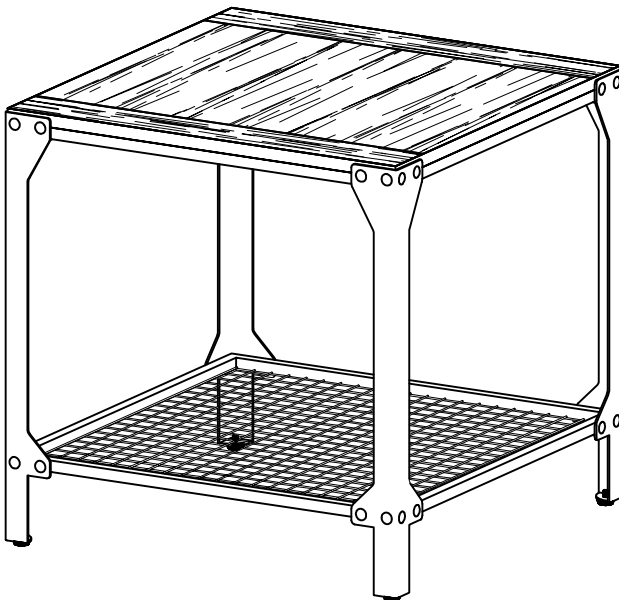


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

1 Attached leg(C) to top(A) with bolts(D) by allen wrench(E).

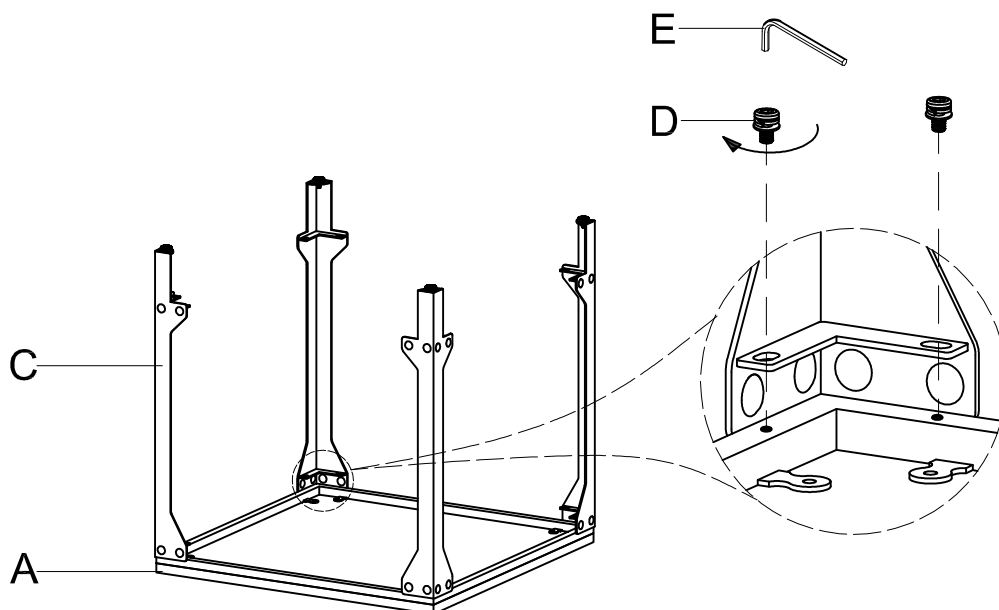

2 Attached lower frame(B) with bolts(D) by allen wrench(E).

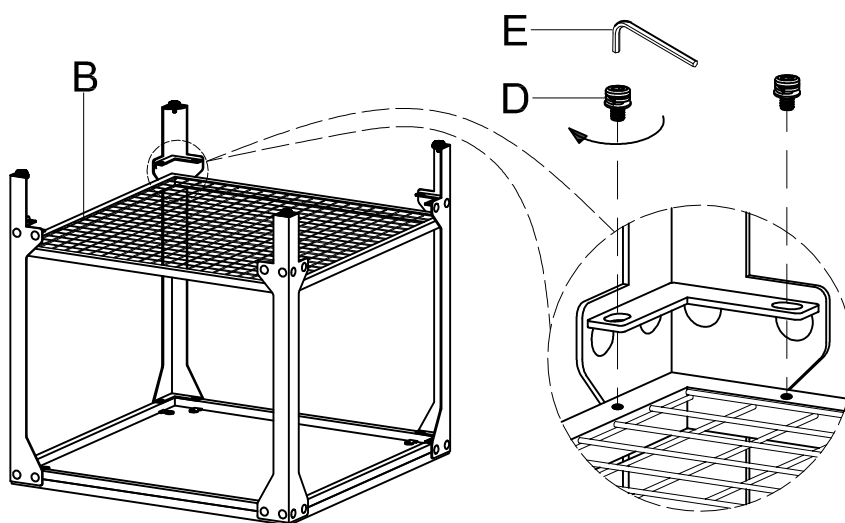

Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.