

# STEP LADDER

## Instruction Manual






✉ HJ-Customer-Service@outlook.com

☎ (909)637-7665 | (909)637-7593


EST 9:00AM--17:00PM

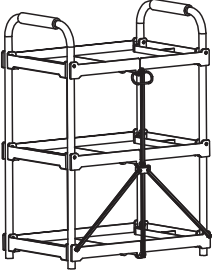

**Notice: Pressing requires some effort.**
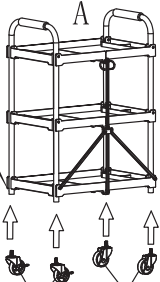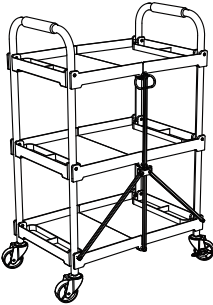
<p>A</p>  <p>1PCS</p>	<p>B</p>  <p>2PCS</p>	<p>C</p>  <p>2PCS</p>	<p>A</p>  <p>①</p> <p>B C</p> <p>Open the cart, insert the wheel into the hole</p>	<p>②</p>  <p>Done</p>
---	---	---	---	---


**OPEN**

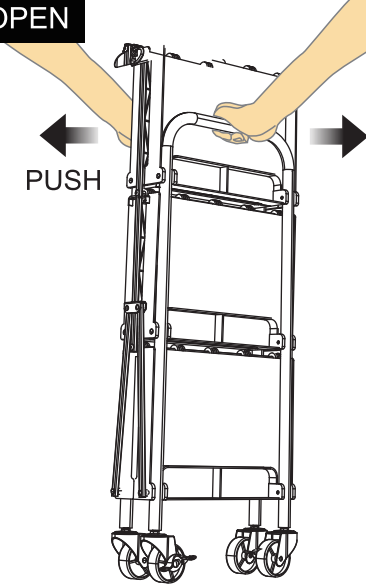

PUSH

1 Brake casters are installed according to customer requirements.


**OPEN**

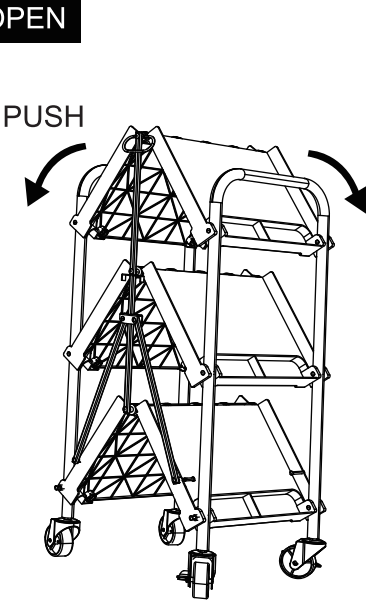

PUSH

2

**OPEN**

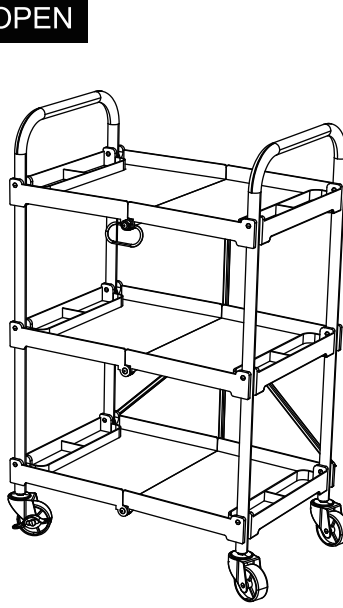

3

Note: Make sure both sides of the treads are securely locked before use.

